

THREE PHASE
O/U VOLTAGE and O/U FREQUENCY
MICROPROCESSOR
RELAY

TYPE

MC3V

OPERATION MANUAL



1. General Utilization and Commissioning Directions	3
1.1 - Storage and Transportation	3
1.2 - Installation	3
1.3 - Electrical Connection	3
1.4 - Measuring Inputs and Power Supply	3
1.5 - Outputs Loading	3
1.6 - Protection Earthing	3
1.7 - Setting and Calibration	3
1.8 - Safety Protection	3
1.9 - Handling	3
1.10 - Maintenance	4
1.11 - Waste Disposal of Electrical & Electronic Equipment	4
1.12 - Fault detection and repair	4
2. General Characteristics	5
2.1 - Power Supply	5
2.2 - Operation and Algorithms	5
2.2.1 - Reference Input Values	5
2.2.2 - Input quantities	5
3 - Functions and Settings (Function)	6
3.1 - V> (1F59) - First overvoltage protection level (smallest of 3 phase-to-neutral voltages)	6
3.2 - V>> (2F59) - Second overvoltage protection level (largest of 3 phase-to-neutral voltages)	6
3.3 - V<< (2F27) - Second undervoltage protection level (smallest of 3 phase-to-neutral voltages)	7
3.4 - f> (F81) - Overfrequency protection level	7
3.5 - f< (F81) - Underfrequency protection level	7
3.6 - Vo> (F59o) - Zero sequence overvoltage protection level ($V_o=3U_o$)	8
3.7 - V1< (F27V1) - Positive sequence undervoltage protection level (Positive sequence symmetrical component)	8
3.8 - V2> (F59V2) - Negative sequence overvoltage protection level (Negative sequence symmetrical component)	8
3.9 - RTD - Remote Trip	9
3.10 - I.R.F. - Internal Relay Failure	9
3.11 - Osc - Oscillographic Recording	9
3.12 - Comm - Communication Parameters	10
3.13 - LCD - Display and Buzzer operation	10
4. Instantaneous Output and Blocking Input	11
4.1 - Instantaneous Output	11
4.2 - Blocking Input	11
5. Output Relays	11
6. Digital Inputs	11
7. Self-diagnostic	11
8. Relay Management	12
9. Signalizations	13
10. Keyboard Buttons	13
11. Serial Communication Port	14
11.1 - Main RS485 Serial Communication Port	14
11.2 - Communication Port on Front Face Panel	15
12. Menu and Variables	16
12.1 - Real Time Measurements	16
12.2 - Meas (Instantaneous Measurements)	16
12.3 - Counter (Operation Counters)	16
12.4 - LastTrip (Event Recording)	17
12.5 - R/W Set (Programming / Reading the Relay Settings)	18
12.5.1 - CommAdd (Communication Address)	18
12.5.2 - Time/Date (Time/Date)	18
12.5.3 - RatedVal (Rated Input Values)	18
12.5.4 - Function (Functions)	19
12.6 - RelayCfg (Relay Configuration)	21
12.7 - Commands	21
12.8 - Info&Ver (Firmware - Info&Version)	21
13. Keyboard Operational Diagram	22
14. Password	23
14.1 - MS-Com Password	23
15. Maintenance	23
16. power frequency insulation test	23
17. Connection Diagram	24
18. Overall Dimensions	24
19. Direction for PCB's Draw-Out and Plug-In	25
19.1 - Draw-Out	25
19.2 - Plug-In	25
20. Electrical Characteristics	26

1. General Utilization and Commissioning Directions

Always make reference to the specific description of the product and to the Manufacturer's instruction. Carefully observe the following warnings.

1.1 - Storage and Transportation

must comply with the environmental conditions stated on the product's instruction or by the applicable IEC standards.

1.2 - Installation

must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

1.3 - Electrical Connection

must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

1.4 - Measuring Inputs and Power Supply

carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

1.5 - Outputs Loading

must be compatible with their declared performance.

1.6 - Protection Earthing

When earthing is required, carefully check its effectiveness.

1.7 - Setting and Calibration

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

1.8 - Safety Protection

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.

1.9 - Handling

Notwithstanding the highest practicable protection means used in designing M.S. electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules.

The damage caused by electrostatic discharge may not be immediately apparent, but the design reliability and the long life of the product will have been reduced. The electronic circuits reduced by M.S. are completely safe from electrostatic discharge (8 kV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

- a. Before removing a module, ensure that you are at the same electrostatic potential as the equipment by touching the case.
- b. Handle the module by its front-plate, frame, or edges of the printed circuit board. Avoid touching the electronic components, printed circuit tracks or connectors.
- c. Do not pass the module to any person without first ensuring that you are both at the same electrostatic potential. Shaking hands achieves equipotential.
- d. Place the module on an antistatic surface, or on a conducting surface which is at the same potential as yourself.
- e. Store or transport the module in a conductive bag.

More information on safe working procedures for all electronic equipment can be found in BS5783 and IEC 147-OF.

1.10 - Maintenance

Make reference to the instruction manual of the Manufacturer; maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

1.11 - Waste Disposal of Electrical & Electronic Equipment

(Applicable throughout the European Union and other European countries with separate collection program). This product should not be treated as household waste when you wish dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequence to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resource.

1.12 - Fault detection and repair

Internal calibrations and components should not be altered or replaced.
For repair, please ask the Manufacturer or its authorised Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

2. General Characteristics

The MC is a very innovative and versatile line of Protective Relays which takes advantage of the long and successful experience coming from the M-Line.

The main features of the MC-Line relays are:

Compact draw-out execution for Flush Mounting or for assembly in 19" 3U chassis for 19" Rack systems.

User friendly front face with 2x8 characters LCD Display, four signal Leds, four keys for complete local management and 9-pin socket for local RS232 serial communication.

Four user programmable Output Relays. On request one of the Output Relays can be replaced by a Can Bus port for control of additional I/O modules.

Three optoisolated, self-powered Digital Inputs.

RS485 communication port (independent from the RS232 port on front panel)

Totally draw-out execution.

Input voltage is supplied to 3 internal isolated transformers.

The Measuring Ranges are:

Phase Voltage	: (0.1 - 2) Un
Frequency	: (40 - 70) Hz

Make electric connection in conformity with the diagram reported on relay's enclosure.

Check that input quantities are same as reported on the diagram and on the test certificate.

2.1 - Power Supply

The auxiliary power is supplied by a built-in module fully isolated and self-protected.

The relay can be fitted with two different types of **power supply**:

Type 1	24V(-20%) / 110V(+15%) a.c.	24V(-20%) / 125V(+20%) d.c.
Type 2	80V(-20%) / 220V(+15%) a.c.	90V(-20%) / 250V(+20%) d.c.

Before energizing the unit check that supply voltage is within the allowed limits.

2.2 - Operation and Algorithms

2.2.1 - Reference Input Values

	Display		Description	Setting Range	Step	Unit
V1	10	kV	Rated Primary voltage of phase V.T.	0.05 - 500	0.01	kV
V2	100	V	Rated Secondary voltage of phase V.T.	50 - 450	0.01	V
Freq	50	Hz	System rated frequency	50 - 60	10	Hz

2.2.2 - Input quantities

2.2.2.1 - Mains Frequency (Freq)

The relay can operate either in 50Hz or 60Hz systems.
The rated Mains Frequency "Freq" must be set accordingly.

2.2.2.2 - Phase Voltage inputs

Input voltages are supplied to 3 internal adapting transformers; the rated input voltage (phase-to-phase) can be programmed in the range (50 ÷ 450) V.

The display shows the measurement of the phase-to-neutral voltages in primary volt according to the programmed reference input values.

3 - Functions and Settings (Function)

3.1 - V> (1F59) - First overvoltage protection level (smallest of 3 phase-to-neutral voltages)

<i>FuncEnab</i>	→	Enable	[Disable / Enable]					
<i>Options</i>	→	BI	Disable	[Disable / Enable]				
	→	Trg	Enable	[Disable / Enable]				
<i>TripLev</i>	→	V>	1.1	Vn	(0.5 ÷ 1.5)	step	0.01	Vn
<i>Timers</i>	→	tV>	1	s	(0.05 ÷ 60)	step	0.01	s

Description of variables

FuncEnab	:	If disable the function is deactivated
BI	:	Operation controlled by Blocking Digital Input
Trg	:	Function operation triggers the oscillographic wave form capture (see § Oscillographic)
V>	:	Trip level of overvoltage protection
tV>	:	Trip time delay

3.2 - V>> (2F59) - Second overvoltage protection level (largest of 3 phase-to-neutral voltages)

<i>FuncEnab</i>	→	Enable	[Disable / Enable]					
<i>Options</i>	→	BI	Disable	[Disable / Enable]				
	→	Trg	Enable	[Disable / Enable]				
<i>TripLev</i>	→	V>>	1.3	Vn	(0.5 ÷ 1.5)	step	0.01	Vn
<i>Timers</i>	→	tV>>	0.3	s	(0.05 ÷ 60)	step	0.01	s

Description of variables

FuncEnab	:	If disable the function is deactivated
BI	:	Operation controlled by Blocking Digital Input
Trg	:	Function operation triggers the oscillographic wave form capture (see § Oscillographic)
V>>	:	Trip level of overvoltage protection
tV>>	:	Trip time delay

2.2.3.3 - V< (1F27) - First undervoltage protection level (smallest of 3 phase-to-neutral voltages)

<i>FuncEnab</i>	→	Enable	[Disable / Enable]					
<i>Options</i>	→	BI	Disable	[Disable / Enable]				
	→	Trg	Disable	[Disable / Enable]				
<i>TripLev</i>	→	V<	0.9	Vn	(0.2 ÷ 1.2)	step	0.01	Vn
<i>Timers</i>	→	tV<	1	s	(0.05 ÷ 60)	step	0.01	s

Description of variables

FuncEnab	:	If disable the function is deactivated
BI	:	Operation controlled by Blocking Digital Input
Trg	:	Function operation triggers the oscillographic wave form capture (see § Oscillographic)
V<	:	Trip level of undervoltage protection
tV<	:	Trip time delay

3.3 - V<< (2F27) - Second undervoltage protection level (smallest of 3 phase-to-neutral voltages)

<i>FuncEnab</i>	→	Enable	[Disable / Enable]
<i>Options</i>	→	BI	Disable
	→	Trg	Disable
<i>TripLev</i>	→	V<<	0.7 Vn (0.2 ÷ 1.2) step 0.01 Vn
<i>Timers</i>	→	tV<<	0.3 s (0.05 ÷ 60) step 0.01 s

Description of variables

FuncEnab	: If disable the function is deactivated
BI	: Operation controlled by Blocking Digital Input
Trg	: Function operation triggers the oscillographic wave form capture (see § Oscillographic)
V<<	: Trip level of undervoltage protection
tV<<	: Trip time delay

3.4 - f> (F81) - Overfrequency protection level

<i>FuncEnab</i>	→	Enable	[Disable / Enable]
<i>Options</i>	→	BI	Disable
	→	Trg	Enable
<i>TripLev</i>	→	f>	50.5 Hz (40 ÷ 70) step 0.01 Hz
<i>Timers</i>	→	tf>	1 s (0.05 ÷ 60) step 0.01 s

Description of variables

FuncEnab	: If disable the function is deactivated
BI	: Operation controlled by Blocking Digital Input
Trg	: Function operation triggers the oscillographic wave form capture (see § Oscillographic)
f>	: Trip level of overfrequency protection
tf>	: Trip time delay

3.5 - f< (F81) - Underfrequency protection level

<i>FuncEnab</i>	→	Enable	[Disable / Enable]
<i>Options</i>	→	BI	Disable
	→	Trg	Enable
<i>TripLev</i>	→	f<	49.5 Hz (40 ÷ 70) step 0.01 Hz
<i>Timers</i>	→	tf<	1 s (0.05 ÷ 60) step 0.01 s

Description of variables

FuncEnab	: If disable the function is deactivated
BI	: Operation controlled by Blocking Digital Input
Trg	: Function operation triggers the oscillographic wave form capture (see § Oscillographic)
f<	: Trip level of underfrequency protection
tf<	: Trip time delay

3.6 - Vo> (F59o) – Zero sequence overvoltage protection level (Vo=3Uo)

<i>FuncEnab</i>	→	Enable	[Disable / Enable]
<i>Options</i>	→	BI	Disable
	→	Trg	Enable
<i>TripLev</i>	→	Vo>	1.1 Vn (0.1 ÷ 2) step 0.1 Vn
<i>Timers</i>	→	tVo>	0.3 s (0.05 ÷ 60) step 0.01 s

Description of variables

FuncEnab	:	If disable the function is deactivated
BI	:	Operation controlled by Blocking Digital Input
Trg	:	Function operation triggers the oscillographic wave form capture (see § Oscillographic)
Vo>	:	Trip level of zero sequence overvoltage protection
tVo>	:	Trip time delay

3.7 – V1< (F27V1) – Positive sequence undervoltage protection level (Positive sequence symmetrical component)

<i>FuncEnab</i>	→	Enable	[Disable / Enable]
<i>Options</i>	→	BI	Disable
	→	Trg	Enable
<i>TripLev</i>	→	V1<	0.8 Vn (0.1 ÷ 1.5) step 0.01 Vn
<i>Timers</i>	→	tV1<	5 s (0.05 ÷ 60) step 0.01 s

Description of variables

FuncEnab	:	If disable the function is deactivated
BI	:	Operation controlled by Blocking Digital Input
Trg	:	Function operation triggers the oscillographic wave form capture (see § Oscillographic)
V1<	:	Trip level of positive sequence overvoltage protection
tV1<	:	Trip time delay

3.8 – V2> (F59V2) – Negative sequence overvoltage protection level (Negative sequence symmetrical component)

<i>FuncEnab</i>	→	Enable	[Disable / Enable]
<i>Options</i>	→	BI	Disable
	→	Trg	Enable
<i>TripLev</i>	→	V2>	0.2 Vn (0.02 ÷ 1.5) step 0.01 Vn
<i>Timers</i>	→	tV2>	5 s (0.05 ÷ 60) step 0.01 s

Description of variables

FuncEnab	:	If disable the function is deactivated
BI	:	Operation controlled by Blocking Digital Input
Trg	:	Function operation triggers the oscillographic wave form capture (see § Oscillographic)
V2>	:	Trip level of negative sequence overvoltage protection
tV2>	:	Trip time delay

3.9 - RTD - Remote Trip

Remote trip is controlled via the Digital Input D2.

FuncEnab	→	Disable	[Disable / Enable]
Options	→	No Param	No Parameters
TripLev	→	No Param	No Parameters
Timers	→	No Param	No Parameters

Description of variables

FuncEnab : If disable the function is deactivated

3.10 - I.R.F. - Internal Relay Failure

FuncEnab	→	No Param	No Parameters
Options	→	Opz	[NoTrip / Trip]
TripLev	→	No Param	No Parameters
Timers	→	No Param	No Parameters

Description of variables

Opz : The variable "Opz" can be programmed to trip the output relays same as the other protection functions (Opz = TRIP), or to only operate the "IRF" signal led without tripping the output relays (Opz = NoTRIP).

3.11 - Osc - Oscillographic Recording

FuncEnab	→	Enable	[Disable / Enable]
Options	→	Trg	[Disable / Start / Trip / Ext.Inp.]
TripLev	→	No Param	No Parameters
Timers	→	tPre	s (0.1 ÷ 0.5) step 0.1 s
	→	tPost	s (0.1 ÷ 1.5) step 0.1 s

Description of variables

FuncEnab : If disable the function is deactivated
Trg : *Disab* = Function Disable (no recording)
Start. = Trigger on time start of protection functions
Trip = Trigger on trip (time delay end) of protection functions
Ext.Inp. = Trigger from the Digital Input D3
tPre : Recording time before Trigger (Pre-trigger)
tPost : Recording time after Trigger (Post-trigger)

When the option "Start" or "Trip" is selected:

The oscillographic recording is started respectively by the "Time Start" or by the "Trip at time end" of any of the functions that have been programmed to Trigger the Wave Form Capture (V>, V>>, V<, V<<, f>, f<, Vo>, V1<, V2>).

The "Osc" Function includes the wave Form Capture of the input quantities (U, f) and can totally store a record of 3 seconds.

The number of events recorded depends on the duration of each individual recording (tPre + tPost).

In any case the number of events stored cannot exceed ten (10 x 0.3 sec).

Any new event beyond the 3 sec capacity of the memory, cancel and overwrites the former records (FIFO Memory).

3.12 - Comm – Communication Parameters

FuncEnab	→	No Param	No Parameters
Options	→	LBd	9600
	→	RBd	9600
	→	Mod	8,n,1
	→	RPr	Modbus
TripLev	→	No Param	No Parameters
Timers	→	No Param	No Parameters

Description of variables

LBd	:	Local Baud Rate (Front panel RS232 communication speed)
RBd	:	Remote Baud Rate (Rear panel terminal blocks RS485 communication speed)
Mod	:	Communication mode (communication parameters)
RPr	:	Remote Protocol

Note: Any change of this setting becomes valid at the next power on

3.13 - LCD – Display and Buzzer operation

FuncEnab	→	No Param	No Parameters
Options	→	BkL	Auto
TripLev	→	No Param	No Parameters
Timers	→	No Param	No Parameters

Description of variables

BkL	:	LCD Backlight continuously "ON" or switched-on Automatically on operation of Keyboard buttons.
------------	---	--

4. Instantaneous Output and Blocking Input

4.1 - Instantaneous Output

The instantaneous element of each of the protection functions (F59, F27, F81) can be programmed to control one of the Output Relays.

This relay picks-up as soon as the input quantity exceeds the set trip level of the Protection Function and automatically resets when the input quantity drops below the function reset level ($\approx 95\%$ of the trip level).

4.2 - Blocking Input

Tripping at time end of any time delayed protection function (t_{F59} , t_{F27} , t_{F81} , $t_{F81<}$, t_{F59Vo} ,) can be blocked by activating the Digital Input D1 (BI = Enable).

5. Output Relays

Four user programmable Output Relays are normally available R1, R2, R3, R4.

Each of them can be programmed to be controlled by any element (instantaneous or time delayed) of any of the Relay Functions including Remote trip and Internal Relay Fault.

Moreover, the operation of each of the output relays can be programmed to be either Normally Deenergized (energized on tripping of the controlling Functional Element) or Normally Energized (Deenergized on tripping of the controlling Functional Element)

As an option (to be required when ordering the relay), the output relay "R4" can be replaced by a Field Bus output (CANBUS) that controls additional I/O modules for increasing as needed the number of user programmable Output Relays and Digital Inputs controlled from the MC relay.

6. Digital Inputs

Three optoisolated, self-powered Digital Inputs D1, D2, D3 are provided.

A Digital Input is activated when its terminals are shorted by a cold contact.

D1	(terminals 22 - 19)	: It is used as Function Blocking Input
D2	(terminals 22 - 21)	: It is used for Remote Trip
D3	(terminals 22 - 20)	: The digital Input triggers the oscillographic recording, any time the DI changes from closed to open.

7. Self-diagnostic

The Relay incorporates a sophisticated self-diagnostic feature that continuously checks the following elements:

A/D conversion
Checksum of the settings stored into E ² Prom.
DSP general operation (Power, Routines, etc.)
Lamp test (only on manual test).


Any time Power is switched on, a complete test is run; then, during normal operation, the test runs continuously, and the checksum is done any time a parameter is stored into E²Prom.

If during the test any Relay Internal Failure (I.R.F) is detected:

If "I.R.F." is programmed to "Trip", the programmed output relays are operated same as on tripping of any protection function operation is stored in the "Last Trip" and the I.R.F. signal led is set to flashing.
If "I.R.F." is programmed to "NO Trip", and only the I.R.F. signal led is set to flashing.


8. Relay Management

The relay can be totally managed locally, either by the RS232 communication port or by the 4 key buttons and the LCD display, or remotely via the communication bus RS485 connected to the rear terminal blocks. The 2-line x 8 characters LCD display shows the available information. Key buttons operate according to the flow-chart here below.

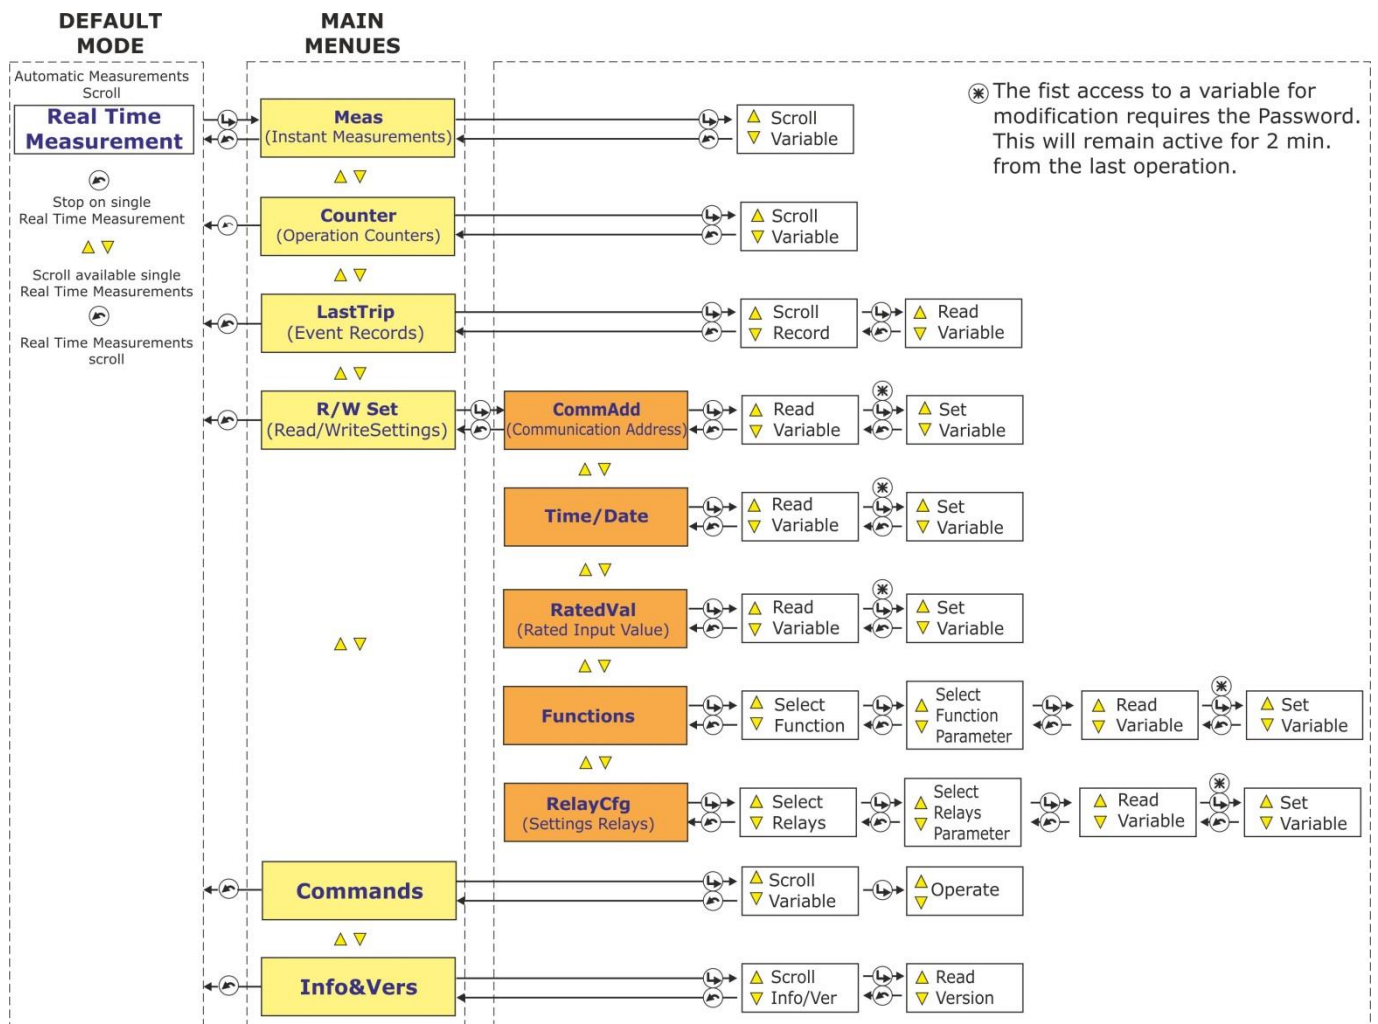

9. Signalizations

Four signal leds are available on the Front Face Panel:

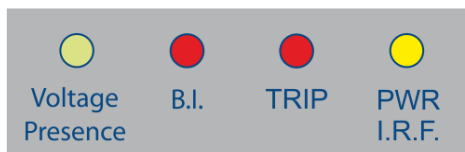

a)	GREEN LED	Voltage Presence	Illuminated when the input voltage is present (at least one phase-to-neutral voltage exceeding 5% of its rated input value). Off when the input voltage is not present
b)	RED LED	B.I.	Illuminated when a blocking signal is present at the relevant input terminals.
c)	RED LED	TRIP (*)	Flashing when a timed function starts to operate. Illuminated when any function is tripped; reset takes places by pressing the reset button.
d)	YELLOW LED	PWR/ I.R.F.	Illuminated during normal operation when Power Supply is ON. Flashing when a Relay Internal Fault is detected.

(*) When any protection function is tripped besides the Led which gives the general trip indication.
The display shows the function that caused the tripping:

<i>LastTrip</i>	steady
<i>"Cause"</i>	blinking

10. Keyboard Buttons



Enter Give access to any menu or convalidate any programming changement.



Reset Return from the actual selected menu to the former menu.



Select + Scrolls variables available in the different menus or increases/decreases setting values.



Select -

11. Serial Communication Port

11.1 - Main RS485 Serial Communication Port

This port is accessible via the terminals 1-2-3 provided on the relay terminal board.

It is used for connection to a serial bus interfacing up to 31 units with the Central Supervision System (SCADA, DCS, ecc).

The serial bus is a shielded pair of twisted cables connecting in parallel (Multi Drop) the different units (slaves) by the relevant terminals.


The physical link is RS485, and the Communication Protocol is MODBUS/RTU / IEC60870-5-103.

The configuration of transmission parameters is selectable.

<i>Baud Rate</i>	: 9600/19200 bps	9600/19200 bps	9600/19200 bps
<i>Start bit</i>	: 1	1	1
<i>Data bit</i>	: 8	8	8
<i>Parity</i>	: None	Odd	Even
<i>Stop bit</i>	: 1	1	1

Note: any change of this setting becomes valid at the next power on.

Each relay is identified by its programmable address code (NodeAd) and can be called from the P.C. A dedicated communication software (MCom) for windows is available on www.microelettrica.com. Maximum length of the serial bus can be up to 200m.

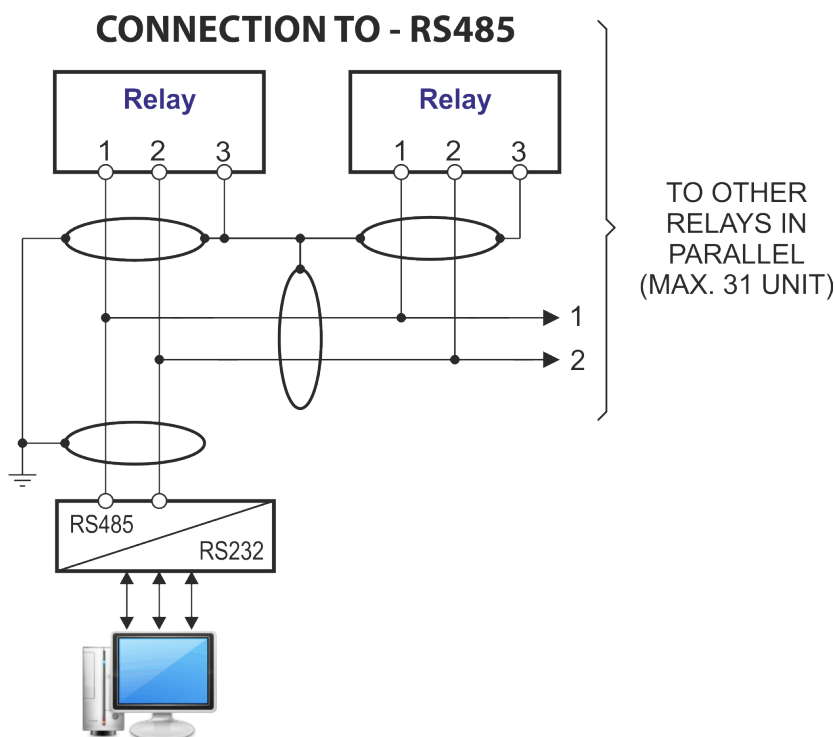


For longer distance and for connection of up to 250 Relays, optical interconnection is recommended. (Please ask Microelettrica for accessories)

11.2 - Communication Port on Front Face Panel

This port is used for communication through the Front Face Panel between a local Lap-top PC.

The physical link is RS232 by the standard female 9-pin D-sub connector available on the Front Face Panel. Via this Port complete Relay management and data acquisition is possible.

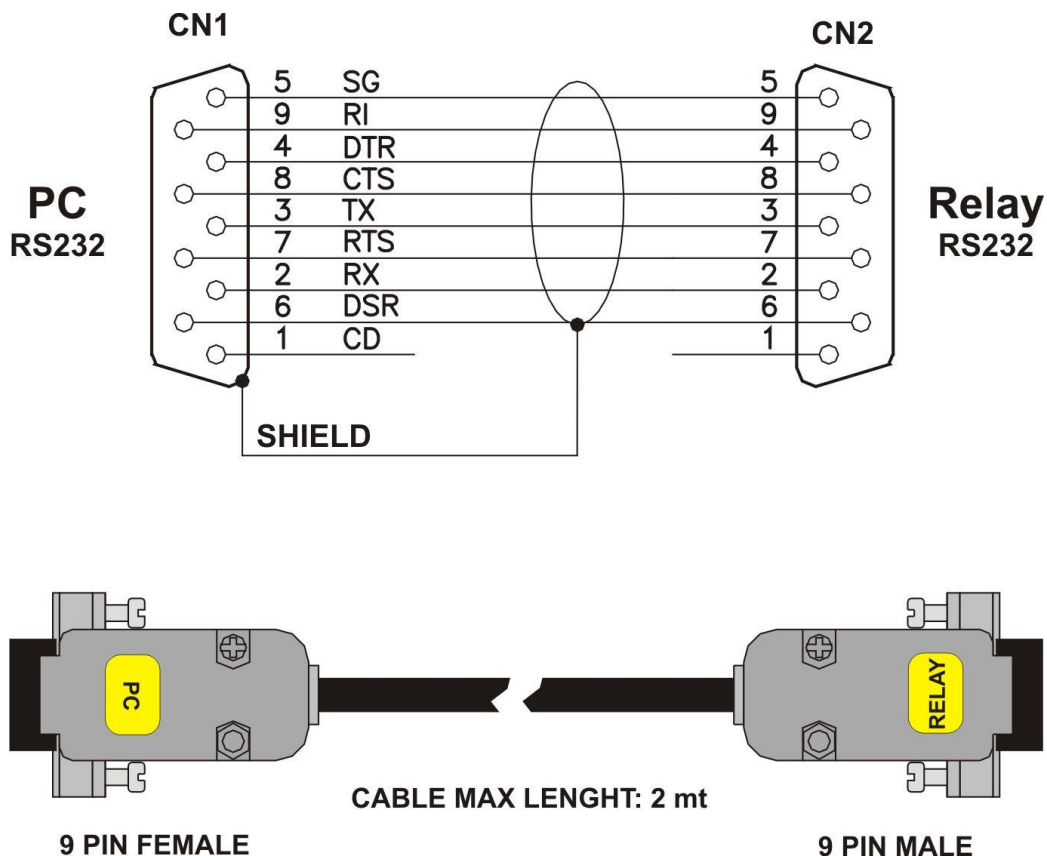




12. Menu and Variables

12.1 - Real Time Measurements

Scrolling display of the Real Time Measurements is the Default operation.

Scrolling can be stopped at any of the measurements and restarted by pressing the Reset button .

When stopped on one variable,  appears aside the measurement and the different available measurements can be selected by the   buttons.

	Display		Description
EA	= 0 - 999999	V	RMS value of primary phase-to-neutral voltage of phase A
EB	= 0 - 999999	V	RMS value of primary phase-to-neutral voltage of phase B
EC	= 0 - 999999	V	RMS value of primary phase-to-neutral voltage of phase C
f	= 40.00-70.00	Hz	System Frequency
Vo	= 0 - 999999	V	RMS primary zero sequence voltage
V1	= 0 - 999999	%	% Of rated system voltage
V2	= 0 - 999999	%	% Of rated system voltage

12.2 - Meas (Instantaneous Measurements)


Real time measurements can be frozen at any moment selecting the menu "Instant Measure":



	Display		Description
EA	= 0 - 999999	V	RMS value of primary phase-to-neutral voltage of phase A
EB	= 0 - 999999	V	RMS value of primary phase-to-neutral voltage of phase B
EC	= 0 - 999999	V	RMS value of primary phase-to-neutral voltage of phase C
f	= 40.00-70.00	Hz	System Frequency
Vo	= 0 - 999999	V	RMS primary zero sequence voltage
V1	= 0 - 999999	%	% Of rated system voltage
V2	= 0 - 999999	%	% Of rated system voltage

12.3 - Counter (Operation Counters)

The operation of any of the function herebelow reported, is counted and recorded in the menu "Counters".

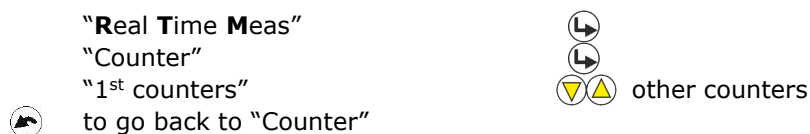







	Display		Description
V>	= 0 - 65535		Number of 1 st Overvoltage (time delayed) trip
V>>	= 0 - 65535		Number of 2 nd Overvoltage (time delayed) trip
V<	= 0 - 65535		Number of 1 st Undervoltage (time delayed) trip
V<<	= 0 - 65535		Number of 2 nd Undervoltage (time delayed) trip
f>	= 0 - 65535		Number of Overfrequency (time delayed) trip
f<	= 0 - 65535		Number of Underfrequency (time delayed) trip
Vo>	= 0 - 65535		Number of Zero sequence overvoltage (time delayed) trip
V1<	= 0 - 65535		Number of Positive sequence undervoltage (time delayed) trip
RTD	= 0 - 65535		Number of External Trip commands
V2>	= 0 - 65535		Number of Negative sequence overvoltage (time delayed) trip
I.R.F.	= 0 - 65535		Number of Internal Relay Faults
HR	= 0 - 65535		Number of HW recovery operations



12.4 - LastTrip (Event Recording)

The Relay records any tripping and stores the information relevant to the last 20 tripping of protection functions (FIFO).





Each event recording includes the following information.

- "Real Time Meas" 
- "LastTrip" 
-  1st event,
-  to scroll available events,
-  to "Rec #" selected,
-  to select the different fields;

	Display	Description
Date	= YYYY/MM/GG	Date: Year/Month/Day
Time	= hh:mm:ss:cc	Time: hours/minutes/second/hundredths of seconds
Func	xxxxx	Indication of the protection function which caused the relay tripping. For indication of the TRIP Cause the following acronyms are used: V> = 1 st Overvoltage V>> = 2 nd Overvoltage V< = 1 st Undervoltage V<< = 2 nd Undervoltage f> = Overfrequency f< = Underfrequency Vo> = Zero sequence overvoltage V1< = Positive sequence undervoltage V2> = Negative sequence overvoltage RTD = External Trip commands IRF = Internal Relay Fault
EA	= 0 - 999999 V	RMS value of primary phase-to-neutral voltage of phase A
EB	= 0 - 999999 V	RMS value of primary phase-to-neutral voltage of phase B
EC	= 0 - 999999 V	RMS value of primary phase-to-neutral voltage of phase C
f	= 40.00-70.00 Hz	System Frequency
Vo>	= 0 - 999999 V	RMS primary zero sequence voltage
V1<	= 0 - 999999 %	% Of rated system voltage
V2>	= 0 - 999999 %	% Of rated system voltage

-  to go back to "Rec #",
-  to go back to "Real Time Meas".

12.5 - R/W Set (Programming / Reading the Relay Settings)

-  "Main Menu"
-  select "Function"
-  select among following sub menus
- 
















12.5.1 - CommAdd (Communication Address)

-  "CommAdd"
-  "Add: #"
-  "Password ????" (If not yet entered; see § Password)
-  to select the Address (1-250)
-  to validate. Set Done!








The default address is 1.

Display	Description	Setting Range	Step	Unit
Add: 1	Identification number for connection on serial communication bus	1 - 250	1	-

12.5.2 - Time/Date (Time/Date)

-  "Time/Date"
-  Date: Current Date, Time: Current time
-  "YY/....."
-  to set year,
-  "XX/MM"
-  to set month,
-  "XX/XX/DD"
-  to set day,
-  "XX/XX/XX"
-  to set hour,
-  "hh/mm"
-  to set minutes,
-  "XX/mm"
-  To validate Set Done!
-  Exit

12.5.3 - RatedVal (Rated Input Values)

-  "RatedVal"
-  1st Variable
-  to scroll variables
-  to modify selected variable
-  "Password ????" (If not yet entered) or #??? (If not yet entered; see § Password)
-  to set variable value,
-  to validate. Set Done!

Display	Description	Setting Range	Step	Unit
V1 10 kV	Rated Primary voltage of phase V.T.	0.05 - 500	0.01	kV
V2 100 V	Rated Secondary voltage of phase V.T.	50 - 450	0.01	V
Freq 50 Hz	System rated frequency	50 - 60	10	Hz

12.5.4 - Function (Functions)



"Function",

1st function,

to scroll available Functions,

to Read/Write setting of the selected function,

to select the different definable fields

- FuncEnab

- TripLev

- Options

- Timers

to access the selected field and read the actual setting of the relevant variable

to modify the actual setting;

to set the new value.

to validate.

Set Done!

Function	Type	Display	Variable	Default Setting	Unit	Description	Setting Range	Step
Password		=	0000-9999	1111	-	Password for programming enable (see § Password)		
V> (1F59)	FuncEnab	→		Enable		Enable of the protection function	Enable/Disable	-
	Options	→	BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
			Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	TripLev	→	V>	1.10	Vn	Trip level of overvoltage protection	0.50 – 1.50	0.01
	Timers	→	tV>	1.00	s	Trip time delay	0.05 – 60.00	0.01
V>> (2F59)	FuncEnab	→		Enable		Enable of the protection function	Enable/Disable	-
	Options	→	BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
			Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	TripLev	→	V>>	1.30	Vn	Trip level of overvoltage protection	0.50 – 1.50	0.01
	Timers	→	tV>>	0.30	s	Trip time delay	0.05 – 60.00	0.01
V< (1F27)	FuncEnab	→		Enable		Enable of the protection function	Enable/Disable	-
	Options	→	BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
			Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	TripLev	→	V<	0.90	Vn	Trip level of undervoltage protection	0.20 – 1.20	0.01
	Timers	→	tV<	1.00	s	Trip time delay	0.05 – 60.00	0.01
V<< (1F27)	FuncEnab	→		Enable		Enable of the protection function	Enable/Disable	-
	Options	→	BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
			Trg	Disable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	TripLev	→	V<<	0.70	Vn	Trip level of undervoltage protection	0.20 – 1.20	0.01
	Timers	→	tV<<	0.30	s	Trip time delay	0.05 – 60.00	0.01
f> (F81)	FuncEnab	→		Enable		Enable of the protection function	Enable/Disable	-
	Options	→	BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
			Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	TripLev	→	f>	50.50	Hz	Trip level of overfrequency protection	40 – 70	0.01
	Timers	→	tf>	1.00	s	Trip time delay	0.05 – 60.00	0.01
f< (F81)	FuncEnab	→		Enable		Enable of the protection function	Enable/Disable	-
	Options	→	BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
			Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	TripLev	→	f<	40.50	Hz	Trip level of underfrequency protection	40 – 70	0.01
	Timers	→	tf<	1.00	s	Trip time delay	0.05 – 60.00	0.01

Function	Type	Display Variable	Default Value	Unit	Description	Setting Range	Step
Vo> (F59o)	<i>FuncEnab</i> <i>Options</i>	→	Enable		Enable of the protection function	Enable/Disable	-
		→ BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
		→ Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	<i>TripLev</i> <i>Timers</i>	→ Vo> → tVo>	1.10 1.00	Vn s	Trip level of zero sequence overvoltage protection Trip time delay	0.10 – 1.50 0.05 – 60.00	0.1 0.01
V1< (F27V1)	<i>FuncEnab</i> <i>Options</i>	→	Enable		Enable of the protection function	Enable/Disable	-
		→ BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
		→ Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	<i>TripLev</i> <i>Timers</i>	→ V1< → tV1<	1.10 1.00	Vn s	Trip level of positive sequence undervoltage protection Trip time delay	0.10 – 1.50 0.05 – 60.00	0.01 0.01
V2> (F59V2)	<i>FuncEnab</i> <i>Options</i>	→	Enable		Enable of the protection function	Enable/Disable	-
		→ BI	Disable		Operation controlled by Blocking Digital Input	Enable/Disable	-
		→ Trg	Enable		Function operation triggers the oscillographic wave form capture	Enable/Disable	-
	<i>TripLev</i> <i>Timers</i>	→ V2> → tV2>	1.30 0.30	Vn s	Trip level of negative sequence overvoltage protection Trip time delay	0.02 – 1.50 0.05 – 60.00	0.01 0.01
RTD	<i>FuncEnab</i> <i>Options</i> <i>TripLev</i> <i>Timers</i>	→	Disable		Enable of the protection function	Enable/Disable	-
		→ No Param.			No Parameters	-	-
		→ No Param.			No Parameters	-	-
		→ No Param.			No Parameters	-	-
IRF	<i>FuncEnab</i> <i>Options</i>	→	Enable		Enable of the protection function	Enable/Disable	-
		→ Opz	Trip		Operation of output Relays on detection of Internal Relay Fault	NoTrip – Trip	-
		→ No Param.			No Parameters	-	-
	<i>TripLev</i> <i>Timers</i>	→ No Param.			No Parameters	-	-
Osc	<i>FuncEnab</i> <i>Options</i>	→	Enable		Enable of the protection function	Enable/Disable	-
		→ Trg	Trip		Trigger operation mode	Disable	-
		→ No Param.			No Parameters	Start Trip Ext.Inp	-
	<i>TripLev</i> <i>Timers</i>	→ tPre → tPost	0.30 0.30		Recording time before Trigger Recording time after Trigger	0.10 – 0.50 0.10 – 1.50	0.1 0.1
Comm	<i>FuncEnab</i> <i>Options</i>	→ No Param.			No Parameters	-	-
		→ LBd	9600		Local Baud Rate	9600 - 19200	-
		→ RBd	9600		Remote Baud Rate (Rear panel terminal blocks RS485 communication speed)	38400 - 57600	-
		→ Mod	8,N,1		Remote mode (communication parameters)	8,N,1	-
	<i>TripLev</i> <i>Timers</i>	→ No Param.			Note: any change of this setting became valid at the next power on Remote Protocol	8,O,1 8,E,1	-
		→ No Param.	Modbus		Remote Protocol	IEC103-Modbus	-
		→ No Param.			No Parameters	-	-
		→ No Param.			No Parameters	-	-
LCD	<i>FuncEnab</i> <i>Options</i>	→ No Param.			No Parameters	-	-
		→ Key	BeepON		Buzzer "Beep" on operation of Keyboard buttons.	BeepON- BeepOFF	-
		→ BkL	ON		LCD Backlight continuously "ON" or switched-on Automatically on operation of Keyboard buttons.	ON - -OFF	-
	<i>TripLev</i> <i>Timers</i>	→ No Param.			No Parameters	-	-

Settings can also be programmed via the serial communication ports.

12.6 - RelayCfg (Relay Configuration)





To associate one of the Output Relays to one or more functions (see § Password): enter the menu "R/W Set", select "Relay Cfg", select the "Relay #" to be programmed, select "Link"; at this stage the list of the available functions is displayed. Scrolling the list by the "+" and "-" keys the function is selected and then assigned by the key "Enter". The assignation is confirmed by the function indication that switches from blinking to steady. Any of the Output Relays can be programmed to work in two different modes:

N.D.	Normally Deenergized	Relay is energized on trip of the associated functions
N.E.	Normally Energized	Relay is deenergized on trip of the associated functions

Programming of working mode is made as above selecting "OpMode" instead of "Link".

Relay	Type	Display	Default Value	Description	Setting Range
Relay1 (R1)	Link	→	tV>, tV>>, tf>, tVo>, fV2>	Association of functions to output relay R1	V> - tV> - V>> - tV>> - V< - tV< - V<< - tV<< - f> - tf> - f< - tf< - Vo> - tVo> - V1< - tV1< - V2> - tV2> - RTD - IRF - HwRecov.
	OpMode	→	N.D.	N.D. (Normally Deenergized) N.E. (Normally Energized)	N.D./N.E.
Relay2 (R2)	Link	→	tV<, tV<<, tf<, tV1<	Association of functions to output relay R2	V> - tV> - V>> - tV>> - V< - tV< - V<< - tV<< - f> - tf> - f< - tf< - Vo> - tVo> - V1< - tV1< - V2> - tV2> - RTD - IRF - HwRecov.
	OpMode	→	N.D.	N.D. (Normally Deenergized) N.E. (Normally Energized)	N.D./N.E.
Relay3 (R3)	Link	→	V>, V>>, V<, V<<, Vo>	Association of functions to output relay R3	V> - tV> - V>> - tV>> - V< - tV< - V<< - tV<< - f> - tf> - f< - tf< - Vo> - tVo> - V1< - tV1< - V2> - tV2> - RTD - IRF - HwRecov.
	OpMode	→	N.D.	N.D. (Normally Deenergized) N.E. (Normally Energized)	N.D./N.E.
Relay4 (R4)	Link	→	IRF	Association of functions to output relay R4	V> - tV> - V>> - tV>> - V< - tV< - V<< - tV<< - f> - tf> - f< - tf< - Vo> - tVo> - V1< - tV1< - V2> - tV2> - RTD - IRF - HwRecov.
	OpMode	→	N.E.	N.D. (Normally Deenergized) N.E. (Normally Energized)	N.D./N.E.








12.7 - Commands

-  "Commands"
-  1st Control,
-  to select other available control,
-  to operate selected control.


Display	Description
Clear	: Erase memory of Trip Counters, Event Records.
Test	: Starts a relay diagnostic test
Reset	: Reset after trip

12.8 - Info&Ver (Firmware - Info&Version)

The menu displays the Relay Model and the Firmware Version

-  "Real Time Meas"
 -  "Info/Ver",
 -  "Model XXXXXX",
 -  "RelayVrs ###.##.##X",
 -  to go back to "Info&Ver".
 -  to go back to "Real Time Meas".
-  Model Relay
Firmware Version

13. Keyboard Operational Diagram

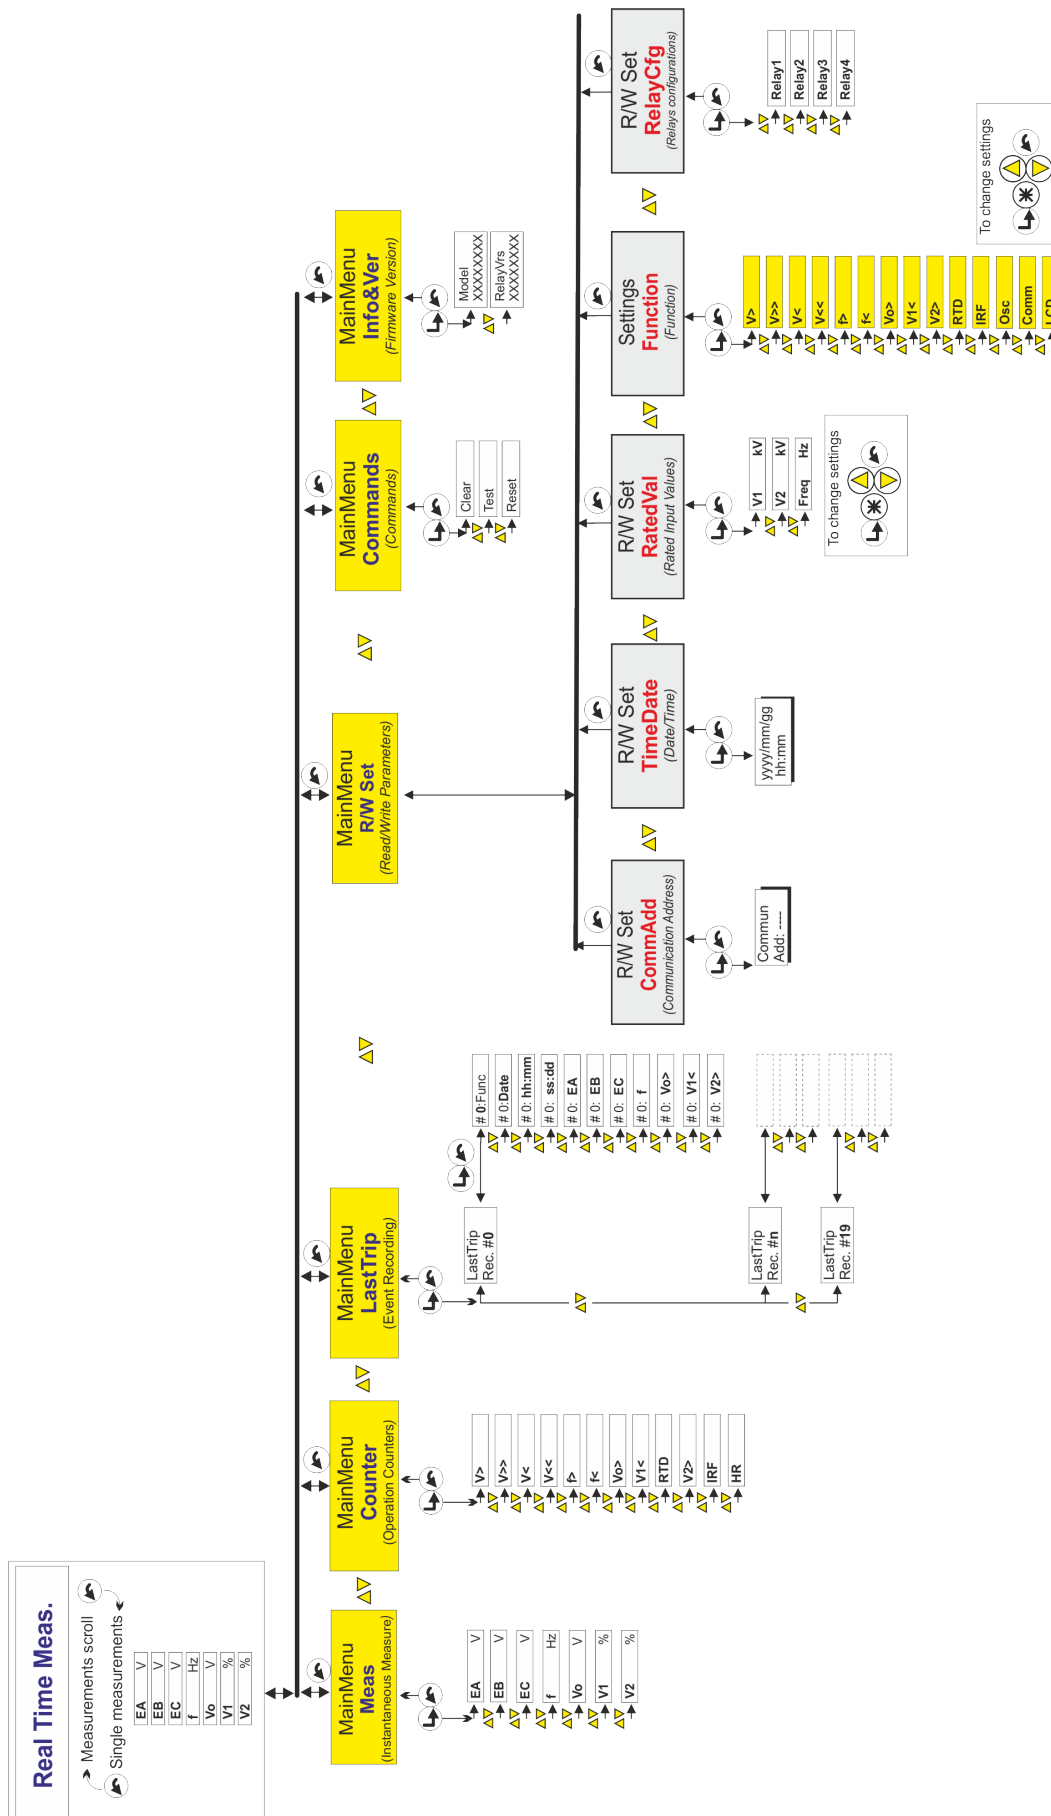













14. Password

This password is requested anytime the user wants to write in the "Settings" menu a command of the "Commands" menu.


The default password is "1111"

When password is required, proceed as follows

The Display shows the message "Password ????"

		to select 1 st digit (1-9)		to validate
		to select 2 nd digit (1-9)		to validate
		to select 3 rd digit (1-9)		to validate
		to select 4 th digit (1-9)		to complete procedure.

The "password" is required any time you attempt to modify one of the programmable variables at the first entrance in the "Settings" and/or "Commands" menus.

The "password" remains valid for 2 minutes from the last operation of the programming buttons or until the  button is pressed to return to the default display (RT Meas).

Once the Password has been entered, a "#" appears before the variable that can be modified.

14.1 - MS-Com Password

This password is requested anytime the user wants to send to the relay a setting parameters modification or to issue a command through the relay itself using the managing software MSCom.

The user can decide whether inserting his own password (see MS-Com Operational Manual) or keeping the password disabled just clicking on the OK button when the password is requested.

15. Maintenance


No maintenance is required. In case of malfunctioning please contact Microelettrica Scientifica Service or the local Authorised Dealer mentioning the relay's Serial No reported in the label on relays enclosure.

16. power frequency insulation test

Every relay individually undergoes a factory insulation test according to IEC255-5 standard at 2 kV, 50 Hz 1min. Insulation test should not be repeated as it unusefully stresses the dielectrics.


When doing the insulation test, the terminals relevant to serial output, digital inputs and RTD input must always be short circuited to ground. When relays are mounted in switchboards or relay boards that have to undergo the insulation tests, the relay should be isolated. This is extremely important as discharges eventually tacking place in other parts or components of the board can severely damage the relays or cause damages not immediately evident to the electronic components.

17. Connection Diagram

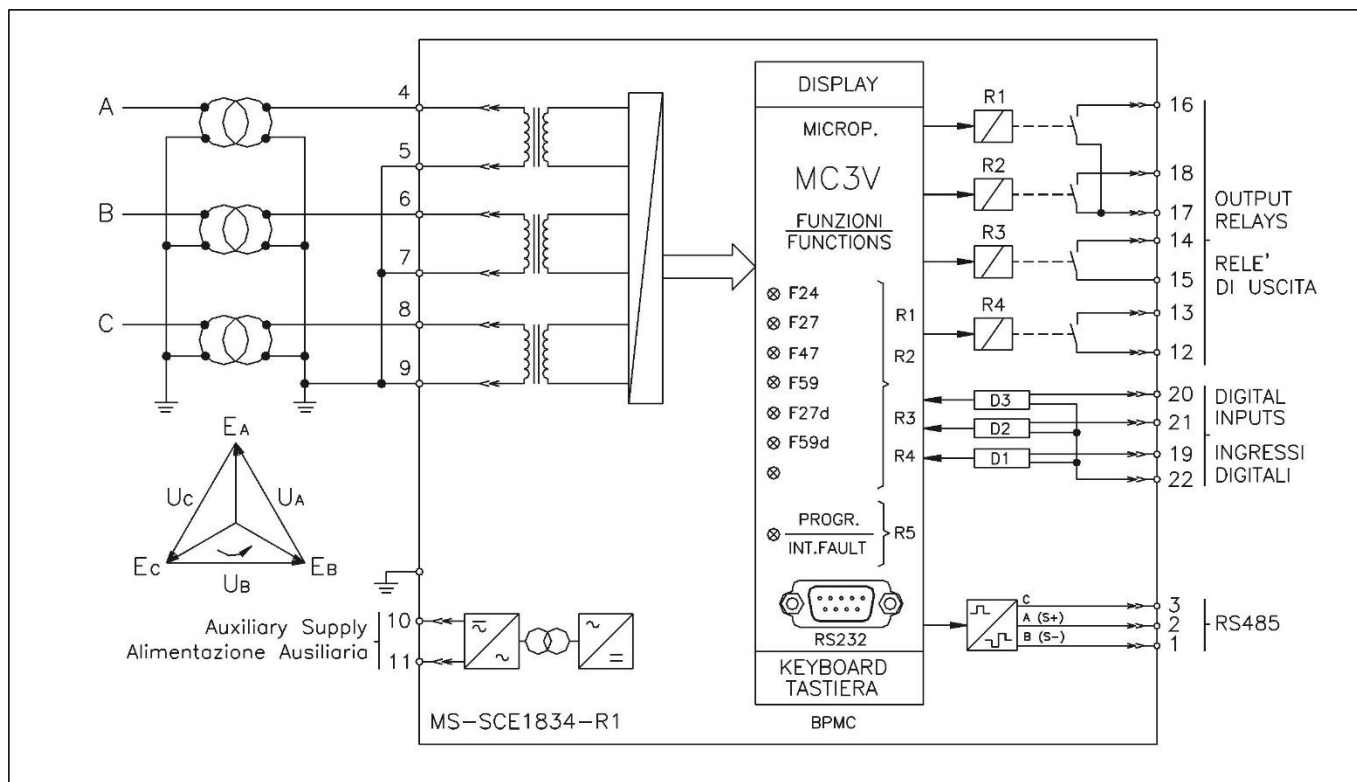

18. Overall Dimensions

PROTECTION DEGREE IP44 (IP54 on request)

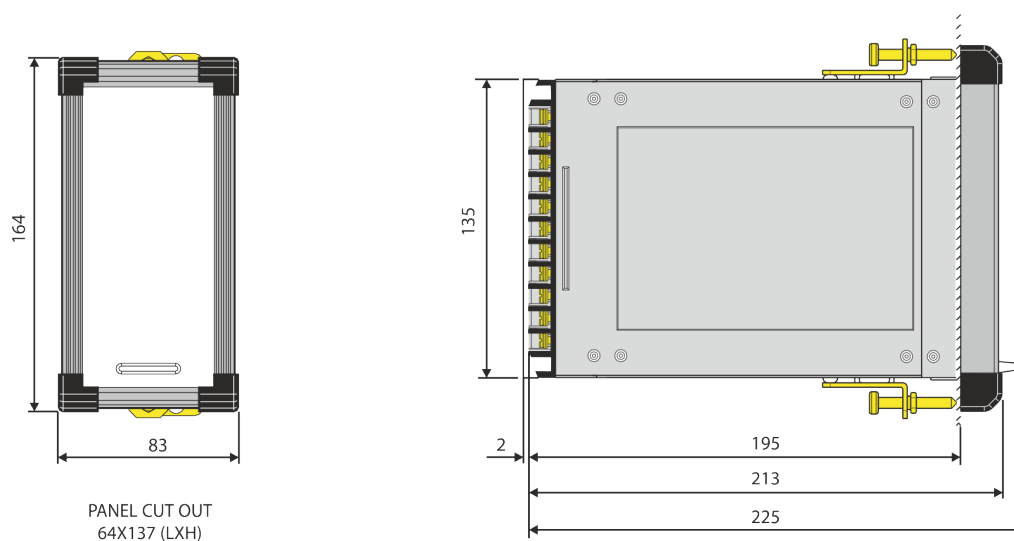


19. Direction for PCB's Draw-Out and Plug-In

19.1 - Draw-Out

Rotate clockwise the screws ① in the horizontal position of the screws-driver mark.
Draw-out the PCB by pulling on the handle ②

19.2 - Plug-In

Rotate clockwise the screws ① in the horizontal position of the screws-driver mark.
Slide-in the card on the rails provided inside the enclosure.
Plug-in the card completely and by pressing the handle to the closed position.
Rotate anticlockwise the screws ① with the mark in the vertical position (locked).

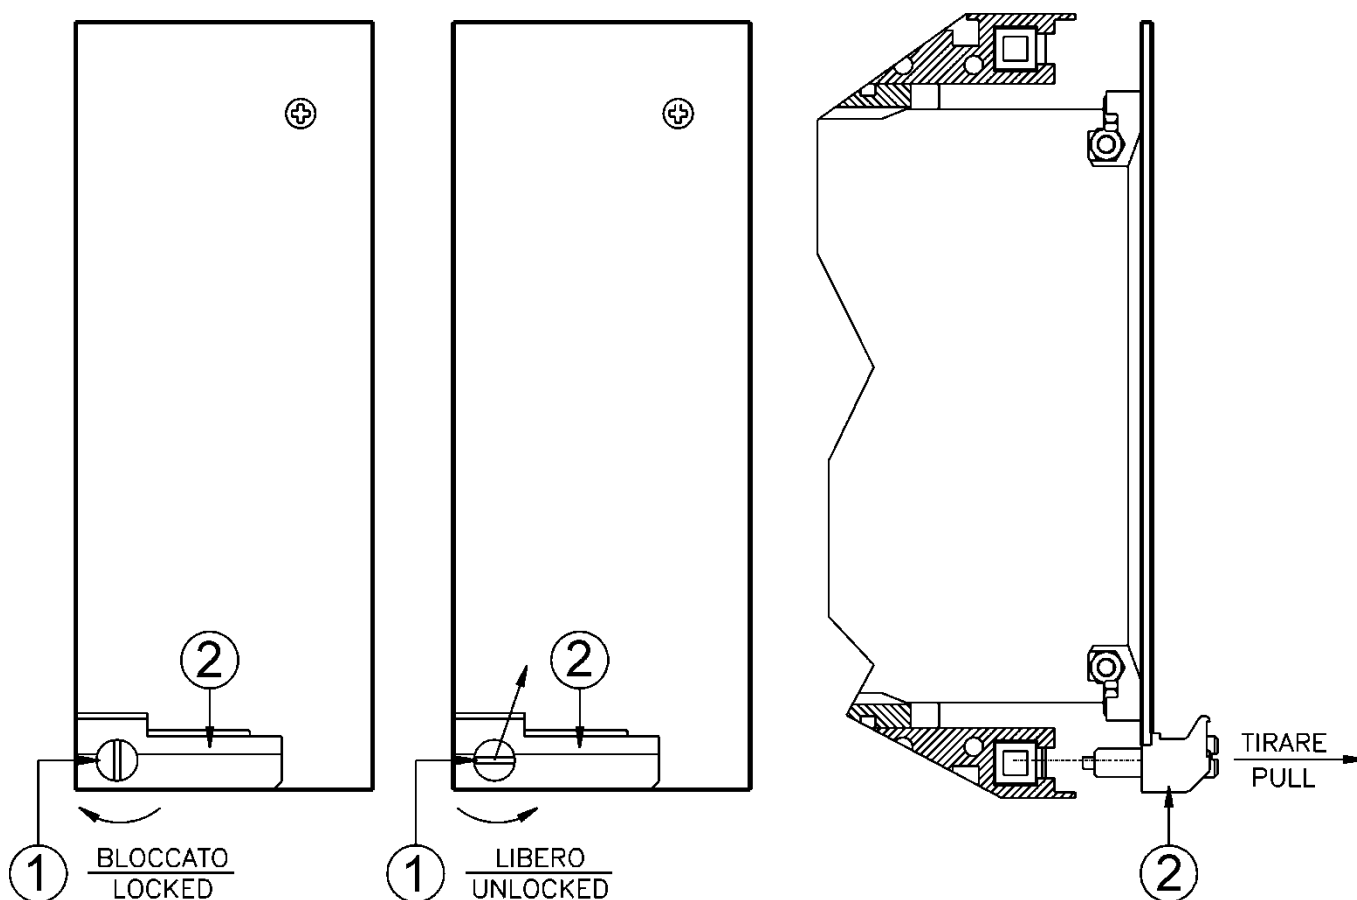

20. Electrical Characteristics

APPROVAL: CE

REFERENCE STANDARDS IEC 60255 - CE Directive - EN/IEC61000 - IEEE C37

Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) – 1,2/50µs
Insulation resistance	> 100MΩ	

Environmental Std. Ref. (IEC 60068)

Operation ambient temperature	-10°C / +55°C		
Storage temperature	-25°C / +70°C		
Environmental testing	(Cold)	IEC60068-2-1	
	(Dry heat)	IEC60068-2-2	
	(Change of temperature)	IEC60068-2-14	
	(Damp heat, steady state)	IEC60068-2-78	RH 93% Without Condensing AT 40°C

CE EMC Compatibility (EN61000-6-2 - EN61000-6-4 - EN50263)

Electromagnetic emission	EN55011/22	industrial environment		
Radiated electromagnetic field immunity test	IEC61000-4-3	level 3	80-2000MHz	10V/m
	ENV50204		900MHz/200Hz	10V/m
Conducted disturbances immunity test	IEC61000-4-6	level 3	0.15-80MHz	10V
Electrostatic discharge test	IEC61000-4-2	level 3	6kV contact / 8kV air	
Power frequency magnetic test	IEC61000-4-8		1000A/m	50/60Hz
Pulse magnetic field	IEC61000-4-9		1000A/m, 8/20µs	
Damped oscillatory magnetic field	IEC61000-4-10		100A/m, 0.1-1MHz	
Immunity to conducted common mode disturbance 0Hz-150KHz	IEC61000-4-16	level 4		
Electrical fast transient/burst	IEC61000-4-4	level 3	2kV, 5kHz	
HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3	400pps, 2,5kV (m.c.), 1kV (d.m.)	
Oscillatory waves (Ring waves)	IEC61000-4-12	level 4	4kV(c.m.), 2kV(d.m.)	
Surge immunity test	IEC61000-4-5	level 4	2kV(c.m.), 1kV(d.m.)	
Voltage interruptions	IEC60255-4-11			
Resistance to vibration and shocks	IEC60255-21-1 - IEC60255-21-2 - 10-500Hz - 1g			

Electric Rated Value

Accuracy at reference value of influencing factors	2% Un	for measure
	2% + to (to=20÷30ms)	for times
Rated Voltage	Un = (50 ÷ 230) Vac	
Voltage overload	2Un 1sec	
Burden on voltage inputs	0,2VA at Un	
Average power supply consumption	≤ 7 VA	
Output relays	rating 6 A; Vn = 250 V	
	A.C. resistive switching = 1500VA (400V max)	
	make = 30 A (peak) 0,5 sec.	
	break = 0.3 A, 110 Vcc, L/R = 40 ms (100.000 op.)	

Communication Parameter

RS485 (Back)	9600/19200 bps – 8,n,1 - 8,e,1 - 8,o,1 – Modbus RTU or IEC60870-5-103
RS232 (Front)	9600 - 19200 - 38400 - 57600 – 8,n,1 – Modbus RTU

This publication may be subject to alteration without prior notice. Therefore, a printed copy of this document may not be the latest revision. Please contact your local representative for the latest update. The trademarks MS Microelettrica Scientifica, Knorr and Knorr-Bremse as well as the figurative mark "K" are registered. Copyright © Knorr-Bremse AG and Microelettrica Scientifica SpA - all rights reserved, including industrial property rights application. Knorr-Bremse AG and Microelettrica Scientifica SpA retain any power of disposal, such as for copying and transferring.



20090 Buccinasco (MI) · Via Lucania 2 · Italy · Tel.: +39 02 575731
E-Mail: info@microelettrica.com · www.microelettrica.com