



MULTIFUNCTION MANAGER RELAY


TYPE

FMR-PLk

(Multiple I/O Boards)

ULTRA Line

OPERATION MANUAL

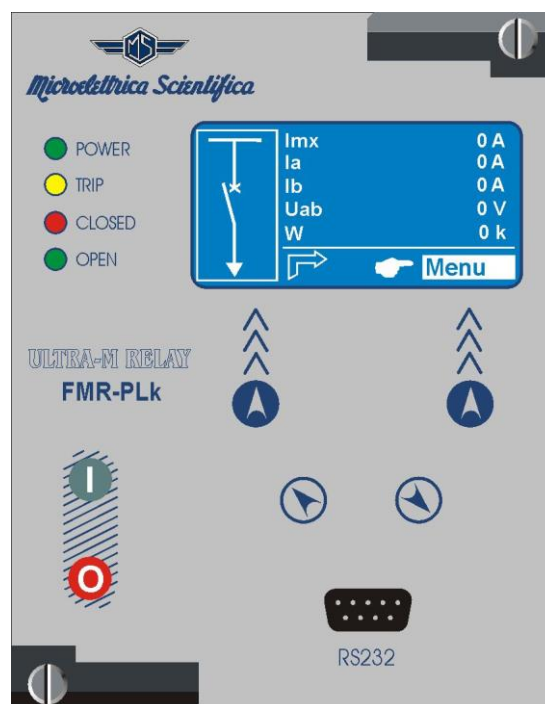



1. General Utilization and Commissioning Directions	6
1.1 - Storage and Transportation	6
1.2 - Installation	6
1.3 - Electrical Connection	6
1.4 - Measuring Inputs and Power Supply	6
1.5 - Outputs Loading	6
1.6 - Protection Earthing	6
1.7 - Setting and Calibration	6
1.8 - Safety Protection	6
1.9 - Handling	6
1.10 - Maintenance	6
1.11 - Fault Detection and Repair	7
2. General	7
2.1 - Power Supply – Main Relay	7
2.2 - Power Supply – Signalization Module (PSU) (Signalization module)	7
3. Front Panel	7
4. Keyboard and Display	8
4.1 - Display	8
5. Icons of Display	9
6. Signalization on Main Relay	10
6.1 - Leds Manual Reset	10
6.2 – Display of the last trip	10
6. Signalization Module (Optional)	11
6.1 – Description parameters (only in MScOm2)	11
6.1.1 – “Name”	12
6.1.2 – “Link enable”	12
6.1.3 – “Status”	12
6.1.4 – “Light Prog.”	12
6.1.5 – “Funct. Mode”	12
6.1.6 – “Functions”	12
6.1.7 – “Table 1”	13
6.1.8 – “Example”: Change settings for “Led5”	15
6.1.8.1 - “Enable”	15
6.1.8.2 - “Flashing”	16
6.1.8.3 - “Latched”	17
6.1.8.4 - “Functions”	17
7. User Variables	18
7.1 – “Name”	18
7.2 – “User Descr.”	18
7.3 – “Linked functions”	18
7.4 – “OpLogic”	18
7.5 – “Timer”	18
7.6 – “Timer type”	18
7.7 – “Logical status”	18
7.8 – “Example”: Setting “User Variable”	19
7.9 – “User description” (User descr.)	20
7.10 - “Linked Functions”	20
7.11 - “Operation Logic” (Oplogic)	21
7.12 - “Timer”	21
7.13 - “Timer type”	22
 8. Cmd (Local Commands)	23
 9. Measure	24
 10. Energy	25
 11. LTrip (Trips Recorded)	26
 12. Cnt (Statistical Counters)	28
 13. RCE (Recording Chronological Events)	30
13.1 – Events on display	31
 14. System (System parameters)	33

15.	Settings	36
15.1	- Modifying the setting of variables	37
15.2	- Password	38
15.3	- Menu: Comm. (Communication)	39
15.3.1	- Description of variables	39
15.3.2	- Front Panel serial communication port (RS232)	39
15.3.3	- Cable for direct connection of Relay to Personal Computer	39
15.3.4	- Main serial communication port (RS485)	39
15.4	- Menu: LCD (Human Machine Interface - customize)	40
15.4.1	- Description of variables	40
15.5	- Function: T> (Thermal Image F49)	42
15.5.1	- Description of variables	42
15.5.2	- Trip and Alarm	42
15.5.2.1	- Operation mode "I _{max} "	42
15.5.2.2	- Operation mode "I _{1-I2} "	42
15.5.2.3	- Trip time of the Thermal Image Element	43
15.5.2.4	- Thermal Image Curves (TU1024 Rev.1)	44
15.6	- Function: 1I> (First Overcurrent Element F50/51)	45
15.6.1	- Description of variables	45
15.6.2	- Algorithm of the time current curves	46
15.6.3	- IEC Curves	47
15.6.4	- IEEE Curves	48
15.6.5	- Operation of the phase Overcurrent Elements in function of variable "f(a)"	49
15.6.6	- Operation of the Overcurrent Element with Voltage Control f(U)	51
15.6.7	- Blocking Logic (BO-BI)	52
15.6.7.1	- Output Blocking signal "BO"	52
15.6.7.2	- Blocking Input "BI"	52
15.6.8	- Automatic doubling of Overcurrent thresholds on current inrush	52
15.7	- Function: 2I> (Second Overcurrent Element F50/51)	53
15.7.1	- Description of variables	53
15.8	- Function: 3I> (Third Overcurrent Element F50/51)	54
15.8.1	- Description of variables	54
15.9	- Function: 1Io> (First Earth Fault Element 50N/51N)	55
15.9.1	- Description of variables	55
15.9.2	- Operation mode of the Earth Fault elements programming the variable "f(a ₀)"	56
15.10	- Function: 2Io> (Second Earth Fault Element 50N/51N)	57
15.10.1	- Description of variables	57
15.11	- Function: 3Io> (Second Earth Fault Element 50N/51N)	58
15.11.1	- Description parameters	58
15.12	- Function: 1Is> (First Negative Sequence Element F46)	59
15.12.1	- Description of variables	59
15.12.2	- Time/Current operation of the first Current Unbalance element "f(t)"	59
15.13	- Function: 2Is> (Second Negative Sequence Element F46)	60
15.13.1	- Description of variables	60
15.14	- Function: 1U> (First Overvoltage Element F59)	61
15.14.1	- Description of variables	61
15.15	- Function: 2U> (Second Overvoltage Element F59)	61
15.15.1	- Description of variables	61
15.16	- Function: 1U< (First Undervoltage Element F27)	62
15.16.1	- Description of variables	62
15.17	- Function: 2U< (Second Undervoltage Element F27)	62
15.17.1	- Description of variables	62
15.18	- Function: 1f> (First Overfrequency Element F81>)	63
15.18.1	- Description of variables	63
15.19	- Function: 2f> (Second Overfrequency Element F81>)	63
15.19.1	- Description of variables	63
15.20	- Function: 3f> (Third Overfrequency Element F81>)	63
15.20.1	- Description of variables	63
15.21	- Function: 1f< (First Underfrequency Element F81<)	64
15.21.1	- Description of variables	64
15.22	- Function: 2f< (Second Underfrequency Element F81<)	64
15.22.1	- Description of variables	64
15.23	- Function: 3f< (Third Underfrequency Element F81<)	64
15.23.1	- Description of variables	64
15.24	- Function: 1Uo> (First Zero Sequence Overvoltage Element F59Uo)	65
15.24.1	- Description of variables	65
15.25	- Function: 2Uo> (Second Zero Sequence Overvoltage Element F59Uo)	65
15.25.1	- Description of variables	65
15.26	- Function: U1< (Positive Sequence Undervoltage Element F27U1)	66
15.26.1	- Description of variables	66
15.27	- Function: U2> (Negative sequence Overvoltage Element F59U2 or F47)	66
15.27.1	- Description of variables	66
15.28	- Function: Wi (Circuit Breaker maintenance level)	67
15.28.1	- Description of variables	67
15.28.2	- Operation (Accumulation of the interruption Energy)	67



15.29 - Function: TCS (Trip Circuit Supervision)	68
15.29.1 - Description of variables	68
15.29.2 - Operation	68
15.30 - Function: IRF (Internal Relay Fault)	69
15.30.1 - Description of variables	69
15.30.2 - Operation	69
15.31 - Function: RT (Remote Trip)	69
15.31.1 - Description of variables	69
15.31.2 - Operation	69
15.32 - Function: TripTimeRd. (Trip Time Reduction)	70
15.32.1 - Description of variables	70
15.32.2 - Operation	70
15.33 - Function: MotSt (Motor Starts)	71
15.31.1 - Description of variables	71
15.34 - Function: LR (Locked Rotor - Rotor jam)	71
15.34.1 - Description of variables	71
15.34.2 - Operation	71
15.35 - Function: StNo (Limitation Start Number)	72
15.35.1 - Description of variables	72
15.36 - Function: StSeq (Starting Sequence Control)	72
15.36.1 - Description of variables	72
15.36.2 - Operation	72
15.37 - Function: IK (No load running)	73
15.37.1 - Description of variables	73
15.37.2 - Operation	73
15.38 - Function: CB Manage (Control C/B)	74
15.38.1 - Description of variables	74
15.38.2 - Display Message	75
15.39 - Function: Oscillo (Oscillographic Recording)	76
15.39.1 - Description of variables	76
15.39.2 - Operation	76
15.39.3 - Setting "User Trigger Oscillo"	77
15.39.3.1 - "Name"	77
15.39.3.2 - "User descr."	77
15.39.3.3 - "Linked functions"	77
15.39.3.4 - "OpLogic"	77
15.39.3.5 - "Timer"	77
15.39.3.6 - "Timer type"	77
15.39.3.7 - "Logical status"	77
15.39.3.8 - "Example": Setting "User Variable"	78
15.39.3.9 - "Linked Functions"	79
15.39.3.10 - "Operation Logic" (Oplogic)	80
15.39.3.11 - "Timer"	80
15.39.3.12 - "Timer type"	81
15.40 - Function: BreakerFail (Breaker Failure)	82
15.40.1 - Description of variables	82
15.40.2 - Operation	82
15.41 - Function: ExtReset (External Reset Configuration)	82
15.41.1 - Description of variables	82
16.  Input - Output (via software MCom2)	83
16.1 - Digital Input	83
16.2 - "DI" Configuration (via MCom2 software)	83
16.2.1 - "Example"	84
16.2.2 - "Name"	84
16.2.3 - "Status"	84
16.2.4 - "OpLogic"	84
16.2.5 - "Functions"	84
16.2.6 - "Example": Setting "Digital Input"	84
16.2.7 - "Functions"	85
16.3 - Outputs Relay	86
16.4 - "DO" Configuration	86
16.4.1 - "Example"	88
16.4.1.1 - "Relay"	88
16.4.1.2 - "Linked function"	88
16.4.1.3 - "Operation Logic"	88
16.4.1.4 - "Logical Status"	88
16.4.1.5 - "Output Configuration"	88
16.4.1.6 - "tON - Operation Time"	88
16.4.1.7 - "Relay Status"	88
16.4.1.8 - "Functions - Operation Mode"	89
16.4.3 - "Example": Change settings for "O.R1"	90
16.4.3.1 - "Linked Functions"	90
16.4.3.2 - "Output Config"	91
16.4.3.3 - "Function"	92
16.4.3.4 - "tON"	92



17.	 DATE and TIME	93
	17.1 – Clock synchronization	94
18.	 Healthy (Diagnostic Information)	95
19.	 Dev.Info (Relay Version)	95
20.	Battery	96
21.	Maintenance	96
22.	Power Frequency Insulation Test	96
23.	Basic Relay - Wiring Diagram	97
	23.1 – UX10-4 - Expansion Module - Wiring Diagram (10 Digital Inputs - 4 Digital Outputs)	97
	23.2 – 14DI - Expansion Module - Wiring Diagram (14 Digital Inputs)	98
	22.3 – 14DO - Expansion Module - Wiring Diagram (14 Output Relays)	98
	23.3 – PSU – Power Supply for Expansion Module - Wiring Diagram	98
24.	Wiring the Serial Communication Bus	99
25.	Overall Dimensions	100
	25.1 - Configuration box	100
	25.2 – Box “E2”	101
	25.3 – Box “E3” & Box “E4”	102
	25.2 – Box “E5”	103
	25.2 – Rack 3U	103
	25.1 - Expansion Module - Overall Dimensions	104
26.	Direction for Pcb's Draw-Out and Plug-In	105
	26.1 - Draw-out	105
	26.2 – Plug-in	105
27.	Electrical Characteristics	106
28.	Software & Firmware Version	107



1. General Utilization and Commissioning Directions

Always make reference to the specific description of the product and to the Manufacturer's instruction. Carefully observe the following warnings.

1.1 - Storage and Transportation

Must comply with the environmental conditions stated in the product's specification or by the applicable IEC standards.

1.2 - Installation

Must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

1.3 - Electrical Connection

Must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

1.4 - Measuring Inputs and Power Supply

Carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

1.5 - Outputs Loading

Must be compatible with their declared performance.

1.6 - Protection Earthing

When earthing is required, carefully check its effectiveness.

1.7 - Setting and Calibration

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

1.8 - Safety Protection

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.

1.9 - Handling

Notwithstanding the highest practicable protection means used in designing M.S. electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules. The damage caused by electrostatic discharge may not be immediately apparent but the design reliability and the long life of the product will have been reduced. The electronic circuits produced by M.S. are completely safe from electrostatic discharge (8 kV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

1.10 - Maintenance

Make reference to the instruction manual of the Manufacturer; maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

1.11 - Fault Detection and Repair

Internal calibrations and components should not be altered or replaced.
For repair please ask the Manufacturer or its authorized Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

2. General

Input currents are supplied to 4 current transformers: - three measuring phase current - one measuring the earth fault zero-sequence current.

Current input can be selected 1A or 5A by movable jumpers available on relay cards.

Input voltage are supplied to 4 Potential Transformers: three measuring phase-to-neutral voltage and one measuring the zero sequence voltage supplied by the secondary of three system P.Ts. Y/Open Delta connected.

The Measuring Ranges of the different inputs respectively are:

Phase Currents	: (0.1-40)In	Phase Voltage	: (0.01-2)Un
Neutral Current	: (0.01-10)On	Neutral Voltage	: (0.01-2)Un

Make electric connection in conformity with the diagram reported on relay's enclosure.

Check that input currents and voltages are same as reported on the diagram and on the test certificate.
The auxiliary power is supplied by a built-in interchangeable module fully isolated and self protected.

2.1 - Power Supply – Main Relay

The relay can be fitted with two different types of **power supply**:


Type 1) - {	24V(-20%) / 110V(+15%) a.c.	Type 2) - {	80V(-20%) / 220V(+15%) a.c.
	24V(-20%) / 125V(+20%) d.c.		90V(-20%) / 250V(+20%) d.c.

Before energizing the unit check that supply voltage is within the allowed limits.


2.2 - Power Supply – Signalization Module (PSU) (Signalization module)

90 ÷ 125 (±20%) Vd.c.

3. Front Panel

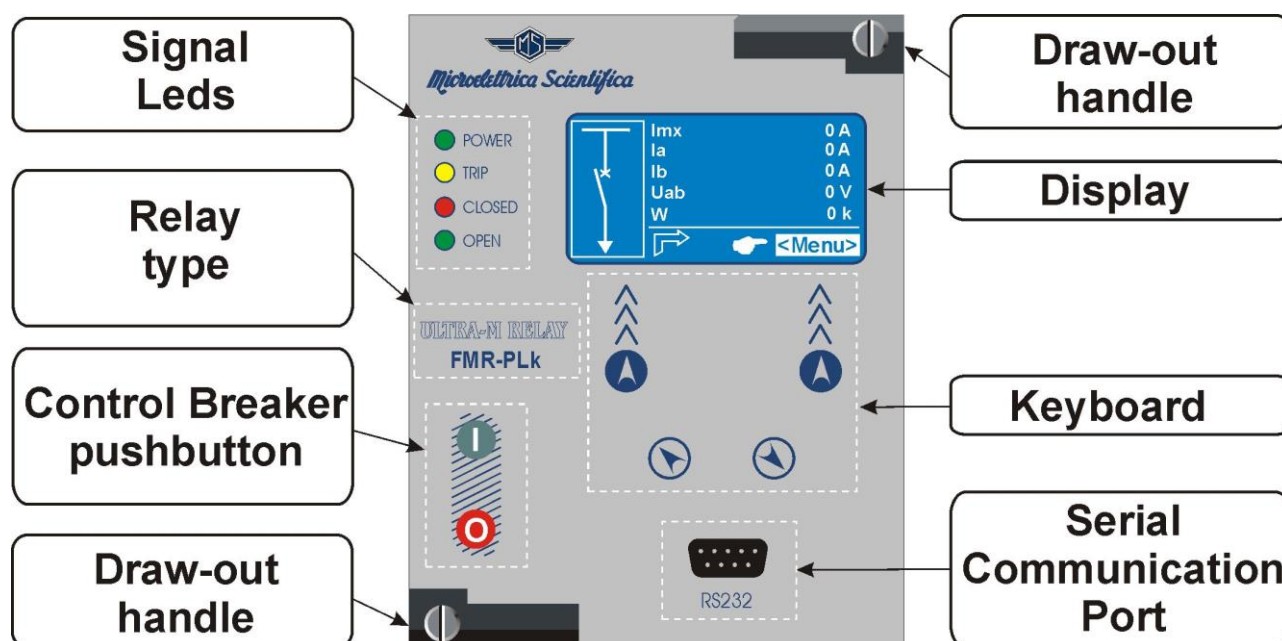

4. Keyboard and Display

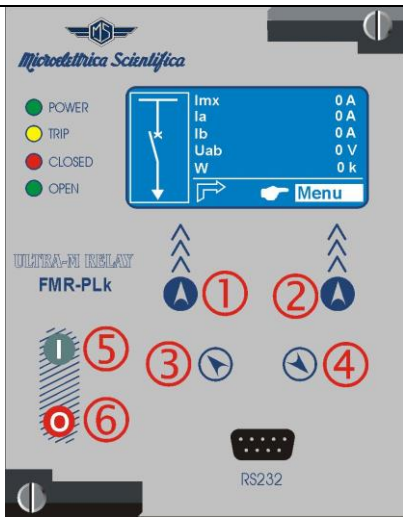	 Navigation menu	By these buttons the options showed in correspondence on the display are selected.
	 Increase	These buttons are used to scroll the items of the different menus (Local Control, Measurements, Energy metering etc).
	 Decrease	
	 Open	these buttons (when enabled) operate Circuit Breaker Open/Close control (see § C/B manage)
	 Close	


□ By the key ② select the windows showing the ICONS of the available menus.

□ By the key ③, ④ select the desired icon and enter by key ①

□ The different elements can be selected by the key ③ and ④.
The details of the individual menus are given in the following paragraphs.

4.1 - Display

The 128x64 pixel LCD display the available information (menu, etc.).

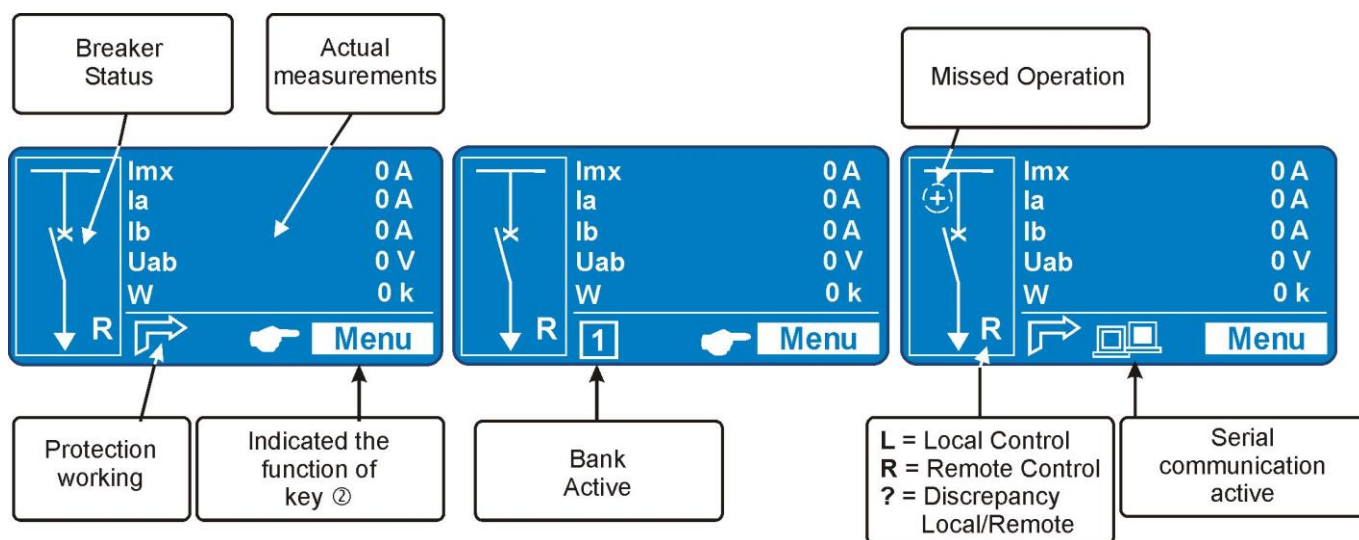



5. Icons of Display

**Cmd**

Local Commands

**Measure**

Actual Measurements

**Energy**

Energy Measurements

**LTrip**

Trips Recorded

**Cnt**

Statistical Counters

**RCE**

Recorder Chronological Events

**Setting**

Function Settings

**Sys**

System Parameters

**TimeDate**

Time And Date

**Healthy**


Diagnostic Information

**Info**

Info Device

6. Signalization on Main Relay

Four signal leds are provided:

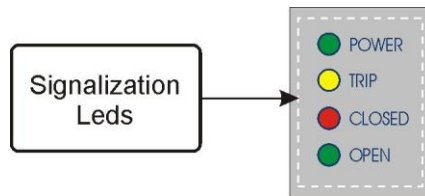

Green Led	 POWER	☐ Illuminated ☐ Flashing	- Relay working properly. - Internal Relay Fault
Yellow Led	 TRIP	☐ Off ☐ Illuminated ☐ Flashing	- No Trip - Trip occurred - Function Timing Reset from Illuminated status is manual (see § 6.1)
Red Led	 CLOSED	☐ Off ☐ Illuminated	- C/B Open - C/B Close
Green Led	 OPEN	☐ Off ☐ Illuminated	- C/B Close - C/B Open
Both Flashing Operation of Trip Circuit Supervision element.			
☐ In case of auxiliary power supply failure the status of the leds is recorded and reproduced when power supply is restored.			

6.1 - Leds Manual Reset

For Leds' manual reset operate as follows:

- 
 - Press "**Menu**" for access to the main menu with icons.
- 
 - Select icon "**LocalCmd**".
 - Press "**Select**".
- 
 - Select "**LedClear**".
 - Press "**Select**" to execute the command. (See § Password).
- 
 - When command has been executed the display shows "**! Command Done**";


6.2 – Display of the last trip

Beside the signalization of the yellow led "Trip", indicating a generic function trip, the display shows a window indicating the last function that was tripped and the number of events that are stored in the memory. The display will show this window until the reset button or external reset are operated.

- 
 - Press "**Menu**" to access to the main menu with icons. Press "**Res.**" to erase visualization. Ex. "t1l>" (flashing) is the last trip.

6. Signalization Module (Optional)


The firmware can manage up to 53 signal leds, 4 led are available on the main relay module, the remaining are available on additional expansion modules (1 “Power” (green), 49 “Programmable” (red)) controlled via the CAN-Bus communication channel (external wired).

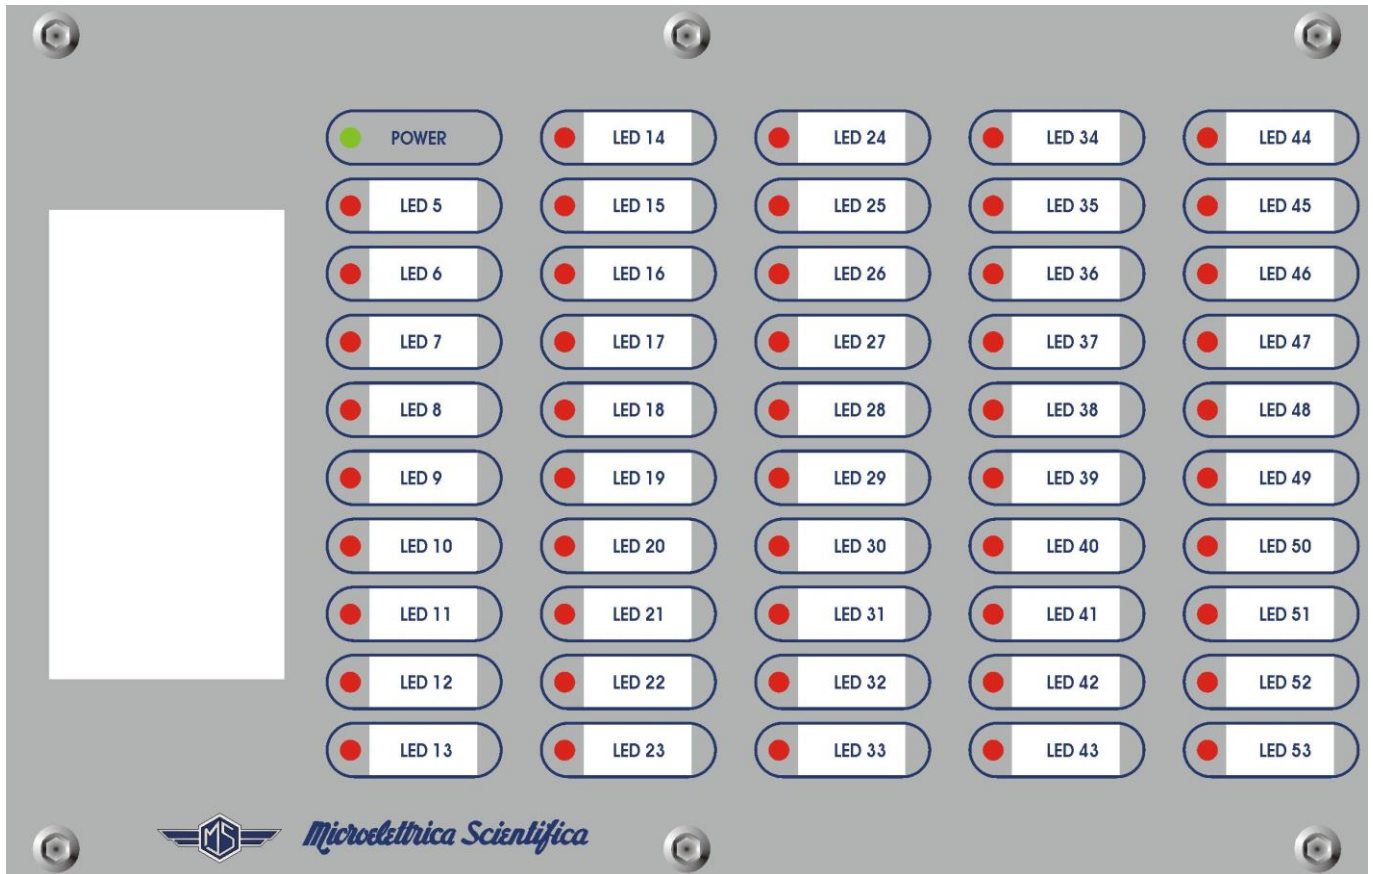


6.1 – Description parameters (only in MSCom2)

For Leds' programming (only via MSCom2) operate as follows:

- Open “MSCom2” program and connect to the relay.
- Select “Change Windows” from “Menu” button

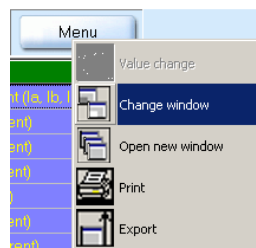

- Select “Led Setting”





The window for led configuration will show:

ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	1 >
2	Led 2	Not linked	Light off	Light on	Volatile	1 >

6.1.1 – “Name”

Led name – for leds position see picture

6.1.2 – “Link enable”

Linked = Enable to operate
No Linked = Disable

6.1.3 – “Status”

Light-OFF = Normal condition
Light-ON = When cause appear led is illuminated
Flashing = When cause appear led is flashing

See “Light Prog”

6.1.4 – “Light Prog.”

Light-ON = When cause appear led is illuminated
Flashing = When cause appear led is flashing

6.1.5 – “Funct. Mode”

Volatile = When cause disappear led turn-off (Not memorized)
Latched = When cause disappear led remain illuminated (memorized)

6.1.6 – “Functions”

Select the function assigned to specific led (see table 1).
 Its possible to configure only one function for each led.
 For configuration multiple functions use “UserVar” function.

6.1.7 – “Table 1”

Functions	Element	Description
T>	Tal T>	Alarm Trip Thermal Image T>
1I>	1I> t1I>	Start Trip First overcurrent element F50-51
2I>	2I> t2I>	Start Trip Second overcurrent element F50-51
3I>	3I> t3I>	Start Trip Third overcurrent element F50-51
1Io>	1Io> t1Io>	Start Trip First earth fault element F50N-51N
2Io>	2Io> t2Io>	Start Trip Second earth fault element F50N-51N
3Io>	3Io> t3Io>	Start Trip Third earth fault element F50N-51N
1Is>	1Is> t1Is>	Start Trip First negative sequence current element F46
2Is>	2Is> t2Is>	Start Trip Second negative sequence current element F46
1U>	1U> t1U>	Start Trip First overvoltage element F59
2U>	2U> t2U>	Start Trip Second overvoltage element F59
1U<	1U< t1U<	Start Trip First undervoltage element F27
2U<	2U< t2U<	Start Trip Second undervoltage element F27
1f>	1f> t1f>	Start Trip First overfrequency element F81
2f>	2f> t2f>	Start Trip Second overfrequency element F81
3f>	3f> t3f>	Start Trip Third overfrequency element F81
1f<	1f< t1f<	Start Trip First underfrequency element F81
2f<	2f< t2f<	Start Trip Second underfrequency element F81
3f<	3f< t3f<	Start Trip Third underfrequency element F81
1Uo>	1Uo> t1Uo>	Start Trip First zero sequence voltage element F59Uo
2Uo>	2Uo> t2Uo>	Start Trip Second zero sequence voltage element F59Uo
U1<	U1< tU1<	Start Trip Positive sequence undervoltage element F27U1
U2>	U2> tU2>	Start Trip Negative sequence overvoltage element F59U2
I<	I< tI<	Start Trip Undercurrent (no-load running) element F37
Wi	tWi>	Circuit breaker maintenance level
TCS	tTCS	Trip coil supervision
IRF	IRF tIRF	Start Trip Internal Relay Failure
BF	tBF	Trip Breaker Failure
RT	RT tRT	Start Trip Remote Trip

MotON		<i>Motor status – ON</i>
LR	<i>Start</i>	<i>Locked Rotor</i>
tLR	<i>Trip</i>	<i>Locked Rotor</i>
LimStNum		<i>Limitation of the number of startings</i>
StSeqSucc		<i>Start Sequence Successful</i>
Itr		<i>Switch-over (transition) current</i>
Gen.Start	<i>Start</i>	<i>Generic</i>
Gen.Trip	<i>Trip</i>	<i>Generic</i>
manOpCmd		<i>Manual Open Command</i>
L/Rdisc		<i>Local/Remote signal Discrepancy</i>
CL-Cmd		<i>Close Command</i>
C/Bfail		<i>Circuit Breaker failure</i>
OscilloTrigger Logic		<i>User Variable for Oscillographic Recording</i>
Gate1 to Gate25		<i>User Variable</i>
Vcc		<i>Reserved</i>
Gnd		<i>Reserved</i>
Reset		<i>Reset signal logic</i>
P1		<i>Push-button Open</i>
P2		<i>Push-button Close</i>
SCDop		<i>Scada open breaker command</i>
SCDcl		<i>Scada close breaker command</i>
SCDop2		<i>Scada open breaker 2 command (generic command)</i>
SCDcl2		<i>Scada close breaker 2 command (generic command)</i>
SCDop3		<i>Scada open breaker 3 command (generic command)</i>
SCDcl3		<i>Scada close breaker 3 command (generic command)</i>
SCDop4		<i>Scada open breaker 4 command (generic command)</i>
SCDcl4		<i>Scada close breaker 5 command (generic command)</i>
DisRCL		<i>Scada disable reclose command</i>
EnRCL		<i>Scada enable reclose command</i>
TripTimerR		<i>Trip Time Reduction</i>
0.D1 0.D1Not ---		<i>Digital Input on Main Relay</i>
0.D6 0.D6Not ---		
1.D1 1.D1Not ---		<i>Digital input on Expansion Board 1 - 14DI</i>
1.D15 1.D15Not ---		
2.D1 2.D1Not ---		<i>Digital input on Expansion Board 2 - 14DI</i>
2.D15 2.D15Not ---		
0.R1 0.R2 0.R3 0.R4 0.R5 0.R6		<i>Output relay on Main Relay</i>
1.R1 ---- to 1.R14		<i>Output relay on Expansion Board 3 - 14DO-F</i>

6.1.8 – “Example”: Change settings for “Led5”

Change settings for “**Led5**” : “**Enable**”, “**Flashing**”, “**Latched**”, “**1I>**”.

Led 1 = (see § Signalization on Main Relay)

Led 2 = If we change the link of these leds, the label written on the front panel will not match

Led 3 = anymore.

Led 4 =

Led 5 = are provided in signalization module

to


Led 53 =

Main Windows:


ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	1I>
2	Led 2	Not linked	Light off	Light on	Volatile	1I>
3	Led 3	Not linked	Light off	Light on	Volatile	1I>
4	Led 4	Not linked	Light off	Light on	Volatile	1I>
5	Led 5	Linked	Light off	Light on	Volatile	1 D1

6.1.8.1 - “Enable”

Select “**Link enable**” related to “Led 5” and press right button on mouse, select “Value change”:

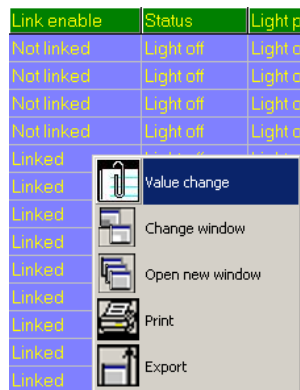

Select “**Linked**” from combo box and press “OK” (if Password is request, see § Password):

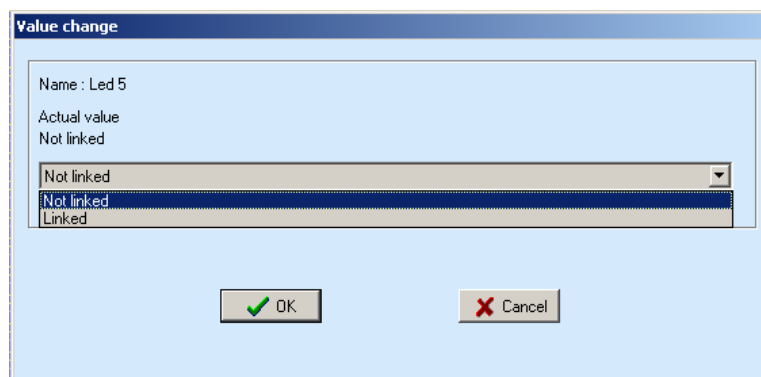



7. User Variables

The “User Variable” is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via “MSCom2” software.

Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
------	-------------	------------------	---------	-------	------------	----------------

7.1 – “Name”

Internal progressive name

7.2 – “User Descr.”

Custom identification label for user variable

7.3 – “Linked functions”

Selection functions

7.4 – “OpLogic”

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

7.5 – “Timer”

Time delay (0-10)s, step 0.01s

7.6 – “Timer type”

Delay = Add a delay on output activation.
The “Timer” is edge triggered on rise edge.

Monostable = Activated the output for the time “Timer”


7.7 – “Logical status”

“User Variable” Logical status


7.8 – “Example”: Setting “User Variable”

Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button

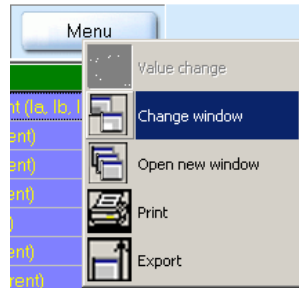

Select “User Variable”

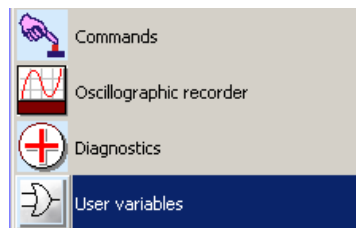


Setting for “UserVar<0>” : “Current Trip”, “1I>,2I>,3I>”, “OR”, “1”, “Monostable”.


ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
1	User Trigger Oscillo	User Trigger Oscillo		None	0	Delay	0
2	UserVar <0>	Current trip	1I>,2I>,3I>	OR	1	Monostable	0

7.9 - "User description" (User descr.)

Select "**User descr**" related to "UserVar<0>" and press right button on mouse, select "Value change":

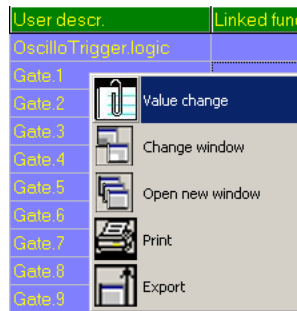


Insert "**Current Trip**" into box and press "OK":

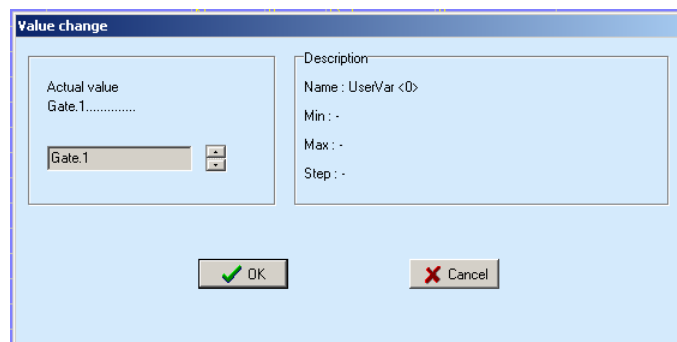


7.10 - "Linked Functions"

Select "**Linked Functions**" related to "UserVar<0>" and press right button on mouse, select "Value change":

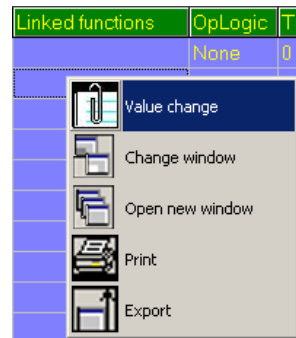


Select "**1I>, 2I>, 3I>**" from "Available" box via push-button "<-Add", and press "OK".
For remove functions, use push-button ">-Remove".

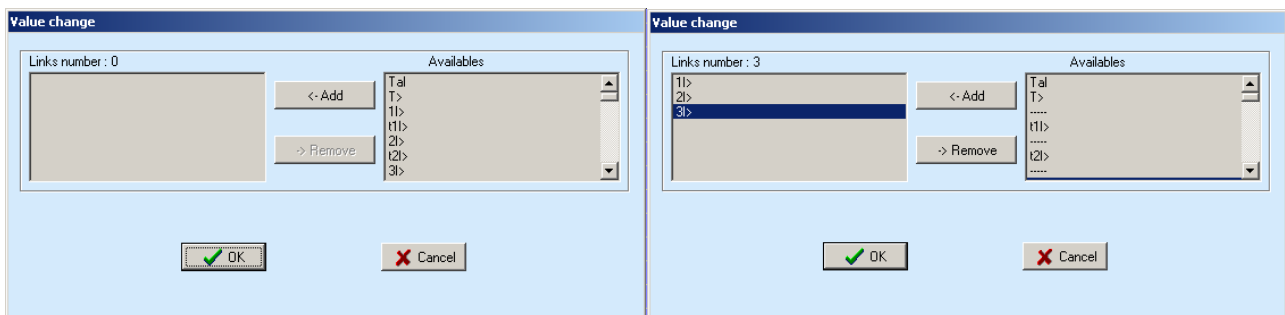


7.11 - "Operation Logic" (Oplogic)

Select "**Oper Logic**" related to "UserVar<0>" and press right button on mouse, select "Value change":

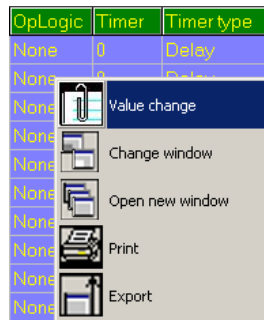


Insert "**OR**" into box and press "OK":

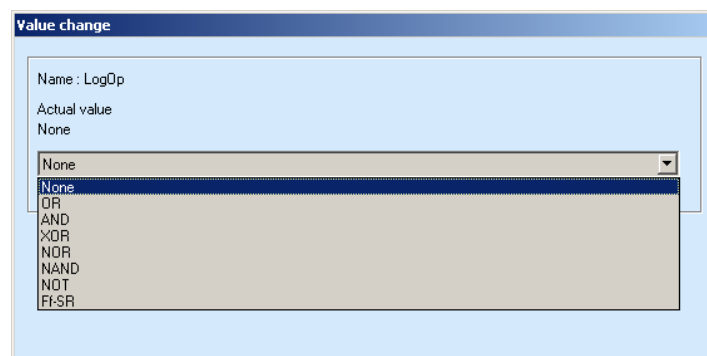


7.12 - "Timer"

Select "**Timer**" related to "UserVar<0>" and press right button on mouse, select "Value change":

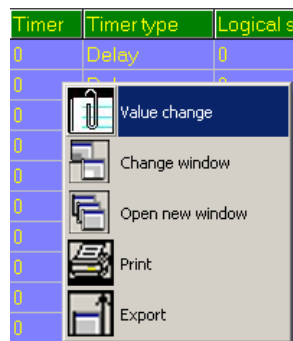


Select "**1**" into box and press "OK":

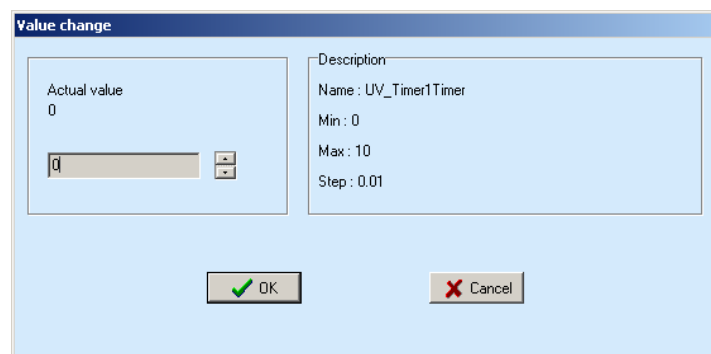


7.13 - "Timer type"

Select "**Timer**" related to "UserVar<0>" and press right button on mouse, select "Value change":

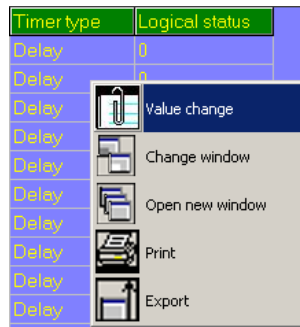

Select "**Monostable**" into box and press "OK":


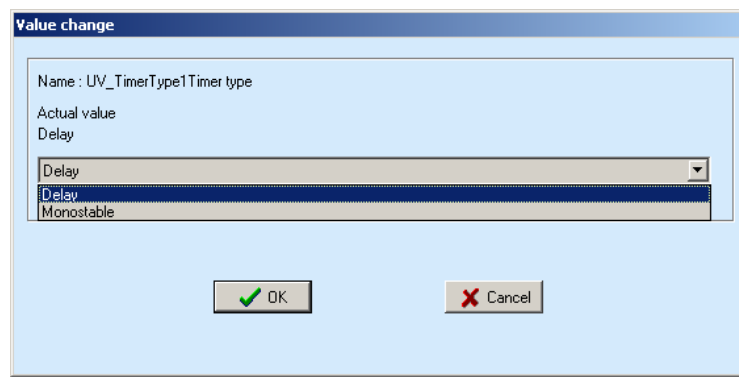


8. Cmd (Local Commands)

“**Cmd**” allow to operate from relay front face controls like Thermal Memory reset, Leds reset, etc.

Menu	Description	Password
→ Led Clear	Reset of signal Leds	No
→ Relays Clear	Manual reset of output relays	No
→ Breaker Close	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ Breaker Open	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ Breaker2 Close	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ Breaker2 Open	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ Breaker3 Close	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ Breaker3 Open	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ Breaker4 Close	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ Breaker4 Open	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ Event Clear	Reset of all Events recorded	Yes
→ HistFail Clear	Reset of Internal Failure Historic records	Yes
→ Reset Term	Reset to zero of the accumulations relevant to Thermal Image and Interruption Energy.	Yes
→ Leds Test	Signal Leds test	No
→ Force Osc	Issue a trigger on oscillographic recording (see § Oscillo)	Yes
→ LastTrip Reset	Reset all Last Trip recorded <i>Available only in MScOm2</i>	Yes
→ Energy Counter Reset	Reset Energy Counter <i>Available only in MScOm2</i>	Yes

To operate one command by the Front Face Keyboard, proceed as follows (Led Reset in the present example).

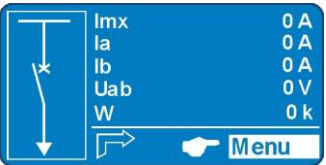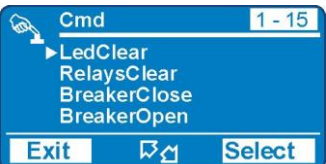- 
 - Press “**Menu**” for access to the main menu with icons.
- 
 - Select “**LocalCmd**” icon with pushbutton “**Increase**” or “**Decrease**”.
 - Press “**Select**” for access.
- 
 - Select with pushbutton “**Increase**” or “**Decrease**” the menu “**LedClear**”.
 - Press “**Select**” to execute the command.
(if Password is request, see § Password).
- 
 - When command has been executed the display shows “**! Command Done**”; go to “3”.

9. Measure

Real time values as measured during the normal operation.

- 1 
 - Press “**Menu**” for access to the main menu with icons.
- 2 
 - Select “**Measure**” icon with pushbutton “**Increase**” or “**Decrease**”.
 - Press “**Select**” for access.
- 3 
 - Scroll the menu “**Measure**” with pushbutton “**Increase**” or “**Decrease**” to display the measurement.
 - Press “**Exit**” to go to the main menu.



→ Imx	(0 ÷ 9999)	A	Largest phase current (Ia, Ib, Ic).	
→ Ia	(0 ÷ 9999)	A	Phase A current	(R.M.S. ampere)
→ Ib	(0 ÷ 9999)	A	Phase B current	(R.M.S. ampere)
→ Ic	(0 ÷ 9999)	A	Phase C current	(R.M.S. ampere)
→ Io	(0 ÷ 9999)	A	Zero Sequence Current	(fundamental frequency value 3Io)
→ I1	(0.00 ÷ 99.99)	In	Positive sequence current	
→ I2	(0.00 ÷ 99.99)	In	Negative sequence current	
→ Frq	(0.00 ÷ 99.99)	Hz	Frequency	
→ Uan	(0 ÷ 999999)	V	Phase Voltage “A-N”	(R.M.S. value)
→ Ubn	(0 ÷ 999999)	V	Phase Voltage “B-N”	(R.M.S. value)
→ Ucn	(0 ÷ 999999)	V	Phase Voltage “C-N”	(R.M.S. value)
→ Uab	(0 ÷ 999999)	V	Phase-to-phase Voltage “A-B”	(R.M.S. value)
→ Ubc	(0 ÷ 999999)	V	Phase-to-phase Voltage “B-C”	(R.M.S. value)
→ Uca	(0 ÷ 999999)	V	Phase-to-phase Voltage “C-A”	(R.M.S. value)
→ Uo	(0 ÷ 999999)	V	Zero Sequence Voltage	(fundamental frequency value 3Vo)
→ V1	(0.00 ÷ 99.99)	Vn	Positive Sequence Voltage	
→ V2	(0.00 ÷ 99.99)	Vn	Negative Sequence Voltage	
→ PhA	(0 ÷ 359)	°	Phase angle “Ia ^ Uan”	
→ PhB	(0 ÷ 359)	°	Phase angle “Ib ^ Ubn”	
→ PhC	(0 ÷ 359)	°	Phase angle “Ic ^ Ucn”	
→ Ph0	(0 ÷ 359)	°	Phase angle “Io ^ Uo”	
→ W	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	k	Three Phase Active Power	(kW)
→ VAr	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	k	Three Phase Reactive Power	(kVAr)
→ VA	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	k	Three Phase Apparent Power	(kVA)
→ Cos	(0.000 ÷ 1.000)	-	Power Factor	
→ Tem	(0 ÷ 9999)	%T	Thermal status as % of the full load continuous operation temperature Tn	
→ Wir	(100 ÷ 0)	%W	Amount still remaining of permissible interruption energy before Circuit Breaker maintenance is requested.	
→ tst	(0 ÷ 9999.9)	s	Motor Starting time	
→ Ist	(0 ÷ 9999)	A	Maximum current motor starting	

10. Energy

Real time energy measurements

Display	→ + kWh	(0 – 9999999)	Exported Active Energy
	→ - kWh	(0 – 9999999)	Imported Active Energy
	→ + kRh	(0 – 9999999)	Exported Reactive Energy
	→ - kRh	(0 – 9999999)	Imported Reactive Energy
Erase	→ All Energy counters are cleared		

When the measurement exceed “9999999” the counters restart from “0”.

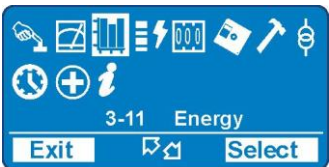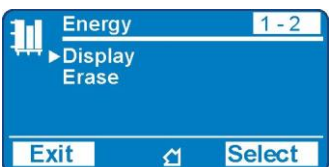- 
 - Press “**Menu**” for access to the main menu with icons.
- 
 - Select “**Energy**” icon with pushbutton “**Increase**” or “**Decrease**”.
 - Press “**Select**” for access.
- 
 - Select “**Display**” with pushbutton “**Increase**” or “**Decrease**”.
 - Press “**Select**” for access.
- 
 - Display of Real time Energy measurements.
 - Press “**Exit**” to go back to the level “3”.
- 
 - Select “**Erase**” with pushbutton “**Decrease**” to clear all recording.
 - Press “**Select**”. (if Password is request, see § Password).
- 
 - When command has been execute the display shows “**! Command Done**”; to go to the level “5”.
 - Press “**Exit**” to go back to the main menu.









11. LTrip (Trips Recorded)

Display of the function which caused the tripping of the relay plus values of the measurement at the moment of tripping. The last 10 events are recorded.

The memory buffer is refreshed at each new relay tripping (FIFO logic).

Display	→	Reading of recorded Trips.
Erase	→	Clear all Trip recorded.

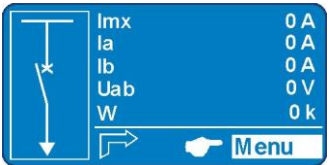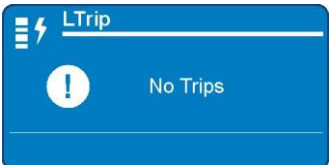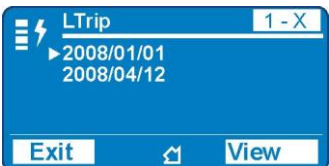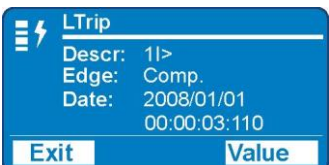- 
 - Press "**Menu**" for access to the main menu with icons.
- 
 - Select "**TripRec.**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 
 - Select "**Display**" with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
 - For "**Erase**" go to "8"
- 
 - If no trip is recorded the display shows "**! No Trips**".
- 
 - If any trip was recorded, select "**View**" to display the chronological list of the records.
 - By the keys "**Increase**" or "**Decrease**" select the date of the record to be checked.
- 
 - Will be shown:
 - "**Descr**" the function that caused the event (Example: t1I> = Trip)
 - "**Edge**" if the function was tripped (Rise) or reset (Fall)
 - "**Date**", date of trip, year/month/day, hour:minutes:seconds:milliseconds
 - Press "**Value**", for reading the value of input quantities on tripping.

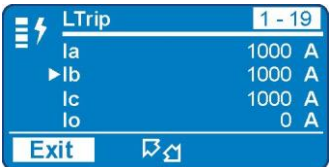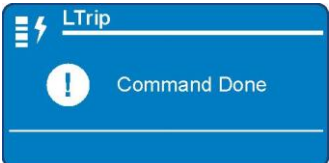- 7
- 
- Scroll with pushbuttons “**Increase**” or “**Decrease**” the available measurements.
 - Select “**Exit**” to go back to “5” for another selection, or “2” go back to the main menu.
- 8
- 
- Select “**Erase**” with button “**Decrease**”.
 - Press “**Select**” to execute the commands; **All** Trips recorded are erased. (if Password is request, see § Password).
- 9
- 
- When command has been executed the display shows “**! Command Done**”;
 - Press “**Exit**” to go back to the main menu.

- **Date** *Date* : Year/Month/Day
 Time : hours/minutes/second/hundredths of seconds
- **Cause** Indication of the protection function which caused the relay tripping.

→ Ia	Phase A current	A
→ Ib	Phase B current	A
→ Ic	Phase C current	A
→ Io	Zero Sequence Current	A
→ I1	Positive sequence current	In
→ I2	Negative sequence current	In
→ Frq	Frequency	Hz
→ Uan	Phase Voltage “A-N”	V
→ Ubn	Phase Voltage “B-N”	V
→ Ucn	Phase Voltage “C-N”	V
→ Uo	Zero Sequence Voltage	V
→ PhA	Phase angle “Ia ^ Uan”	°
→ PhB	Phase angle “Ib ^ Ubn”	°
→ PhC	Phase angle “Ic ^ Ucn”	°
→ Ph0	Phase angle “Io ^ Uo”	°
→ Tem	Thermal status as % of the full load continuous operation temperature Tn	%T
→ Wir	Amount still remaining of permissible interruption energy before Circuit Breaker maintenance is requested.	%W

12. Cnt (Statistical Counters)

Counters of the number of operations for each of the relay functions.

By the interface program "MCom 2" it is possible to individually reset the counters and set an initial starting number.

Display	→ T>	0	Operations counters	Thermal Image
	→ 1l>	0	Operations counters	First overcurrent element
	→ 2l>	0	Operations counters	Second overcurrent element
	→ 3l>	0	Operations counters	Third overcurrent element
	→ 1lo>	0	Operations counters	First Earth Fault element
	→ 2lo>	0	Operations counters	Second Earth Fault element
	→ 3lo>	0	Operations counters	Third Earth Fault element
	→ 1ls>	0	Operations counters	First Negative Sequence element
	→ 2ls>	0	Operations counters	Second Negative Sequence element
	→ 1U>	0	Operations counters	First Overvoltage element
	→ 2U>	0	Operations counters	Second Overvoltage element
	→ 1U<	0	Operations counters	First Undervoltage element
	→ 2U<	0	Operations counters	Second Undervoltage element
	→ 1f>	0	Operations counters	First Overfrequency element
	→ 2f>	0	Operations counters	Second Overfrequency element
	→ 3f>	0	Operations counters	Third Overfrequency element
	→ 1f<	0	Operations counters	First Underfrequency element
	→ 2f<	0	Operations counters	Second Underfrequency element
	→ 3f<	0	Operations counters	Third Underfrequency element
	→ 1Uo>	0	Operations counters	First Zero Sequence overvoltage element
	→ 2Uo>	0	Operations counters	Second Zero Sequence overvoltage element
	→ U1<	0	Operations counters	Positive Sequence Undervoltage element
	→ U2>	0	Operations counters	Negative Sequence overvoltage element
	→ Wi	0	Operations counters	Circuit Breaker maintenance alarm
	→ TCS	0	Operations counters	Trip Circuit Supervision
	→ IRF	0	Operations counters	Internal Relay Fault
	→ RT	0	Operations counters	Remote Trip
	→ BrkF	0	Operations counters	Breaker failure to open
	→ motSt	0	Operations counters	Motor start
	→ mStOV	0	Operations counters	Motor start overall counter
	→ LR	0	Operations counters	Locked Rotor
	→ StNo	0	Operations counters	Start number
	→ StSeq	0	Operations counters	Start sequence
	→ I<	0	Operations counters	No load running
	→ Aut Op	0	Operations counters	Automatic C/B Openings
	→ Aut CL	0	Operations counters	Automatic C/B Closings
	→ Man Op	0	Operations counters	Manual C/B Openings
	→ Man CL	0	Operations counters	Manual C/B Closings
	→ OvrOp	0	Operations counters	Overall C/B Openings total (Man+Aut)
	→ OvrCL	0	Operations counters	Overall C/B Closings total (Man+Aut)



- 1




- Press "**Menu**" for access to the main menu with icons.
- 2



- Press "**Counter**" for access.
- 3



- Press "**Display**" for access.
- 4




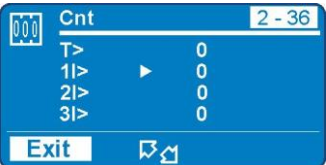


- Display of the number of operations of each individual function.
 - With pushbuttons "**Increase**" or "**Decrease**" scroll the parameters
 - Press "**Exit**" go back to "3".

13. RCE (Recording Chronological Events)

Display of the function which caused any of the following events: - *Status change of digital Inputs/Outputs.* - *Start of protection functions – Trip of protection function – Function reset.*
The last 100 events are recorded.
The memory buffer is updated at each new event.

Display	→	Reading events recorded.
Erase	→	Clear all events recorded.

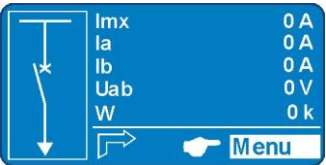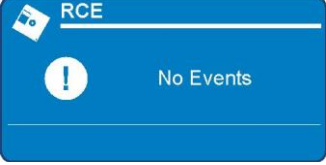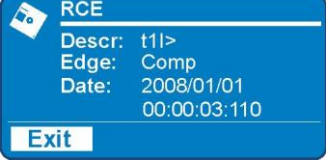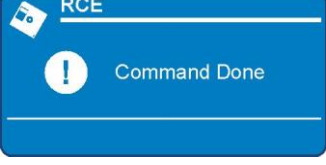- 1 
 - Press “**Menu**” for access to the main menu with icons.
- 2 
 - Select “**Events**” icon with pushbutton “**Increase**” or “**Decrease**”.
 - Press “**Select**” for access.
- 3 
 - Select “**Display**” with pushbutton “**Increase**” or “**Decrease**”.
 - Press “**Select**” for access.
 - For “**Erase**” go to “7”
- 4 
 - If no event is recorded the display shows message “**! No Events**”.
- 5 
 - If any event was recorded, select “**View**” to display the chronological list of the records.
 - By the keys “**Increase**” or “**Decrease**” select the date of the record to be checked.
- 6 
 - Will be shown:
“**Descr**” the function that caused the event
(Example: 1l> = Start, t1l> = Trip)
“**Edge**” if the function was tripped (Rise) or reset (Fall)
“**Date**”, date of trip, year/month/day, hour:minutes:seconds:milliseconds
- 7 
 - Select “**Erase**” with button “**Decrease**”.
 - Press “**Select**” to execute the commands; **All** Events recorded are erased. (if Password is request, see § Password).
- 8 
 - When command has been execute the display shows “**! Command Done**”;
 - Press “**Exit**” to go back to the main menu.

13.1 – Events on display

Functions	Events Displayed	Status	Description
T>	Tal T>	Alarm Rise	Thermal Image T>
1I>	1I> t1I>	Trip Rise Fall	First overcurrent element F50-51
2I>	2I> t2I>	Trip Rise Fall	Second overcurrent element F50-51
3I>	3I> t3I>	Trip Rise Fall	Third overcurrent element F50-51
1Io>	1Io> t1Io>	Trip Rise Fall	First earth fault element F50N-51N
2Io>	2Io> t2Io>	Trip Rise Fall	Second earth fault element F50N-51N
3Io>	3Io> t3Io>	Trip Rise Fall	Third earth fault element F50N-51N
1Is>	1Is> t1Is>	Trip Rise Fall	First negative sequence current element F46
2Is>	2Is> t2Is>	Trip Rise Fall	Second negative sequence current element F46
1U>	1U> t1U>	Trip Rise Fall	First overvoltage element F59
2U>	2U> t2U>	Trip Rise Fall	Second overvoltage element F59
1U<	1U< t1U<	Trip Rise Fall	First undervoltage element F27
2U<	2U< t2U<	Trip Rise Fall	Second undervoltage element F27
1f>	1f> t1f>	Trip Rise Fall	First overfrequency element F81
2f>	2f> t2f>	Trip Rise Fall	Second overfrequency element F81
3f>	3f> t3f>	Trip Rise Fall	Third overfrequency element F81
1f<	1f< t1f<	Trip Rise Fall	First underfrequency element F81
2f<	2f< t2f<	Trip Rise Fall	Second underfrequency element F81
3f<	3f< t3f<	Trip Rise Fall	Third underfrequency element F81
1Uo>	1Uo> t1Uo>	Trip Rise Fall	First zero sequence voltage element F59Uo
2Uo>	2Uo> t2Uo>	Trip Rise Fall	Second zero sequence voltage element F59Uo
U1<	U1< tU1<	Trip Rise Fall	Positive sequence undervoltage element F27U1
U2>	U2> tU2>	Trip Rise Fall	Negative sequence overvoltage element F59U2
Wi	tWi>	Rise	Circuit breaker maintenance level
TCS	TCS tTCS	Trip Rise Fall	Trip coil supervision
IRF	IRF tIRF	Trip Rise	Internal Relay Failure
RT	RT tRT	Trip Rise	Remote Trip
BF	BF	Trip	Breaker Failure
ILR	ILR tILR	Trip Rise Fall	Locked Rotor
I<	I< tI<	Trip Rise Fall	No load running
StSeq	ITR StartSeq.Success	Trip Rise	Start sequence Start sequence success
StNo	StNo	Trip	Limitation of start number



Functions	Events Displayed	Status		Description
	L/Rdisc.	Rise		Local/Remote signal Discrepancy
	manOpKey	Rise		Circuit Breaker intentional open by Key
	manOpLocC	Rise		Circuit Breaker intentional open by local command
	manOpRemC	Rise		Circuit Breaker intentional open by remote command
	manOpExtIn	Rise		Circuit Breaker intentional open by external input
	ExterManOp	Rise		Circuit Breaker intentional external open
	manCIKey	Rise		Circuit Breaker intentional close by Key
	manCILocC	Rise		Circuit Breaker intentional close by local command
	manCIRemC	Rise		Circuit Breaker intentional close by remote command
	manCIExtIn	Rise		Circuit Breaker intentional close by external input
	ExterManCh	Rise		Circuit Breaker intentional external close
	CB-Fail	Rise	Fall	Circuit Breaker failure
	Vcc			Reserved
	GND			Reserved
	Mot On	Rise	Fall	Motor status – ON
	Time Sincro	Rise		Time Synchronization
	0.D0	Rise	Fall	Digital Input

	0.D4			
	1.D1	Rise	Fall	Digital input

	1.D15			
	2.D1	Rise	Fall	Digital input

	2.D15			
	0.R1	Rise	Fall	Output relay

	0.R6			
	1.R1	Rise	Fall	Output relay

	1.R14			
	2.R1	Rise	Fall	Output relay

	2.R14			
	UpDateMon	Rise	Fall	Update Monitor
	IPU boot	Rise		IPU boot


14. System (System parameters)

Setting of system parameters.

CT&PTs	Phase CT	Prim.	→	1000	A	(1 ÷ 9999)	step	1	A	(1)
		Sec.	→	1	A	(1 / 5)				
	PT (Ph-Ph)	Prim.	→	10.00	kV	(0.10 ÷ 500.00)	step	0.01	kV	(2)(3)
		Sec.	→	100	V	(50 ÷ 150)	step	1	V	
	Neut. CT	Prim.	→	1000	A	(1÷9999)		1	A	(1)
		Sec.	→	1	A	(1 / 5)				
Nom.Val.		→	Fn	50	Hz	(50 / 60)				
(Nominal Values)		→	In	500	A	(1÷9999)		1	A	
		→	Un	10.00	kV	(0.10 ÷ 500.00)		0.01	kV	
Setup Group		→	Group	1		(1 / 2)				

- ☐ **Fn** : Nominal Frequency
- ☐ **In** : Nominal Current
- ☐ **Un** : Nominal Voltage
- ☐ **Group** : Setting group active


- (1) Move the switch in the corresponding founding to the required input current as herebelow shorted.

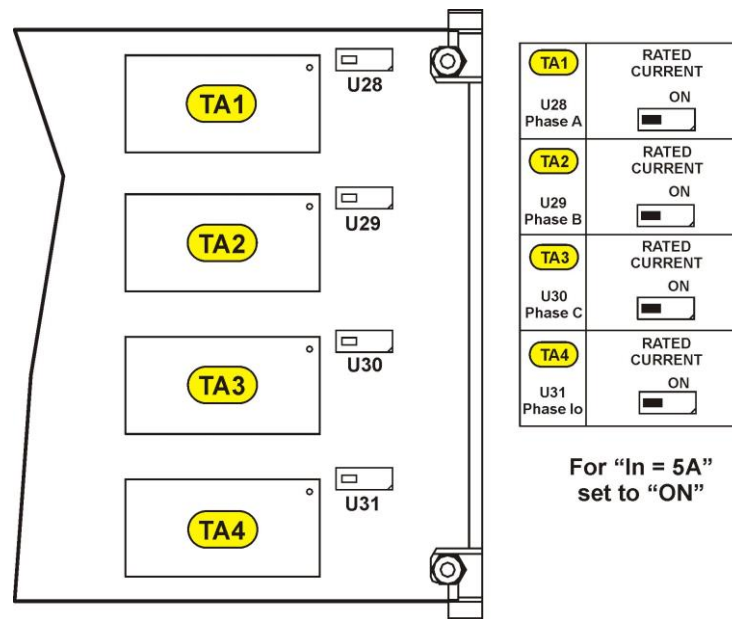

- (2) Set the value of the phase-to-phase PT voltage.

$$\text{Example: Example : TV } \frac{10000 : \sqrt{3}}{100 : \sqrt{3}} \rightarrow \text{set } \frac{\text{Prim.} = 10000}{\text{Sec.} = 100}$$

- (3) Zero sequence voltage input is to be supplied by three system P.Ts. Y/Open Delta connected; the open delta connected secondary are rated 1/3 of the phase-to-phase secondary voltage (Example: 10000 / 100:√3 / 100:3).

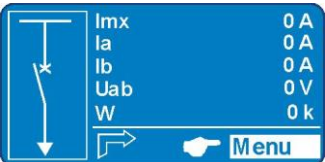- 
 - Press **"Menu"** for access to the main menu with icons.
- 
 - Select **"System"** icon with pushbuttons **"Increase"** or **"Decrease"**.
 - Press **"Select"** for access.
- 
 - Select **"CT&PTs"**.
 - Press **"Select"** for access.
- 
 - Select **"Phase CT"**.
 - Press **"Select"** for access.


- 5



- Select "**Prim.**" to modify the primary value of Phase CT, or press "**Decrease**" and select "**Sec.**" to modify the secondary value of Phase CT.
 - Press "**Modify**" to modify the parameter.
(if Password is request, see § Password).
- 6



- The value appear as bold figure.
 - Use pushbuttons "**Increase**" or "**Decrease**" to set the value.
 - Press "**Write**" to confirm the value
- 7

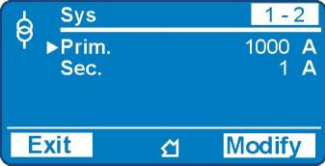

- The value is now set.
 - To set a new value return to the point "5".
 - Press "**Exit**".
- 8



- The display show "**Confirm the change?**".
 - Choose "**Yes**" to convalidate the changes.
 - Choose "**No**" to not confirm the changes.
 - After set confirmation (or non confirmation) the display goes back to point "4".
- 9



- To modify the input quantities, select with pushbutton "**Decrease**", "**Nom.Val.**".
 - Press "**Select**" for access.
- 10



- To set the input quantities see points "5-6-7-8".
- 11



- To select the Active Bank select and press "**SetUp Group**".
- 12



- Press "**Select**" and with pushbuttons "**Increase**" or "**Decrease**" select the Bank to be Active.

15. Settings

Two complete banks of settings of the programmable variables are available in the “**SETTING**” menu. Both “Group #1” and “Group #2” include the hereunder listed variables.

- 1   Indicates the Setting Bank that is actually being modified.
-  This symbol indicates that the function is enabled; symbol missing indicates that the function is disabled.




→ Comm.	Serial communication parameters
→ LCD	Human Machine Interface
→ T>	Thermal Image
→ 1I>	First Overcurrent Element
→ 2I>	Second Overcurrent Element
→ 3I>	Third Overcurrent Element
→ 1Io>	First Earth Fault Element
→ 2Io>	Second Earth Fault Element
→ 3Io>	Third Earth Fault Element
→ 1Is>	First Negative Sequence Current Element
→ 2Is>	Second Negative Sequence Current Element
→ 1U>	First Overvoltage Element
→ 2U>	Second Overvoltage Element
→ 1U<	First Undervoltage Element
→ 2U<	Second Undervoltage Element
→ 1f>	First Overfrequency Element
→ 2f>	Second Overfrequency Element
→ 3f>	Third Overfrequency Element
→ 1f<	First Underfrequency Element
→ 2f<	Second Underfrequency Element
→ 3f<	Third Underfrequency Element
→ 1Uo>	First Zero Sequence Voltage Element
→ 2Uo>	Second Zero Sequence Voltage Element
→ U1<	Positive Sequence Undervoltage Element F27U1
→ U2>	Negative sequence Overvoltage Element F59U2 or F47
→ Wi	Amount of Energy to reach the C/B maintenance level
→ TCS	Setting variables for Trip Circuit Supervision
→ IRF	Internal Relay Fault
→ RT	Remote Trip
→ tTripRd	Trip time reduction
→ BreakerFail	Setting variables for Breaker Failure detection
→ ExtReset	Configuration for external reset input
→ MotSt	Motor Start
→ LR	Locked Rotor
→ StNo	Limitation Start number
→ StSeq	Stating sequence control
→ I<	No load Running
→ CB Manage	C/B command Local / Remote setting
→ Oscillo	Setting variables for Oscillographic recording



15.1 - Modifying the setting of variables

To modify any variable setting by the keyboard proceed as follows:

(example: change setting of element “1I>”, from “Is 4.000 In” to “Is 3.500 In”)

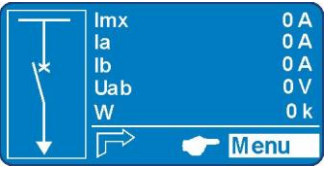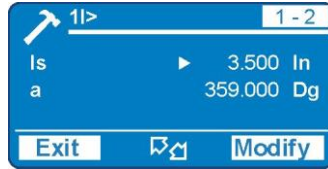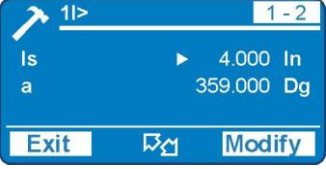- | | | | |
|--|---|--|---|
| 1  | <ul style="list-style-type: none"> Press “Menu” for access to the main menu with icons. | 6  | <ul style="list-style-type: none"> The value appear as bold figure. |
| 2  | <ul style="list-style-type: none"> Select icon “Setting” by pushbuttons “Increase” or “Decrease”. Press “Select”. | 7  | <ul style="list-style-type: none"> Set new values pushbuttons “Increase” or “Decrease” buttons Press “Write”. |
| 3  | <ul style="list-style-type: none"> Select by pushbuttons “Increase” or “Decrease” the parameter “1I>”. Press “Select”. | 8  | <ul style="list-style-type: none"> If the change of parameters is completed, press “Exit”. |
| 4  | <ul style="list-style-type: none"> Select by buttons “Increase” or “Decrease” the menu “Oper.Levels”. Press “Select”. | 9  | <ul style="list-style-type: none"> “Yes” confirm all changes. “No” voids all the changes. |
| 5  | <ul style="list-style-type: none"> The arrow aside “Is” shows the parameter selected for changing Press “Modify”. If Password is request, see § Password | 10  | <ul style="list-style-type: none"> The relay returns to point “4”. |

15.2 - Password

The password is requested any time the user wishes to modify any password protected parameter (example "1l>" menu "Setting").

The factory default password is "1111".


The password is only modifiable with "MSCom 2" software (see Manual "MSCom 2").

When password is requested, proceed as follows:

- | | | | | | |
|---|---|--|---|--|---|
| 1 |  | • Use the key " Increase " and " Decrease " and set the first digit of password. | 5 |  | • Use the key " Increase " or " Decrease " to set the third digit. |
| 2 |  | • Press " Next " to validate and go to the next digit. | 6 |  | • Press " Next " to validate and go to the next digit. |
| 3 |  | • Use the key " Increase " or " Decrease " to set second digit. | 7 |  | • Use the key " Increase " or " Decrease " to set the fourth digit. |
| 4 |  | • Press " Next " to validate and go to the next digit. | 8 |  | • Press " Next " to validate and go to modify the next parameter. |

 By key "**Prev**" go back to previous digit.

 The password validity expires 60 sec after the last setting modification or as soon as you go back to the main menu

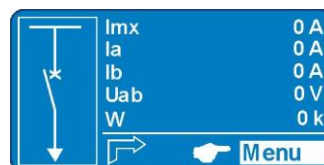

- | | | | | | |
|---|---|--|---|--|---|
| 1 |  | • If set the incorrect password the display shows " ! Wrong code ". | 2 |  | • The display will repeat the initial interrogation |
|---|---|--|---|--|---|



15.3 – Menu: **Comm. (Communication)**

Options	→ BRLoc	38400	[9600 / 19200 / 38400 / 57600]
	→ BRRem	19200	[9600 / 19200 / 38400]
Node Address	→ Indir.	1	[1 ÷ 255]


15.3.1 – Description of variables

- **BRLoc** : RS232 local (Front Panel) serial communication speed
- **BRRem** : RS485 remote (Rear terminal block) serial communication speed
- **Indir.** : Identification number for the connection on serial communication bus

15.3.2 – Front Panel serial communication port (RS232)

A D-Sub, -pin female socket is available on Relay's front face for connection to the local RS232 serial communication line. Through this port - and by the interface program available from Microelettrica Scientifica S.p.A. (MCom2 for Windows 98/ME/2000/XP) – it is possible to connect a Personal Computer to download all available information, operate any control and program the relay; the protocol used is "Modbus RTU".

15.3.3 – Cable for direct connection of Relay to Personal Computer

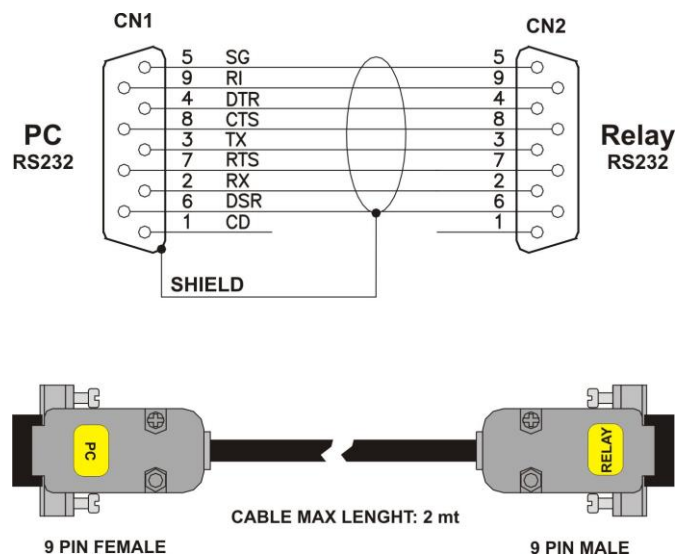

15.3.4 – Main serial communication port (RS485)

From the Relay's back terminal board, a RS485 ports is available for communication with SCADA system with Protocol Modbus RTU.

The communication interface allows to program all settings, operate all commands and download all information and records.

The physical connection can be via a normal pair of wires (RS485) or, on request, via fiber optic.



15.4 - Menu: **LCD** (Human Machine Interface - customize)

Options	→ Lang	English	[English / Loc.Lang]
	→ Light	On	[Autom. / On]
	→ Row1	Imx	[Imx / Ia / Ib / Ic / Io / I1 / I2 / Frq / Uan / Ubn /
	→ Row2	Ia	Ucn/ Uab / Ubc / Uca / Uo / V1 / V2 / PhA / PhB
	→ Row3	Ib	/ PhC / Ph0 / W / VAr / VA / Cos / Tem / Wir / tst
	→ Row4	Uab	/ Ist / LocRm / Empty]
	→ Row5	W	
	→ Leds	4	[4 / 11 / 18 / 25 / 32 / 39 / 46 / 53]

15.4.1 – Description of variables

☐ Lang	:	Set Language
☐ Light	:	Set Display backlight
☐ Row1	:	Choosing the variable to be displayed in the rows on main menu
☐ Row2	:	
☐ Row3	:	
☐ Row4	:	
☐ Row5	:	
☐ Leds	:	Configuration Leds number
4	:	4 Base leds only
11	:	4 Base leds only + 7 configurable leds
18	:	4 Base leds only + 14 configurable leds
25	:	4 Base leds only + 21 configurable leds
32	:	4 Base leds only + 28 configurable leds
39	:	4 Base leds only + 35 configurable leds
46	:	4 Base leds only + 42 configurable leds
53	:	4 Base leds only + 49 configurable leds

This menu allows to customize the Language and the Display's backlight.

The standard languages are English and Italian. On request, other languages can be loaded (French, German, etc..).

The Display backlight can be programmed always on "ON" or switched-on "Automatically" for a few second at any operation of the keyboard "Auto".

Example: set Local Language.

- | | | | |
|---|--|--|--|
| 1  | <ul style="list-style-type: none"> Press "Menu" for access to the main menu with icons. | 5  | <ul style="list-style-type: none"> Press "Modify". Select "Loc.Lang". Press "Write". Press "Exit". |
| 2  | <ul style="list-style-type: none"> Select icon "Setting" by pushbuttons "Increase" or "Decrease". Press "Select". | 6  | <ul style="list-style-type: none"> "Yes" confirms all changes. "No" void all changes. |
| 3  | <ul style="list-style-type: none"> Select "Group 1" or "Group 2". Select "LCD". Select "Options". Press "Select". | 7  | <ul style="list-style-type: none"> After set confirmation the display shows "Please Wait". |
| 4  | <ul style="list-style-type: none"> Select "Lang". Press "Modify". If Password is requested, see § Password | 8  | |



15.5 - Function: T> (Thermal Image F49)

Status	→ Enab.	No	[No / Yes]					
Options	→ OPMOD	I1 I2	[I1 I2 – I _{max}]					
Oper.Levels	→ Tal	10.000	%Tn [10 ÷ 100]	step	1.000	%Tn		
	→ Is	0.500	[0.5 ÷ 1.5]	step	0.010			
	→ Kt	1.000	min [1 ÷ 600]	step	0.010	min		

15.5.1 - Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **OPMOD** : Operation Mode
- ❑ **Tal** : Temperature prealarm level
- ❑ **Is** : Continuous admissible current
- ❑ **Kt** : Warming-up Time Constant of the load

15.5.2 - Trip and Alarm

The algorithm compares the amount of heat accumulated “T” ($\equiv i^2 \cdot t$) to the steady state amount of heat “T_n” corresponding to continuous operation of the rated current “I_n”.
When the ratio “T/T_n” reaches the level set for Thermal Alarm “Tal” or the max allowed heating, the relay trips accordingly

15.5.2.1 – Operation mode “I_{max}”

With this option, the largest of the three phase currents measured is used to compute the Thermal Image:

$$I = \text{MAX}(I_a, I_b, I_c)$$

15.5.2.2 – Operation mode “I1-I2”

With this option, a composition of Positive and Negative Sequence components of the current measured is used to compute the Thermal Image:

$$I = \sqrt{(I_1)^2 + 3(I_2)^2}$$

15.5.2.3 – Trip time of the Thermal Image Element


The trip time of the Thermal Image Element is a function of the current “I” flowing into the load and depends on its warming-up Time Constant “Kt”, on the previous thermal status “Ip” and on the maximum admissible continuous current “Is” according to the equation:

$$t = Kt \cdot \ell_n \frac{\left(\frac{I}{I_n}\right)^2 - \left(\frac{I_p}{I_n}\right)^2}{\left(\frac{I}{I_n}\right)^2 - \left(\frac{I_s}{I_n}\right)^2}$$

- t** = Time to relay tripping
- Kt** = Load thermal time constant
- I** = Actual load current
- I_n** = Load rated current
- I_s** = Continuous admissible current
- I_p** = Steady state current before the overload
- ℓ_n** = Natural Logarithm

When the heating exceeds the set alarm level “Tal” or the max. allowed level (“I” > “Is” for the time “t”) the output relays programmed for these function will be operated. Reset will take place when the heating will drop below 99% of the trip level.

15.5.2.4 – Thermal Image Curves (TU1024 Rev.1)

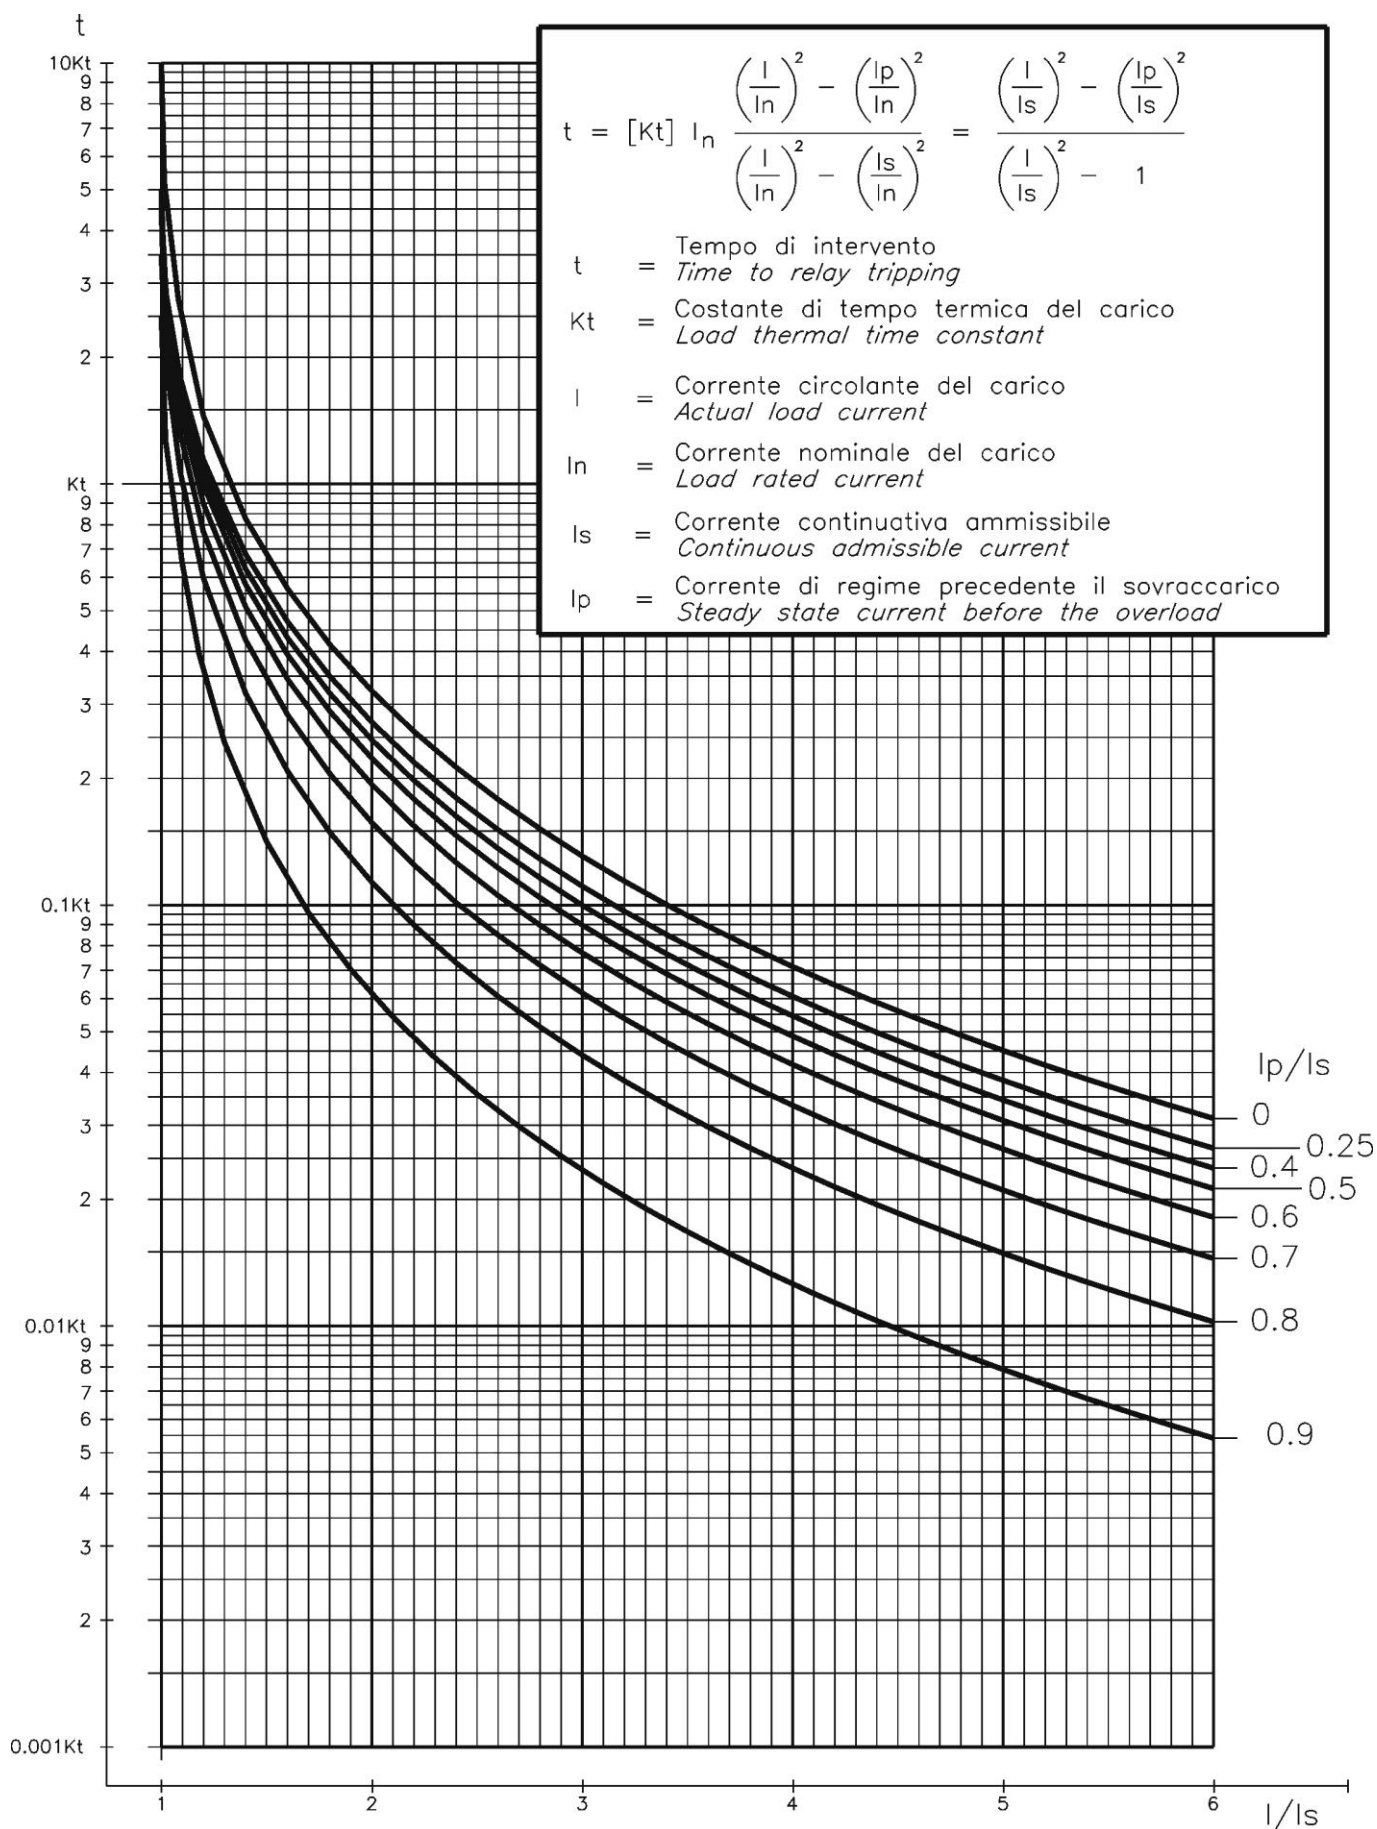



15.6 - Function: **1I** (First Overcurrent Element F50/51)

Status	→ Enab.	No	[No / Yes]
Options	→ f(t)	Type - D	[D / A / B / C / I / VI / EI / MI / SI]
	→ tBI	Off	[Off / 2tBO]
	→ f(a)	Disable	[Disable / Sup / Dir]
	→ f(U)	Disable	[Disable / Enable]
Oper. Levels	→ Is	4.000	In (0.100÷4) step 0.010 In
	→ a	359.000	° (0.000÷359) step 1.000 °
Timers	→ ts	100.00	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

14.6.1 - Description of variables

- **Enab.** : Function enabling (No = Disable / Yes = Enable)
- **f(t)** : Operation characteristic (Time/Current curve):
 - (D) = Independent definite time
 - (A) = IEC Inverse Curve type A
 - (B) = IEC Very Inverse Curve type B
 - (C) = IEC Extremely Inverse Curve type C
 - (I) = IEEE Inverse Curve
 - (VI) = IEEE Very Inverse Curve
 - (EI) = IEEE Extremely Inverse Curve
 - (MI) = IEEE Moderate Inverse Curve
 - (SI) = IEEE Short Inverse Curve
- **tBI** : Blocking input reset time
 - Off = Permanent block
 - 2tBO = Set 2xtBO.
- **f(a)** : Operation mode:
 - Disable = Non Directional
 - Sup. = Directional Supervision
 - Dir. = Total Directional
- **f(U)** : Voltage restraint
- **Is** : Minimum operation level
- **a** : Reference phase current displacement angle for Directional operation
- **ts** : Trip time delay
- **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.
"tBO" is also the trip time delay of the Breaker Failure function.

15.6.2 - Algorithm of the time current curves

The Time Current Curves are generally calculated with the following equation

$$(1) \quad t(I) = \left[\frac{A}{\left(\frac{I}{I_s}\right)^a - 1} + B \right] \cdot K \cdot T_s + T_r \quad \text{where}$$

$t(I)$ = Actual trip time delay when the input current equals "I"

I_s = Set minimum pick-up level

$$K = \left(\frac{A}{10^a - 1} + B \right)^{-1}$$

T_s = Set time delay: $t(I) = T_s$ when $\frac{I}{I_s} = 10$

t_r = Operation time of the output relay on pick-up.

The parameters A, B and a have different values for the different Time Current Curves.

Curve Name	Curve Identifier	A	B	a
IEC A Inverse	A	0.14	0	0.02
IEC B Very Inverse	B	13.5	0	1
IEC C Extremely Inverse	C	80	0	2
IEEE Moderate Inverse	MI	0.0104	0.0226	0.02
IEEE Short Inverse	SI	0.00342	0.00262	0.02
IEEE Very Inverse	VI	3.88	0.0963	2
IEEE Inverse	I	5.95	0.18	2
IEEE Extremely Inverse	EI	5.67	0.0352	2

For the IEC curves, being $B = 0$, the Time/Current equation (1), becomes:

$$(1') \quad t(I) = \frac{(10^a - 1)T_s}{\left(\frac{I}{I_s}\right)^a - 1} + t_r = \frac{Kt}{\left(\frac{I}{I_s}\right)^a - 1} + t_r$$


Where $Kt = (10^a - 1)T_s$ is the time multiplier

When "f(t) = D" is programmed, the trip time delay is Definite and independent from the current: excess " $t = t_s$ ".

The maximum measuring current is "40xIn" for phase elements and "10xOn" for the neutral elements.

Trip takes place when the current measured exceeds (no matter how much) the set level " I_s " for the set time " t_s ".


15.6.3 - IEC Curves

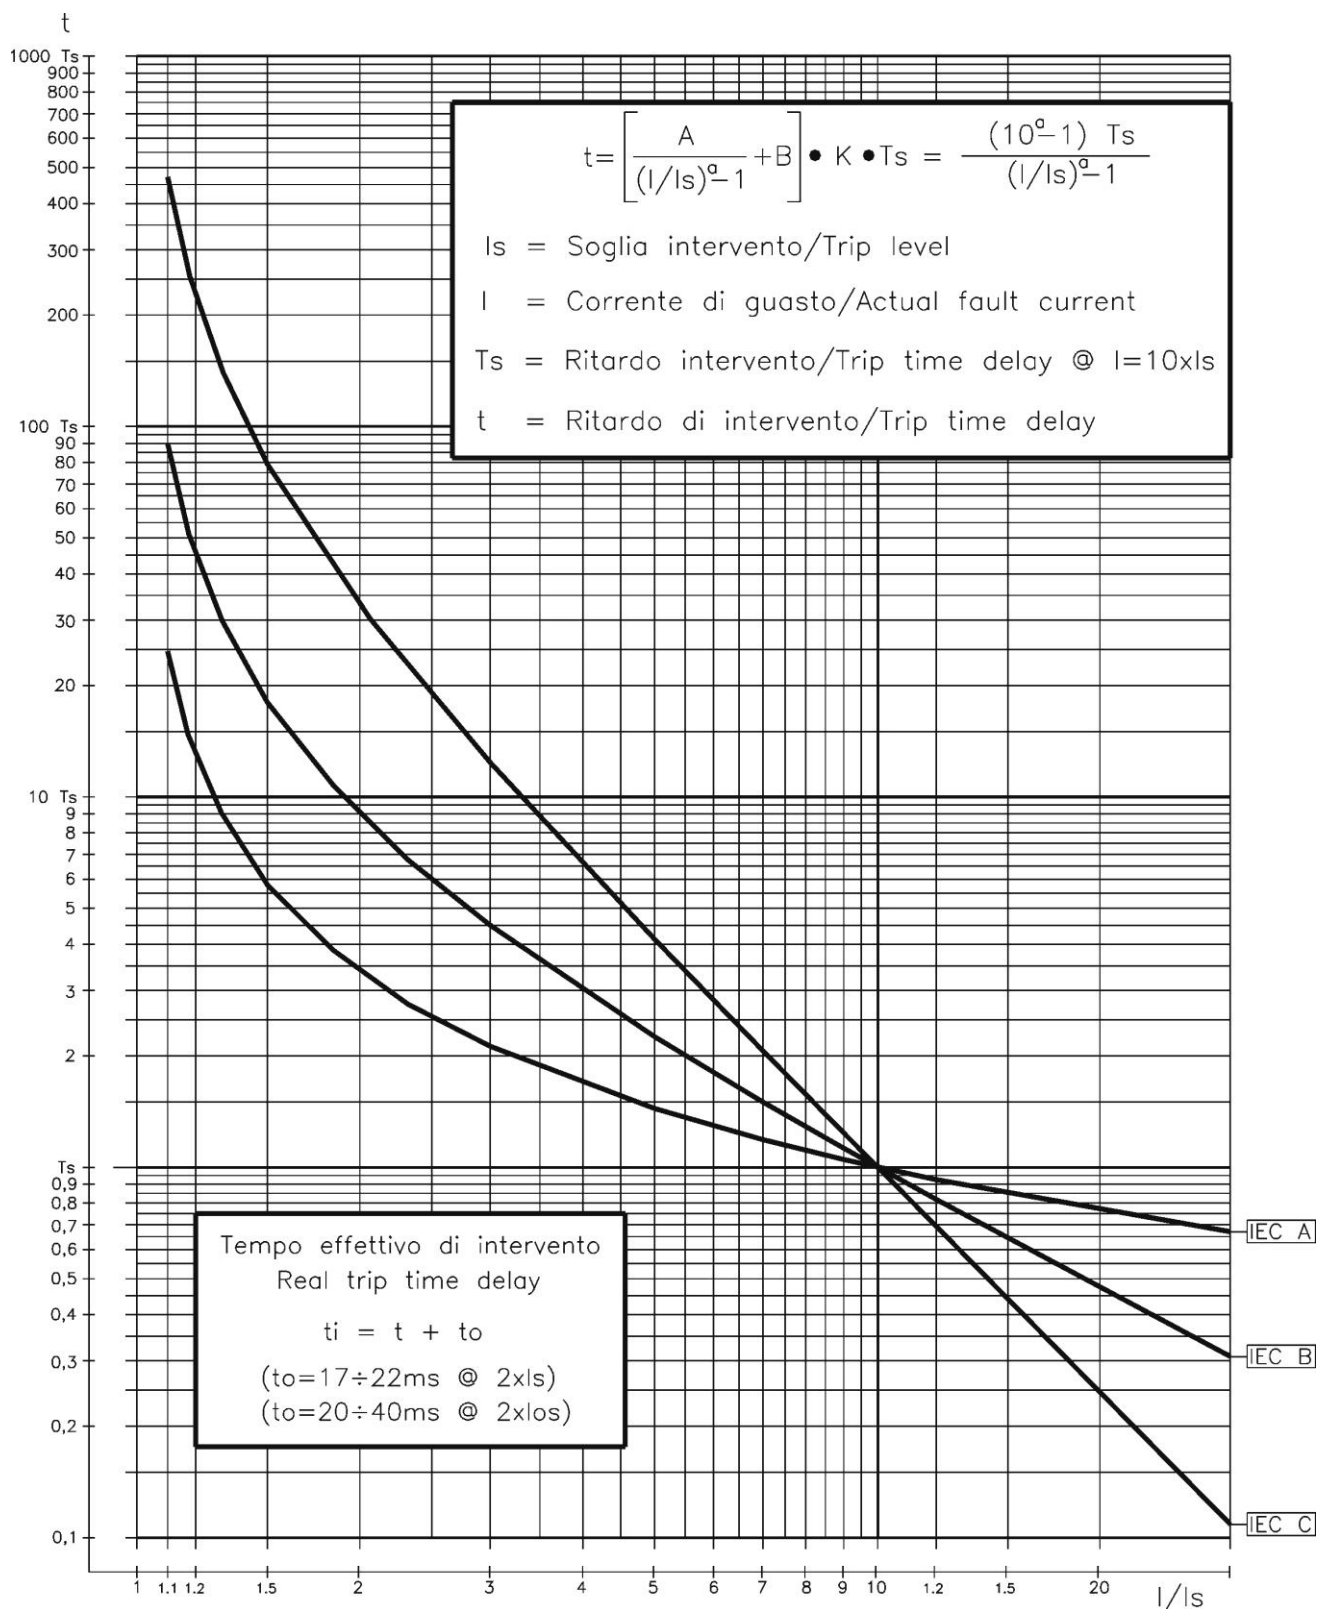

Curve Type	A	B	K	α
IEC A	0.14	0	0.336632	0.02
IEC B	13.5	0	0.666667	1
IEC C	80	0	1.2375	2

Max. "I" Phase = $40 \times I_n$
 Max. "I" Neutral = $10 \times I_n$

15.6.4 – IEEE Curves

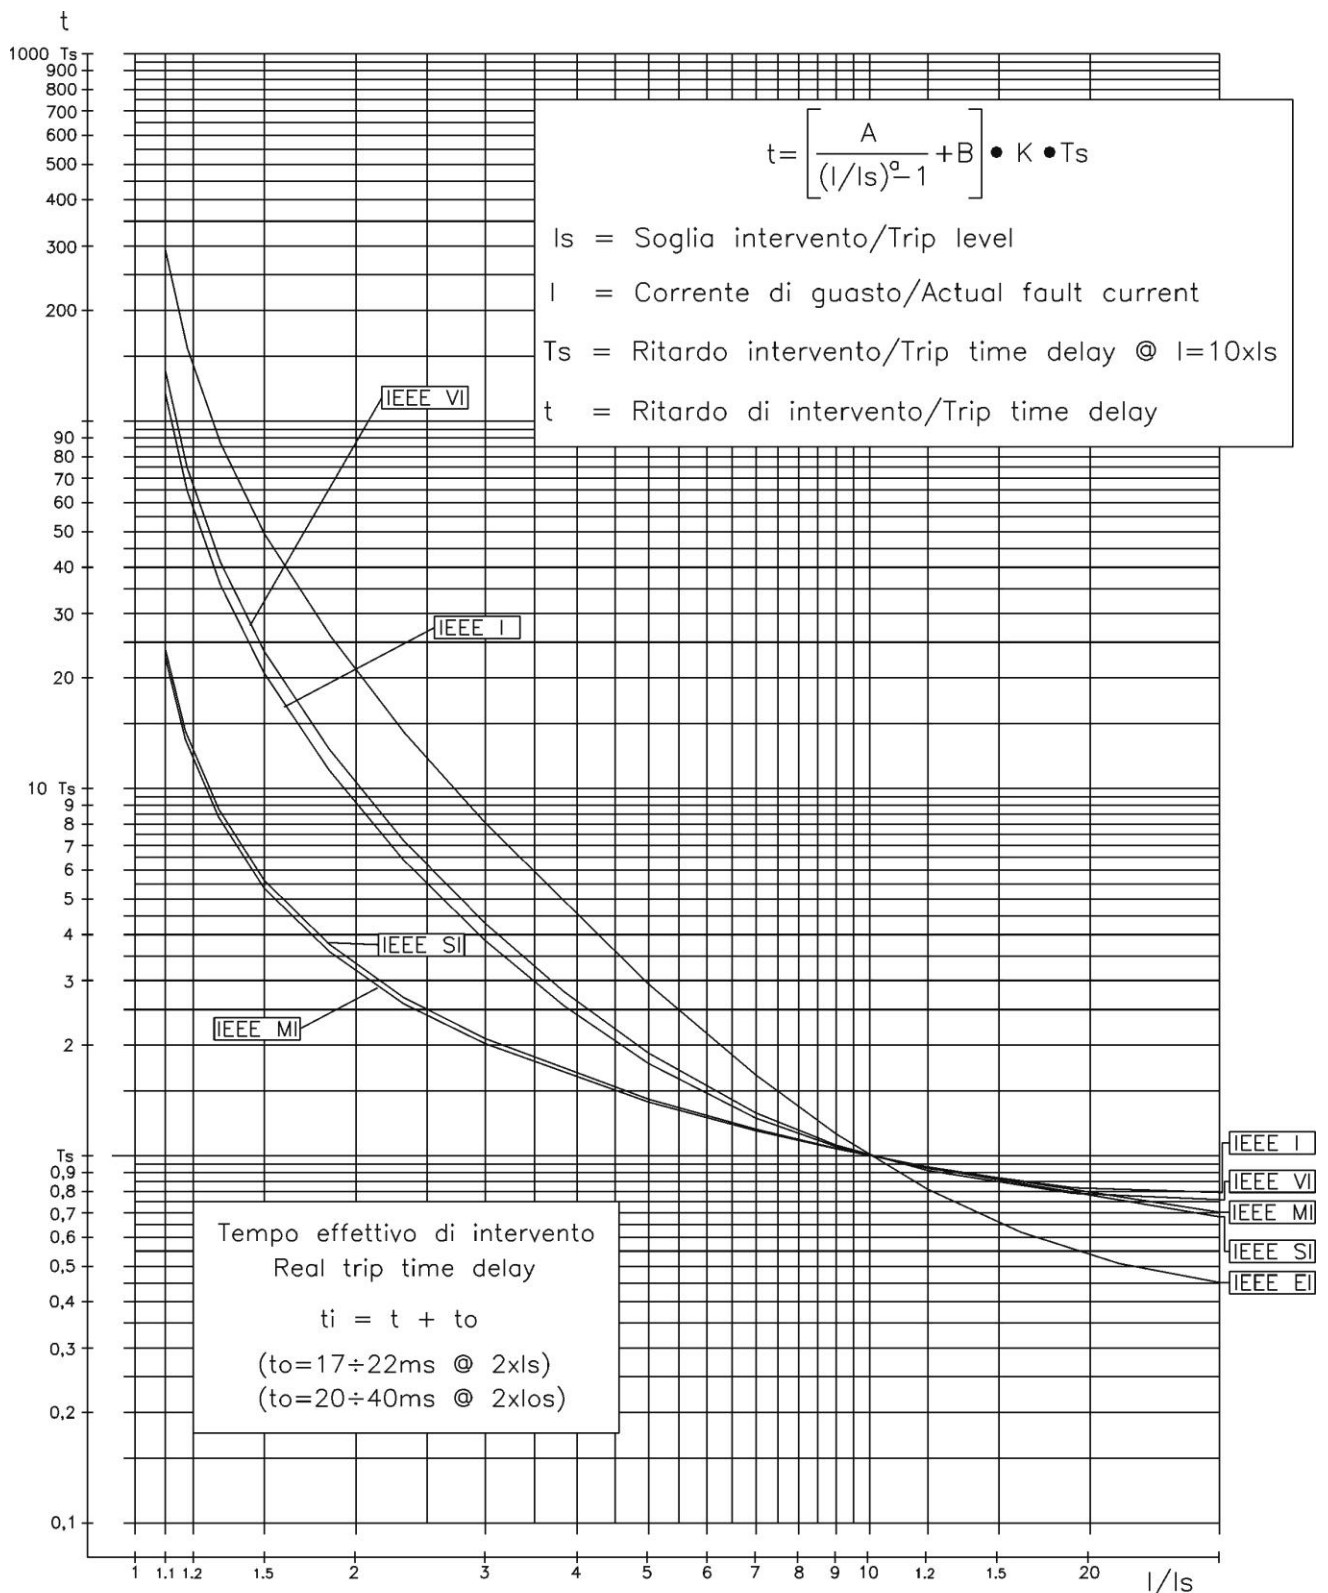

Curve Type	A	B	K	a
MI= IEEE Moderate Inv.	0.0104	0.0226	4.110608	0.02
SI= IEEE Short Inv.	0.00342	0.00262	13.30009	0.02
VI= IEEE Very Inv.	3.88	0.0963	7.380514	2
I= IEEE Inverse	5.95	0.18	4.164914	2
EI= IEEE Extremely Inv.	5.67	0.0352	10.814	2

Max. "I" Phase = $40 \times I_n$
 Max. "I" Neutral = $10 \times I_n$


15.6.5 – Operation of the phase Overcurrent Elements in function of variable “f(a)”

On each phase the relay measures the current “I_x” and its displacement “φ_x” from the relevant phase-to-neutral voltage “E_x”.

Different operation modes are possible according to the programming of the variable “f(a)”.


- I_s = Minimum operation current level.
- a = Operation reference angle (phase x; x = A, B, C).
- I_x = Measured input current (largest among the three phase currents I_A, I_B, I_C).
- φ_x = Phase displacement of current “I_x” from phase-to-neutral “E_x” (X = A, B, C).
- I_{dx} = Component of “I_x” on the direction “a”.

A) Set f(a) = Disab.

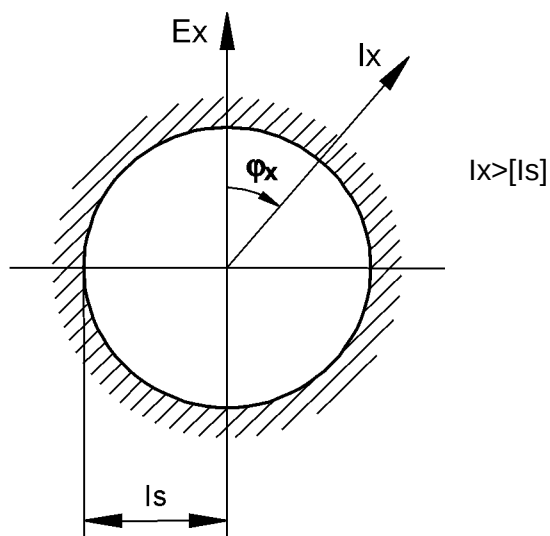

The overcurrent element operates independently from the current direction.

B) Set f(a) = Sup.

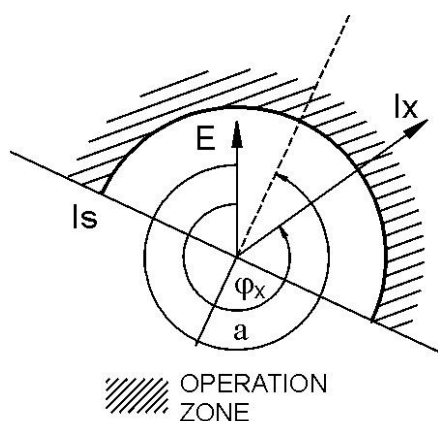


The Overcurrent element only supervises the direction of the current:

the operation conditions are:

- Input voltage above 1-2% of the rated input value.
- Input current above the set level: I_x > [I_s]
- Phase displacement “φ_x” within ±90° from the reference direction “a”.

$$(a - 90^\circ) < \varphi_x < (a + 90^\circ)$$

C) Set $f(a) = \text{Dir}$.

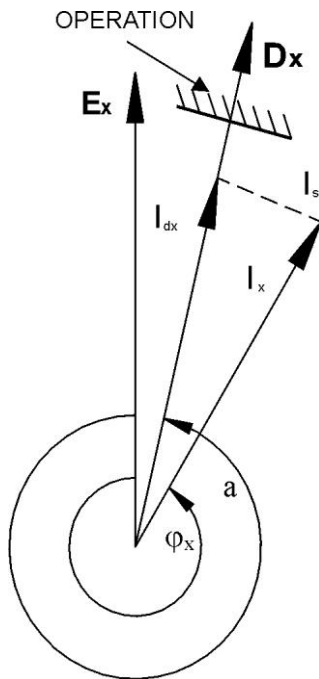

The overcurrent element operates in a real directional mode measuring the component “ I_{dx} ” of the input current in the reference direction “ a ” ($x = A, B, C$).

$$I_{dA} = I_A \cos(\varphi_A - a) \quad I_{dB} = I_B \cos(\varphi_B - a) \quad I_{dC} = I_C \cos(\varphi_C - a)$$


The overcurrent starts to operate when the component “ I_{dx} ” of the input current in the direction “ D_x ” (versor displaced of “ a ” from the phase-to-neutral voltage “ E_x ”) exceeds the set level “ I_s ”.

$$I_{dx} = I_x \cos(\varphi_x - a) \geq I_s$$

In details:

- When $\varphi_x = a$: $I_{dx} = I_x \rightarrow$ operation if $I_x > I_s$
- When $(\varphi_x - a) = 90^\circ$: $I_{dx} = 0 \rightarrow$ no operation
- When $(\varphi_x - a) > 90^\circ$: I_{dx} opposite to $D_x \rightarrow$ no operation

The operation is practically independent from the voltage as low as 1-2% of rated value.

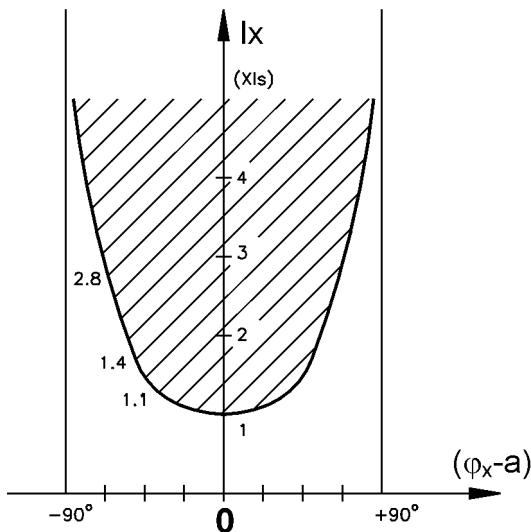


Recommended Reference angles for different applications:

- Measurement of resistive component of current (active power) :
Direct : $a = 0^\circ$ - Reverse : $a = 180^\circ$
- Directional phase fault detection:
Direct : $a = 300^\circ (60^\circ \text{ lag})$ - Reverse : $a = 120^\circ$
- Measurement of inductive reactive component:
Direct : $a = 270^\circ (90^\circ \text{ lag})$ - Reverse : $a = 90^\circ$
- Measurement of capacitive reactive component:
Direct : $a = 90^\circ (90^\circ \text{ lead})$ - Reverse : $a = 270^\circ$

15.6.6 – Operation of the Overcurrent Element with Voltage Control f(U)

When the “Voltage Restraint” function is enabled (F(U)=Enable), the set minimum pick-up level “Is” of the overcurrent elements, changes proportionally to the smallest of the input phase-to-phase voltages: $I_s = F(U)$.

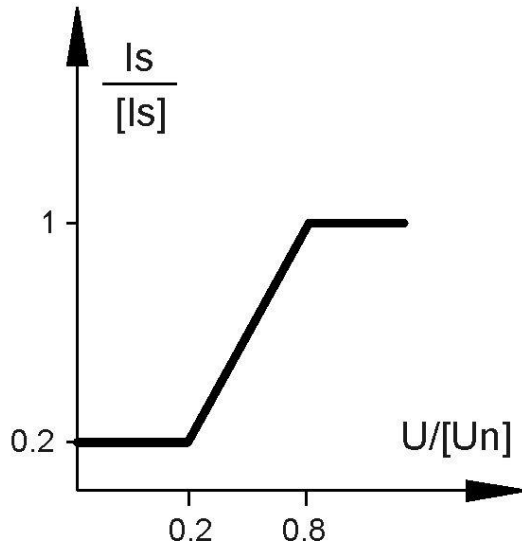

$$\frac{I_s}{[I_s]} = \frac{\text{Actual pick - up level}}{[\text{Set pick - up level}]}$$

$$\frac{U}{[U_{ns}]} = \frac{\text{Actual input voltage}}{[\text{Set rated input voltage}]}$$

the algorithm uses the smallest among the ratios $\frac{E_x \cdot \sqrt{3}}{[U_{ns}]}$ (x = A, B, C)

Practically, between 0.2 U_{ns} and 0.8 U_{ns} , the trip level of the Overcurrent element varies according to the equation:

$$\frac{I_s}{[I_s]} = \frac{0.8}{0.6} \cdot \left(\frac{U}{[U_{ns}]} - 0.8 \right) + 1$$

Below 0.2 $[U_n]$ $\frac{I_s}{[I_s]} = 0.2$

Above 0.8 $[U_n]$ $\frac{I_s}{[I_s]} = 1$

15.6.7 – Blocking Logic (BO-BI)

For each Protection Function it is possible to activate a Blocking Logic allowing for inhibiting their operation by external signals supplied to the Digital Input.

15.6.7.1 – Output Blocking signal “BO”

All the protection functions that can be programmed to operate in the blocking logic mode, element, have an instantaneous element (beside the time delayed) which is operated as soon as the controlled quantity exceeds the set trip level ($I > [Is]$ for current, etc..) and is instantaneously reset when the input quantity drops below the reset level (normally $0.95Is$).

The instantaneous element can control one of the user programmable output relays that, by its contacts, makes the signal available for blocking an external element (BO = Blocking Output). In case, “tBO” sec after the set trip time “ts” has expired, the Protection function is still in operation (current above trip level), the Blocking Output relay (instantaneous element) is anyhow reset to eventually remove the Blocking signal from a back-up protection.

15.6.7.2 – Blocking Input “BI”

For all the functions controllable by the Blocking Logic, it is possible to inhibit the time delayed tripping by an external signal that activates a Digital Input programmed for this functionality. The programmed Digital Input gets activated by an external cold contact closing across its terminals.

With the variable “tBI” set to “OFF” (tBI=OFF), the tripping of the delayed function is blocked as long as the Blocking Input signal is present at the terminals of the Digital Input.

With the variable “tBI” set to “2xtBI” (tBI=2xtBI), 2xtBI seconds after the set trip time delay of the function has expired the blocking input is anyhow ignored and the function enabled to trip.

14.6.8 - Automatic doubling of Overcurrent thresholds on current inrush

For some of the phase Overcurrent functions it is possible to have the set trip level $[Is]$ automatically doubled when strong inrush current is detected.

If at circuit Breaker switch-on (i.e. when the input current rises from zero to a minimum measurable value) the current increases from 0 to 1.5 times the rated value $[In]$ in less than 60ms, the set minimum pick-up level $[Is]$ is dynamically doubled ($[Is] \rightarrow [2Is]$) and keeps this value until the input current drops below $1.25 \times In$ or the set time $[t2xI]$ has elapsed.

This functionality is very useful to avoid spurious tripping of the instantaneous, or short-time delayed Overcurrent elements, that could be experienced at switch-on of reactive loads like Transformer or Capacitors.



15.7 – Function: 2I> (Second Overcurrent Element F50/51)

Stats	→ Enab.	No		[No / Yes]
Options	→ tBI	Off		[Off / 2tBO]
	→ f(a)	Disable		[Disable / Sup / Dir]
	→ 2xl	Disable		[Disable / Enable]
	→ f(U)	Disable		[Disable / Enable]
Oper. Levels	→ Is	40.000	In	(0.100÷40) step 0.010 In
	→ a	359.000	°	(0.000÷359) step 1.000 °
Timers	→ ts	100.00	s	(0.02÷100) step 0.01 s
	→ tBO	0.75	s	(0.05÷0.75) step 0.01 s
	→ t2xl	100.00	s	(0.02÷100) step 0.01 s
	→ td2xl	0.06	s	fixed

15.7.1 – Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **tBI** : Blocking input reset time
Off = Permanent block
2tBO = Set 2xtBO.
- ❑ **f(a)** : Operation mode:
Disable = Non Directional
Sup. = Directional Supervision
Dir. = Total Directional
- ❑ **2xl** : Automatic doubling of trip level on inrush
- ❑ **f(U)** : Voltage restraint
- ❑ **Is** : Minimum operation level
- ❑ **a** : Reference phase current displacement angle for Directional operation
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.
“tBO” is also the trip time delay of the Breaker Failure function.
- ❑ **t2xl** : Maximum time of automatic threshold doubling on inrush
- ❑ **td2xl** : Time for calculation of current rate of rise.



15.8 - Function: **3I** (Third Overcurrent Element F50/51)

Status	→ Enab.	No	[No / Yes]
Options	→ tBI	Off	[Off / 2tBO]
	→ f(a)	Disable	[Disable / Sup / Dir]
	→ 2xl	Disable	[Disable / Enable]
Oper. Levels	→ Is	40.000	In (0.100÷40) step 0.010 In
	→ a	359.000	° (0.000÷359) step 1.000 °
Timers	→ ts	100.00	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s
	→ t2xl	100.00	s (0.02÷100) step 0.01 s
	→ td2xl	0.06	s fixed

15.8.1 - Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **tBI** : Blocking input reset time
Off = Permanent block
2tBO = Set 2xtBO.
- ❑ **f(a)** : Operation mode:
Disable = Non Directional
Sup. = Directional Supervision
Dir. = Total Directional
- ❑ **2xl** : Automatic doubling of trip level on inrush
- ❑ **Is** : Minimum operation level.
- ❑ **a** : Reference phase current displacement angle for Directional operation
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.
“tBO” is also the trip time delay of the Breaker Failure function.
- ❑ **t2xl** : Maximum time of automatic threshold doubling on inrush
- ❑ **td2xl** : Time for calculation of current rate of rise



15.9 - Function: **1lo**> (First Earth Fault Element 50N/51N)

Status	→ Enab.	No	[No / Yes]
Options	→ f(t)	Type - D	[D / A / B / C / I / VI / EI / MI / SI]
	→ tBI	Off	[Off / 2tBO]
	→ f(a₀)	Disable	[Disable / Dir]
Oper. Levels	→ I_s	0.010	On (0.001÷0.2) step 0.001 On
	→ V₀	0.000	%Un (0.000÷50) step 0.100 %Un
	→ a₀	0.000	° (0.000÷359) step 1.000 °
	→ a_z	0.000	° (0.000÷359) step 1.000 °
Timers	→ t_s	100.00	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

15.9.1 - Description of variables


- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **f(t)** : Operation characteristic (Time/Current curve):
 - (D) = Independent definite time
 - (A) = IEC Inverse Curve type A
 - (B) = IEC Very Inverse Curve type B
 - (C) = IEC Extremely Inverse Curve type C
 - (I) = IEEE Inverse Curve
 - (VI) = IEEE Very Inverse Curve
 - (EI) = IEEE Extremely Inverse Curve
 - (MI) = IEEE Moderate Inverse Curve
 - (SI) = IEEE Short Inverse Curve
- ❑ **tBI** : Blocking Input reset time
 - Off = Permanent block
 - 2tBO = Set 2xtBO.
- ❑ **f(a₀)** : Operation mode:
 - Disable = Non Directional
 - Dir. = Total Directional
- ❑ **I_s** : Minimum operation level
- ❑ **V₀** : Minimum residual voltage level for enabling the directional operation
- ❑ **a₀** : Reference Zero Sequence current displacement angle for Directional operation
- ❑ **a_z** : Trip sector amplitude
- ❑ **t_s** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

15.9.2 – Operation mode of the Earth Fault elements programming the variable “f(a_o)”

The relay measures the current “3I_o” and the input voltage “3V_o” of the Earth Fault input and the displacement “φ_o” of the current from the voltage. Different operation modes are programmable by the variable “f(a_o)”.

- **I_s** = Set minimum pick-up residual current “3I_o”.
- **V_o** = Set minimum residual voltage (3V_o) to enable operation.
- **a_o** = Set displacement of the reference current direction.
- **3I_o** = Earth Fault current.
- **3V_o** = Earth Fault voltage.
- **φ_o** = I_o/V_o phase displacement.
- **a_z** = Angle defining the directional operation area around the reference direction.

The Directional Earth Fault element can operate in two different modes:

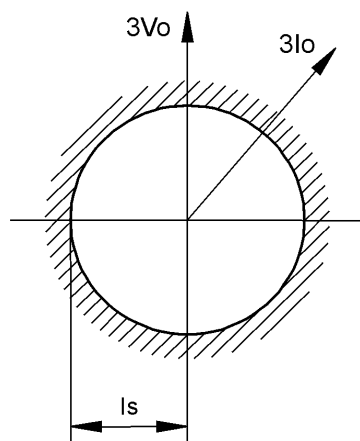

f(a_o) = Dis (Disable)


Operation is Non Directional without any influence by the Zero Sequence Voltage “V_o” and the displacement “φ_o”.

- Operation starts when : 3I_o ≥ [I_s]

f(a_o) = Dir (Directional).

Operation starts when the following 3 conditions are present:

- The Residual Voltage “3V_o” exceeds the set level “V_o” : 3V_o ≥ [V_o]
- The Residual Current “3I_o” exceeds the set level “I_s” : 3I_o ≥ [I_s]
- The angle “φ_o” is within “± a_z” from “a”
(a_o - a_z) ≤ φ_o ≤ (a_o + a_z)

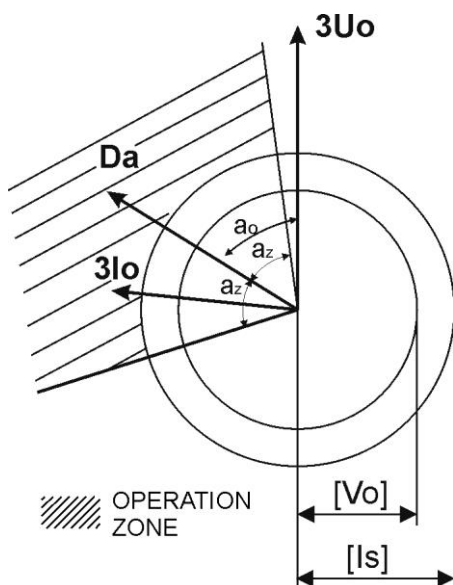

- 3U_o > [V_o]
- 3I_o > [I_s]
- (a_o - a_z) ≤ φ_o ≤ (a_o + a_z)



15.10 - Function: **2Io** (Second Earth Fault Element 50N/51N)

Status	→ Enab.	No	[No / Yes]
Options	→ tBI	Off	[Off / 2tBO]
	→ f(a₀)	Disable	[Disable / Dir]
Oper. Levels	→ Is	0.010	On (0.001÷0.20) step 0.001 On
	→ Vo	0.000	%Un (0.000÷50) step 0.100 %Un
	→ a₀	0.000	° (0.000÷359) step 1.000 °
	→ a_z	0.000	° (0.000÷359) step 1.000 °
Timers	→ ts	100.00	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

15.10.1 - Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **tBI** : Blocking Input reset time
Off = Permanent block
2tBO = Set 2xtBO.
- ❑ **f(a₀)** : Operation mode:
Disable = Non Directional
Dir. = Total Directional
- ❑ **Is** : Minimum operation level
- ❑ **Vo** : Minimum residual voltage level for enabling the directional operation
- ❑ **a₀** : Reference Zero Sequence current displacement angle for Directional operation
- ❑ **a_z** : Trip sector amplitude
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.
“tBO” is also the trip time delay of the Breaker Failure function.



15.11 - Function: **3lo**> (Second Earth Fault Element 50N/51N)

Status	→ Enab.	No	[No / Yes]
Options	→ tBI	Off	[Off / 2tBO]
	→ f(a₀)	Disable	[Disable / Dir]
Oper. Levels	→ I_s	0.010	On (0.001÷0.20) step 0.001 On
	→ V₀	0.000	%Un (0.000÷50) step 0.100 %Un
	→ a₀	0.000	° (0.000÷359) step 1.000 °
	→ a_z	0.000	° (0.000÷359) step 1.000 °
Timers	→ t_s	100.00	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

15.11.1 - Description parameters

- **Enab.** : Function enabling (No = Disable / Yes = Enable)
- **tBI** : Blocking Input reset time
Off = Permanent block
2tBO = Set 2xtBO.
- **f(a₀)** : Operation mode:
Disable = Non Directional
Dir. = Total Directional
- **I_s** : Minimum operation level
- **V₀** : Minimum residual voltage level for enabling the directional operation
- **a₀** : Reference Zero Sequence current displacement angle for Directional operation
- **a_z** : Trip sector amplitude
- **t_s** : Trip time delay
- **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.
“tBO” is also the trip time delay of the Breaker Failure function.



15.12 - Function: **1Is** (First Negative Sequence Element F46)

Status	→ Enab.	No	[No / Yes]
Options	→ t(t)	Type-D	[D / A / B / C / I / VI / EI / MI / SI /]
	→ tBI	Off	[Off / 2tBO]
Oper. Levels	→ Is	4.000	In (0.1÷4) step 0.01 In
Timers	→ ts	100.00	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

15.12.1 - Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **f(t)** : Operation characteristic (Time/Current curve):
 - (D) = Independent definite time
 - (A) = IEC Inverse Curve type A
 - (B) = IEC Very Inverse Curve type B
 - (C) = IEC Extremely Inverse Curve type C
 - (I) = IEEE Inverse Curve
 - (VI) = IEEE Very Inverse Curve
 - (EI) = IEEE Extremely Inverse Curve
 - (MI) = IEEE Moderate Inverse Curve
 - (SI) = IEEE Short Inverse Curve
- ❑ **tBI** : Blocking Input reset time
 - Off = Permanent block
 - 2tBO = Set 2xtBO.
- ❑ **Is** : Minimum operation level
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

15.12.2 – Time/Current operation of the first Current Unbalance element "f(t)"

the relay measures the Negative Sequence component "I₂" of the input current.
The Time/Current curves can be selected by programming the variable "f(t)":

- ❑ f(t) = D Independent definite time operation.
- ❑ f(t) = I, VI, EI, MI, SI, A, B, C Dependent Inverse time operation



15.13 - Function: **2Is**> (Second Negative Sequence Element F46)

Status	→ Enab.	No	[No / Si]
Options	→ tBI	Off	[Off / 2tBO]
Oper. Levels	→ Is	4.000	In (0.1÷4) step 0.01 In
Timers	→ ts	100.00	s (0.02÷100) step 0.01 s
	→ tBO	0.75	s (0.05÷0.75) step 0.01 s

15.13.1 - Description of variables

- **Enab.** : Function enabling (No = Disable / Yes = Enable)
- **tBI** : Blocking Input reset time
Off = Permanent block
2tBO = Set 2tBO.
- **Is** : Minimum operation level
- **ts** : Trip time delay
- **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.
“tBO” is also the trip time delay of the Breaker Failure function.



15.14 - Function: **1U>** (First Overvoltage Element F59)

Status	→ Enab.	No	[No / Yes]			
Oper. Levels	→ Us	90.000	%Un (10÷190)	step	1	%Un
Timers	→ ts	100.00	s (0.02÷100)	step	0.01	s

14.15.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **Us** : Minimum operation level
- ☐ **ts** : Trip time delay

15.15 - Function: **2U>** (Second Overvoltage Element F59)

Status	→ Enab.	No	[No / Yes]			
Oper. Levels	→ Us	90.000	%Un (10÷190)	step	1	%Un
Timers	→ ts	100.00	s (0.02÷100)	step	0.01	s

15.15.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **Us** : Minimum operation level
- ☐ **ts** : Trip time delay



15.16 - Function: **1U<** (First Undervoltage Element F27)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ Us	90.000	%Un	(10÷190)	step	1	%
Timers	→ ts	100.00	s	(0.02÷100)	step	0.01	s

15.16.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **Us** : Minimum operation level
- ☐ **ts** : Trip time delay

15.17 - Function: **2U<** (Second Undervoltage Element F27)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ Us	90.000	%	(10÷190)	step	1	%
Timers	→ ts	100.00	s	(0.02÷100)	step	0.01	s

15.17.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **Us** : Minimum operation level
- ☐ **ts** : Trip time delay



15.18 - Function: **1f**> (First Overfrequency Element F81>)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ fs	40.000	Hz	(40÷70)	step	0.01	Hz
Timers	→ ts	10.00	s	(0.02÷100)	step	0.01	s

15.18.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **fs** : Minimum operation level
- ☐ **ts** : Trip time delay

15.19 - Function: **2f**> (Second Overfrequency Element F81>)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ fs	40.000	Hz	(40÷70)	step	0.01	Hz
Timers	→ ts	10.00	s	(0.02÷100)	step	0.01	s

15.19.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **fs** : Minimum operation level
- ☐ **ts** : Trip time delay

15.20 - Function: **3f**> (Third Overfrequency Element F81>)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ fs	40.000	Hz	(40÷70)	step	0.01	Hz
Timers	→ ts	10.00	s	(0.02÷100)	step	0.01	s

15.20.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **fs** : Minimum operation level
- ☐ **ts** : Trip time delay



15.21 – Function: **1f<** (First Underfrequency Element F81<)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ fs	40.000	Hz	(40÷70)	step	0.01	Hz
Timers	→ ts	10.00	s	(0.02÷100)	step	0.01	s

15.21.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **fs** : Minimum operation level
- ☐ **ts** : Trip time delay

15.22 - Function: **2f<** (Second Underfrequency Element F81<)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ fs	40.000	Hz	(40÷70)	step	0.01	Hz
Timers	→ ts	10.00	s	(0.02÷100)	step	0.01	s

15.22.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **fs** : Minimum operation level
- ☐ **ts** : Trip time delay

15.23 - Function: **3f<** (Third Underfrequency Element F81<)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ fs	40.000	Hz	(40÷70)	step	0.01	Hz
Timers	→ ts	10.00	s	(0.02÷100)	step	0.01	s

15.23.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **fs** : Minimum operation level
- ☐ **ts** : Trip time delay



15.24 - Function: 1Uo> (First Zero Sequence Overvoltage Element F59Uo)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ Us	1.000	%Un	(1÷100)	step	1	%Un
Timers	→ ts	100.00	s	(0.02÷100)	step	0.01	s

15.24.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
 - ☐ **Us** : Minimum operation level
 - ☐ **ts** : Trip time delay
-

15.25 - Function: 2Uo> (Second Zero Sequence Overvoltage Element F59Uo)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ Us	1.000	%Un	(1÷100)	step	1	%Un
Timers	→ ts	100.00	s	(0.02÷100)	step	0.01	s

15.25.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
 - ☐ **Us** : Minimum operation level
 - ☐ **ts** : Trip time delay
-



15.26 - Function: $U1<$ (Positive Sequence Undervoltage Element F27U1)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ Us	90.000	%Un	(10÷190)	step	1	%Un
Timers	→ ts	100.00	s	(0.02÷100)	step	0.01	s

15.26.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
 - ☐ **Us** : Minimum operation level
 - ☐ **ts** : Trip time delay
-

15.27 - Function: $U2>$ (Negative sequence Overvoltage Element F59U2 or F47)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ Us	90.000	%Un	(10÷190)	step	1	%Un
Timers	→ ts	100.00	s	(0.02÷100)	step	0.01	s

15.27.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
 - ☐ **Us** : Minimum operation level
 - ☐ **ts** : Trip time delay
-



15.28 - Function: **Wi** (Circuit Breaker maintenance level)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ li	1.000	In (0.1÷99)
	→ Wi	1.000	(1÷9999)
			step 0.1 In
			step 1

15.28.1 - Description of variables

- **Enab.** : Function enabling (No = Disable / Yes = Enable)
- **li** : Circuit Breaker Rated Current in multiples of the Relay rated input current In
- **Wi** : Maximum allowed amount of accumulated interruption energy before maintenance as stated by the C/B Manufactured.

15.28.2 - Operation (Accumulation of the interruption Energy)

The relay computes the Arc Energy developed during each interruption of the Circuit Breaker and accumulates these values.

When the amount of the accumulated energy exceeds a settable level the relay gives out an alarm to signalize that maintenance inspection of the Circuit Breaker is needed.

The operation of this function is based on the following parameters:

$$li = li = (0.1-99)In$$

$$Wi = Wi = (1 - 9999)$$

"Wi" is set as a multiple of the conventional interruption energy unit.

Any time the Circuit Breaker opens (change of status from closed to open of the digital input connected to the normally open contact 52a of the C/B) the relay decreases the amount of energy corresponding to a number of conventional units:

$$nW_c = \frac{W}{W_c} = \frac{I^2 \cdot t_x}{li^2 \cdot t_i}$$

where:

W = $I^2 \cdot t_x$ Interruption Energy during the interruption time "tx" with interruption current "I".

Wc = $li^2 \cdot t_i$ Conventional unit of interruption energy corresponding to C/B rated current and rated interruption time "ti".

When the set Energy level before maintenance is decreased to zero a user programmable output relay is operated.

Reset to Zero of the Energy accumulation is available in the menu "**Cmd**" (Reset Term).



15.29 - Function: TCS (Trip Circuit Supervision)

Status	→ Enab.	No	[No / Yes]
Timers	→ ts	0.10	s (0.1÷100) step 0.01 s

15.29.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **ts** : Trip time delay

15.29.2 - Operation

The relay includes a complete Circuit Breaker Trip Circuit Supervision unit that is associated to the Contact "15-26" of the "R1" Output Relay.

The contact of "R1" is used to trip the C/B as reported in the drawing here below.

The supervision works when the C/B is closed and recognizes the Trip Circuit as sound as far as the current flowing exceeds "1mA".


In case of Trip Circuit Fault detection, the diagnostic relay is operated and the Led starts flashing (see § Signalization).

To have Supervision also with the C/B open one N/C contact (52b) from the C/B and an external resistor "R" are needed.

$$R[k\Omega] \leq \frac{V}{1mA} - R_{52} \quad \text{where} \quad R_{52} = \text{Trip Coil internal resistance [k}\Omega\text{]}$$

V = Trip Circuit Voltage

$$P_R \geq 2 \cdot \frac{V^2}{R} [W] \quad \text{Design power of external resistance "R"}$$

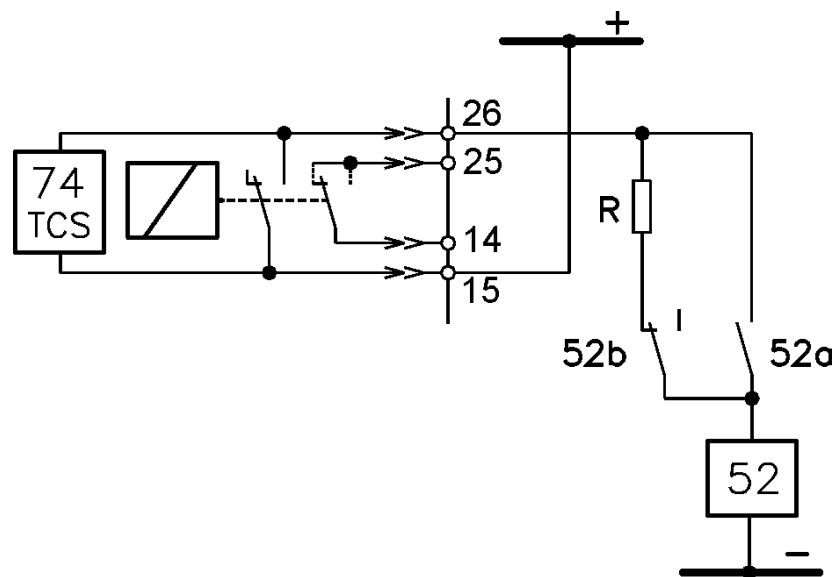

Tripping of the function operates a user programmable output relay.



15.30 - Function: **IRF** (Internal Relay Fault)

In this menu it is possible to configure the operation of the Relay Internal Fault detection element

Status	→ Enab.	No	[No / Yes]
Timers	→ tIRF	5.00 s	(5÷200) step 0.01 s

15.30.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **tIRF** : Trip time delay

15.30.2 - Operation

Tripping of the function operates a user programmable output relay.

15.31 - Function: **RT** (Remote Trip)

In this menu it is possible to configure the operation of Remote Trip via the relevant Digital Input.

Status	→ Enab.	No	[No / Yes]
Options	→ RTon	FallEdge	[RiseEdge – FallEdge]
Timers	→ ts	5.00 s	(0.00÷10.00) step 0.01 s

15.31.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **RTon** : Remote trip Edge selector
- ☐ **ts** : Remote Trip time delay

15.31.2 - Operation

This function operate when the Digital Input "RT" is activated.
It can also be used to receive an external command from another protection. (Temperature sensor, RTD, etc.)



15.32 - Function: **TripTimeRd.** (Trip Time Reduction)

Status	→	Enab.	No	[No / Yes]			
Timers	→	tHold	0.00	s	(0.00÷180)	step	1 s
	→	tC1 I	0.02	s	(0.02÷100)	step	0.01 s
	→	tC2 I	0.02	s	(0.02÷100)	step	0.01 s
	→	tC3 I	0.02	s	(0.02÷100)	step	0.01 s
	→	tC1 Io	0.02	s	(0.02÷100)	step	0.01 s
	→	tC2 Io	0.02	s	(0.02÷100)	step	0.01 s
	→	tC3 Io	0.02	s	(0.02÷100)	step	0.01 s
	→	tC1 Uo	0.02	s	(0.02÷100)	step	0.01 s
	→	tC2 Uo	0.02	s	(0.02÷100)	step	0.01 s
	→	tCRT	0.00	s	(0.00÷10)	step	0.1 s

15.32.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **tHold** : Duration of the trip time reduction;
is set to 0,00 the reduction function does not operate.
- ☐ **tC1 I** : Reduced trip time for 1I>
- ☐ **tC2 I** : Reduced trip time for 2I>
- ☐ **tC3 I** : Reduced trip time for 3I>
- ☐ **tC1 Io** : Reduced trip time for 1Io>
- ☐ **tC2 Io** : Reduced trip time for 2Io>
- ☐ **tC3 Io** : Reduced trip time for 3Io>
- ☐ **tC1 Uo** : Reduced trip time for 1Uo>
- ☐ **tC2 Uo** : Reduced trip time for 2Uo>
- ☐ **tCRT** : Reduced trip time for RT

15.32.2 - Operation

When this function is enabled, after a manual or automatic reclosure, the trip time delay of the protection functions is reduced from the original set value to the new time delay “tc” until “tHold” is expired.

Anyhow when the ongoing reclose cycle is over and the relay is ready for new reclose cycle, the original trip time delay is restored.

Functions originally programmed for a inverse time operation, during “tHold” operate as independent time function with definite time delay “tc”.



15.33 - Function: **MotSt** (Motor Starts)

Oper. Levels	→ Is	0.100	In	(0.05÷1)	step	0.01	In
Timers	→ tfSt	0.10	s	(0.02÷1)	step	0.01	s
	→ tst	120	s	(10÷120)	step	0.01	s

15.31.1 - Description of variables

- ☐ **Is** : Minimum level for motor ON
- ☐ **tfSt** : Motor start filter time
- ☐ **tst** : Motor Starting time

15.34 - Function: **LR** (Locked Rotor - Rotor jam)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ ILR	1.00	In	(1÷5)	step	0.01	In
Timers	→ tLR	120	s	(1÷120)	step	0.01	s

15.34.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **ILR** : Trip level of Locked rotor
- ☐ **tLR** : Trip time delay of Locked Rotor element during run

15.34.2 - Operation

At motor starting this function is disabled for the set time “ **2xtSt** ” (see § MotSt) : when this time has elapsed, if current exceeds the set level “ **ILR** ”, the relay trips with a delay of “ **tLR** ”.



15.35 - Function: **StNo** (Limitation Start Number)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ StNo	10	(1÷60)	step	1		
Timers	→ tstNo	600	s	(60÷3600)	step	60	s
	→ tBst	600	s	(60÷3600)	step	60	s

15.35.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **StNo** : Maximum Number of starting allowed within the time tStNo
- ☐ **tstNo** : Time into which the StNo is counted
- ☐ **tBst** : Restart inhibition time after tripping StNo

15.36 - Function: **StSeq** (Starting Sequence Control)

Status	→ Enab.	No	[No / Yes]				
Oper. Levels	→ ITr	10	In	(0.1÷1)	step	0.1	In
Timers	→ tTr	20	s	(0.50÷50)	step	0.1	s

15.36.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **ITr** : Switch-over current of motor starter
- ☐ **tTr** : Trip time delay of LR during run

15.36.2 - Operation

During start-up of the motor, the unit can control an output relay used to operate the switch-over of motor starter (star-delta, resistance or impedance, autotransformer, etc...) thus allowing to automatically manage the starting transition by controlling the parameters "ITr", "tTr".

At motor start counting of "tTr" begins. If during "tTr" the motor current drops below "ITr", switching-over is operated; if motor current stays above "ITr" longer than "tTr", the Locked Rotor element is activated.



15.37 - Function: **I<** (No load running)

Status	→ Enab.	No	[No / Yes]
Oper. Levels	→ I<	10	In (0.15÷1) step 0.01 In
Timers	→ tl<	30	s (0.10÷90) step 0.01 s

15.37.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **I<** : Operation level
- ☐ **tl<** : Trip time delay

15.37.2 - Operation

This function performs the protection against no-load running: it is activated by motor under current.



15.38 - Function: **CB Manage** (Control C/B)

This menu allows to configure the command for C/B operation.

Options	→ L/R	Ignored	[Ignored – Active]			
	→ Key	Enable	[Disable – Enable]			
Timers	→ tL/R	0.05	s	(0.05 ÷ 1.00)	step 0.05	s
	→ tC/Bs	0.50	s	(0.05 ÷ 1.00)	step 0.05	s

15.38.1 - Description of variables

- ❑ **L/R** : Selection of Local/Remote C/B operation mode Ignored or Active
- ❑ **Key** : **Disable** = The pushbuttons on Front Panel are disabled;
the operation of the C/B can be controlled by;




1 - serial bus commands
2 - commands available in the menu "**Cmd**"
(Password protected).
3 - Digital Inputs.

Enable = The C/B can be controlled also by the pushbuttons available
on Relay's Front Face.
- ❑ **tL/R** : Admissible time before detection of the Local/Remote discrepancy alarm.
- ❑ **tC/Bs** : Maximum admissible delay for detection of status signal after C/B operation.

15.38.2 - Display Message

- 1  • **L** • “**L**” the control of C/B is in “Local” mode
- 2  • **R** • “**R**” the control of C/B is in “Remote” mode
- 3  • **?** If the symbol “?” show up the relay is in discrepancy Local/Remote.
The commands can be send from “Local” or “Remote”.
- 4  • **(+)** This symbol indicates the CB breaker failure
(example: C/B closing failure)



15.39 - Function: **Oscillo** (Oscillographic Recording)

Status	→ Enab.	No	[No / Yes]
Options	→ Trig	Start	[Start / Trip / OnCom / REUserLg / FEUserLg]
Timers	→ tPre	0.50	s (0.01÷0.50) step 0.01 s
	→ tPost	0.50	s (0.01÷1.50) step 0.01 s

15.39.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **Trig** : Selection of the Trigger command source (start recording):
 - Start* = Trigger on time start of protection functions
 - Trip* = Trigger on trip (time delay end) of protection functions
 - OnCom* = External Trigger from Digital Input
 - REUserLg* = Rising Edge of "User Logic" (see § Setting)
 - FEUserLg* = Falling Edge of "User Logic" "User Trigger Oscillo")
- ☐ **tPre** : Recording time before Trigger
- ☐ **tPost** : Recording time after Trigger

15.39.2 - Operation

In the options: "Trig = Start" and "Trig = Trip", the oscillographic recording starts respectively when any protection function starts operating or trip.

In the option "ExtInp", the oscillographic record starts when the Digital Input is activated (terminals shorted)

The "Oscillo" Function includes the wave Form Capture of the input quantities (IA, IB, IC, Io, EA, EB, EC, Eo) and can totally store a record of 3 seconds.

The number of events recorded depends on the duration of each individual recording (tPre + tPost).

In any case the number of event stored can not exceed ten (10 x 0.3 sec).

Any new event beyond the 3 sec capacity of the memory, cancels and overwrites the former records (FIFO Memory).



15.39.3 – Setting “User Trigger Oscillo”

The “User trigger Oscillo” is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via “MSCom2” software.

Name	User descr.	Linked functions	OpLogic	Timer	Timertype	Logical status
------	-------------	------------------	---------	-------	-----------	----------------

15.39.3.1 – “Name”

Internal name

15.39.3.2 – “User descr.”

Fixed

15.39.3.3 – “Linked functions”

Selection functions

15.39.3.4 – “OpLogic”

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

15.39.3.5 – “Timer”

Time delay (0-10)s, step 0.01s

15.39.3.6 – “Timer type”

Delay = Add a delay on output activation.
The “Timer” is edge triggered on rise edge.

Monostable = Activated the output for the time “Timer”


15.39.3.7 – “Logical status”

“User Trigger Oscillo” Logical status


15.39.3.8 – “Example”: Setting “User Variable”

Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button

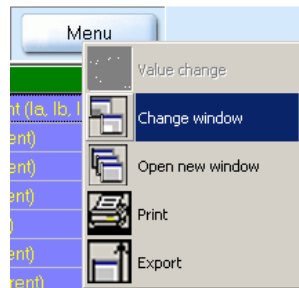

Select “User Variable”

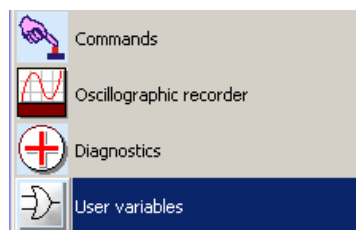


Setting for “User Trigger Oscillo” : “**1I>2I>3I>**”, “**AND**”, “**1**”, “**Monostable**”.


ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
1	User Trigger Oscillo	OscilloTrigger logic		None	0	Delay	0
2	UserVar <0>	Gate 1		None	0	Delay	0

15.39.3.9 – “Linked Functions”

Select “**Linked Functions**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

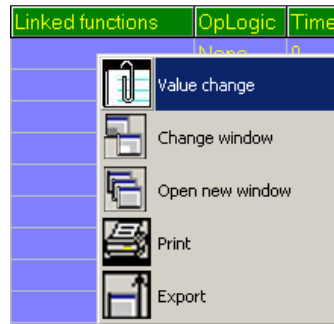


Select “**1I>**, **2I>**, **3I>**” from “Available” box via push-button “<Add”, and press “OK”.
For remove functions, use push-button “>Remove”.

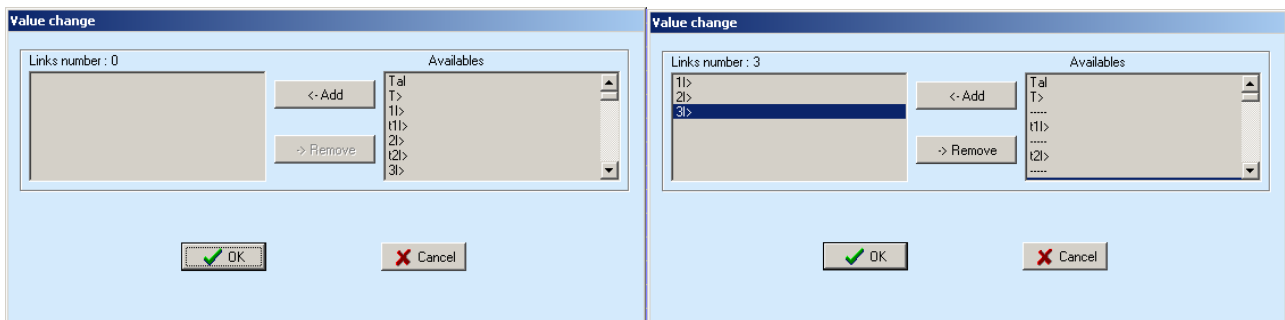


15.39.3.10 – “Operation Logic” (Oplogic)

Select “**Oper Logic**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

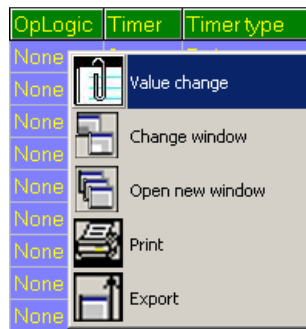


Insert “**AND**” into box and press “OK”:

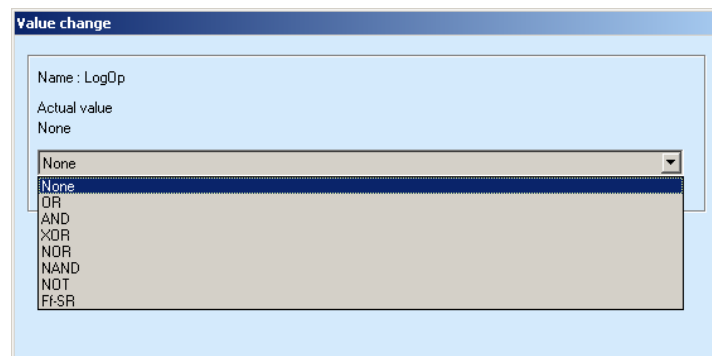


15.39.3.11 – “Timer”

Select “**Timer**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

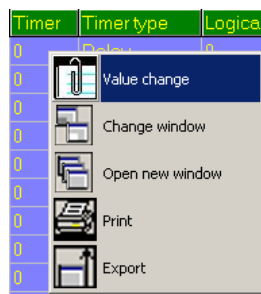


Select “**1**” into box and press “OK”:

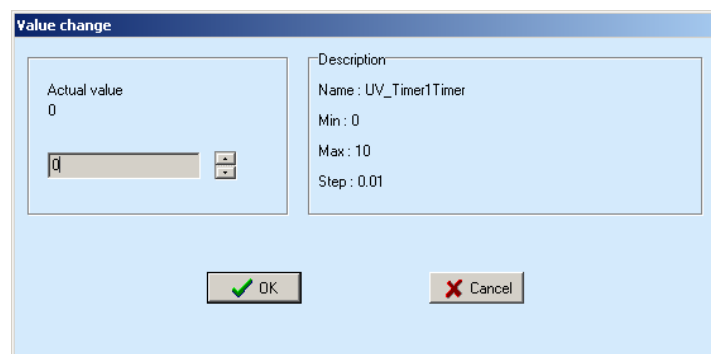


15.39.3.12 – “Timer type”

Select “**Timer**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:

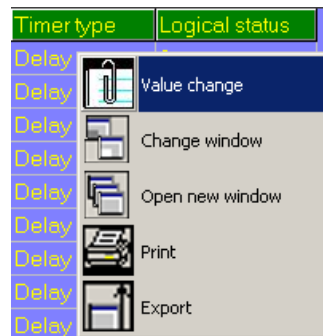

Select “**Monostable**” into box and press “OK”:

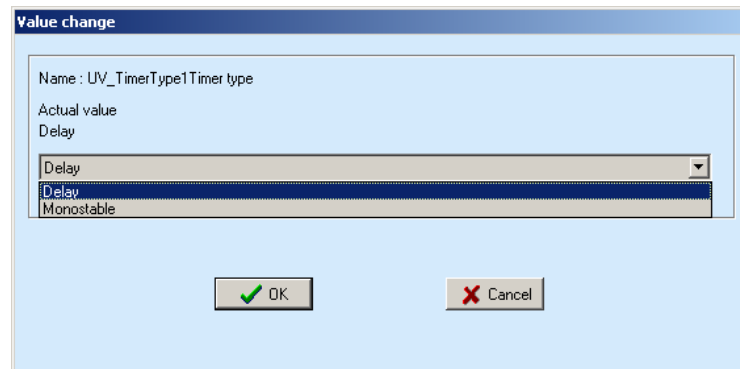



15.40 - Function: **BreakerFail** (Breaker Failure)

Status	→ Enab.	No	[No / Yes]
Timers	→ tBF	0.75 s	(0.05 ÷ 0.75) step 0.01 s

15.40.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **tBF** : Trip time delay

15.40.2 - Operation

The Breaker Failure detection is started by the operation of the output relay “R1” (programmed to be controlled by the Protection Functions that trip the C/B).

If after [tBF] seconds from operation of the relay “R1”, any input current flow is still detected (>10% I_n) , the function “BF” trips and operate one user programmable output relay,

15.41 - Function: **ExtReset** (External Reset Configuration)

This menu allows to configure the edge polarity of the digital input associated to the trip reset function.

Options	→ ActOn	RiseEdge	[RiseEdge / FallEdge]
----------------	----------------	----------	-----------------------

15.41.1 - Description of variables

- ☐ **ActOn** : **RiseEdge** Active on Rise Edge (Digital Input close).
FallEdge Active on Fall Edge (Digital Input open).

16. Input – Output (via software MCom2)

The firmware can manage up to 32 digital inputs and 20 output relays; among these, 4 digital inputs and 6 output relays are available on the relay module, the remaining are available on additional expansion modules controlled via the CAN-Bus communication channel:

14DI	Module	=	14 Digital Inputs
14DO	Module	=	14 Outputs Relay
UX10-4	Module	=	10 Digital Input - 4 Outputs Relay

The interfacing software “MCom2” also allows to program the operation of the output relays (Physical Output), and Digital Inputs (see MCom2 Manual).

16.1 – Digital Input

→ 0.D1	Programmable (D1)	When the relevant terminals are open and get activated when the relevant terminals are shorted by an external cold contact. Reserved - dont use	<i>Available in the FMR relay</i>
→ 0.D2	Programmable (D2)		
→ 0.D3	Programmable (D3)		
→ 0.D4	Programmable (D4)		
→ 1.D1	Inputs	<i>Digital input on Expansion Board 1</i>	Any digital input of the expansion modules is active when the relevant terminals (see wiring diagram) are shorted.
→ 1.D--	"D8", "D16" not available		
→ 1.D15			
→ 2.D1	Inputs	<i>Digital input on Expansion Board 2</i>	
→ 2.D--	"D8", "D16" not available		
→ 2.D15			

16.2 – “DI” Configuration (via MCom2 software)

Any of the Digital Inputs can be programmed to control one or more of the following functions.

Bi1>	Blocking input to the	1l>
Bi2l>	Blocking input to the	2l>
Bi3l>	Blocking input to the	3l>
Bi1lo>	Blocking input to the	1lo>
Bi2lo>	Blocking input to the	2lo>
Bi3lo>	Blocking input to the	3lo>
Bi1ls>	Blocking input to the	1ls>
Bi2ls>	Blocking input to the	2ls>
Bi1U>	Blocking input to the	1U>
Bi2U>	Blocking input to the	2U>
Bi1U<	Blocking input to the	1U<
Bi2U<	Blocking input to the	2U<
Bi1Uo>	Blocking input to the	1Uo>
Bi2Uo>	Blocking input to the	2Uo>
BiU1<	Blocking input to the	U1<
BiU2>	Blocking input to the	U2>
Circuit Breaker	Indication of the Open/Close status of the C/B	
Local State	Local mode operation	
Remote State	Remote mode operation	
Remote Trip	Remote (external) Trip	
C/B Open command	C/B open command	
C/B Close command	C/B close command	
Dig.Inp.red.Time	Digital input reduction of trip time	
ExtR	External Reset input	
Group 1-2	Selection of the setting Group 1 or 2.	

16.2.1 – “Example”

ID	Name	Status	OpLogic	Functions
----	------	--------	---------	-----------

16.2.2 – “Name”

Logical Input name

16.2.3 – “Status”

Logical Input status

16.2.4 – “OpLogic”

Not Used


16.2.5 – “Functions”

Selection function


16.2.6 – “Example”: Setting “Digital Input”

Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button

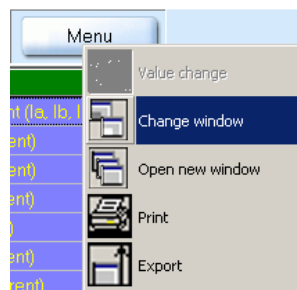

Select “DI configuration”

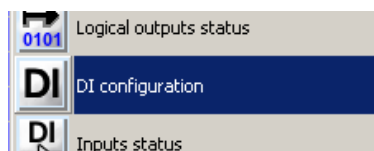


Setting for “Bi1I>” : “1I>”.


ID	Name	Status	OpLogic	Functions
1	Bi1I>	Not active	None	1I>
2	Bi1I>	Not active	None	

16.2.7 – “Functions”

Select “**Functions**” related to “Bi1l>” and press right button on mouse, select “Value change”:

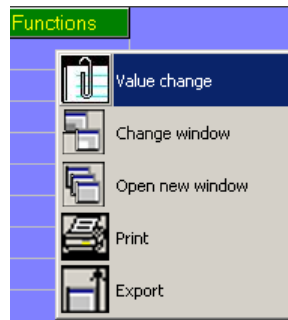

From box “Available”, select “1l>” and press “Add”.
Press “OK” for confirmation. (if Password is request, see § Password)

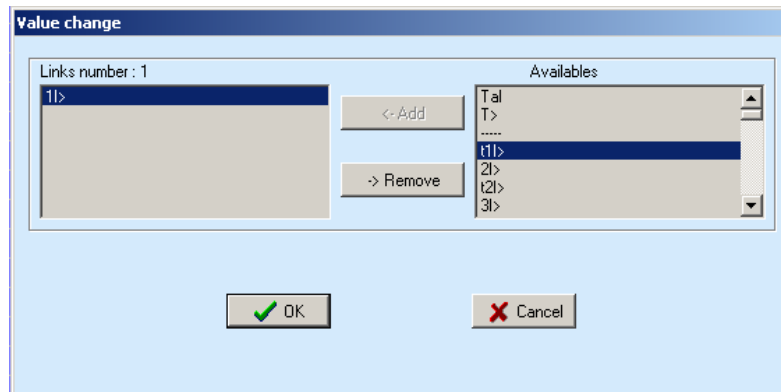

16.3 – Outputs Relay

The output relay are fully user programmable and controlled by any protection functions and by any digital inputs.

→ 0.R1	Programmable (R1)	<i>Available in the FMR relay</i>
→ 0.R2	Programmable (R2)	
→ 0.R3	Programmable (R3)	
→ 0.R4	Programmable (R4)	
→ 0.R5	Programmable (R5)	
→ 0.R6	Programmable (R6)	
→ 1.R1	Programmable	<i>Output Relays on Expansion Board</i>
→ 1.R--		
→ 1.R14		

16.4 - “DO” Configuration

Any Output Relay can be programmed to be controlled (energized) by one or more of the following functions or Digital Inputs:

Functions	Element		Description
T>	Tal	Alarm Trip	Thermal Image T>
1l>	1l> t1l>	Start Trip	First overcurrent element F50-51
2l>	2l> t2l>	Start Trip	Second overcurrent element F50-51
3l>	3l> t3l>	Start Trip	Third overcurrent element F50-51
1lo>	1lo> t1lo>	Start Trip	First earth fault element F50N-51N
2lo>	2lo> t2lo>	Start Trip	Second earth fault element F50N-51N
3lo>	3lo> t3lo>	Start Trip	Third earth fault element F50N-51N
1ls>	1ls> t1ls>	Start Trip	First negative sequence current element F46
2ls>	2ls> t2ls>	Start Trip	Second negative sequence current element F46
1U>	1U> t1U>	Start Trip	First overvoltage element F59
2U>	2U> t2U>	Start Trip	Second overvoltage element F59
1U<	1U< t1U<	Start Trip	First undervoltage element F27
2U<	2U< t2U<	Start Trip	Second undervoltage element F27
1f>	1f> t1f>	Start Trip	First overfrequency element F81
2f>	2f> t2f>	Start Trip	Second overfrequency element F81
3f>	3f> t3f>	Start Trip	Third overfrequency element F81
1f<	1f< t1f<	Start Trip	First underfrequency element F81
2f<	2f< t2f<	Start Trip	Second underfrequency element F81
3f<	3f< t3f<	Start Trip	Third underfrequency element F81
1Uo>	1Uo> t1Uo>	Start Trip	First zero sequence voltage element F59Uo
2Uo>	2Uo> t2Uo>	Start Trip	Second zero sequence voltage element F59Uo
U1<	U1< tU1<	Start Trip	Positive sequence undervoltage element F27U1



U2>	U2> tU2>	Start Trip	Negative sequence overvoltage element F59U2
I<	I< tI<	Start Trip	Undercurrent (no-load running) element F37
Wi	tWi>		Circuit breaker maintenance level
TCS	tTCS		Trip coil supervision
IRF	IRF tIRF	Start Trip	Internal Relay Failure
BF	tBF	Trip	Breaker Failure
RT	RT tRT	Start Trip	Remote Trip
	MotON		Motor status – ON
	LR tLR	Start Trip	Locked Rotor
	LimStNum		Limitation of the number of startings
	StSeqSucc		Start Sequence Successful
	ITr		Switch-over (transition) current
	Gen.Start	Start	Generic Start
	Gen.Trip	Trip	Generic Trip
	manOpCmd		Manual Open Command
	L/Rdisc		Local/Remote signal Discrepancy
	CL-Cmd		Close Command
	C/Bfail		Circuit Breaker failure
	OscilloTriggerLogic		User Variable for Oscillographic Recording
	Gate1 to Gate25		User Variable
	Vcc		Reserved
	Gnd		Reserved
	Reset		Reset signal Logic
	P1		Push-button Open
	P2		Push-button Close
	SCDop		Scada open breaker command
	SCDcl		Scada close breaker command
	SCDop2		Scada open breaker 2 command (generic command)
	SCDcl2		Scada close breaker 2 command (generic command)
	SCDop3		Scada open breaker 3 command (generic command)
	SCDcl3		Scada close breaker 3 command (generic command)
	SCDop4		Scada open breaker 4 command (generic command)
	SCDcl4		Scada close breaker 5 command (generic command)
	DisRCL		Scada disable reclose command
	EnRCL		Scada enable reclose command
	TripTimerR		Trip Time Reduction
	0.D1 0.D1Not ---		Digital Input on Main Relay
	0.D4 0.D4Not ---		
	1.D1 1.D1Not ---		Digital inputs on Expansion Board
	1.D15 1.D15Not ---		
	2.D1 2.D1Not ---		Digital inputs on Expansion Board
	2.D15 2.D15Not ---		
	0.R1 0.R2 0.R3 0.R4 0.R5 0.R6		Output relays on Main Relay
	1.R1 ---- 1.R14		Output relays on Expansion Board



16.4.1 – “Example”

ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0 F1 (Master board, R.1)		None	Off	Normally open	Automatic reset	0.1	Off
2	0 F2 (Master board, R.2)		None	Off	Normally open	Automatic reset	0.1	Off

16.4.1.1 – “Relay”

Relay internal name

16.4.1.2 – “Linked function”

It's available only 1 link, select the function for tripping the output relay (for multiple association use “User Variable”)

16.4.1.3 – “Operation Logic”

Not Used

16.4.1.4 – “Logical Status”

Relay Logical status

16.4.1.5 – “Output Configuration”

Normally Deenergized The output relay is deenergized in normal conditions and gets energized on activation of the controlling Functional Output; reset means deenergizing.

Normally Energized The output relay is energized in normal conditions and gets deenergized on activation of the controlling Functional Output; reset means energizing.

16.4.1.6 – “tON - Operation Time”

This timer controls the duration of the activation of the output relay.


tON : (0.01-10)s, step 0.01s

16.4.1.7 – “Relay Status”

Relay – Physical status


16.4.1.8 – “Functions - Operation Mode”

- Automatic** : In this mode the output relay is “operated” (energized if “N.D.”, deenergized if “N.E.”) when the controlling Functional Output is activated and it is reset to the “non operated” condition when the Functional Output gets disactivated but, anyhow, not before the time “tON” has elapsed (minimum duration of the operation time)
- Manual** : In this mode the output relay is “operated” when the controlling Functional Output is activated and remains in the operated condition until a manual reset command is issued by the FMR keyboard (local commands menu) or via the serial communication. In this mode the timer “tON” has no effect.
- Impulsive** : In this mode the output relay is “operated” when the controlling Functional Output is activated and it remains in the “operated” condition (energized if “N.D.”, deenergized if “N.E.”) for the set time “tON” independently from the status of the controlling Functional Output.

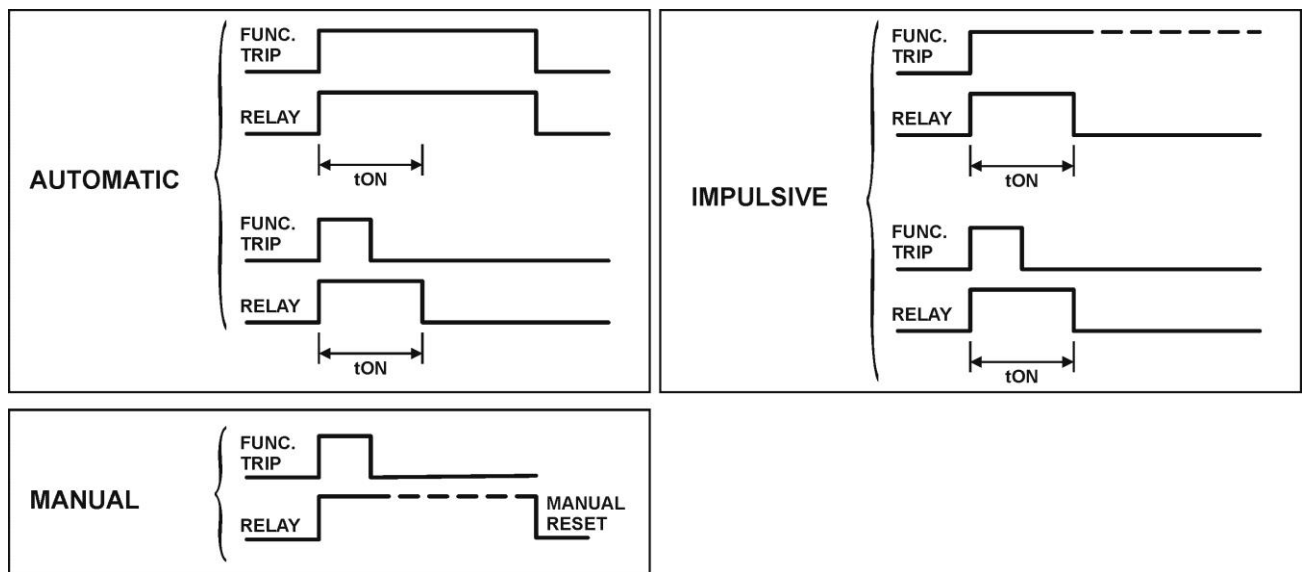


Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button

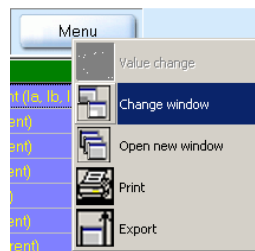

Select “DO Configuration”

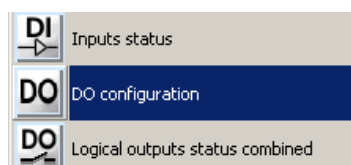


16.4.3 – “Example”: Change settings for “0.R1”

Change settings for “0.R1” : “1I>”, “Normally Closed”, “Pulse”, “0.5”.


ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board: R.1]		None	Off	Normally open	Automatic reset	0.1	Off
2	0.R2 [Master board: R.2]		None	Off	Normally open	Automatic reset	0.1	Off

16.4.3.1 – “Linked Functions”

Select “**Linked Functions**” related to 0.D1 and press right button on mouse, select “Value change”:

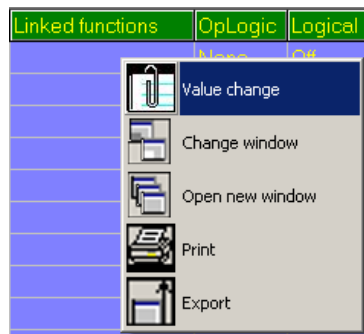


From box “Available”, select “1I>” and press “Add”.
Press “OK” for confirmation. (if Password is request, see § Password)

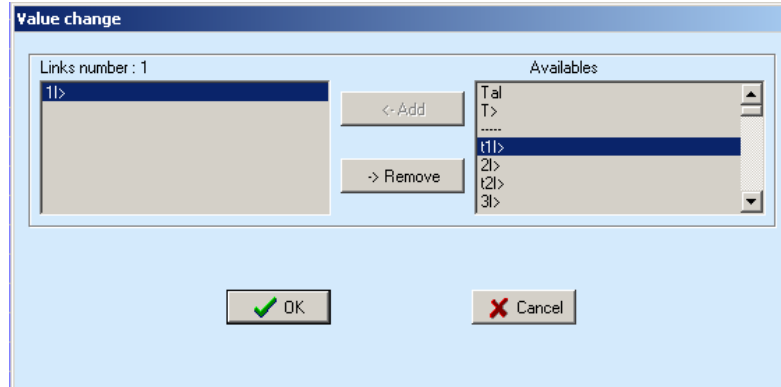


16.4.3.2 – “Output Config”

Select “**Output Config**” related to “0.R1” and press right button on mouse, select “Value change”:

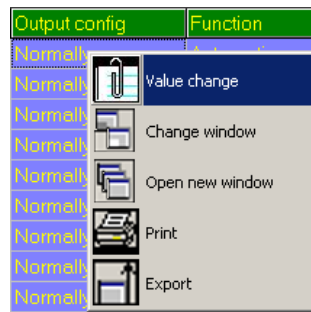


Select “**Normally Close**” from combo box and press “OK” (if Password is request, see § Password)

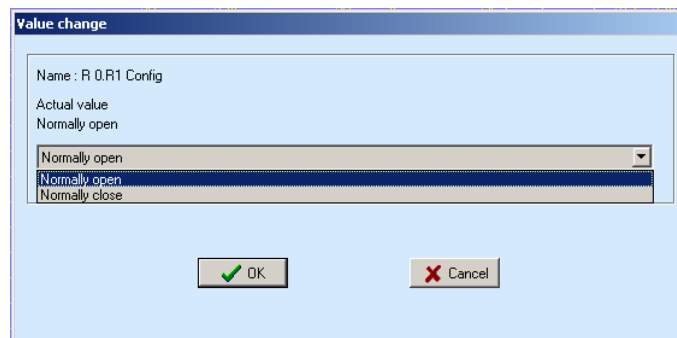


16.4.3.3 – “Function”

Select “**Function**” related to “0.R1” and press right button on mouse, select “Value change”:

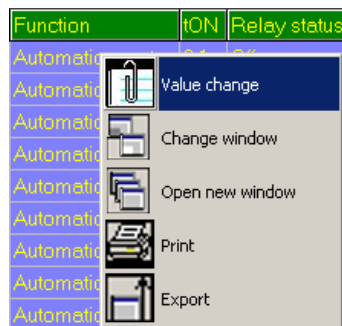


Select “**Pulse**” from combo box and press “OK” (if Password is request, see § Password):

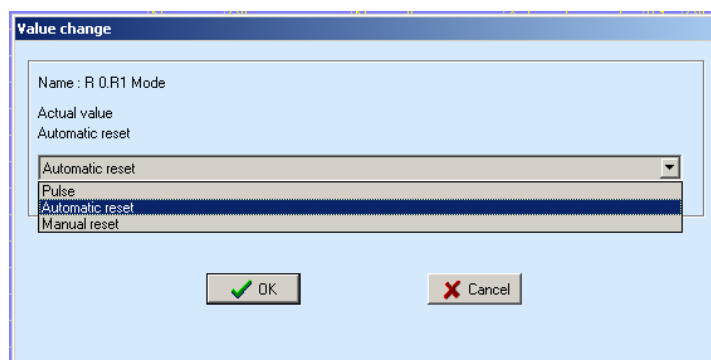


16.4.3.4 – “tON”

Select “**tON**” related to “0.R1” and press right button on mouse, select “Value change”:

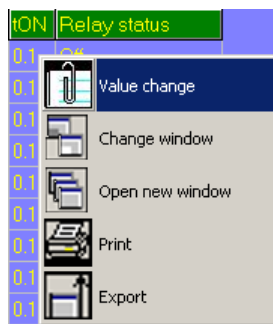

Select “**0.5**” from combo box and press “OK” (if Password is request, see § Password):

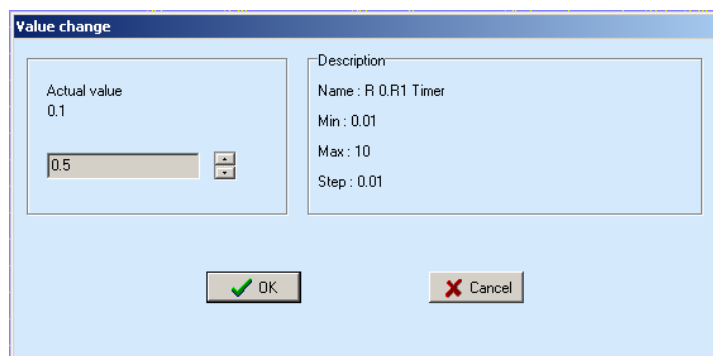

17. DATE and TIME

In this menu it is possible to configurate the Date and Time

Date:

	20YY	/	MM	/	DD
--	------	---	----	---	----

 (2000/01/01 ÷ 2099/12/31)
YY = Year / MM = Month / DD = Day

Time:




	HH	:	MM	:	00
--	----	---	----	---	----

 HH = hour / MM = Minutes / 00

DofW:

	Day
--	-----

 Es: Wednesday

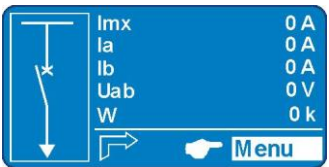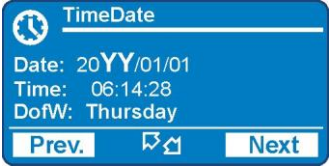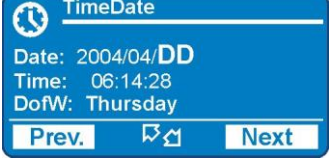- 1 
 - Press "**Menu**" for access to the main menu with icons.
- 2 
 - Select icon "**TimeDate**" by pushbuttons "**Increase**" or "**Decrease**".
 - Press "**Select**".
- 3 
 - Press "**Modify**".
- 4 
 - The last two figures of the Year will appear in bold character; by pushbuttons "**Increase**" or "**Decrease**" set the new figures.
 - Press "**Next**" to go to the next setting.
- 5 
 - As above for changing the "Month"
 - Press "**Next**" to go to the next setting.
- 6 
 - As above for changing the "Day"
 - Press "**Next**" to go to the next setting.



- 7 
 - As above for changing the “Hours”
 - Press “**Next**” to go to the next setting.
- 8 
 - As above for changing the “Minutes”
 - Press “**Next**” to go to the next setting.
- 9 
 - The **Day of the Week** is calculated and displayed automatically.
 - Press “**Exit**” to go back to the main menu.
 - Press “**Modify**” to go back to the step “3”



Press the button “**Next**” to go back to the previous display.

17.1 – Clock synchronization

The internal clock has 1ms resolution and a stability of $\pm 35\text{ppm}$ in the operational temperature range.

It can be synchronized with an external time reference in the following ways:

- Using the “MCom 2” software or from the DCS with the Modbus RTU protocol.

Note: On power supply failure an internal battery supports the internal clock for over two years.

18. Healthy (Diagnostic Information)

The relay operates a continuous checking of the vital functionalities and in case an internal failure is detected, the I.R.F. function (see § I.R.F.) is activated and the Power/IRF led is set to flashing.

Device	→	No Fail	→	No Fail
		Fail	→	Fail present
		MinorFail	→	Minor Fail
		HisoricalFail	→	Cleared Fail
		FW not comp.	→	Firmware not compatible

If an internal self-clearing (transient) fault is detected, it is recorded into an historical file without any other action.

19. Dev.Info (Relay Version)

In this menu it is possible to read the information relevant to relay unit.


<i>SW Version</i>	AcqUnit-I/O	→	#####.##.##.##	Firmware version of acquisition unit	This information can only be modified by the interface program “MSCom2” and allows the user to give to the relay any suitable denomination.
	ProtectUnit	→	#####.##.##.##	Firmware version of CPU unit	
<i>Protect.Model</i>		→	FeederManager	Protection Type	
<i>Serial Number</i>		→	#### ### ### #####	Relay Serial Number	
<i>User Tag</i>		→	FMR-PLk	Relay identification label.	
<i>Build</i>		→	#####	Build identification label.	
<i>Line</i>		→	#####	Line identification label.	

20. Battery


The relay is equipped with a lithium battery type “CR2477N 3V”, to support the internal clock and the oscillographic recording memory in case of programmed lack of power.
The expected minimum duration without power exceed 2 years.

Attention!! Use only battery specified.

Instruction for replacement the battery:

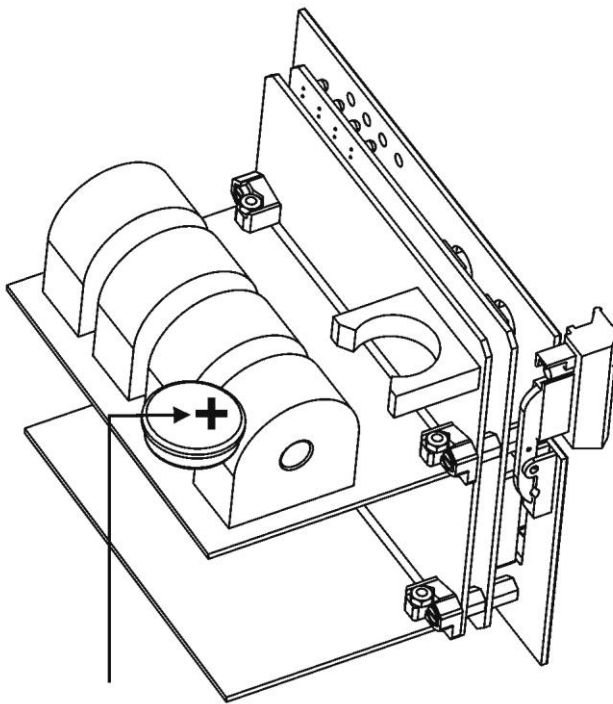

BATTERY

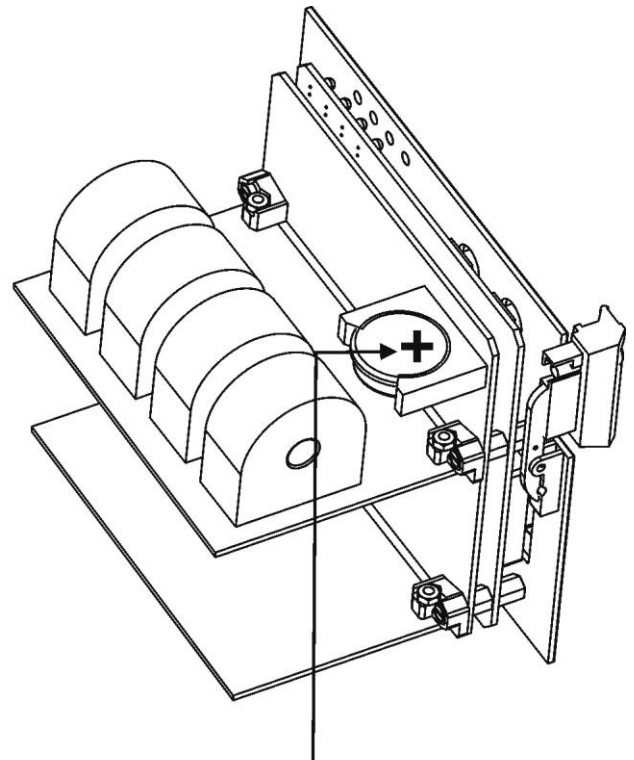

BATTERY


21. Maintenance

No maintenance is required. In case of malfunctioning please contact Microelettrica Scientifica Service or the local Authorized Dealer mentioning the relay's Serial No reported in the label on relays enclosure.


22. Power Frequency Insulation Test

Every relay individually undergoes a factory insulation test according to IEC255-5 standard at 2 kV, 50 Hz 1min. Insulation test should not be repeated as it unusefully stresses the dielectrics.
When doing the insulation test, the terminals relevant to serial output, digital inputs and RTD input must always be short circuited to ground. When relays are mounted in switchboards or relay boards that have to undergo the insulation tests, the relay should be isolated. This is extremely important as discharges eventually tacking place in other parts or components of the board can severely damage the relays or cause damages not immediately evident to the electronic components.


23. Basic Relay - Wiring Diagram

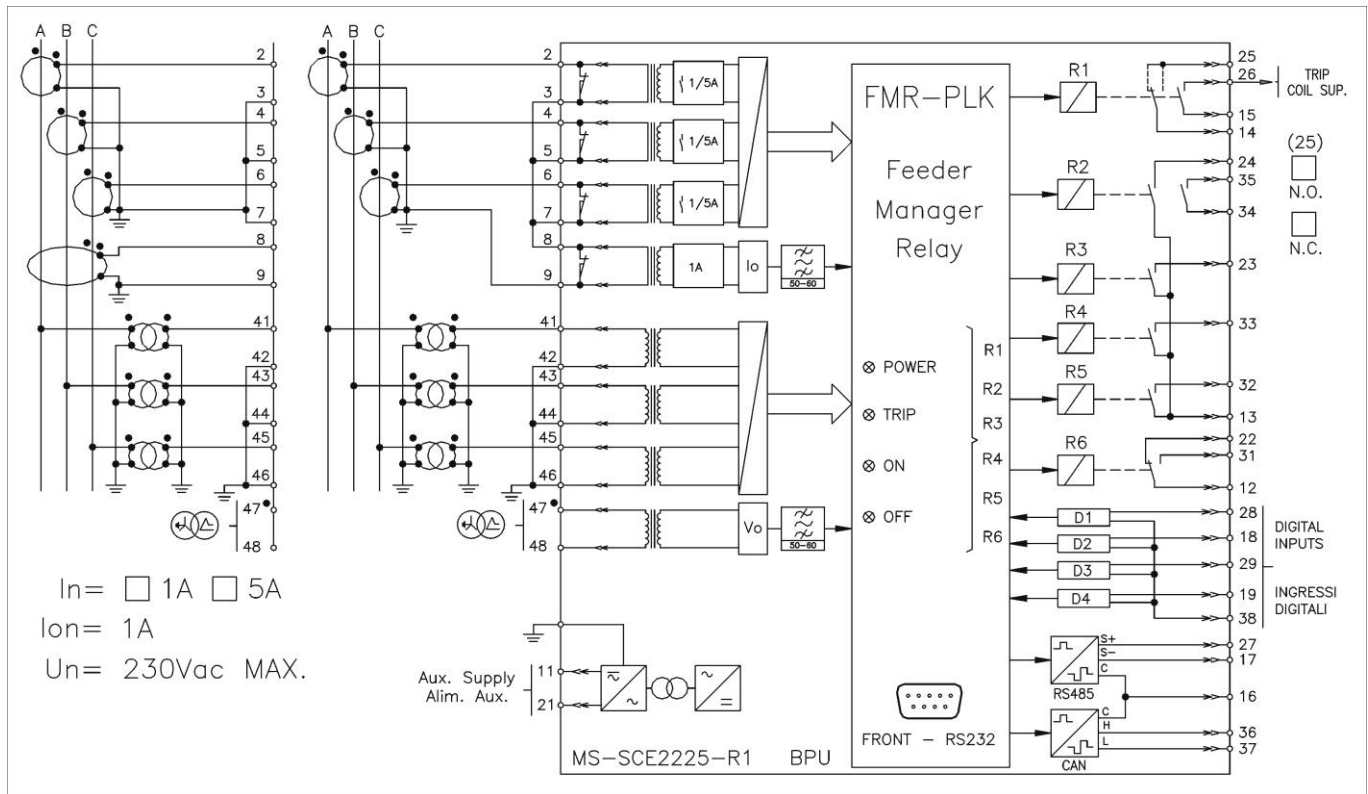


23.1 – UX10-4 - Expansion Module - Wiring Diagram (10 Digital Inputs - 4 Digital Outputs)

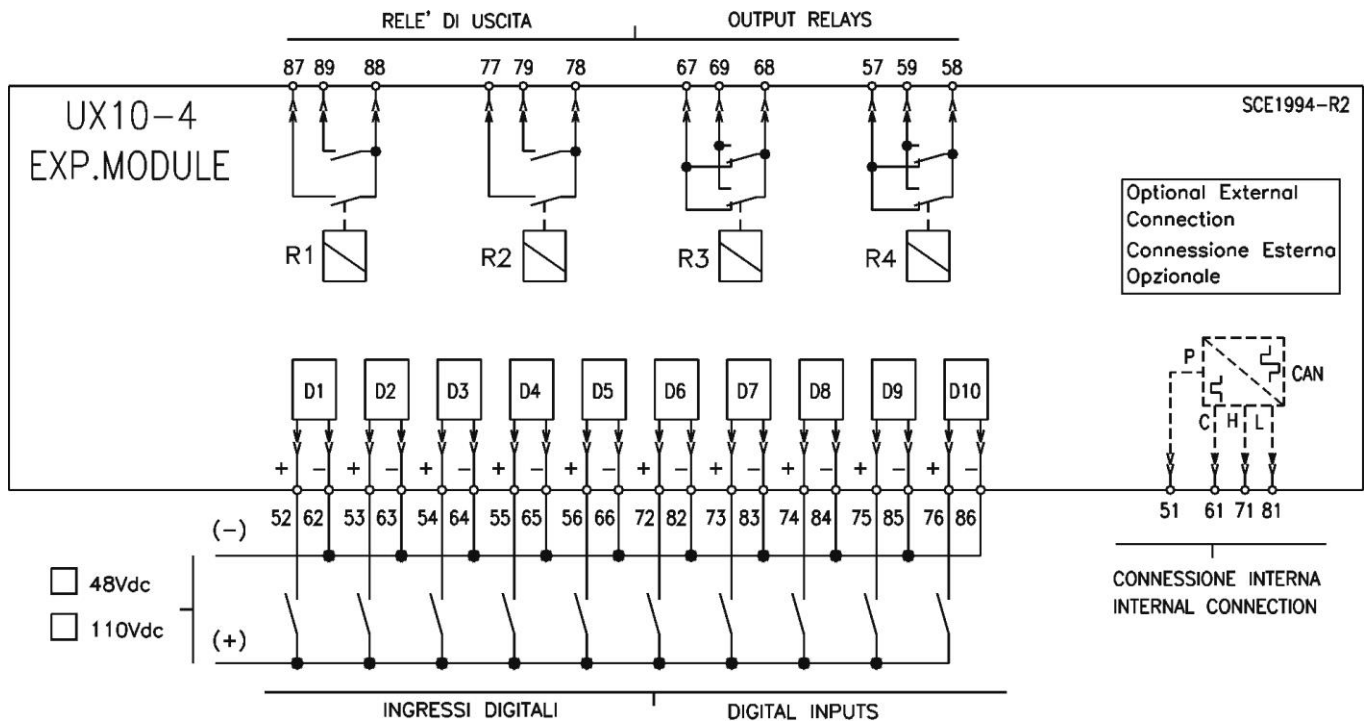

23.2 – 14DI - Expansion Module - Wiring Diagram (14 Digital Inputs)

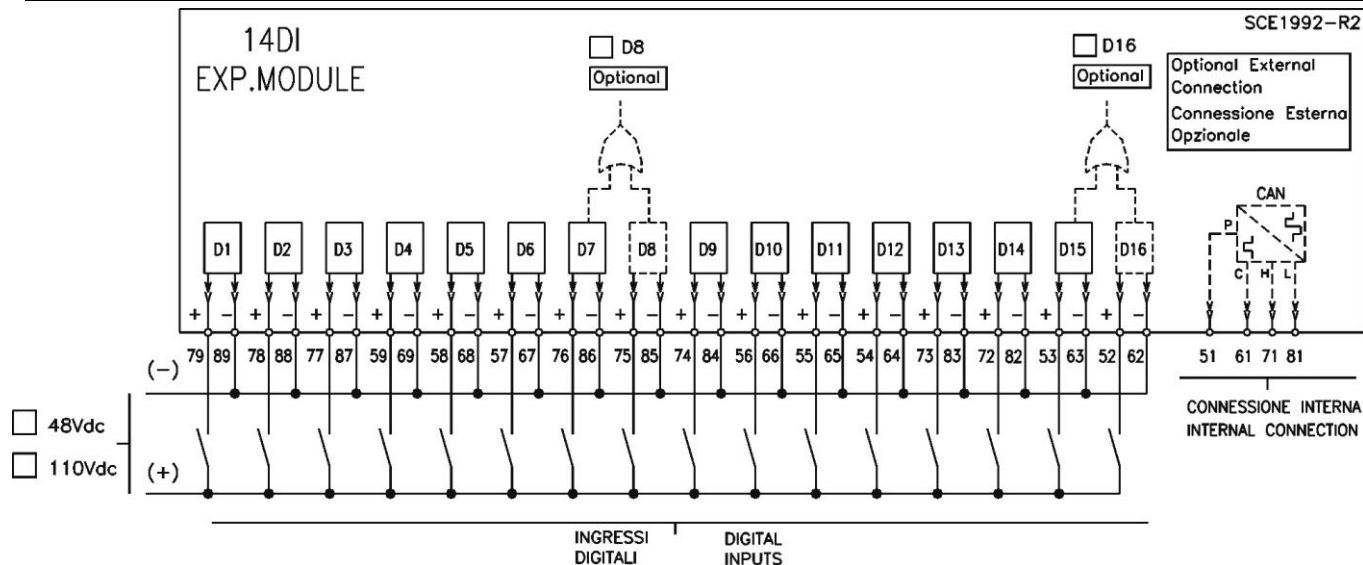

22.3 – 14DO - Expansion Module - Wiring Diagram (14 Output Relays)

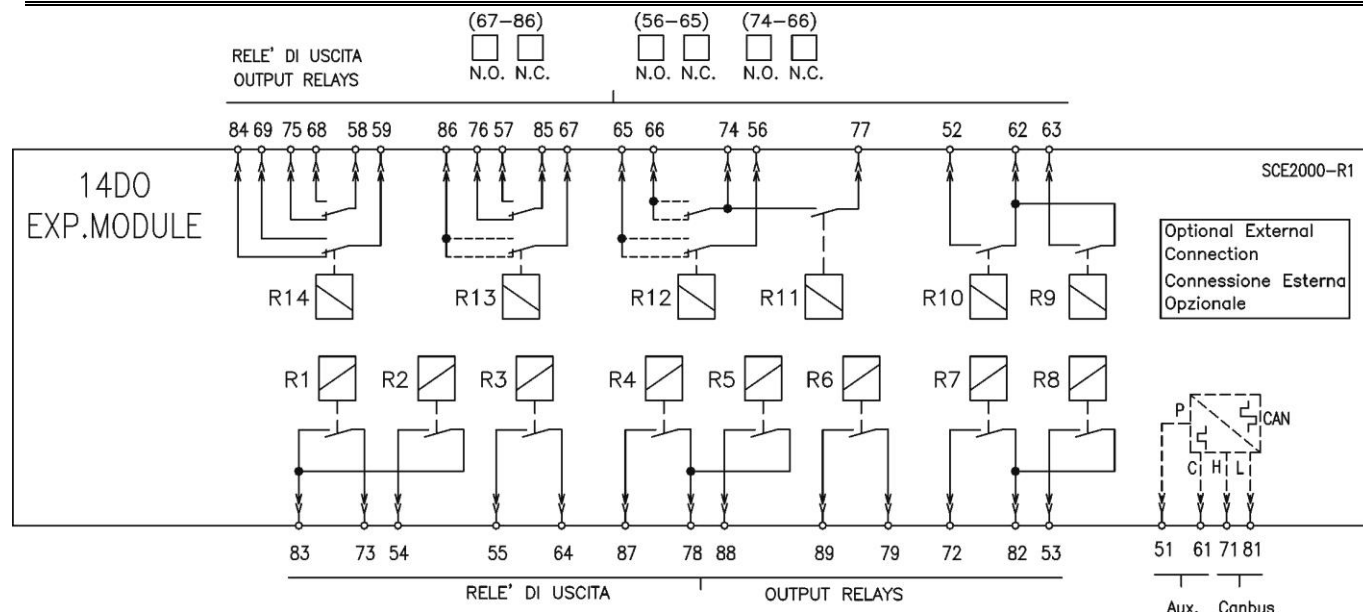


23.3 – PSU – Power Supply for Expansion Module - Wiring Diagram




24. Wiring the Serial Communication Bus

CONNECTION TO RS485

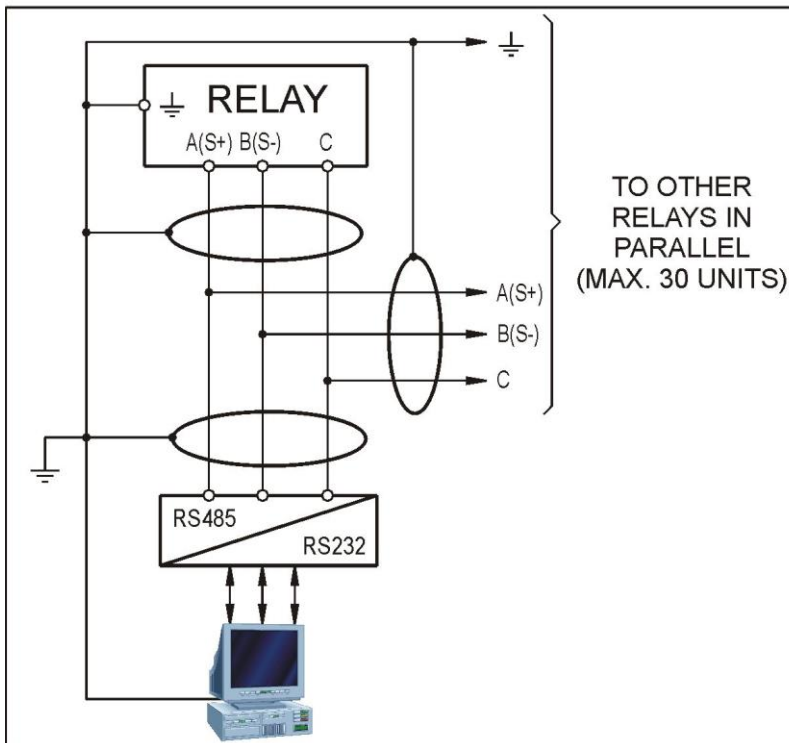

FIBER OPTIC CONNECTION

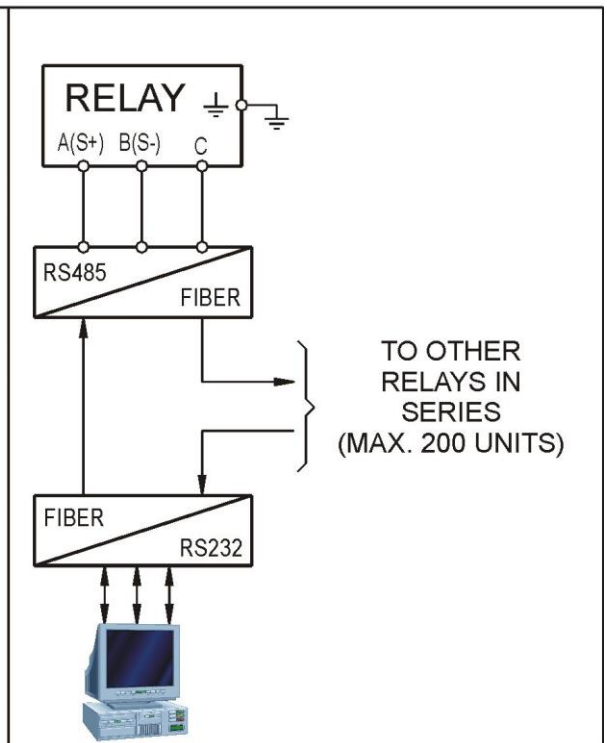

Each relay is identified by its programmable address code (NodeAd) and can be called from the P.C. A dedicated communication software (MSCom2) for Windows 9x/2000/XP (or later) is available. Please refer to the MSCom2 instruction manual for more information. Maximum length of the serial bus can be up to 200m. For longer distance and for connection of up to 250 Relays, optical interconnection is recommended (please ask Microelettrica for accessories).




25. Overall Dimensions

Flush mounting protection degree: IP44 (54 on request).



25.1 - Configuration box

Relay	Expansions							Box
	1st			2nd			Aux.Supply	
	UX10-4	14DI	14DO	UX10-4	14DI	14DO	PSU	
☒	☐	☐	☐	☐	☐	☐	☐	E2
☒	☒	☐	☐	☐	☐	☐	☐	E3
☒	☐	☒	☐	☐	☐	☐	☐	E3
☒	☐	☐	☒	☐	☐	☐	☒	E4
☒	☒	☐	☐	☒	☐	☐	☒	E5
☒	☒	☐	☐	☐	☒	☐	☐	E4
☒	☒	☐	☐	☐	☐	☒	☒	E5
☒	☐	☒	☐	☒	☐	☐	☐	E4
☒	☐	☒	☐	☐	☐	☒	☒	E5
☒	☐	☒	☐	☐	☒	☐	☐	E4
☒	☐	☐	☒	☒	☐	☐	☒	E5
☒	☐	☐	☒	☐	☒	☐	☒	E5
☒	☐	☐	☒	☐	☐	☒	☒	E5

25.2 – Box "E2"

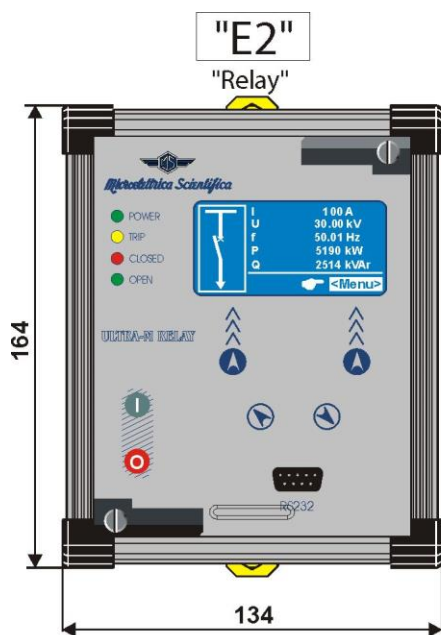


**PANEL CUT-OUT
115x137 (LxH)**

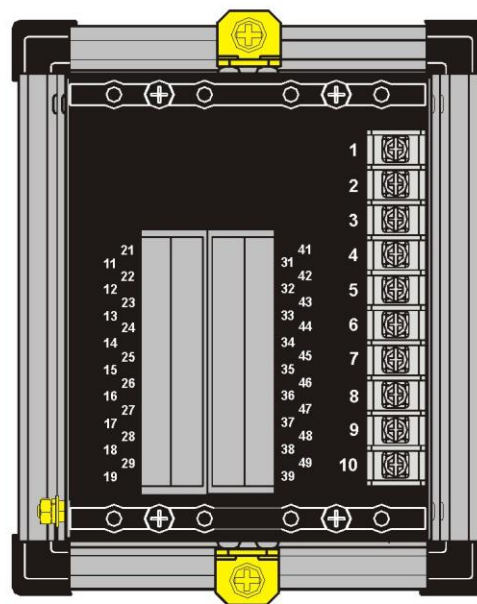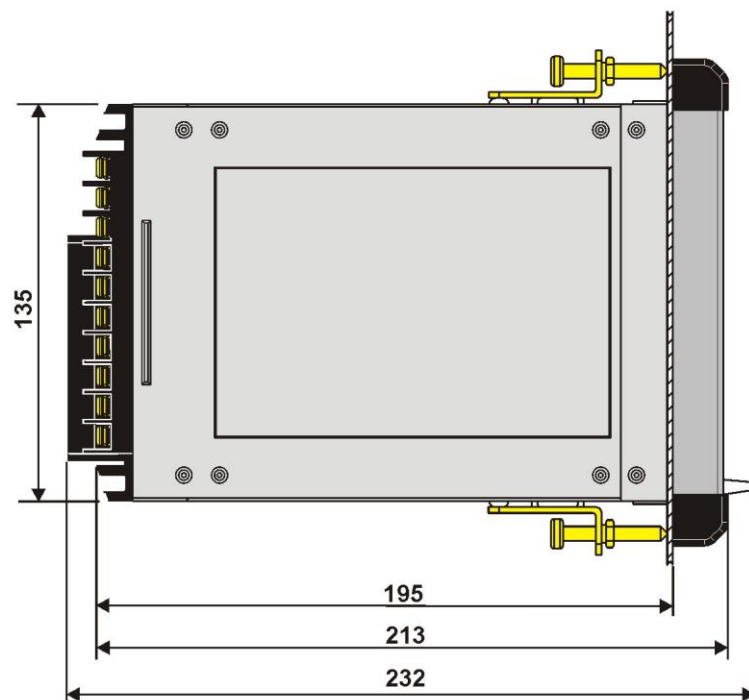


TERMINAL CONNECTION



25.3 – Box "E3" & Box "E4"

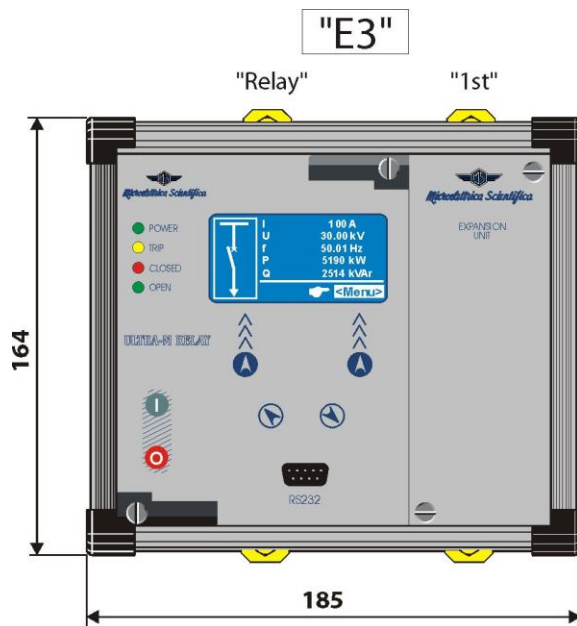


**PANEL
CUT-OUT
165x137 (LxH)**

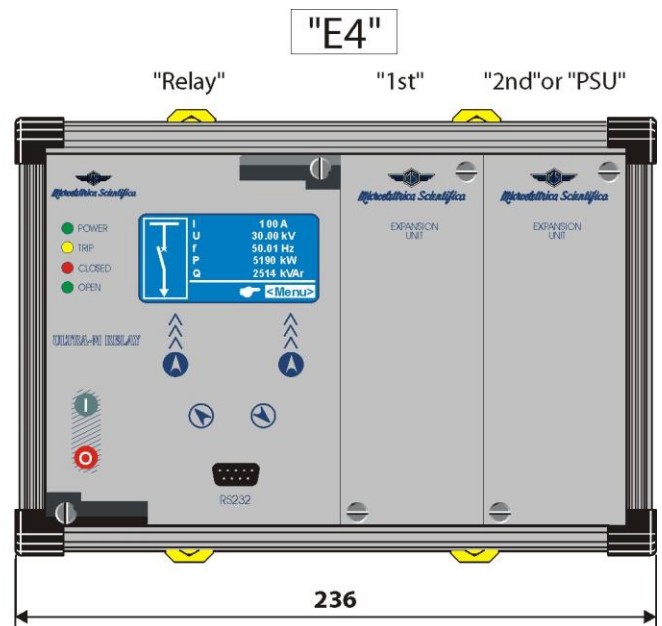


**PANEL
CUT-OUT
217x137 (LxH)**

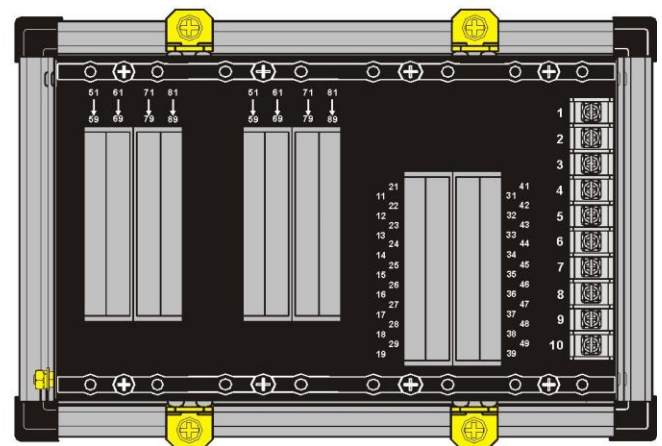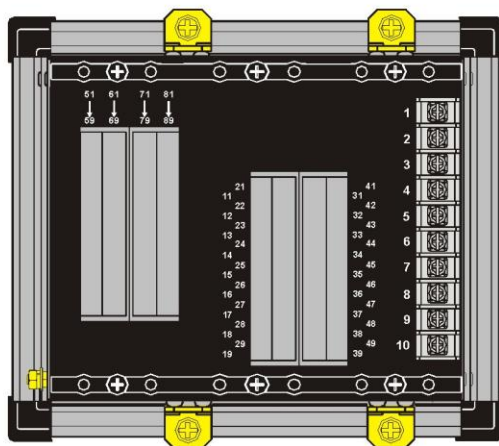


25.2 – Box “E5”

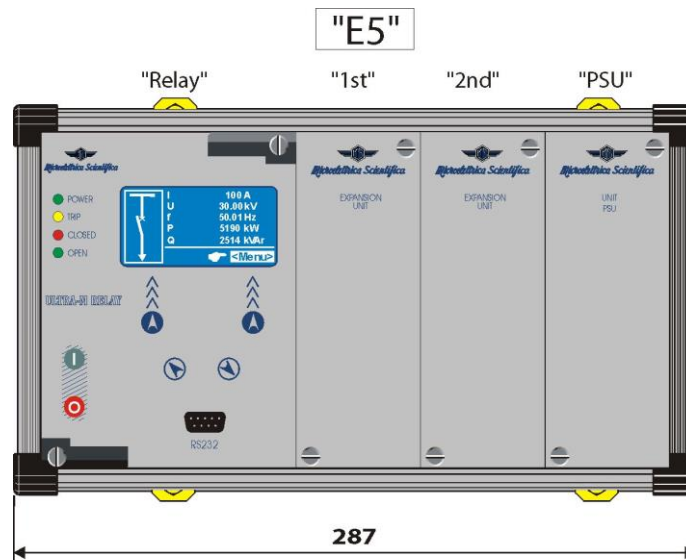


**PANEL
CUT-OUT
268x137 (LxH)**

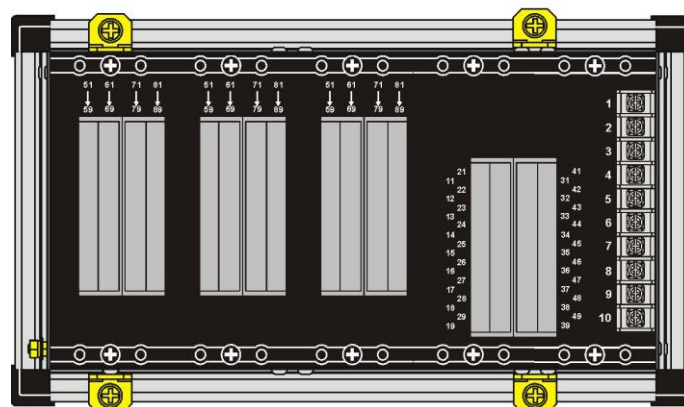




25.2 – Rack 3U

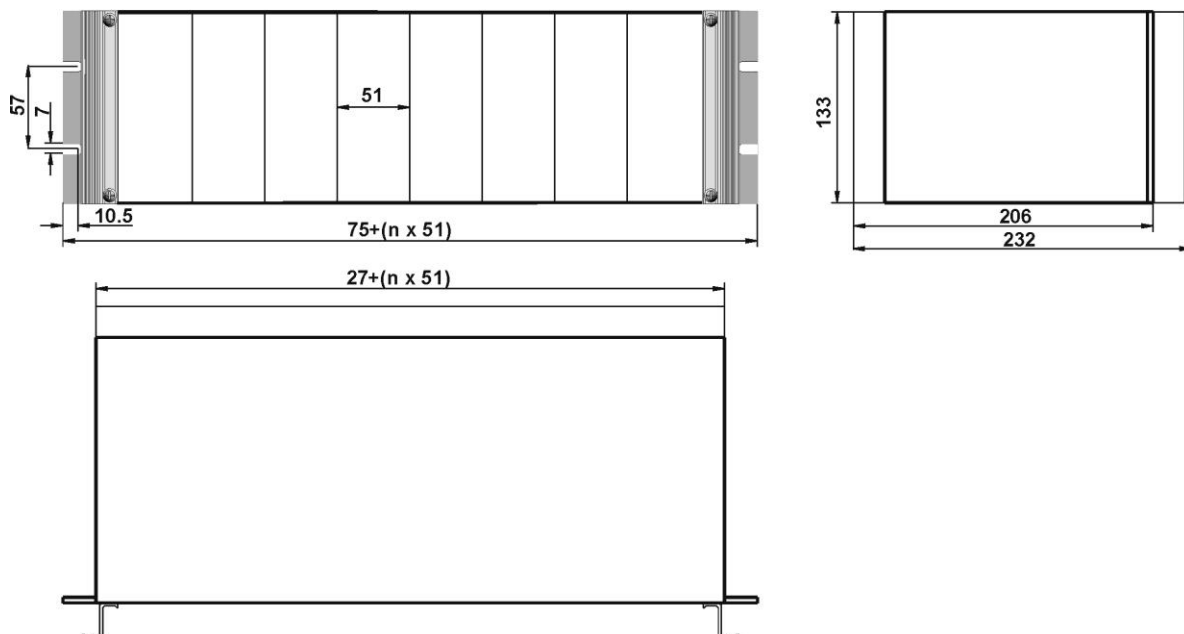

25.1 - Expansion Module - Overall Dimensions

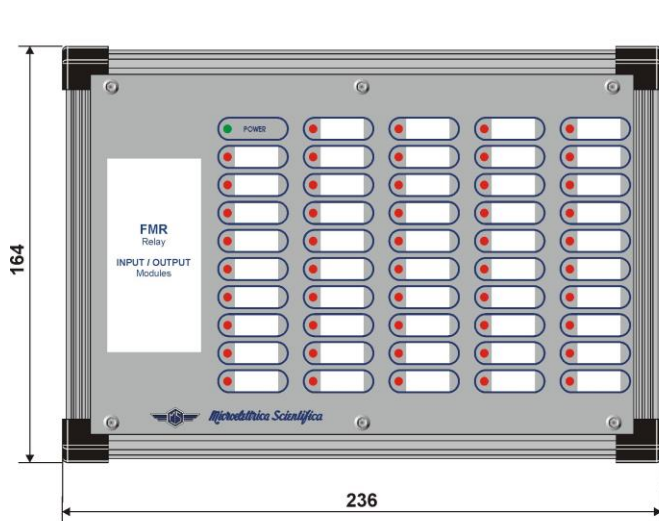

PANEL CUT-OUT
217x137 (LxH)

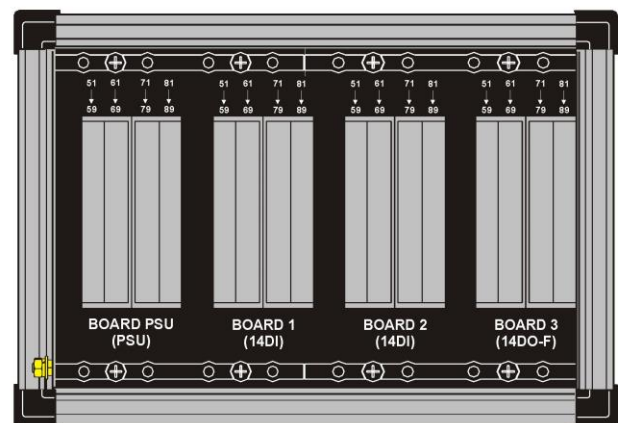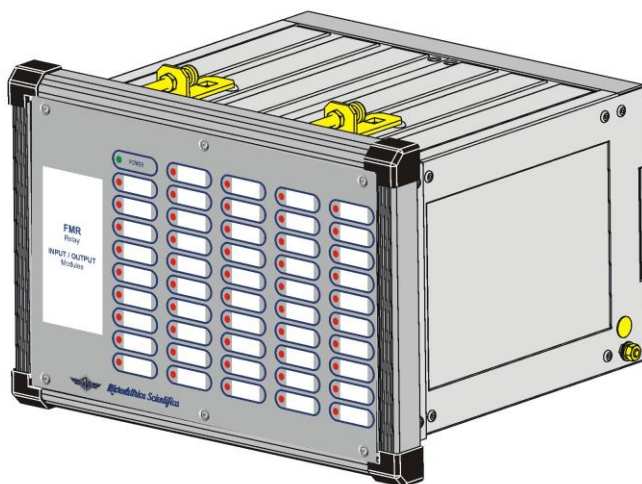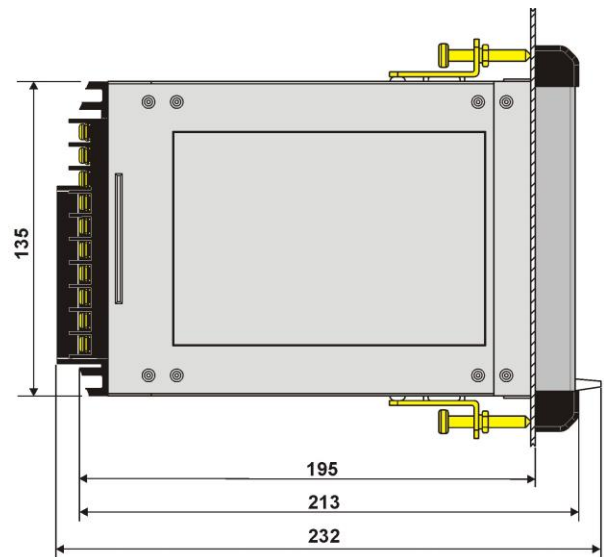

TERMINAL CONNECTION


26. Direction for Pcb's Draw-Out and Plug-In

26.1 - Draw-out

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.
Draw-out the PCB by pulling on the handles ③

26.2 – Plug-in

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.
Slide-in the card on the rails provided inside the enclosure.
Plug-in the card completely and press the handle to the closed position.
Rotate anticlockwise the screws ① and ② with the mark in the vertical position (locked).

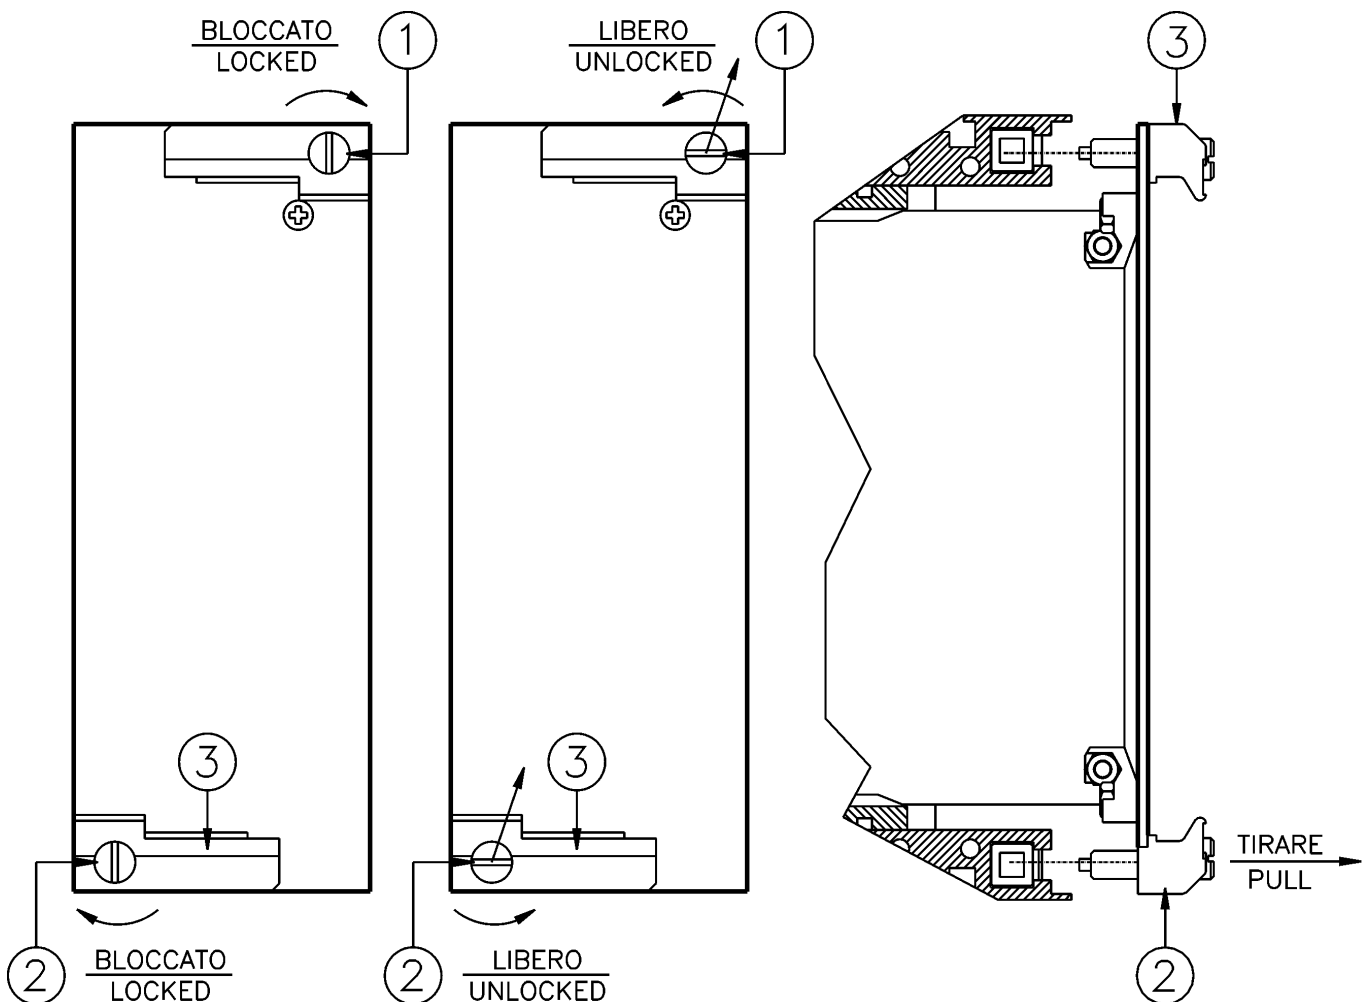

27. Electrical Characteristics

APPROVAL: CE

REFERENCE STANDARDS IEC 60255 - CE Directive - EN/IEC61000 - IEEE C37

☐ Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
☐ Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) – 1,2/50µs
☐ Insulation resistance	> 100MΩ	

Environmental Std. Ref. (IEC 60068)

☐ Operation ambient temperature	-10°C / +55°C	
☐ Storage temperature	-25°C / +70°C	
☐ Environmental testing	(Cold) (Dry heat) (Change of temperature) (Damp heat, steady state)	IEC60068-2-1 IEC60068-2-2 IEC60068-2-14 IEC60068-2-78 RH 93% Without Condensing AT 40°C

CE EMC Compatibility (EN61000-6-2 - EN61000-6-4 - EN50263)

☐ Electromagnetic emission	EN55011	industrial environment
☐ Radiated electromagnetic field immunity test	IEC61000-4-3 ENV50204	level 3 80-2000MHz 10V/m 900MHz/200Hz 10V/m
☐ Conducted disturbances immunity test	IEC61000-4-6	level 3 0.15-80MHz 10V
☐ Electrostatic discharge test	IEC61000-4-2	level 3 6kV contact / 8kV air
☐ Power frequency magnetic test	IEC61000-4-8	1000A/m 50/60Hz
☐ Pulse magnetic field	IEC61000-4-9	1000A/m, 8/20µs
☐ Damped oscillatory magnetic field	IEC61000-4-10	100A/m, 0.1-1MHz
☐ Immunity to conducted common mode disturbance 0Hz-150KHz	IEC61000-4-16	level 4
☐ Electrical fast transient/burst	IEC61000-4-4	level 3 2kV, 5kHz
☐ HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3 400pps, 2,5kV (m.c.), 1kV (d.m.)
☐ Oscillatory waves (Ring waves)	IEC61000-4-12	level 4 4kV(c.m.), 2kV(d.m.)
☐ Surge immunity test	IEC61000-4-5	level 4 2kV(c.m.), 1kV(d.m.)
☐ Voltage interruptions	IEC60255-4-11	
☐ Resistance to vibration and shocks	IEC60255-21-1 - IEC60255-21-2	10-500Hz 1g

CARATTERISTICHE

☐ Accuracy at reference value of influencing factors	1% In – 0.1%On 2% + to (to=20÷30ms @ 2xIs)	for measure for times
☐ Rated Current	In = 1 or 5A - On = 1 or 5A	
☐ Current overload	80 In for 1 sec; 4 In continuous	
☐ Burden on current inputs	Phase : 0.01VA at In = 1A; 0.2VA at In = 5A Neutral : 0.01VA at In = 1A ; 0.2VA at In = 5A	
☐ Rated Voltage	Un = (100 ÷125)Vac	
☐ Voltage Overload	2Un permanent	
☐ Burden on voltage inputs	0,1VA at Un	
☐ Average power supply consumption	< 10 VA	
☐ Output relays	rating 5 A; Vn = 380 V A.C. resistive switching = 1100W (380V max) make = 30 A (peak) 0,5 sec. break = 0.3 A, 110 Vcc, L/R = 40 ms (100.000 op.)	

COMMUNICATION PARAMETER

☐ Rear serial port	RS485 – 9600 to 38400 bps – 8,n,1 – Modbus RTU – IEC60870-5-103
☐ Front serial port	RS232 – 9600 to 57600 bps – 8,n,1 – Modbus RTU



28. Software & Firmware Version

Firmware for version

IAU (Intelligent Acquisition Unit)	0.14.01.X
IPU (Processor Unit)	0461.28.01.X

Application Software

MSCom 2

Microelettrica Scientifica S.p.A. - 20089 Rozzano (MI) - Italy - Via Alberelle, 56/68
Tel. (+39) 02 575731-Fax (+39) 02 57510940
<http://www.microelettrica.com> e-mail : sales.relays@microelettrica.com

The performances and the characteristics reported in this manual are not binding and can be modified at any moment without notice