

MICROPROCESSOR
MOTOR PROTECTION
WITH VOLTAGE AND POWER CONTROL
RELAY

TYPE

"MC2-30MW"

OPERATION MANUAL



1. General Utilization and Commissioning Directions	5
1.1 - Storage and Transportation	5
1.2 - Installation	5
1.3 - Electrical Connection	5
1.4 - Measuring Inputs and Power Supply	5
1.5 - Outputs Loading	5
1.6 - Protection Earthing	5
1.7 - Setting and Calibration	5
1.8 - Safety Protection	5
1.9 - Handling	5
1.10 - Maintenance	5
1.11 - Waste Disposal of Electrical & Electronic Equipment	5
1.12 - Fault Detection and Repair	5
2. General	6
2.1 - Power Supply	6
3. Front Panel	6
4. Keyboard and Display	7
4.1 - Display	7
5. Icons of Display	8
6. Signalization	9
6.1 - Leds Manual Reset	9
6.2 - Display of the last trip	9
7. Leds Configuration	10
7.1 - Name	11
7.2 - Link enable	11
7.3 - Status	11
7.4 - Light Prog.	11
7.5 - Funct. Mode	11
7.6 - Functions	11
7.7 - Table 1	12
7.8 - Example: Change settings for "Led1"	13
7.8.1 - "Link Enable"	13
7.8.2 - "Flashing"	13
7.8.3 - "Funct.Mode"	14
7.8.4 - "Functions"	14
8. User Variables	15
8.1 - Name	15
8.2 - User Descr.	15
8.3 - Linked functions	15
8.4 - OpLogic	15
8.5 - Timer	15
8.6 - Timer type	15
8.7 - Extra	15
8.8 - Logical status	15
8.9 - Example: Setting "User Variable"	15
8.9.1 - "User description" (User descr.)	16
8.9.2 - "Linked Functions"	16
8.9.3 - "Operation Logic" (Oplogic)	17
8.9.4 - "Timer"	17
8.9.5 - "Timer type"	18
8.9.6 - "Extra"	18
9. Local Commands	19
10. Measure	20
11. Maximum Values	21
12. Trip Recording	22
13. Partial Counters	24
14. Total Counters	25
15. Events	26
15.1 - Events on display	27
16. System (System parameters)	28
17. Settings	29
17.1 - Modifying the setting of variables	30
17.2 - Password	31
17.3 - Menu: Communic. (Communication)	32
17.3.1 - Description of variables	32
17.3.2 - Front Panel USB serial communication port (RS232)	32
17.3.3 - Cable for connection from Relay to Personal Computer	32
17.3.4 - Main serial communication port (RS485)	32
17.4 - Menu: Customize (Human Machine Interface)	33
17.4.1 - Description of variables	33
17.5 - Function: FileSys (File system and Disk management)	34
17.5.1 - Description of variables	34
17.5.2 - Download file information	34
17.6 - Function: T> (Thermal Image F49)	35

17.6.1 - Description of variables	35
17.6.2 - Trip and Alarm	35
17.7 - Function: 1I> (First Overcurrent Element F50/51)	37
17.7.1 - Description of variables	37
17.7.2 - Blocking Logic (BO-BI)	38
17.7.3 - Automatic doubling of Overcurrent thresholds on current inrush	38
17.8 - Function: 2I> (Second Overcurrent Element F50/51)	39
17.8.1 - Description of variables	39
17.9 - Function: 3I> (Third Overcurrent Element F50/51)	39
17.9.1 - Description of variables	39
17.10 - Function: 1Io> (First Earth Fault Element 50N/51N)	40
17.10.1 - Description of variables	40
17.11 - Function: 2Io> (Second Earth Fault Element 50N/51N)	40
17.11.1 - Description of variables	40
17.12 - Funzioni: 3Io> (Terzo elemento di guasto a terra 50N/51N)	41
17.12.1 - Description of variables	41
17.13 - Function: 1Is> (First Negative Sequence Element F46)	42
17.13.1 - Description of variables	42
17.13.2 - Time/Current operation of the first Current Unbalance element "f(t)"	42
17.14 - Function: 2Is> (Second Negative Sequence Element F46)	42
17.14.1 - Description of variables	42
17.15 - Function: 1U> (Overvoltage Element)	43
17.15.1 - Description of variables	43
17.16 - Function: 1U< (Undervoltage Element)	43
17.16.1 - Description of variables	43
17.17 - Function: 1f> (Overfrequency Element)	43
17.17.1 - Description of variables	43
17.18 - Function: 1f< (Underfrequency Element)	43
17.18.1 - Description of variables	43
17.19 - Function: 1PF< (Low Power Factor Element)	43
17.19.1 - Description of variables	43
17.20 - Function: MotSt (Motor Start)	44
17.20.1 - Description of variables	44
17.21 - Function: LR (Locked Rotor – Rotor jam)	44
17.21.1 - Description of variables	44
17.22 - Function: StNo (Limitation Start Number)	44
17.22.1 - Description of variables	44
17.23 - Function: StSeq (starting Sequence Control)	45
17.23.1 - Description of variables	45
17.23.2 - Operation	45
17.24 - Function: I< (No load running)	45
17.24.1 - Description of variables	45
17.24.2 - Operation	45
17.25 - Function: TCS (Trip Circuit Supervision)	46
17.25.1 - Description of variables	46
17.25.2 - Operation	46
17.26 - Function: IRF (Internal Relay Fault)	47
17.26.1 - Description of variables	47
17.26.2 - Operation	47
17.27 - Function: BrkFail (Breaker Failure)	47
17.27.1 - Description of variables	47
17.27.2 - Operation	47
17.28 - Function: Oscillo (Oscillographic Recording)	48
17.28.1 - Description of variables	48
17.28.2 - Operation	48
17.28.3 - Available on software	49
17.28.4 - Setting "User Trigger Oscillo"	50
17.28.5 - Example: Setting "Oscillo Trigger Logic"	51
17.29 - Function: CB Mngn (Control C/B)	54
17.29.1 - Description of variables	54
17.29.2 - Push-Buttons (Programmable only via software)	54
17.30 - Function: ExtResCfg (External Reset Configuration)	56
17.30.1 - Description of variables	56
18. Input – Output (via software)	56
18.1 - Digital Input	56
18.2 - "DI" Configuration (via software)	56
18.2.1 - Example	57
18.3 - Physical Outputs	58
18.4 - "DO" Configuration	58
18.4.1 - Example configuration	58
18.4.2 - Functions - Operation Mode	59
19. InfoStatus	61
20. Date and Time	62
20.1 - Clock synchronization	63
21. Healthy (Diagnostic Information)	64



22. Dev.Info (Relay Version)	64
23. Maintenance	64
24. Wiring Diagram	65
25. Overall Dimensions	65
26. Electrical Characteristics	66

1. General Utilization and Commissioning Directions

Always make reference to the specific description of the product and to the Manufacturer's instruction. Carefully observe the following warnings.

1.1 - Storage and Transportation

Must comply with the environmental conditions stated in the product's specification or by the applicable IEC standards.

1.2 - Installation

Must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

1.3 - Electrical Connection

Must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

1.4 - Measuring Inputs and Power Supply

Carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

1.5 - Outputs Loading

Must be compatible with their declared performance.

1.6 - Protection Earthing

When earthing is required, carefully check its effectiveness.

1.7 - Setting and Calibration

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

1.8 - Safety Protection

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.

1.9 - Handling

Notwithstanding the highest practicable protection means used in designing electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules.

The damage caused by electrostatic discharge may not be immediately apparent but the design reliability and the long life of the product will have been reduced. The electronic circuits are completely safe from electrostatic discharge (8 KV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

1.10 - Maintenance

Make reference to the instruction manual of the Manufacturer; maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

1.11 - Waste Disposal of Electrical & Electronic Equipment

(Applicable throughout the European Union and other European countries with separate collection program). This product should not be treated as household waste when you wish dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequence to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resource.

1.12 - Fault Detection and Repair

Internal calibrations and components should not be altered or replaced.
For repair please ask the Manufacturer or its authorized Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

2. General

The main features of the relays are:

User friendly front face with hi-resolution graphic display (240x128), 10 programmable signal Leds, 6 push-buttons (configurable) and four push-button for complete local management, USB for local communication.

Eight user programmable Output Relays.

Eight opto-isolated, self powered Digital Inputs.

Additional RS485 communication port

Input currents are supplied to 3 current transformers: measuring phase currents.

An additional internal CT directly measures the residual (Zero Sequence) current of the three inputs.

Current inputs can be 1 or 5A: selection between 1A or 5A is made by movable jumpers provided inside the Relay.


2.1 - Power Supply

The relay can be fitted with two different types of **power supply**:


Type 1	24V(-20%) / 110V(+15%) a.c.	24V(-20%) / 125V(+20%) d.c.
Type 2	80V(-20%) / 220V(+15%) a.c.	90V(-20%) / 250V(+20%) d.c.

Before energizing the unit check that supply voltage is within the allowed limits.

3. Front Panel

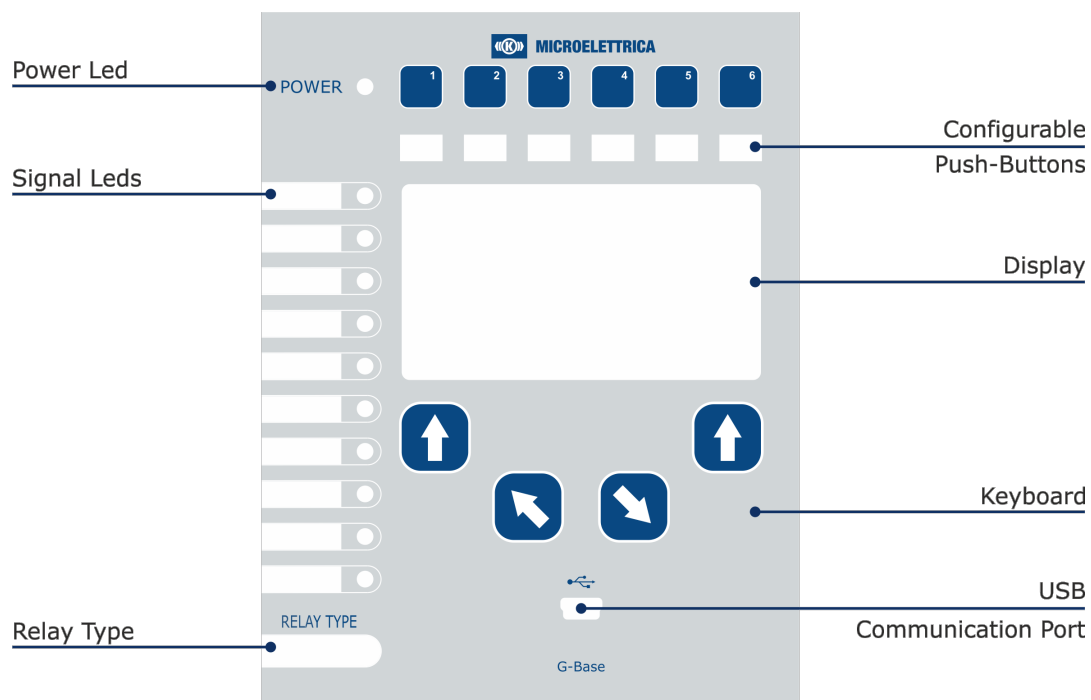

4. Keyboard and Display

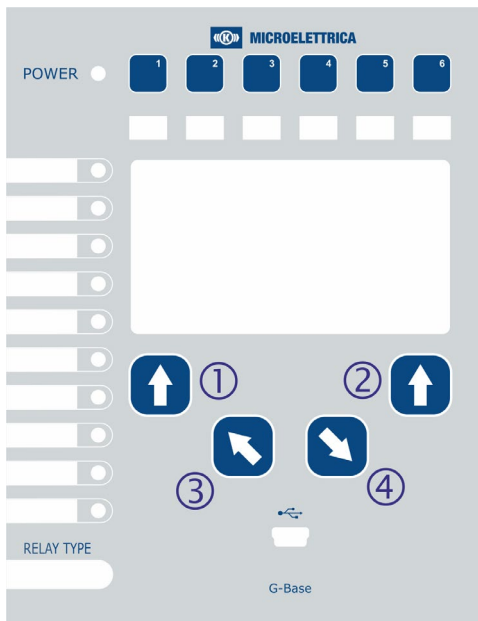

1



Pushbuttons Programmable

6



Navigation menu

By these buttons the options showed in correspondence on the display are selected.



Increase



These buttons are used to scroll the items of the different menus (Local Control, Measurements, Energy metering etc).



Decrease

4.1 - Display

The 240x128 pixel hi-resolution LCD display the available information (menu, etc.).

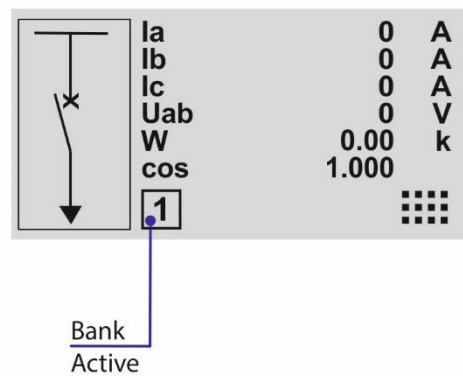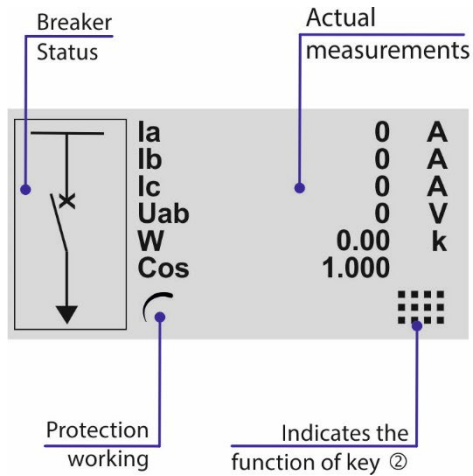

5. Icons of Display


	<i>LocalCmd</i>	Local Commands
	<i>Measure</i>	Actual Measurements
	<i>MaxVal</i>	Maximum Values
	<i>TripRec.</i>	Trip Recording
	<i>Counter</i>	Partial Counters (Resettable Counter)
	<i>ROCnt</i>	Total Counter (Read Only Counter)
	<i>Events</i>	Event Recording
	<i>Setting</i>	Function Settings
	<i>System</i>	System Settings
	<i>InfoStatus</i>	Information Status
	<i>TimeDate</i>	Time And Date
	<i>Healthy</i>	Diagnostic Information
	<i>Dev.Info</i>	Relay Version

6. Signalization

Eleven signal leds are provided:

1	Led Power Supply	Not programmable	Green
10	Leds	Programmable (via software)	

N°	Colours
1	Green
2	Green
3	Green
4	Yellow
5	Red
6	Red
7	Red
8	Yellow
9	Red
10	Green

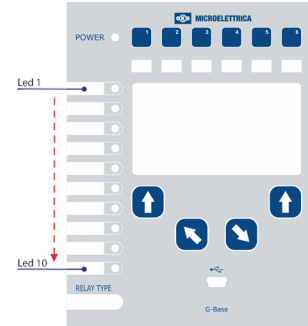

In case of auxiliary power supply failure the status of the leds is recorded and reproduced when power supply is restored.

6.1 - Leds Manual Reset

For Leds manual reset operate as follows:

- Press "**Menu**" for access to the main menu with icons.
- Select icon "**LocalCmd**".
 - Press "**Select**".
- Select "**LedClear**".
 - Press "**Select**" to execute the command.
- When command has been executed the display shows "**Command Done**";


6.2 - Display of the last trip

Beside the signalization of the led "Trip", indicating a generic function trip, the display shows a window indicating the last function that was tripped and the number of events that are stored in the memory. The display will show this window until the reset button or external reset are operated.

- Press "**Menu**" to access to the main menu with icons.
 - Press "**Home**" to erase trip visualization.
 - Ex. "tTCS" (flashing) is the last trip.


7. Leds Configuration

The relay manage up to 10 signal leds (Programmable), 1 led "Power" (green).

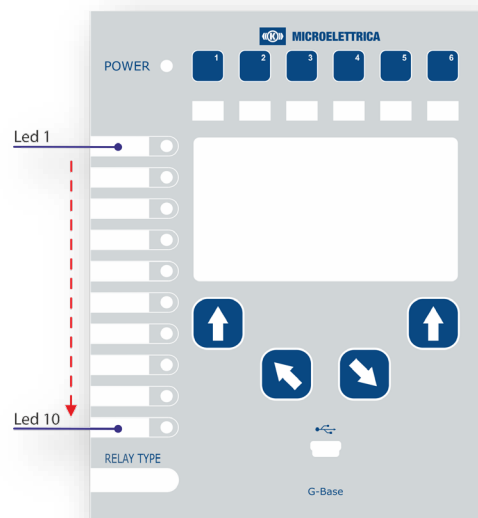


For Leds programming (only via software) operate as follows:

- Open the software program and connect to the relay.
- Select "Change Windows" from "Menu" button (options)

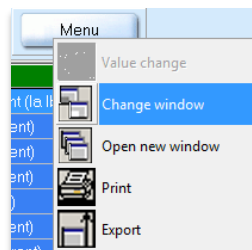

- Select "Led Setting"



The window for leds configuration will show:

ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	BF
2	Led 2	Not linked	Light off	Light on	Volatile	BF

7.1 - Name

Led name – for leds position see picture

7.2 - Link enable

<i>Linked</i>	=	Enable to operate
<i>Not Linked</i>	=	Disable

7.3 - Status

<i>Light-off</i>	=	Normal condition	See "Light Prog"
<i>Light-on</i>	=	When cause appear led is illuminated	
<i>Flashing</i>	=	When cause appear led is flashing	

7.4 - Light Prog.

<i>Light-on</i>	=	When cause appear led is illuminated
<i>Flashing</i>	=	When cause appear led is flashing

7.5 - Funct. Mode

<i>Volatile</i>	=	When cause disappear led turn-off (Not memorized)
<i>Latched</i>	=	When cause disappear led remain illuminated (memorized)

7.6 - Functions

Select the function assigned to specific led (see table 1).
It's possible to configure only one function for each led.
For configuration multiple functions use "UserVar" function.



7.7 - Table 1

Tal	Alarm	Thermal Image T>
T>	Trip	
1I>	Start	First overcurrent element
t1I>	Trip	
2I>	Start	Second overcurrent element
t2I>	Trip	
3I>	Start	Third overcurrent element
t3I>	Trip	
1Io>	Start	First earth fault element
t1Io>	Trip	
2Io>	Start	Second earth fault element
t2Io>	Trip	
3Io>	Start	Third earth fault element
t3Io>	Trip	
1Is>	Start	First negative sequence current element
t1Is>	Trip	
2Is>	Start	Second negative sequence current element
t2Is>	Trip	
1U>	Start	Overvoltage element
t1U>	Trip	
1U<	Start	Undervoltage element
t1U<	Trip	
1f>	Start	Overfrequency element
t1f>	Trip	
1f<	Start	Underfrequency element
t1f<	Trip	
1PF<	Start	Low Power Factor
t1PF<	Trip	
I<	Start	No Load Running element
tI<	Trip	
ILR	Start	Locked Rotor element
tILR	Trip	
IRF	Start	Internal Relay Failure
tIRF	Trip	
BF	Trip	BF (Breaker Failure)
tTCS		Trip coil supervision
MotOn		Motor Start
LimStNum		Limitation Startings Number
StSeqSucc		Start Sequence
Itr		Switch-over current
DskClean		Disk near Full clean operation is required
DskFull		Disk Full Write should be lock
DskWR		Disk write in progress
DskFRMT		Disk Format in progress
DskCHK		Check disk in progress
rDskAttach	Not Used	Removable disk usb attach
rDskDetach		Removable disk usb detach
rDskDtchable		Removable disk usb now detachable
rDskClean		Removable disk usb near to full clean operation is required
rDskFull		Removable disk usb full, write locked
rDskWR		Removable disk usb write in progress
rDskFRMT		Removable disk usb format in progress
rDskCHK		Removable disk usb check in progress
manOpCmd		Manual Open Command
L/Rdisc		Local/Remote signal Discrepancy
CL-Cmd		Close Command
C/Bfail		Circuit Breaker failure
UserTriggerOscillo		User Variable for Oscillographic Recording
UserVar<0>		
to		User Variable
UserVar<24>		
Vcc		Reserved
Gnd		Reserved
Reset		Reset signal logic
P1		Push-button 1
P2		Push-button 2
P3		Push-button 3
P4		Push-button 4
P5		Push-button 5
P6		Push-button 6
Gen.Start	Start	Generic
Gen.Trip	Trip	
0.D1		Digital Inputs
0.D1Not		
to		
0.D8		
0.D8Not		
0.R1		Output relays
to		
0.R8		

7.8 - Example: Change settings for "Led1"


Change settings for "**Led1**" : "Enable", "Flashing", "Latched", "1I>".

Main Windows:


ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	BF
2	Led 2	Not linked	Light off	Light on	Volatile	BF
3	Led 3	Not linked	Light off	Light on	Volatile	BF
4	Led 4	Not linked	Light off	Light on	Volatile	BF
5	Led 5	Not linked	Light off	Light on	Volatile	BF
6	Led 6	Not linked	Light off	Light on	Volatile	BF
7	Led 7	Not linked	Light off	Light on	Volatile	BF
8	Led 8	Not linked	Light off	Light on	Volatile	BF
9	Led 9	Not linked	Light off	Light on	Volatile	BF
10	Led 10	Not linked	Light off	Light on	Volatile	BF

7.8.1 - "Link Enable"

Select "**Link enable**" related to "Led 1" and press right button on mouse, select "Value change":

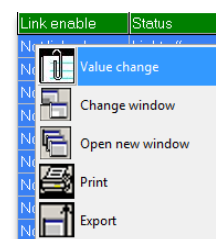


Select "**Linked**" and press "OK" (if Password is request, see § Password):

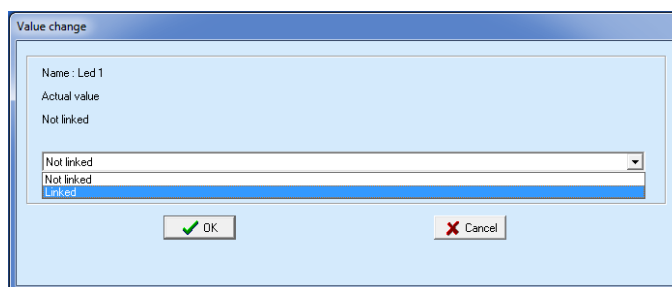


7.8.2 - "Flashing"

Select "**Light prog**" related to Led 1 and press right button on mouse, select "Value change":

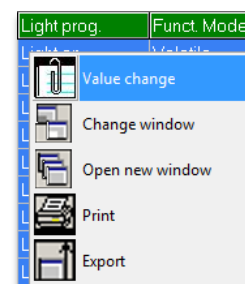


Select "**Flashing**" and press "OK" (if Password is request, see § Password):

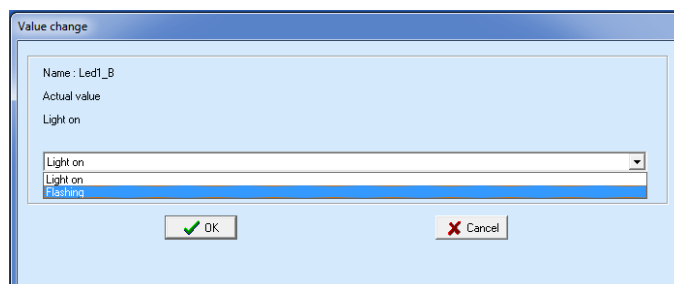


7.8.3 - "Funct.Mode"

Select "**Funct.Mode**" related to Led 1 and press right button on mouse, select "Value change":

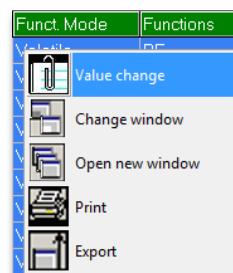


Select "**Latched**" and press "OK"
(if Password is request, see § Password):

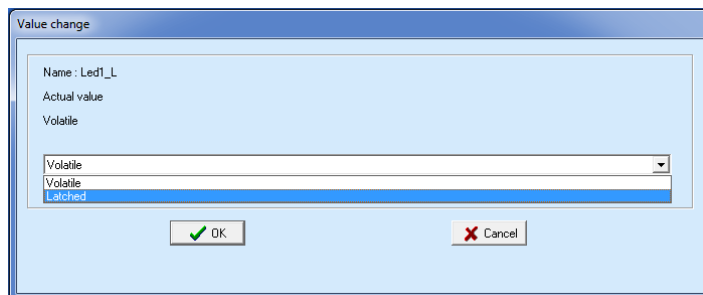


7.8.4 - "Functions"

Select "**Functions**" related to Led 1 and press right button on mouse, select "Value change":

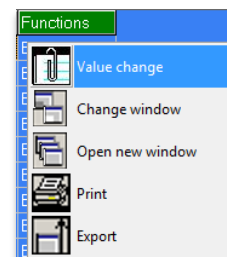

Select "**1I>**" and press "OK"
(if Password is request, see § Password):

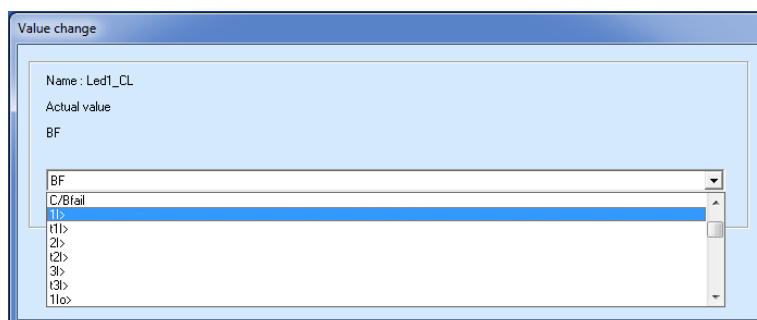

8. User Variables

The "User Variable" is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via software.

Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Extra	Logical status
------	-------------	------------------	---------	-------	------------	-------	----------------

8.1 - Name

Internal progressive name

8.2 - User Descr.

Custom identification label for user variable

8.3 - Linked functions

Selection functions

8.4 - OpLogic

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR, Counter, Rise-UP, Fall-Down]

8.5 - Timer

Time delay (0-600)s, step 0.01s

8.6 - Timer type

<i>Delay</i>	=	Add a delay on output activation. The "Timer" is edge triggered on rise edge.
<i>Monostable P</i>	=	Activated the output for the time "Timer"
<i>Monostable N</i>	=	Disactivated the output for the time "Timer".
<i>Blinking</i>	=	The output switches periodically at the frequency defined by "Timer".
<i>Delay-Fall-Down</i>	=	<i>Delay-Fall-Down</i>

8.7 - Extra

Extra Time (0 - 65000)s, step 1s


8.8 - Logical status

"User Variable" Logical status


8.9 - Example: Setting "User Variable"

Open software program and connect to the relay.

Select "Change Windows" from "Menu" button

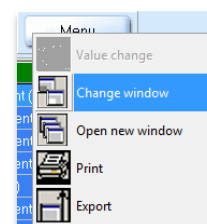

Select "User Variable"




Setting for "UserVar<0>" : "Current Trip", "1I>,2I>,3I>", "OR", "1", "Monostable P", "10".


ID	Name	User descr.	Linked functio	OpLogic	Timer	Timer type	Extra	Logical status
1	UserTrigger Oscillo	UserTrigger Oscillo		None	0	Delay	0	0
2	UserVar <0>	Current Trip...	1I>,2I>,3I>	OR	1	Monostable P	10	0

8.9.1 - "User description" (User descr.)

Select "**User descr**" related to "UserVar<0>" and press right button on mouse, select "Value change":

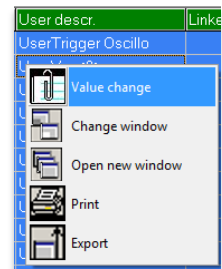


Insert "**Current Trip**" into box and press "OK":


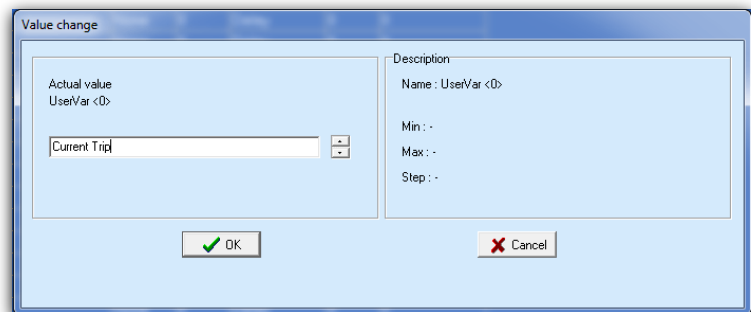


8.9.2 - "Linked Functions"

Select "**Linked Functions**" related to "UserVar<0>" and press right button on mouse, select "Value change":

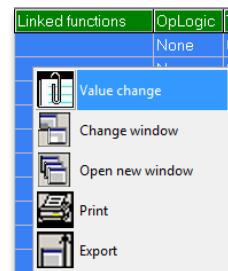


Select "**1I>, 2I>, 3I>**" from "Available" box via push-button "<Add", and press "OK".
For remove functions, use push-button ">Remove".

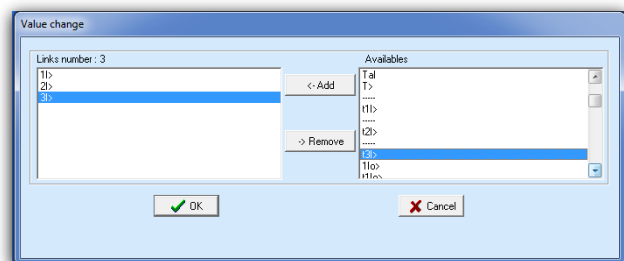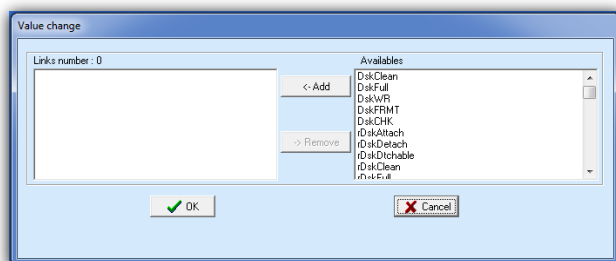


8.9.3 - "Operation Logic" (Oplogic)

Select "**Oper Logic**" related to "UserVar<0>" and press right button on mouse, select "Value change":

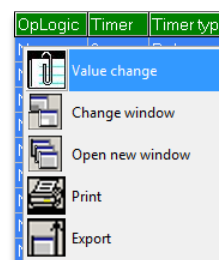


Insert "**OR**" into box and press "OK":

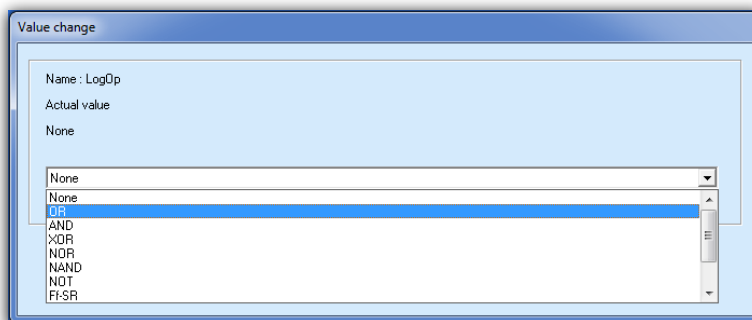


8.9.4 - "Timer"

Select "**Timer**" related to "UserVar<0>" and press right button on mouse, select "Value change":

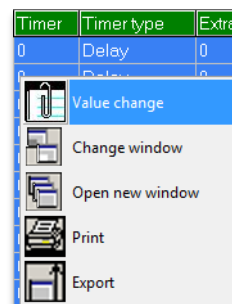


Select "**1**" into box and press "OK":

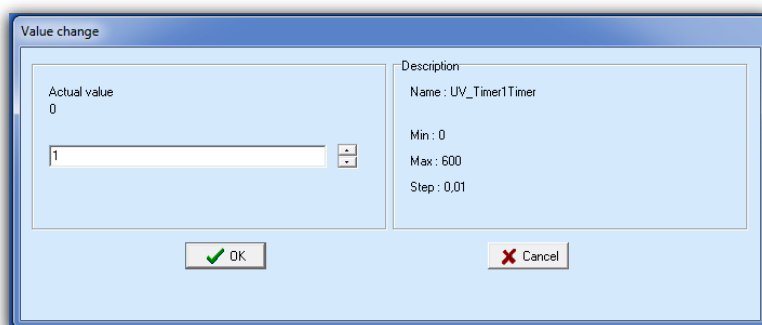


8.9.5 - "Timer type"

Select "**Timer**" related to "UserVar<0>" and press right button on mouse, select "Value change":

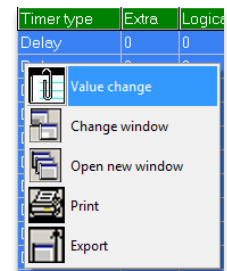


Select "**Monostable P**" into box and press "OK":

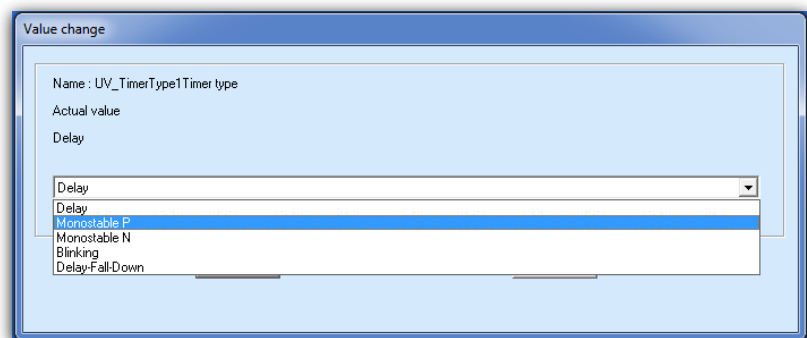


8.9.6 - "Extra"

Select "**Extra**" related to "UserVar<0>" and press right button on mouse,

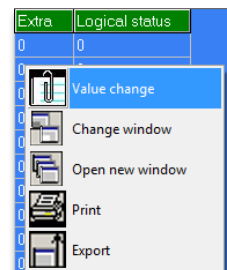

Select "**10**" into box and press "OK":




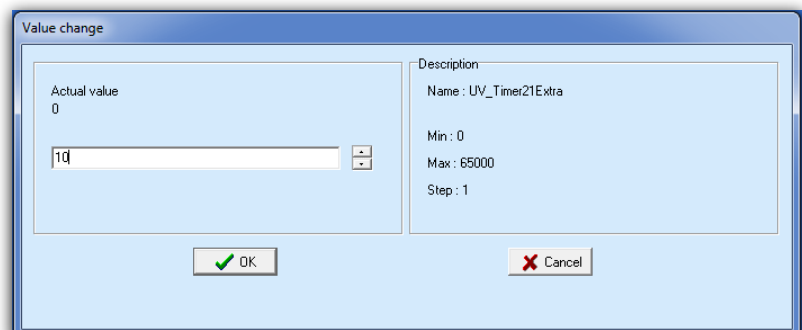


9. Local Commands

"**Local Commands**" allow to operate from relay front face controls like Thermal Memory reset, Leds reset, etc.




Menu		Description	Password
Led	Clear	Reset of signal Leds	No
Relays	Clear	Manual reset of output relays	No
main C/B	Cl.	Manual C/B closing (conditioned by Password)	Yes
main C/B	Op.	Manual C/B opening (conditioned by Password)	Yes
Event	Clear	Reset Events	Yes
LTrip	Clear	Reset Last Trip	Yes
Counter	Clear	Reset Counters	Yes
HistFail	Clear	Reset of Internal Failure Historic records	Yes
Reset	StNo	Reset of the Starts Number	Yes
Reset	Term	Reset to zero of the accumulations relevant to Thermal Image and Interruption Energy (only if T> is enable)	Yes
Leds	Test	Signal Leds test	No
Force	Osc	Force Oscillo Recording	Yes
Format	iDisk	Format internal disk	Yes
Check	iDisk	Check internal disk	Yes

To operate one command by the Front Face Keyboard, proceed as follows (Led Clear in the present example).

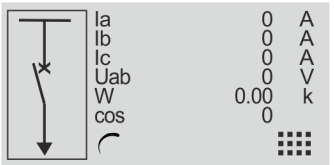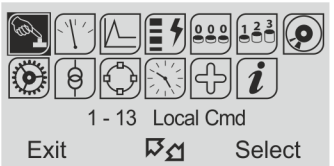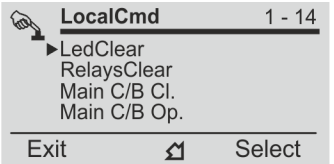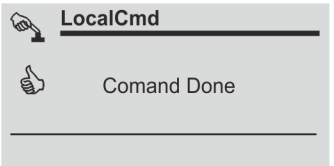- 
 - Press "**Menu**" for access to the main menu with icons.
- 
 - Select "**LocalCmd**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 
 - Select with pushbutton "**Increase**" or "**Decrease**" the menu "**LedClear**".
 - Press "**Select**" to execute the command.
(if Password is request, see § Password).
- 
 - When command has been executed the display shows "**Command Done**"; go to "3".

10. Measure




Real time values as measured during the normal operation.

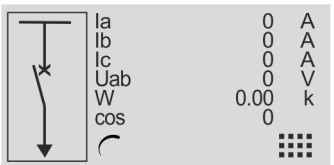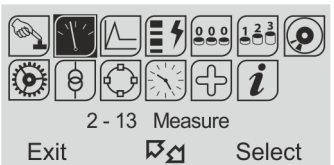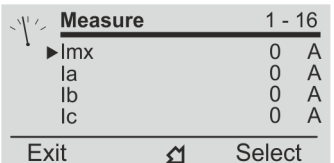- 1 
 - Press "**Menu**" for access to the main menu with icons.
- 2 
 - Select "**Measure**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 3 
 - Scroll the menu "**Measure**" with pushbutton "**Increase**" or "**Decrease**" to display the measurement.
 - Press "**Exit**" to go to the main menu.

Imx	(0 ÷ 99999)	A	Largest of the 3 phase-currents (Ia,Ib,Ic)
Ia	(0 ÷ 99999)	A	RMS value phase A current
Ib	(0 ÷ 99999)	A	RMS value phase B current
Ic	(0 ÷ 99999)	A	RMS value phase C current
Io	(0 ÷ 99999)	A	RMS value of Zero Sequence current (RMS Secondary Amps)
I1	(0 ÷ 99999)	In	Positive Sequence current
I2	(0 ÷ 99999)	In	Negative Sequence current
Frq	(40 ÷ 70)	Hz	Frequency
Tem	(0 ÷ 99999)	%T	Thermal status as % of the full load continuous operation temperature Tn
Uab	(0 ÷ 99999)	V	Phase-to-Phase Voltage A-B
W	(0 ÷ 99999)	k	Three phase active power
VAr	(0 ÷ 99999)	k	Three phase reactive power
VA	(0 ÷ 99999)	k	Three phase apparent power
Cos	(-1 ÷ 1)		Power Factor
tst	(0 ÷ 99999)	s	Motor starting time
Ist	(0 ÷ 99999)	A	Max current during motor starting

11. Maximum Values

Maximum demand values recorded starting from 100ms after closing of main Circuit Breaker (updated any time the breaker closes).

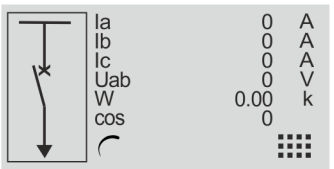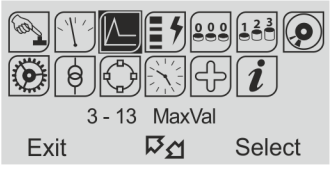- 1 
 - Press "**Menu**" for access to the main menu with icons.
- 2 
 - Select "**MaxVal**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 3 
 - Scroll the menu "**Measure**" with pushbutton "**Increase**" or "**Decrease**" to display the measurement.
 - Press "**Exit**" to go to the main menu.

Imx	(0 ÷ 99999)	A	Largest of the 3 phase-currents (Ia,Ib,Ic)
Ia	(0 ÷ 99999)	A	RMS value phase A current
Ib	(0 ÷ 99999)	A	RMS value phase B current
Ic	(0 ÷ 99999)	A	RMS value phase C current
Io	(0 ÷ 99999)	A	RMS value of Zero Sequence current (RMS Secondary Amps)
I1	(0 ÷ 99999)	In	Positive Sequence current
I2	(0 ÷ 99999)	In	Negative Sequence current
Frq	(40 ÷ 70)	Hz	Frequency
Tem	(0 ÷ 99999)	%T	Thermal status as % of the full load continuous operation temperature Tn
Uab	(0 ÷ 99999)	V	Phase-to-Phase Voltage A-B
W	(0 ÷ 99999)	k	Three phase active power
VAr	(0 ÷ 99999)	k	Three phase reactive power
VA	(0 ÷ 99999)	k	Three phase apparent power
Cos	(-1 ÷ 1)		Power Factor
tst	(0 ÷ 99999)	s	Motor starting time
Ist	(0 ÷ 99999)	A	Max current during motor starting


12. Trip Recording

Display of the function which caused the tripping of the relay plus values of the measurement at the moment of tripping. The last 30 events are recorded.


The memory buffer is refreshed at each new relay tripping (FIFO logic).

<i>Display</i>	→	Reading of recorded Trips.
<i>Erase</i>	→	Clear all Trips recorded.


- 1**

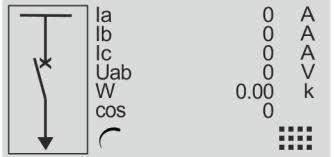


- Press "**Menu**" for access to the main menu with icons.
- 2**




- Select "**TripRec.**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 3**

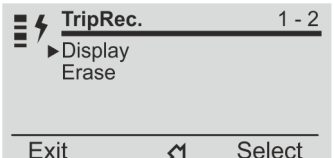


- Select "**Display**" with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
 - For "**Erase**" go to "8"
- 4**

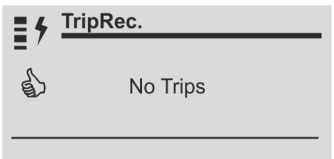




- If no trip is recorded the display shows "**No Trips**".
- 5**

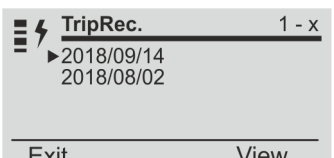

- If any trip was recorded, select "**View**" to display the chronological list of the records.
 - By the keys "**Increase**" or "**Decrease**" select the date of the record to be checked.
- 6**

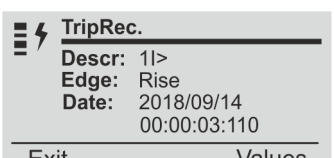

- Will be shown:
 - "**Descr**" the function that caused the event (Example: t1I> = Rise)
 - "**Edge**" if the function was tripped (Rise) or reset (Fall)
 - "**Date**", date of trip, year/month/day, hour:minutes:seconds:milliseconds
 - Press "**Value**", for reading the value of input quantities on tripping.

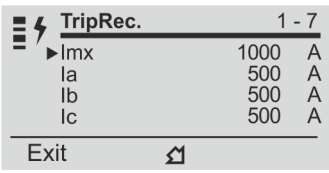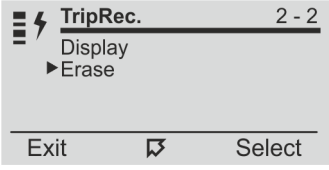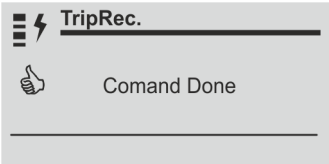- 7**
- 
- Scroll with pushbuttons "**Increase**" or "**Decrease**" the available measurements.
 - Select "**Exit**" to go back to "5" for another selection, or "2" go back to the main menu.
- 8**
- 
- Select "**Erase**" with button "**Decrease**".
 - Press "**Select**" to execute the commands; **All** Trips recorded are erased. (if Password is request, see § Password).
- 9**
- 
- When command has been executed the display shows "**Command Done**";
 - Press "**Exit**" to go back to the main menu.



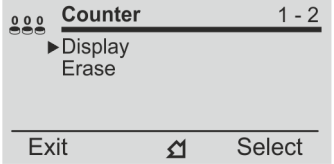
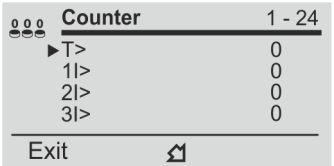
<i>Imx</i>	(0 ÷ 99999)	A	Largest of the 3 phase-currents (Ia,Ib,Ic)
<i>Ia</i>	(0 ÷ 99999)	A	RMS value phase A current
<i>Ib</i>	(0 ÷ 99999)	A	RMS value phase B current
<i>Ic</i>	(0 ÷ 99999)	A	RMS value phase C current
<i>Io</i>	(0 ÷ 99999)	A	RMS value of Zero Sequence Current (RMS Secondary Amps)
<i>I1</i>	(0 ÷ 99999)	In	Positive Sequence current
<i>I2</i>	(0 ÷ 99999)	In	Negative Sequence current
<i>Frq</i>	(40 ÷ 70)	Hz	Frequency
<i>Tem</i>	(0 ÷ 99999)	%T	Thermal status as % of the full load continuous operation temperature Tn
<i>Uab</i>	(0 ÷ 99999)	V	Phase-to-Phase Voltage A-B
<i>Cos</i>	(-1 ÷ 1)		Power Factor



13. Partial Counters

Partial counters of the number of operations for each of the relay functions.

Display → <i>T></i>	0	Operations counters	Thermal Image
<i>1I></i>	0	Operations counters	First overcurrent element
<i>2I></i>	0	Operations counters	Second overcurrent element
<i>3I></i>	0	Operations counters	Third overcurrent element
<i>1Io></i>	0	Operations counters	First earth fault element
<i>2Io></i>	0	Operations counters	Second earth fault element
<i>3Io></i>	0	Operations counters	Third earth fault element
<i>1Is></i>	0	Operations counters	First negative sequence current element
<i>2Is></i>	0	Operations counters	Second negative sequence current element
<i>motST</i>	0	Operations counters	Motor Start
<i>mStOV</i>	0	Operations counters	Motor Start Overall counter
<i>LR</i>	0	Operations counters	Locked Rotor trip
<i>StNo</i>	0	Operations counters	Start number limitation trip
<i>StSeq</i>	0	Operations counters	Start Sequence trip
<i>I<</i>	0	Operations counters	No Load running trip
<i>TCS</i>	0	Operations counters	Trip Circuit Supervision
<i>IRF</i>	0	Operations counters	Internal Relay Fault
<i>BrkF</i>	0	Operations counters	Breaker failure
<i>AutOp</i>	0	Operations counters	Automatic C/B Opening
<i>AutCL</i>	0	Operations counters	Automatic C/B Closing
<i>ManOp</i>	0	Operations counters	Manual C/B Opening
<i>ManCL</i>	0	Operations counters	Manual C/B Closing
<i>OvrOp</i>	0	Operations counters	Overall C/B Opening (Automatic + Manual)
<i>OvrCL</i>	0	Operations counters	Overall C/B Closing (Automatic + Manual)

Erase → Reset all Counters
(By the interface program software it is possible to individually reset the counters and set an initial starting number)



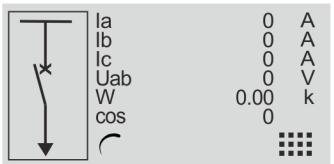
- 
 - Press "**Menu**" for access to the main menu with icons.
- 
 - Select "**Counter**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 
 - Select "**Display**" with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
 - For "**Erase**" to go to "5"
- 
 - Display of the number of operations of each individual function.
 - With pushbuttons "**Increase**" or "**Decrease**" scroll the parameters
 - Press "**Exit**" go back to "3".

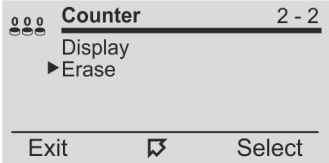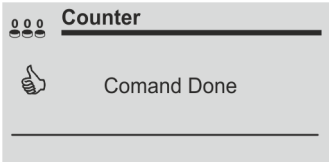- 5**
- 
- Select "**Erase**" with pushbutton "**Decrease**".
 - Press "**Select**".
(if Password is request, see § Password).
- 6**
- 
- When command has been executed the display shows "**Command Done**"; and return to "5".
 - With pushbutton "**Exit**" to go back to the main menu.

14. Total Counters

Counters of the total number of operation of each individual function.
These counters cannot be reset

Display →	T>	0	Operations counters	Thermal Image
	1I>	0	Operations counters	First overcurrent element
	2I>	0	Operations counters	Second overcurrent element
	3I>	0	Operations counters	Third overcurrent element
	1Io>	0	Operations counters	First earth fault element
	2Io>	0	Operations counters	Second earth fault element
	3Io>	0	Operations counters	Third earth fault element
	1Is>	0	Operations counters	First negative sequence current element
	2Is>	0	Operations counters	Second negative sequence current element
	motST	0	Operations counters	Motor Start
	mStOV	0	Operations counters	Motor Start Overall counter
	LR	0	Operations counters	Locked Rotor trip
	StNo	0	Operations counters	Start number limitation trip
	StSeq	0	Operations counters	Start Sequence trip
	I<	0	Operations counters	No Load running trip
	TCS	0	Operations counters	Trip Circuit Supervision
	IRF	0	Operations counters	Internal Relay Fault
	BrkF	0	Operations counters	Breaker failure
	AutOp	0	Operations counters	Automatic C/B Opening
	AutCL	0	Operations counters	Automatic C/B Closing
	ManOp	0	Operations counters	Manual C/B Opening
	ManCL	0	Operations counters	Manual C/B Closing
	OvrOp	0	Operations counters	Overall C/B Opening (Automatic + Manual)
	OvrCL	0	Operations counters	Overall C/B Closing (Automatic + Manual)

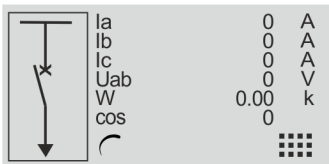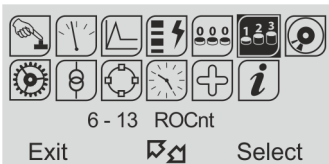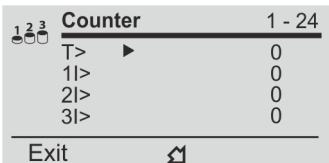- 1**
- 
- Press "**Menu**" for access to the main menu with icons.
- 2**
- 
- Select "**ROCnt**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 3**
- 
- With pushbuttons "**Increase**" or "**Decrease**" scroll the parameters.
 - With pushbutton "**Exit**" to go back to the main menu.


15. Events


Display of the function which caused any of the following events: - *Status change of digital Inputs/Outputs*. - *Start of protection functions* – *Trip of protection function* – *Function reset*.


The last 500 events are recorded at pick-up (rise) or drop-out (fall).


The memory buffer is updated at each new event.


Display	→	Reading events recorded.
Erase	→	Clear all events recorded.

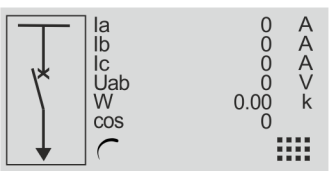
- 

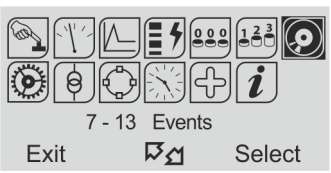
 - Press "**Menu**" for access to the main menu with icons.
- 

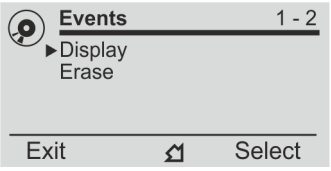
 - Select "**Events**" icon with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
- 

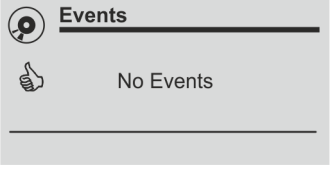 - Select "**Display**" with pushbutton "**Increase**" or "**Decrease**".
 - Press "**Select**" for access.
 - For "**Erase**" go to "7"
- 

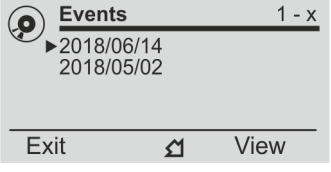 - If no event is recorded the display shows message "**No Events**".
- 

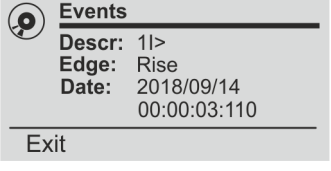 - If any event was recorded, select "**View**" to display the chronological list of the records.
 - By the keys "**Increase**" or "**Decrease**" select the date of the record to be checked.
- 

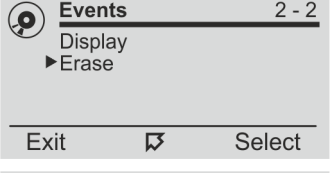 - Will be shown:
 - "**Descr**" the function that caused the event (Example: 1I> = Start, t1I> = Trip)
 - "**Edge**" if the function was tripped (Rise) or reset (Fall)
 - "**Date**", date of trip, year/month/day, hour:minutes:seconds:milliseconds
- 

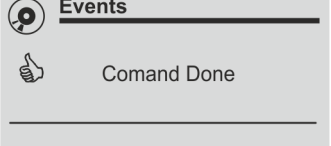 - Select "**Erase**" with button "**Decrease**".
 - Press "**Select**" to execute the commands; **All** Events recorded are erased. (if Password is request, see § Password).
- 

 - When command has been execute the display shows "**Command Done**";
 - Press "**Exit**" to go back to the main menu.

15.1 – Events on display



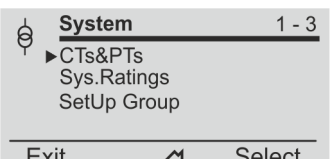
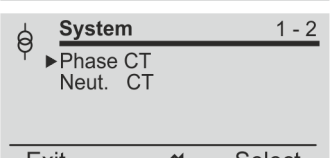
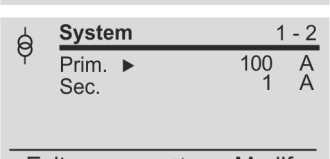
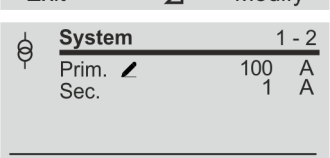

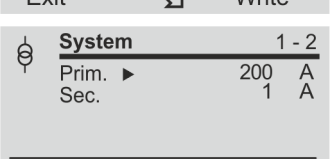
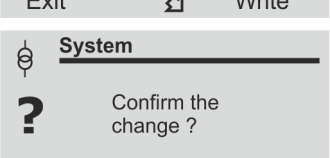
Functions	Events Displayed	Events Description			Status	
T>	Tal T>	Tal T>	Alarm Trip	Thermal Image	Rise	
1I>	1I> t1I>	1I> t1I>	Start Trip	Fist overcurrent element	Rise	Fall
2I>	2I> t2I>	2I> t2I>	Start Trip	Second overcurrent element	Rise	Fall
3I>	3I> t3I>	3I> t3I>	Start Trip	Third overcurrent element	Rise	Fall
1Io>	1Io> t1Io>	1Io> t1Io>	Start Trip	Fist earth fault element	Rise	Fall
2Io>	2Io> t2Io>	2Io> t2Io>	Start Trip	Second earth fault element	Rise	Fall
3Io>	3Io> t3Io>	3Io> t3Io>	Start Trip	Third earth fault element	Rise	Fall
1Is>	1Is> t1Is>	1Is> t1Is>	Start Trip	First negative sequence current	Rise	Fall
2Is>	2Is> t2Is>	2Is> t2Is>	Start Trip	Second negative sequence current	Rise	Fall
1U>	1U> t1U>	1U> t1U>	Start Trip	Overvoltage element	Rise	Fall
1U<	1U< t1U<	1U< t1U<	Start Trip	Undervoltage element	Rise	Fall
1f>	1f> t1f>	1f> t1f>	Start Trip	Overfrequency element	Rise	Fall
1f<	1f< t1f<	1f< t1f<	Start Trip	Underfrequency element	Rise	Fall
1PF<	1PF< t1PF<	1PF< t1PF<	Start Trip	Low Power Factor	Rise	Fall
TCS	TCS tTCS	TCS tTCS	Start Trip	Trip Coil Supervision	Rise	Fall
IRF	IRF tIRF	IRF tIRF	Start Trip	Internal Relay Failure	Rise	
BF	BF	BF	Trip	Breacker Failure	Rise	Fall
LR	ILR tILR	ILR tILR	Start Trip	Start Locked rotor Trip Locked rotor	Rise	
StNo	LimStNum		Trip	Limitation of start number	Rise	
StSeq	StSeqSucc Itr		Start Start	Start sequence successful Start sequence trip/switch over failure	Rise	
I<	I< tI<		Start Trip	Start No load running protection Trip No load running protection	Rise	Fall
	MotON		Trip	Motor On	Rise	Fall
	Time Sincro		Trip	Time Sincronization	Rise	
Disk	DskClean	Not Used		Disk near to full clean operation is required	Rise	
	DskFull			Disk full write should be lock	Rise	
	DskFRMT			Disk format in progress	Rise	Fall
	rDskAttach			removable disk usb attach	Rise	
	rDskDetach			removable disk usb detach	Rise	
	rDskDchable			removable disk usb now detachable	Rise	
	rDskClean			Removable USB disk near to full clean oper. is required	Rise	
	rDskFull			Removable disk USB full, write locked	Rise	
C/B	L/R disc			Local/Remote signal Discrepancy	Rise	
	manOpKey			Circuit Breaker intentional open by key	Rise	
	manOpLocC			Circuit Breaker intentional open by local command	Rise	
	manOpRemC			Circuit Breaker intentional open by remote command	Rise	
	manOpExtIn			Circuit Breaker intentional open by external input	Rise	
	ExterManOp			Circuit Breaker intentional external open	Rise	
	manCIKey			Circuit Breaker intentional close by key	Rise	
	manCILocC			Circuit Breaker intentional close by local command	Rise	
	manCIRemC			Circuit Breaker intentional close by remote command	Rise	
	manCIExtIn			Circuit Breaker intentional close by external input	Rise	
Digital Inputs	ExterManCh			Circuit Breaker intentional external close	Rise	
	CB-Fail			Circuit Breaker (C/B Failure)	Rise	Fall
	Gen.Trip			General Trip	Rise	
	Gen.Start			General Start	Rise	
Output Relays	0.D1			Digital Input D1	Rise	Fall
	to				Rise	Fall
	0.D8			Digital Input D8	Rise	Fall
Output Relays	0.R1			Output relays R1	Rise	Fall
	to				Rise	Fall
	0.R8			Output relays R8	Rise	Fall

16. System (System parameters)

Setting of system parameters.

CTs&PTs	Phase CT	Primary	Prim.	→	1000	A	(1 ÷ 9999)	step	1	A
		Secondary	Sec.	→	1	A	(1 / 5)			
	Neutral CT	Primary	Prim.	→	1000	A	(1 ÷ 9999)	step	1	A
		Secondary	Sec.	→	1	A	(1 / 5)			
	Sys.Ratings		Fn	→	50	Hz	(50 / 60)			
			Nominal Frequency							
			In	→	100	A	(1 ÷ 9999)	step	1	A
			Nominal Current							


Setting Group	Group	→	1	(1 / 2)
----------------------	--------------	---	---	---------

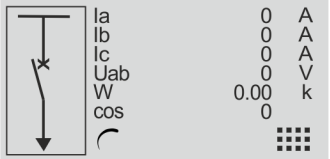- 
 - Press **"Menu"** for access to the main menu with icons.
- 
 - Select **"System"** icon with pushbuttons **"Increase"** or **"Decrease"**.
 - Press **"Select"** for access.
- 
 - Select **"CTs&PTs"**.
 - Press **"Select"** for access.
- 
 - Select **"Phase CT"**.
 - Press **"Select"** for access.
- 
 - Select **"Primary"** to modify the value, or press **"Decrease"**.
 - Press **"Modify"** to modify the parameter.
(if Password is request, see § Password).
- 
 - Appear  icon.
 - Use pushbuttons **"Increase"** or **"Decrease"** to set the value.
 - Press **"Write"** to confirm the value
- 
 - The value is now set.
 - To set a new value return to the point "4".
 - Press **"Exit"**.
- 
 - The display show **"Confirm the change?"**.
 - Choose **"Yes"** to confirm the changes.
 - Choose **"No"** to **not** confirm the changes.
 - After set confirmation (or non-confirmation) the display goes back to point "3".

17. Settings

Two complete banks of settings of the programmable variables are available in the "**SETTING**" menu. Both "Group #1" and "Group #2" include the hereunder listed variables.

1

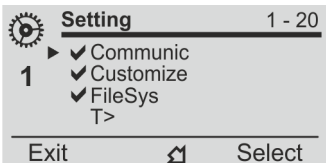

1 Indicates the Setting Group that is actually being modified.







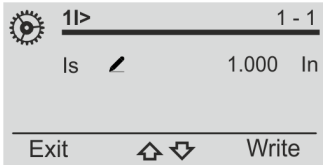

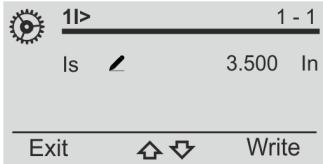

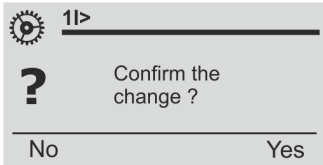
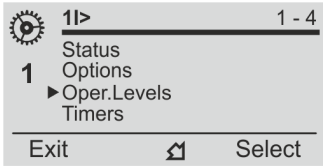
✓ This symbol indicates that the function aside is enabled; symbol missing indicates that the function is disabled.

Group#1	Group#2	Descriptions
<i>Communic.</i>	<i>Communic.</i>	Serial communication parameters
<i>Customise</i>	<i>Customise</i>	Visualization parameters
<i>FileSys</i>	<i>FileSys</i>	File Systems and disks management
<i>T></i>	<i>T></i>	Thermal Image
<i>1I></i>	<i>1I></i>	First Overcurrent Element
<i>2I></i>	<i>2I></i>	Second Overcurrent Element
<i>3I></i>	<i>3I></i>	Third Overcurrent Element
<i>1Io></i>	<i>1Io></i>	First Earth Fault Element
<i>2Io></i>	<i>2Io></i>	Second Earth Fault Element
<i>3Io></i>	<i>3Io></i>	Third Earth Fault Element
<i>1Is></i>	<i>1Is></i>	First Negative Sequence Current Element
<i>2Is></i>	<i>2Is></i>	Second Negative Sequence Current Element
<i>1U></i>	<i>1U></i>	Overvoltage element
<i>1U<</i>	<i>1U<</i>	Undervoltage element
<i>1f></i>	<i>1f></i>	Overfrequency element
<i>1f<</i>	<i>1f<</i>	Underfrequency element
<i>1PF<</i>	<i>1PF<</i>	Low power factor element
<i>MotSt</i>	<i>MotSt</i>	Motor Start
<i>LR</i>	<i>LR</i>	Locked rotor protection
<i>StNo</i>	<i>StNo</i>	Start Number limitation tripping
<i>StSeq</i>	<i>StSeq</i>	Starting sequence Control
<i>I<</i>	<i>I<</i>	No Load running protection
<i>TCS</i>	<i>TCS</i>	Setting variables for Trip Circuit Supervision
<i>IRF</i>	<i>IRF</i>	Internal Relay Fault
<i>BrkFail</i>	<i>BrkFail</i>	Setting variables for Breaker Failure detection
<i>Oscillo</i>	<i>Oscillo</i>	Setting variables for Oscillographic recording
<i>CB-Mngn</i>	<i>CB-Mngn</i>	C/B command Local / Remote setting
<i>ExtReset</i>	<i>ExtReset</i>	Configuration for external reset input

17.1 - Modifying the setting of variables

To modify any variable setting by the keyboard proceed as follows:

(example: change setting of element "1I>", from "Is 1.000 In" to "Is 3.500 In")

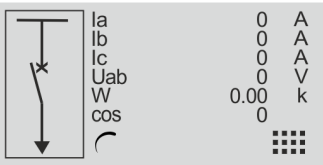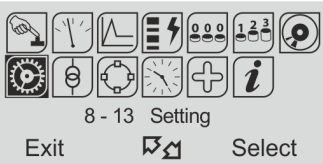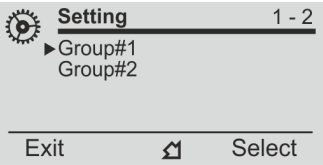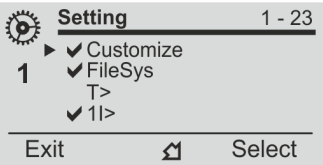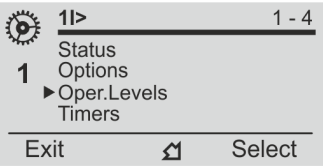- 1 
 - Press "**Menu**" for access to the main menu with icons.
- 2 
 - Select icon "**Setting**" by pushbuttons "**Increase**" or "**Decrease**".
 - Press "**Select**".
- 3 
 - Select by pushbuttons "**Group#1**".
 - Press "**Select**".
- 4 
 - Select by pushbuttons "**Increase**" or "**Decrease**" the parameter "1I>".
 - Press "**Select**".
- 5 
 - Select by buttons "**Increase**" or "**Decrease**" the menu "**Oper.Levels**".
 - Press "**Select**".
- 6 
 - The arrow aside "Is" shows the parameter selected for changing
 - Press "**Modify**".
 - If Password is request, see § Password
- 7 
 - Appear  icon.
- 8 
 - Set new values pushbuttons "**Increase**" or "**Decrease**" buttons
 - Press "**Write**".
- 9 
 - If the change of parameters is completed, press "**Exit**".
- 10 
 - "**Yes**" confirm all changes.
 - "**No**" voids all the changes.
- 11 
 - The relay returns to point "4".









17.2 - Password

The password is requested any time the user wishes to modify any password protected parameter (example "1I>" menu "Setting").

The factory default password is "1111".

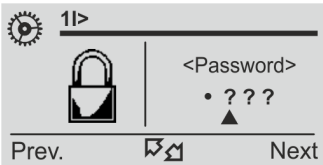The password is only modifiable with the software.

When password is requested, proceed as follows:

- 1  Use the key "**Increase**" and "**Decrease**" and set the first digit of password.
- 2  Press "**Next**" to validate and go to the next digit.
- 3  Use the key "**Increase**" or "**Decrease**" to set second digit.
- 4  Press "**Next**" to validate and go to the next digit.
- 5  Use the key "**Increase**" or "**Decrease**" to set the third digit.
- 6  Press "**Next**" to validate and go to the next digit.
- 7  Use the key "**Increase**" or "**Decrease**" to set the fourth digit.
- 8  Press "**Next**" to validate and go to modify the next parameter.



By key "**Prev**" go back to previous digit.



The password validity expires 60 sec after the last setting modification or as soon as you go back to the main menu

la	0	A
lb	0	A
lc	0	A
l1	0.00	In
l2	0.00	In
Tem	0	%T

- 1  If set the incorrect password the display shows "**Wrong code**".
- 2  The display will repeat the initial interrogation

17.3 – Menu: **Communic.** (Communication)

Options	→	BRRem	19200	[9600 / 19200 / 38400]
	→	PRRem	MODBUS	[MODBUS / IEC103]
Node Address	→	Addr.	1	[1 ÷ 250]

17.3.1 – Description of variables

BRRem	:	USB (Front Panel) serial communication speed
PRRem	:	Remote Protocol
Addr.	:	Identification number for the connection on serial communication bus

17.3.2 – Front Panel USB serial communication port (RS232)

A Mini-USB socket is available on Relay's front face for connection. Through this port - and by the interface program for Windows XP/7 - it is possible connect a Personal Computer to download all available information, operate any control and program the relay; the protocol used is "Modbus RTU". To avoid electronic damage apply ESD caution.

17.3.3 – Cable for connection from Relay to Personal Computer

The connection cable is a standard USB-A/mini USB-B



17.3.4 – Main serial communication port (RS485)

From the Relay's back terminal board, a RS485 ports is available for communication with SCADA system with Protocol Modbus RTU or IEC60870-5-103 (selectable). The communication interface allows to program all settings, operate all commands and download all information and records. The physical connection can be via a normal pair of wires (RS485).

17.4 - Menu: **Customize** (Human Machine Interface)

Options	→	Lang	English
	→	Light	On

[English / Loc.Lang]
[Auto / On]

Timers	→	tBckL	20
--------	---	-------	----

(5 ÷ 120)

step 1 s



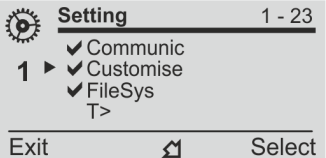
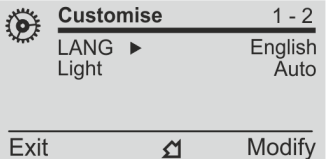
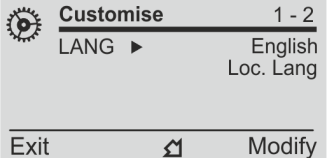
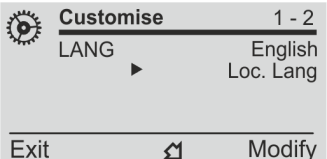
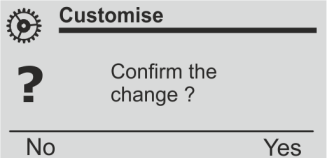
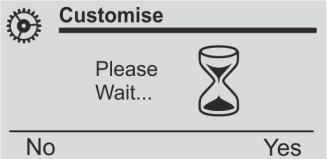
17.4.1 - Description of variables

Lang	:	Set Language
Light	:	Set Display backlight
tBckL	:	Set Display backlight time

This menu allows to customize the Language and the Display.

The Display backlight can be programmed always on "ON" or switched-on "Automatically" for a few second (set parameter "tBckL") at any operation of the keyboard.

Example: set Local Language.

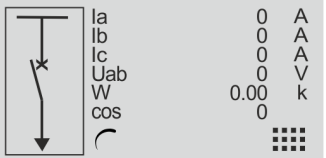- 
 - Press "**Menu**" for access to the main menu with icons.
- 
 - Select icon "**Setting**" by pushbuttons "**Increase**" or "**Decrease**".
 - Press "**Select**".
- 
 - Select "**Group 1**" or "**Group 2**".
 - Select "**Customize**".
 - Select "**Options**".
 - Press "**Select**".
- 
 - Select "**Lang**".
 - Press "**Modify**".
- 
 - Select "**Loc.Lang**".
 - Press "**Write**".
 - If Password is requested, see § Password
- 
 - Press "**Exit**".
- 
 - "**Yes**" confirms all changes.
 - "**No**" void all changes.
- 
 - After set confirmation the display shows "**Please Wait**".

17.5 - Function: **FileSys** (File system and Disk management)

Options	→ log	disable	[disable / int.disk]
	→ OniDF	StopWrite	[StopWrite / DelOldFiles]


17.5.1 - Description of variables

log	:	Internal Disk write
	Enable	: Protection log file write enabled
	Disable	: Protection log file write disabled
OniDF	:	Write policy on internal full disk condition
	StopWrite	: Write disable
	DelOldFiles	: Delete older folder and write

17.5.2 - Download file information

Files related to "Journal" - "Fault log" - "Oscillo" are available in the relay internal memory.

Connect the USB cable to the relay and wait a few moments.



17.5.2.1 - Journal file

Example:

Directory				Descriptions
DATALOG	2018			Year
		Jul		Month
			08	Day
			Jrnl_08.07.2018.txt	Journal File
Jrnl_08.07.2018.txt				
Date	Time	Event		
2018/07/03	18:42:07:100	Vcc	Rise	
2018/07/03	18:42:07:100	L/Rdisc	Rise	
2018/07/03	18:42:07:110	IPU boot	Rise	

17.5.2.2 - Faults log file

Example:

Directory				Descriptions
TRIPS	2018			Year
		Jul		Month
			15	Day
			Trips_15.06.2018.txt	Trips log File
Trips_15.06.2018.txt				
Date	Time	Event	Values	
2018/06/15	08:17:27:200	tTCS	Imx=0.0; Ia=0.0; Ib=0.0; Ic=0.0; Io=0.0; I2=0.00; Tem=0	
2018/06/15	10:31:03:901	tTCS	Imx=0.0; Ia=0.0; Ib=0.0; Ic=0.0; Io=0.0; I2=0.00; Tem=0	

17.5.2.3 - Oscillographic file

Example:

Directory				Descriptions
OSCILLO	2018			Year
		Jul		Month
			18	Day
			fault1_2016.05.08.15.56.45.cfg	Oscillographic Comtrade
			fault1_2016.05.08.15.56.45.dat	File

17.6 - Function: **T>** (Thermal Image F49)

Status	→	Enab.	No	[No / Yes]			
Options	→	OPMOD	I1.I2	[I1.I2 / I.Max]			
Livelli	→	Tal	50	%Tb [10 ÷ 100]	step	1	%Tb
	→	Is	1	In [0.5 ÷ 1.5]	step	0.01	In
	→	Tres	50	%Tb [10 ÷ 100]	step	1	%Tb
	→	To	1	nkt [1 ÷ 10]	step	1	nkt

17.6.1 - Description of variables

Abil.	: Function enabling (No = Disable / Yes = Enable)
OPMOD	: I1.I2 = Direct/Inverse current I.Max = Phase current
Tal	: Temperature pre-alarm level
Is	: Continuous admissible current
Tres	: Temperature reset
To	: Warming-up Time Constant of the load

17.6.2 - Trip and Alarm

The algorithm compares the amount of heat accumulated "T" ($\equiv i^2 \cdot t$) to the steady state amount of heat "Ts" corresponding to continuous operation at the continuously admissible current "Is". When the ratio "T/Ts" reaches the level set for Thermal Alarm "Tal" of the max allowed heating, the relay trips accordingly

17.6.2.1 - Trip time of the Thermal Image Element


The trip time of the Thermal Image Element is a function of the current "I" flowing into the load and depends on its warming-up Time Constant "Kt", on the previous thermal status "Ip" and on the maximum admissible continuous current "Is" according to the equation:

t	= Time to relay tripping
Kt	= Load thermal time constant
I	= Actual load current
In	= Load rated current
Is	= Continuous admissible current
Ip	= Steady state current before the overload
ln	= Natural Logarithm

$$t = Kt \cdot \ell_n \frac{\left(\frac{I}{In}\right)^2 - \left(\frac{Ip}{In}\right)^2}{\left(\frac{I}{In}\right)^2 - \left(\frac{Is}{In}\right)^2}$$

When the heating exceeds the set alarm level "Tal" or the max. allowed level ("I" > "Is" for the time "t") the output relays programmed for these function will be operated. Reset will take place when the heating will drop below 95% of the trip level.

17.6.2.2 – Thermal Image Curves (TU1024 Rev.1)

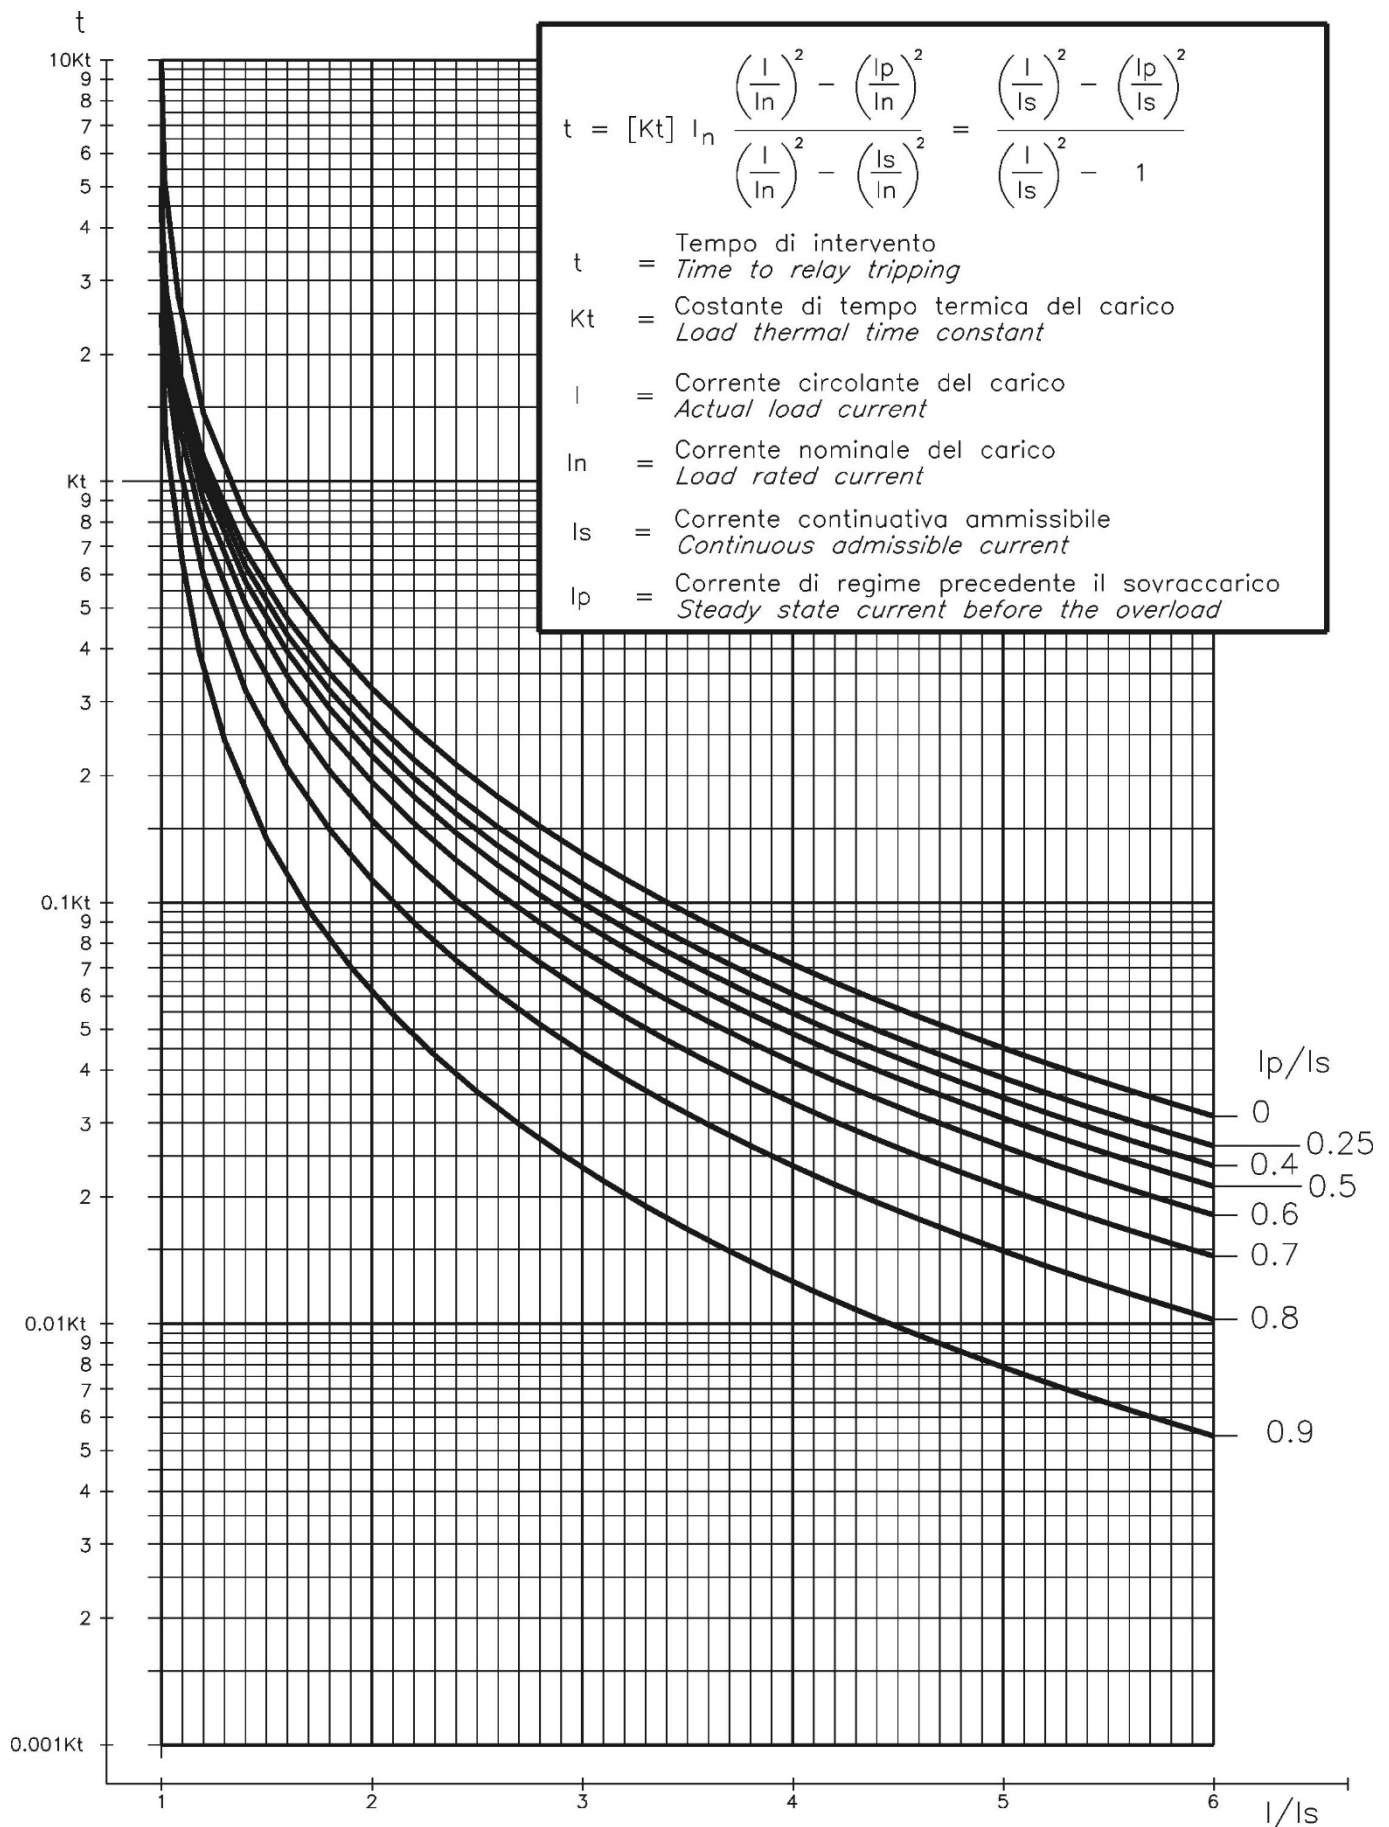

17.7 - Function: **1I**> (First Overcurrent Element F50/51)

Status	→	Enab.	No		[No / Yes]
Options	→	f(t)	Type - D		[D / A / B / C / I / VI / EI / MI / SI]
	→	tBI	Off		[Off / 2tBO]
Oper. Levels	→	Is	1	In	(0.1 ÷ 4) step 0.01 In
Timers	→	ts	100	s	(0.02 ÷ 100) step 0.01 s
	→	tBO	0.75	s	(0.05 ÷ 0.75) step 0.01 s

17.7.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
f(t)	:	Operation characteristic (Time/Current curve):
		(D) = Independent definite time
		(A) = IEC Inverse Curve type A
		(B) = IEC Very Inverse Curve type B
		(C) = IEC Extremely Inverse Curve type C
		(I) = IEEE Inverse Curve
		(VI) = IEEE Very Inverse Curve
		(EI) = IEEE Extremely Inverse Curve
		(MI) = IEEE Moderate Inverse Curve
		(SI) = IEEE Short Inverse Curve
tBI	:	Blocking input reset time
		Off = Permanent block
		2tBO = Set 2xtBO.
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

17.7.2 – Blocking Logic (BO-BI)

For each Protection Function it is possible to activate a Blocking Logic allowing for inhibiting their operation by external signals supplied to the Digital Input.

17.7.2.1 – Output Blocking signal "BO"

All the protection functions that can be programmed to operate in the blocking logic mode, element, have an instantaneous element (beside the time delayed) which is operated as soon as the controlled quantity exceeds the set trip level ($I > [I_s]$ for current, etc..) and is instantaneously reset when the input quantity drops below the reset level (normally $0.95I_s$).

The instantaneous element can control one of the user programmable output relays that, by its contacts, makes the signal available for blocking an external element (BO = Blocking Output).

In case, "tBO" sec after the set trip time "ts" has expired, the Protection function is still in operation (current above trip level), the Blocking Output relay (instantaneous element) is anyhow reset to eventually remove the Blocking signal from a back-up protection.

17.7.2.2 – Blocking Input "BI"

For all the functions controllable by the Blocking Logic, it is possible to inhibit the time delayed tripping by an external signal that activates a Digital Input programmed for this functionality.

The programmed Digital Input gets activated by an external cold contact closing across its terminals.

With the variable "tBI" set to "OFF" (tBI=OFF), the tripping of the delayed function is blocked as long as the Blocking Input signal is present at the terminals of the Digital Input.

With the variable "tBI" set to "2xtBI" (tBI=2xtBI), 2xtBI seconds after the set trip time delay of the function has expired the blocking input is anyhow ignored and the function enabled to trip.

17.7.3 - Automatic doubling of Overcurrent thresholds on current inrush

For some of the phase Overcurrent functions it is possible to have the set trip level $[I_s]$ automatically doubled when strong inrush current is detected.

If at circuit Breaker switch-on (i.e. when the input current rises from zero to a minimum measurable value) the current increases from 0 to 1.5 times the rated value $[I_n]$ in less than 60ms, the set minimum pick-up level $[I_s]$ is dynamically doubled ($[I_s] \rightarrow [2I_s]$) and keeps this value until the input current drops below $1.25 \times I_n$ or the set time $[t_{2xI}]$ has elapsed.

This functionality is very useful to avoid spurious tripping of the instantaneous, or short-time delayed Overcurrent elements, that could be experienced at switch-on when energizing the feeder.

17.8 – Function: **2I**> (Second Overcurrent Element F50/51)

Status	→	Enab.	Yes		[No / Yes]
Options	→	tBI	Off		[Off / 2tBO]
	→	2xI	Disable		[Disable / Enable]
Oper. Levels	→	Is	1	In	(0.1 ÷ 40) step 0.01 In
Timers	→	ts	100	s	(0.02 ÷ 100) step 0.01 s
	→	tBO	0.75	s	(0.05 ÷ 0.75) step 0.01 s
	→	t2xI	2	s	(0.02 ÷ 100) step 0.01 s

17.8.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
tBI	:	Blocking input reset time
Off	=	Permanent block
2tBO	=	Set 2xtBO.
2xI	:	Automatic doubling of trip level on inrush
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.
t2xI	:	Maximum time of automatic threshold doubling on inrush

17.9 - Function: **3I**> (Third Overcurrent Element F50/51)

Status	→	Enab.	Yes		[No / Yes]
Options	→	tBI	Off		[Off / 2tBO]
	→	2xI	Disable		[Disable / Enable]
Oper. Levels	→	Is	1	In	(0.1÷40) step 0.01 In
Timers	→	ts	5	s	(0.02÷100) step 0.01 s
	→	tBO	0.75	s	(0.05÷0.75) step 0.01 s
	→	t2xI	2	s	(0.02÷100) step 0.01 s

17.9.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
tBI	:	Blocking input reset time
Off	=	Permanent block
2tBO	=	Set 2xtBO.
2xI	:	Automatic doubling of trip level on inrush
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.
t2xI	:	Maximum time of automatic threshold doubling on inrush

17.10 - Function: **1Io**> (First Earth Fault Element 50N/51N)

Status	→	Enab.	Yes		[No / Yes]
Options	→	f(t)	Type - D		[D / A / B / C / I / VI / EI / MI / SI]
	→	tBI	Off		[Off / 2tBO]
Oper.Levels	→	Is	0.01	On	(0.01 ÷ 4) step 0.01 On
Timers	→	ts	100	s	(0.02 ÷ 100) step 0.01 s
	→	tBO	0.75	s	(0.05 ÷ 0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

17.10.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
f(t)	:	Operation characteristic (Time/Current curve):
	(D)	= Independent definite time
	(A)	= IEC Inverse Curve type A
	(B)	= IEC Very Inverse Curve type B
	(C)	= IEC Extremely Inverse Curve type C
	(I)	= IEEE Inverse Curve
	(VI)	= IEEE Very Inverse Curve
	(EI)	= IEEE Extremely Inverse Curve
	(MI)	= IEEE Moderate Inverse Curve
	(SI)	= IEEE Short Inverse Curve
tBI	:	Blocking Input reset time
	Off	= Permanent block
	2tBO	= Set 2xtBO.
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

17.11 - Function: **2Io**> (Second Earth Fault Element 50N/51N)

Status	→	Enab.	Yes		[No / Yes]
Options	→	tBI	Off		[Off / 2tBO]
Oper.Levels	→	Is	0.01	On	(0.01 ÷ 9.99) step 0.01 On
Timers	→	ts	100	s	(0.02 ÷ 100) step 0.01 s
	→	tBO	0.75	s	(0.05 ÷ 0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

17.11.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
tBI	:	Blocking Input reset time
	Off	= Permanent block
	2tBO	= Set 2xtBO.
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

17.12 - Funzioni: **3Io**> (Terzo elemento di guasto a terra 50N/51N)

Status	→	Abil.	No	[No / Si]				
Options	→	tBI	Off	[Off / 2tBO]				
Oper.Levels	→	Is	0.01	On	(0.01÷9.99)	step	0.01	On
Timers	→	ts	100	s	(0.02÷100)	step	0.01	s
	→	tBO	0.75	s	(0.05÷0.75)	step	0.01	s

On = Rated primary current of CTs or of the current Tore CT.

17.12.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
tBI	:	Blocking Input reset time
		Off = Permanent block
		2tBO = Set 2xtBO.
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

17.13 - Function: **1Is**> (First Negative Sequence Element F46)

Status	→	Enab.	Yes		[No / Yes]
Options	→	t(t)	Type-D		[D / A / B / C / I / VI / EI / MI / SI]
	→	tBI	Off		[Off / 2tBO]
Oper. Levels	→	Is	4	In	(0.1 ÷ 4) step 0.01 In
Timers	→	ts	100	s	(0.02 ÷ 100) step 0.01 s
	→	tBO	0.75	s	(0.05 ÷ 0.75) step 0.01 s

17.13.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
f(t)	:	Operation characteristic (Time/Current curve):
	(D)	= Independent definite time
	(A)	= IEC Inverse Curve type A
	(B)	= IEC Very Inverse Curve type B
	(C)	= IEC Extremely Inverse Curve type C
	(I)	= IEEE Inverse Curve
	(VI)	= IEEE Very Inverse Curve
	(EI)	= IEEE Extremely Inverse Curve
	(MI)	= IEEE Moderate Inverse Curve
	(SI)	= IEEE Short Inverse Curve
tBI	:	Blocking Input reset time
	Off	= Permanent block
	2tBO	= Set 2xtBO.
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

17.13.2 - Time/Current operation of the first Current Unbalance element "f(t)"

The relay measures the Negative Sequence component "I₂" of the input current.
The Time/Current curves can be selected by programming the variable "f(t)":

f(t) = D	Independent definite time operation.
f(t) = I, VI, EI, MI, SI, A, B, C	Dependent Inverse time operation

17.14 - Function: **2Is**> (Second Negative Sequence Element F46)

Status	→	Enab.	Yes		[No / Yes]
Options	→	tBI	Off		[Off / 2tBO]
Oper. Levels	→	Is	4	In	(0.1 ÷ 4) step 0.01 In
Timers	→	ts	100	s	(0.02 ÷ 100) step 0.01 s
	→	tBO	0.75	s	(0.05 ÷ 0.75) step 0.01 s

17.14.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
tBI	:	Blocking Input reset time
	Off	= Permanent block
	2tBO	= Set 2xtBO.
Is	:	Minimum operation level
ts	:	Trip time delay
tBO	:	Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

17.15 - Function: **1U>** (Overvoltage Element)

Status	→	Enab.	No	[No / Yes]				
Oper.Levels	→	Us	90	%Un	(10 ÷ 190)	step	1	%Un
Timers	→	ts	100	s	(0.02 ÷ 100)	step	0.01	s

17.15.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
Us	:	Minimum operation level
ts	:	Trip time delay

17.16 - Function: **1U<** (Undervoltage Element)

Status	→	Enab.	No	[No / Yes]				
Oper.Levels	→	Us	90	%Un	(10 ÷ 190)	step	1	%Un
Timers	→	ts	100	s	(0.02 ÷ 100)	step	0.01	s

17.16.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
Us	:	Minimum operation level
ts	:	Trip time delay

17.17 - Function: **1f>** (Overfrequency Element)

Status	→	Enab.	No	[No / Yes]				
Oper.Levels	→	Fs	52	Hz	(40 ÷ 70)	step	0.01	Hz
Timers	→	ts	100	s	(0.02 ÷ 100)	step	0.01	s

17.17.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
Fs	:	Minimum operation level
ts	:	Trip time delay

17.18 - Function: **1f<** (Underfrequency Element)

Status	→	Enab.	No	[No / Yes]				
Oper.Levels	→	Fs	48	Hz	(40 ÷ 70)	step	0.01	Hz
Timers	→	ts	100	s	(0.02 ÷ 100)	step	0.01	s

17.18.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
Fs	:	Minimum operation level
ts	:	Trip time delay

17.19 - Function: **1PF<** (Low Power Factor Element)

Status	→	Enab.	No	[No / Yes]				
Oper.Levels	→	PFs	0.5	Hz	(0.5 ÷ 0.9)	step	0.01	
Timers	→	ts	1	s	(1 ÷ 999)	step	1	s

17.19.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
PFs	:	Minimum operation level
ts	:	Trip time delay

17.20 - Function: **MotSt** (Motor Start)

Oper.Levels	→ Im	0.1	In	(0.05 ÷ 1)	step	0.01	In
Timers	→ tfst	0.1	s	(0.02 ÷ 1)	step	0.01	s
	→ tst	120	s	(10 ÷ 120)	step	0.01	s

17.20.1 - Description of variables

Im	:	Minimum operation level
tfst	:	Motor start filter time
tst	:	Motor starting time; 2xtst Inhibition time of the locked rotor function

17.21 - Function: **LR** (Locked Rotor – Rotor jam)

Status	→ Enab.	Yes	[No / Yes]
Oper.Levels	→ ILR	1	In (1 ÷ 5) step 0.01 In
Timers	→ tLR	120	s (1 ÷ 120) step 0.01 s

17.21.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
ILR	:	Minimum operation level
tLR	:	Trip time delay

17.22 - Function: **StNo** (Limitation Start Number)

Status	→ Enab.	Yes	[No / Yes]
Oper.Levels	→ StNo	10	In (1 ÷ 60) step 1
Timers	→ tstNo	600	s (60 ÷ 3600) step 60 s
	→ tBst	600	s (60 ÷ 3600) step 60 s

17.22.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
StNo	:	Maximum number of starting allowed within te time tStNo
tstNo	:	Time in to which the StNo is counted
tBst	:	Restart inhibition time after tripping StNo

17.23 - Function: **StSeq** (starting Sequence Control)

Status	→	Enab.	Yes	[No / Yes]				
Oper.Levels	→	I _{Tr}	10	In	(0.1 ÷ 1)	step	0.1	In
Timers	→	t _{Tr}	20	s	(0.5 ÷ 50)	step	0.1	s

17.23.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
I _{Tr}	:	Switch-over current of motor starter
t _{Tr}	:	Trip time delay of LR during run

17.23.2 - Operation

During start-up of the motor, the unit can control an output relay used to operate the switch-over of motor starter (star-delta, resistance or impedance, autotransformer, etc...) thus allowing to automatically manage the starting transition by controlling the parameters "I_{Tr}", "t_{Tr}".

At motor start counting of "t_{Tr}" begins. If during "t_{Tr}" the motor current drops below "I_{Tr}", switching-over is operated; if motor current stays above "I_{Tr}" longer than "t_{Tr}", the Locked Rotor element is activated.

17.24 - Function: **I<** (No load running)

Status	→	Enab.	No	[No / Yes]				
Oper.Levels	→	I<	0.5	In	(0.15 ÷ 1)	step	0.01	In
Timers	→	tI<	30	s	(0.1 ÷ 90)	step	0.01	s

17.24.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
I<	:	Operation level
tI<	:	Trip time delay

17.24.2 - Operation

This function performs the protection against no-load running: it is activated by motor under current.

17.25 - Function: **TCS** (Trip Circuit Supervision)

Status	→ Enab.	No	[No / Yes]
Timers	→ ts	0.1	s (0.1 ÷ 100) step 0.01 s

17.25.1 - Description of variables

Enab.	: Function enabling (No = Disable / Yes = Enable)
ts	: Trip time delay

17.25.2 - Operation

The relay includes a complete Circuit Breaker Trip Circuit Supervision unit that is associated to the Contact "9-10" of the "R1" Output Relay.

The contact of "R1" is used to trip the C/B as reported in the drawing here below.

The supervision works when the C/B is closed and recognizes the Trip Circuit as sound as far as the current flowing exceeds "1mA".


In case of Trip Circuit Fault detection, the diagnostic relay is operated and the Led starts flashing (see § Signalization).

To have Supervision also with the C/B open one N/C contact (52b) from the C/B and an external resistor "R" are needed.

$$R[k\Omega] \leq \frac{V}{1mA} - R_{52} \quad \text{where } R_{52} = \text{Trip Coil internal resistance [k}\Omega\text{]}$$

V = Trip Circuit Voltage

$$P_R \geq 2 \cdot \frac{V^2}{R} [W] \quad \text{Designed power of external resistance "R"}$$

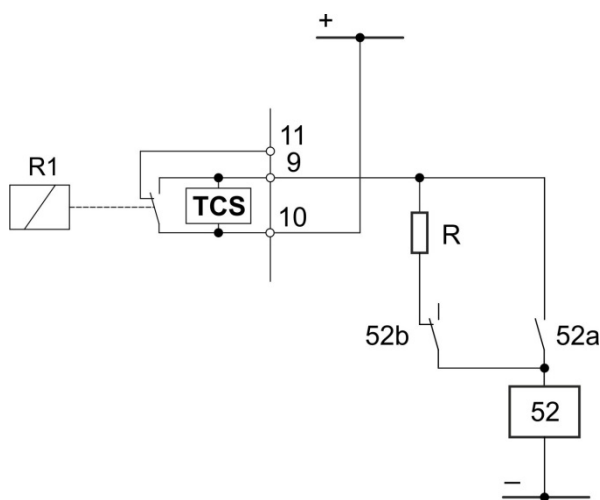

Tripping of the function operates a user programmable output relay.

17.26 - Function: **IRF** (Internal Relay Fault)

In this menu it is possible to configure the operation of the Relay Internal Fault detection element

Status	→	Enab.	No	[No / Yes]
Timers	→	tIRF	5	s (5 ÷ 200) step 0.01 s

17.26.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
tIRF	:	Trip time delay

17.26.2 - Operation

Tripping of the function operates a user programmable output relay.

17.27 - Function: **BrkFail** (Breaker Failure)

Status	→	Enab.	No	[No / Yes]
Timers	→	tBF	0.75	s (0.05 ÷ 0.75) step 0.01 s

17.27.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
tBF	:	Trip time delay

17.27.2 - Operation

The Breaker Failure detection is started by the operation of the output relay "R1", (programmed to be controlled by the Protection Functions that trip the C/B).
If after [tBF] seconds from operation of the relay "R1", any input current flow is still detected (>10% In), the function "BF" trips and operate one user programmable output relay,

17.28 - Function: **Oscillo** (Oscillographic Recording)

Status	→	Enab.	No	[No / Yes]
Options	→	Trig	Trip	[Start / Trip / OnCmd / REUserLg / FEUserLg]
Timers	→	tPre	0.5	s (0.01 ÷ 2) step 0.01 s
	→	tPost	0.5	s (0.01 ÷ 8) step 0.01 s

17.28.1 - Description of variables

Enab.	:	Function enabling (No = Disable / Yes = Enable)
Trig	:	Selection of the Trigger command source (start recording):
Start	=	Trigger on time start of protection functions
Trip	=	Trigger on trip (time delay end) of protection functions
OnCmd	=	On Asynchronous Force trigger command
REUserLg	=	On rising edge of "User Logic" (see § "User Trigger Oscillo")
FEUserLg	=	On falling edge of "User Logic"
tPre	:	Recording time before Trigger
tPost	:	Recording time after Trigger

17.28.2 - Operation

In the options: "Trig = Start" and "Trig = Trip", the oscillographic recording starts respectively when any protection function starts operating or trip.

The "Oscillo" Function includes the oscillographic recorder of input quantities able to store up to 10 seconds for each record.

The number of events recorded depends on the duration of each individual recording (tPre + tPost).

In any case the number of event stored can not exceed 40 (40 x 1 sec).

Any new event exciting the memory capability, cancels and overwrites the former records (FIFO Memory).

Example:

tPre	=	0.5s	=	1s	→	40	Oscillographic recording
tPost	=	0.5s					
tPre	=	2s	=	10s	→	4	Oscillographic recording
tPost	=	8s					



17.28.3 – Available on software

Internal Disk	DskClean DskFull DskWR DskFRMT DskCHK		Disk near Full clean operation is required Disk Full Write should be lock Disk write in progress Disk Format in progress Check disk in progress	
Removable Disk	rDskAttach rDskDetach rDskDtchable rDskClean rDskFull rDskWR rDskFRMT rDskCHK	Not Used	Removable disk usb attach Removable disk usb detach Removable disk usb now detachable Removable disk usb near to full clean operation is required Removable disk usb full, write locked Removable disk usb write in progress Removable disk usb format in progress Removable disk usb check in progress	
T>	Tal T>	Alarm Trip	Thermal Image T>	
1I>	1I> t1I>	Start Trip	First overcurrent element F50-51	
2I>	2I> t2I>	Start Trip	Second overcurrent element F50-51	
3I>	3I> t3I>	Start Trip	Third overcurrent element F50-51	
1Io>	1Io> t1Io>	Start Trip	First earth fault element F50N-51N	
2Io>	2Io> t2Io>	Start Trip	Second earth fault element F50N-51N	
3Io>	3Io> t3Io>	Start Trip	Third earth fault element F50N-51N	
1Is>	1Is> t1Is>	Start Trip	First negative sequence current element F46	
2Is>	2Is> t2Is>	Start Trip	Second negative sequence current element F46	
1U>	1U> t1U>	Start Trip	Overvoltage element	
1U<	1U< t1U<	Start Trip	Undervoltage element	
1f>	1f> t1f>	Start Trip	Overfrequency element	
1f<	1f< t1f<	Start Trip	Underfrequency element	
1PF<	1PF< t1PF<	Start Trip	Low Power Factor	
LR	ILR tILR	Start Trip	Start Locked rotor Trip Locked rotor	
	Mot On		Motor Start	
	LimStNum	Trip	Limitation of start number	
	StSeqSucc	Start	Start sequence successful	
Itr	Itr	Trip	Switch-over current	
I<	I< tI<	Trip Start	No Load Running protection	
BF	BF	Trip	Breaker Failure	
TCS	TCS tTCS	Start Trip	trip coil supervision	
IRF	IRF tIRF	Start Trip	Internal Relay Failure	
C/B	manOpCmd CL-Cmd C/Bfail L/Rdisc Gen.Start Gen.Trip OscilloTriggerLogic UserVar<0> to UserVar<24> Vcc Gnd ResLog P1 to P6		Manual Open Command Close Command Circuit Breaker failure Local/Remote signal Discrepancy Start Generic Trip Generic User Variable for Oscillographic Recording User Variable Reserved Reserved Reset signal logic Push-button	
	0.D1 0.D1Not to 0.D8 0.D8Not		Digital Input "0.D1" Digital Input "0.D1" Digital Input "0.D8" Digital Input "0.D8"	activated deactivated activated deactivated
				Digital Inputs

17.28.4 – Setting "User Trigger Oscillo"

The "User trigger Oscillo" is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via software.

Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Extra	Logical status
------	-------------	------------------	---------	-------	------------	-------	----------------

17.28.4.1 - Name

Internal name

17.28.4.2 - User descr.

Fixed

17.28.4.3 - Linked functions

Selection functions

17.28.4.4 - OpLogic

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR, Counter, Rise-UP, Fall-Down]

17.28.4.5 - Timer

Time delay (0 ÷ 600)s, step 0.01s

17.28.4.6 - Timer type

<i>Delay</i>	= Add a delay on output activation. The "Timer" is edge triggered on rise edge.
<i>Monostable P</i>	= Activated the output for the time "Timer"
<i>Monostable N</i>	= Disactivated the output for the time "Timer".
<i>Blinking</i>	= The output switches periodically at the frequency defined by "Timer".
<i>Delay-Fall-Down</i>	= <i>Delay-Fall-Down</i>

17.28.4.7 - Extra

Extra Time (0 ÷ 65000)s, step 1s


17.28.4.8 - Logical status

"User Trigger Oscillo" Logical status


17.28.5 – Example: Setting "Oscillo Trigger Logic"

Open software program and connect to the relay.

Select "Change Windows" from "Menu" button

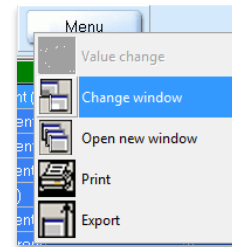

Select "User Variable"




Setting for "User Trigger Oscillo" : "1I>/2I>/3I>", "AND", "1", "Monostable", "10".


Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Extra	Logical status
UserTrigger Oscillo	UserTrigger Oscillo	1I>2I>3I>	AND	1	Monostable P	10	0

17.28.5.1 – "Linked Functions"

Select "**Linked Functions**" related to "User Trigger Oscillo" and press right button on mouse, select "Value change":

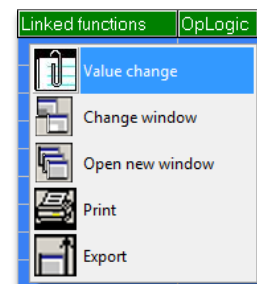


Select "1I>, 2I>, 3I>" from "Available" box via push-button "<Add", and press "OK".
For remove functions, use push-button ">Remove".

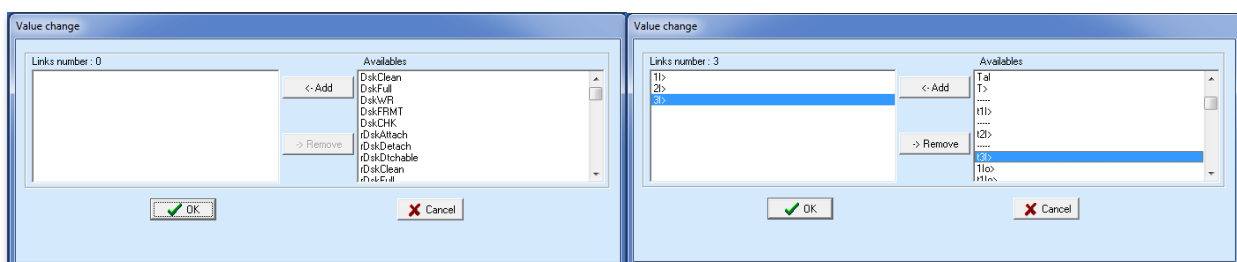


17.28.5.2 – "Operation Logic" (Oplogic)

Select "**Oper Logic**" related to "User Trigger Oscillo" and press right button on mouse, select "Value change":

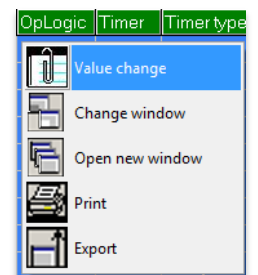


Insert "**AND**" into box and press "OK":

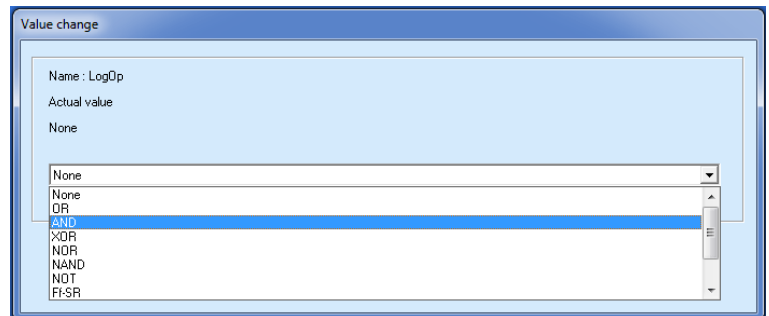


17.28.5.3 – "Timer"

Select "**Timer**" related to "User Trigger Oscillo" and press right button on mouse, select "Value change":

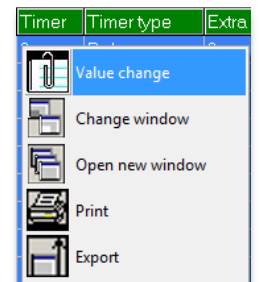


Select "**1**" into box and press "OK":

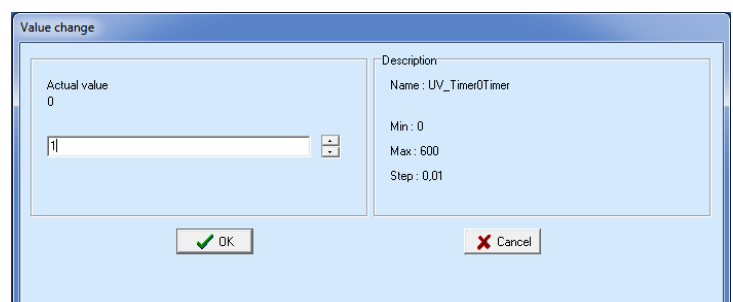


17.28.5.4 – "Timer type"

Select "**Timer**" related to "User Trigger Oscillo" and press right button on mouse, select "Value change":

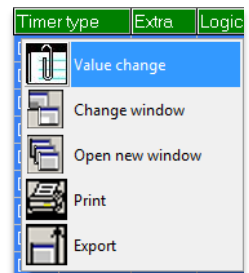


Select "**Monostable P**" into box and press "OK":

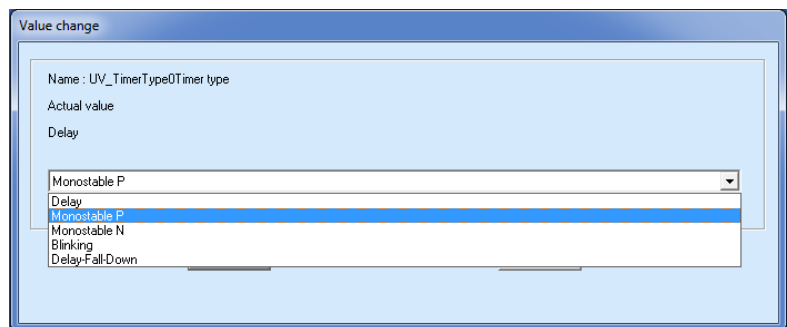


17.28.5.5 – "Extra"

Select "**Extra**" related to "User Trigger Oscillo" and press right button on mouse,

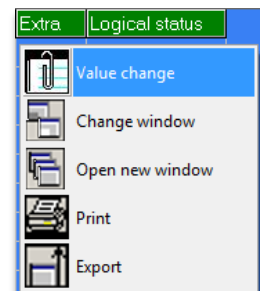

Select "**10**" into box and press "OK":

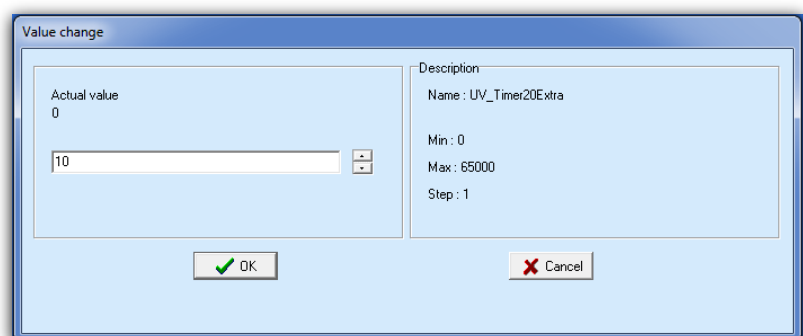

17.29 - Function: **CB Mngrn** (Control C/B)

This menu allows to configure the command for C/B operation.

Options	→ L/R	Ignored	[Ignored / Active]			
	→ Key	Enable	[Disable / Enable]			
	→ Key0	None	[None / P1 / P2 / P3 / P4 / P5 / P6]			
	→ KeyC	None	[None / P1 / P2 / P3 / P4 / P5 / P6]			
Timers	→ tL/R	0.05	s	(0.05 ÷ 1)	step	0.05 s
	→ tC/Bs	0.5	s	(0.05 ÷ 1)	step	0.05 s

17.29.1 - Description of variables

L/R	: Selection of Local/Remote C/B operation mode Ignored or Active
Key	: Disable = The pushbuttons on Front Panel are disabled; Enable = The pushbuttons on Front Panel are Enable
Key0	: Configure a Key as C/B Open
KeyC	: Configure a Key as C/B Close
tL/R	: Admissible time before detection of the Local/Remote discrepancy alarm.
tC/Bs	: Maximum admissible delay for detection of status signal after C/B operation.


17.29.2 - Push-Buttons (Programmable only via software)

It is possible to program up to six buttons on front of the relay, assigning any action / function.

Example: "**OPEN C/B**" to "**P1**" and "**CLOSE C/B**" to "**P2**".

17.29.2.1 - "DI Configurations" (Digital Inputs)

Select "**DI configuration**":




Assign to:

Type	Functions
Main C/B CloseSts	0.D1 digital input
Local State	0.D3 digital input
Remote State	0.D4 digital input

ID	Name	Status	Functions
1	Group 1-2	Group-1	
2	ExtR (external reset input)	Not active	
3	Local State	Not active	0.D3.
4	Remote State	Not active	0.D4.
5	C/B Open command	Not active	
6	C/B Close command	Not active	
7	Main C/B CloseSts (Main Circuit Breaker CLOSE position status)	Not active	0.D1.

17.29.2.2 – "User Variables"

Select **"User Variable"**:




Assign to:

Type	User descr.	Linked Functions
UserVar<0>	UserVar<0>	manOpCmd,Gen.Trip <i>Manual Open Command, Generic Trip</i>
UserVar<1>	UserVar<1>	CL-Cmd <i>Close Command</i>

ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Extra	Logical status
1	UserTrigger Oscillo	UserTrigger Oscillo		None	0	Delay	0	0
2	UserVar <0>	UserVar <0>	manOpCmd,Gen.Trip.	OR	0	Delay	0	0
3	UserVar <1>	UserVar <1>	CL-Cmd.	None	0	Delay	0	0

17.29.2.3 – "DO Configuration"

Select **"DO Configuration"**:




Assign to:

Type	Linked Functions
0.R1	UserVar<0>
0.R2	UserVar<1>

ID	Relay	Linked functions	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]	UserVar <0>.	Off	Normally Denergized	Pulse	0.01	Off
2	0.R2 [Master board, R:2]	UserVar <1>.	Off	Normally Denergized	Pulse	0.01	Off

17.29.2.4 – "Function Setting"

Select **"Function Setting"**:



Assign to "CB Manage":

Type	Settings
Enable Local/remote	Active
Enable Local Keys	Enable
KeyO	P1
KeyC	P2

CB Manage (Local/Remote C/B management and missed operation diagnostic) ()								
Enable Local/Remote Handler	—	Active	—					
Enable Local Keys	—	Enable	—					
KeyO (Configure a key as C/B open)	—	P1	—					
KeyC (Configure a key as C/B close)	—	P2	—					
Local/Remote inconsistent filter Time	—	0,05	—	sec				
Time check circuit breaker	—	0,5	—	sec				

17.30 - Function: **ExtResCfg** (External Reset Configuration)

This menu allows to select the edge polarity of the signal on the digital input configured to reset the relay after a trip (see 17.2 input ExtReset).

The reset input will reset all the output relays configured as manual reset (latched), the signalisation of the trip on the display and the indication of the LED are cleared also.

Options	→ ActOn	RiseEdge	[RiseEdge / FallEdge]
---------	----------------	----------	-----------------------

17.30.1 - Description of variables

ActOn	:	RiseEdge	Active on Rise Edge (Digital Input close).
		FallEdge	Active on Fall Edge (Digital Input open).

18. Input – Output (via software)

The firmware can manage up to 8 digital inputs and 8 output relays.

The interfacing software also allows to program the operation of the output relays (Physical Output), and Digital Inputs.

18.1 – Digital Input

0.D1	Programmable (D1)
0.D2	Programmable (D2)
0.D3	Programmable (D3)
0.D4	Programmable (D4)
0.D5	Programmable (D5)
0.D6	Programmable (D6)
0.D7	Programmable (D7)
0.D8	Programmable (D8)

Any digital input is active when the relevant terminals (see wiring diagram) are shorted.

18.2 – "DI" Configuration (via software)

Any of the Digital Inputs can be programmed to control one or more of the following functions.

Bi1I>	Blocking input	First overcurrent element
Bi2I>	Blocking input	Second overcurrent element
Bi3I>	Blocking input	Third overcurrent element
Bi1Io>	Blocking input	First earth fault element
Bi2Io>	Blocking input	Second earth fault element
Bi3Io>	Blocking input	Third earth fault element
Bi1Is>	Blocking input	First negative sequence current element
Bi2Is>	Blocking input	Second negative sequence current element
Bi1PF<	Blocking input	Low power factor element
Bi1U>	Blocking input	Overvoltage element
Bi1U<	Blocking input	Undervoltage element
Group 1-2	Selection of the setting Group 1 or 2.	
Main C/B CloseSts	Main Circuit Breaker CLOSE position status	
ExtR	External Reset input	
Local state	Locate state	
Remote state	Remote state	
C/B open command	Open C/B Command	
C/B close command	Close C/B Command	

18.2.1 – Example

ID	Name	Status	Functions
----	------	--------	-----------

18.2.1.1 – Name

Logical Input name

18.2.1.2 – Status

Logical Input status


18.2.1.3 – Functions

Selection function


18.2.1.4 – Example: Setting "Digital Input"

Open software program and connect to the relay.

Select "Change Windows" from "Menu"

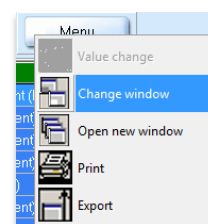

Select "DI configuration"




Setting for "**Bi1I>**" : "**1I>**".


ID	Name	Status	Functions
1	Bi1I>	Not active	1I>

18.2.1.5 – "Functions"

Select "**Functions**" related to "**Bi1I>**" and press right button on mouse, select "Value change":

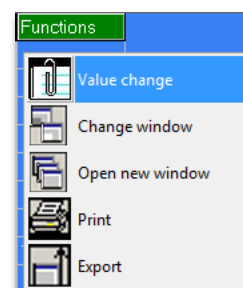

From box "Available", select "**1I>**" and press "Add". Press "OK" for confirmation. (if Password is request, see § Password)

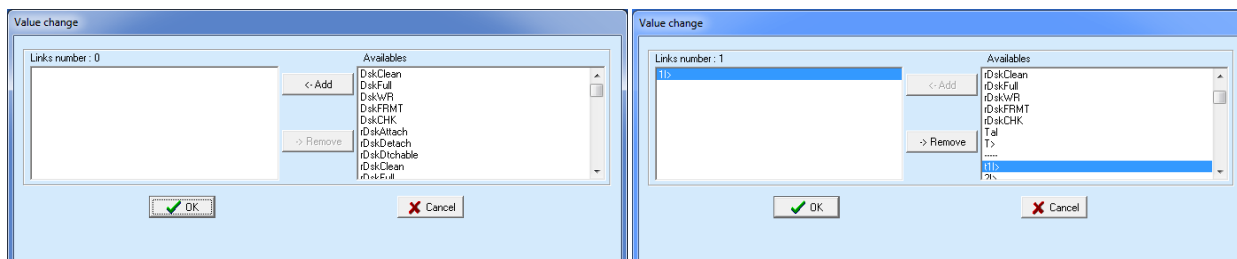

18.3 – Physical Outputs

The output relay are fully user programmable and controlled by any protection functions and by any digital inputs.

0.R1	Programmable (R1)
0.R2	Programmable (R2)
0.R3	Programmable (R3)
0.R4	Programmable (R4)
0.R5	Programmable (R5)
0.R6	Programmable (R6)
0.R7	Programmable (R7)
0.R8	Programmable (R8)

Available in the relay

18.4 - "DO" Configuration

Any Output Relay can be programmed to be controlled (energized) by one or more of the following functions or Digital Inputs:

18.4.1 - Example configuration

ID	Relay	Linked functions	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]	UserVar <1>	Off	Normally Denergized	Pulse	0,01	Off
2	0.R2 [Master board, R:2]	User Var <2>	Off	Normally Denergized	Pulse	0,01	Off

18.4.1.1 - Relay

Relay internal name

18.4.1.2 - Linked function

It's available only 1 link, select the function for tripping the output relay (for multiple association use "User Variable")

18.4.1.3 - Operation Logic

Not Used

18.4.1.4 - Logical Status

Relay Logical status

18.4.1.5 - Output Configuration

<i>Normally Denergized</i>	The output relay is denergized in normal conditions and gets energized on activation of the controlling Functional Output; reset means denergizing.
<i>Normally Energized</i>	The output relay is energized in normal conditions and gets denergized on activation of the controlling Functional Output; reset means energizing.

18.4.1.6 - tON (Operation Time)

This timer controls the duration of the activation of the output relay.


tON : 0 (0.01-10)s, step 0.01s

18.4.1.7 - Relay Status


Relay – Physical status

18.4.2 - Functions - Operation Mode


- Automatic** : In this mode the output relay is "operated" (energized if "N.D.", dennergized if "N.E.") when the controlling Functional Output is activated and it is reset to the "non operated" condition when the Functional Output gets disactivated but, anyhow, not before the time "tON" has elapsed (minimum duration of the operation time)
- Manual** : In this mode the output relay is "operated" when the controlling Functional Output is activated and remains in the operated condition until a manual reset command is issued by the relay keyboard (local commands menu) or via the serial communication. In this mode the timer "tON" has no effect.
- Impulsive** : In this mode the output relay is "operated" when the controlling Functional Output is activated and it remains in the "operated" condition (energized if "N.D.", dennergized if "N.E.") for the set time "tON" independently from the status of the controlling Functional Output.

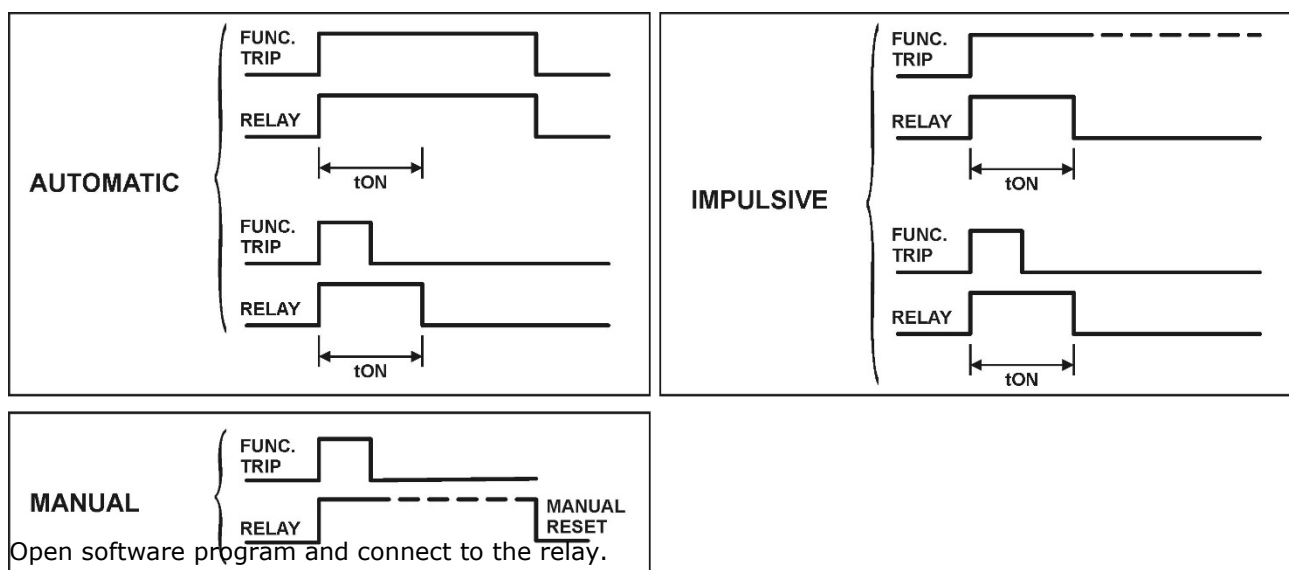

Select "Change Windows" from "Menu"

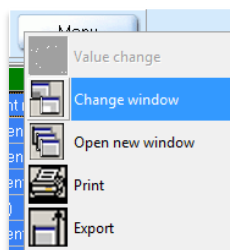

Select "DO Configuration"




18.4.2.1 - Example: Change settings for "0.R1"

Change settings for "0.R1" : "1I>", "Normally Deenergized", "Automatic reset", "0.5".

ID	Relay	Linked functions	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]	1I>	Off	Normally Deenergized	Pulse	0.5	Off
2	0.R2 [Master board, R:2]		Off	Normally Deenergized	Pulse	0.01	Off


18.4.2.2 - "Linked Functions"

Select "**Linked Functions**" related to 0.R1 and press right button on mouse, select "Value change":

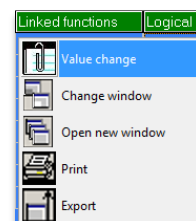


From box "Available", select "1I>" and press "Add".

Press "OK" for confirmation. (if Password is request, see § Password)

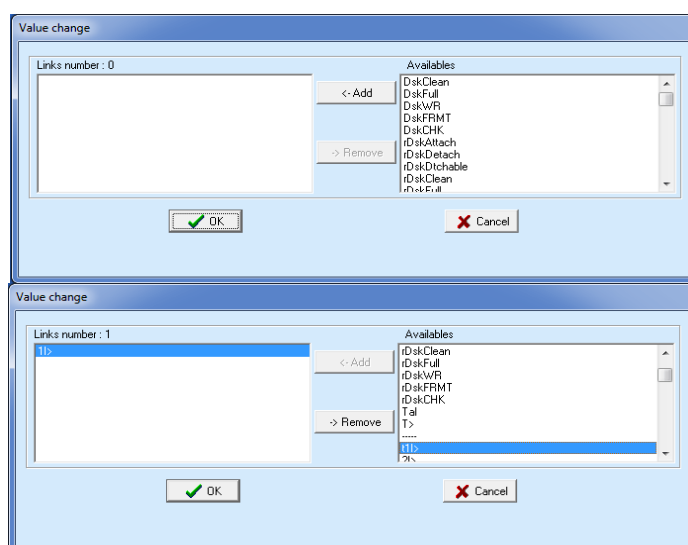


18.4.2.3 - "Output Config"

Select "**Output Config**" related to "0.R1" and press right button on mouse, select "Value change":

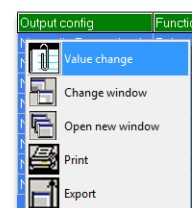


Select "**Normally Deenergized**" from combo box and press "OK" (if Password is request, see § Password)

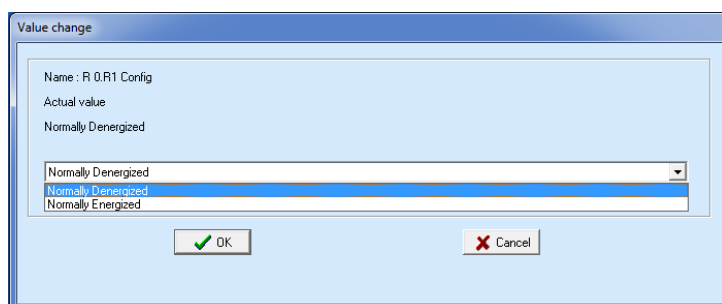


18.4.2.4 - "Function"

Select "**Function**" related to "0.R1" and press right button on mouse, select "Value change":

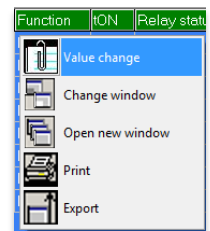


Select "**Manual reset**" from combo box and press "OK"
(if Password is request, see § Password)

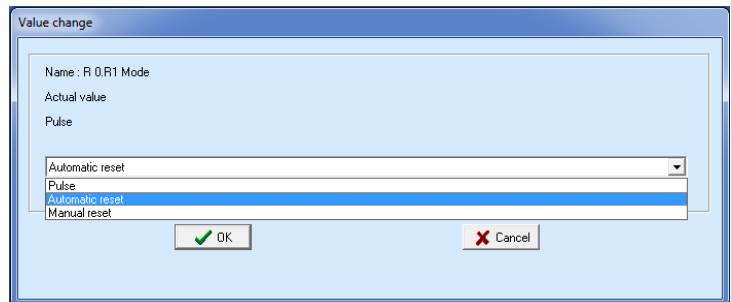


18.4.2.5 - "tON"

Select "**tON**" related to "0.R1" and press right button on mouse, select "Value change":

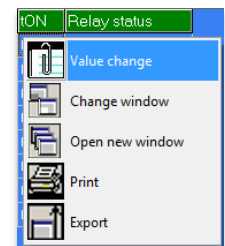

Set "**0.5**" and press "OK"
(if Password is request, see § Password)

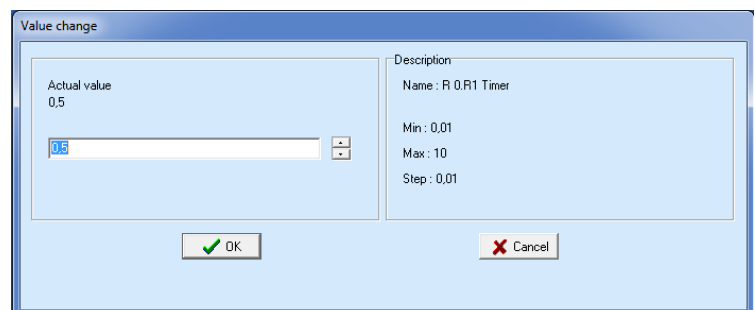

19. InfoStatus

In this menu is showed the status of relay









LocR : Local and Remote Status







Disable
Local
Remote
Discrepancy Status

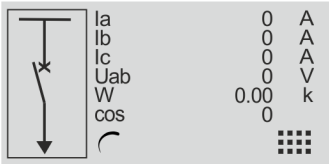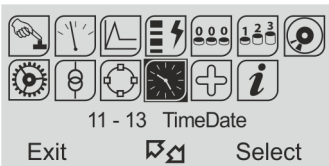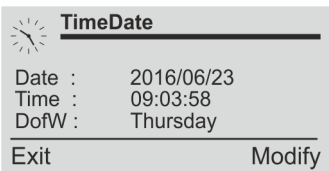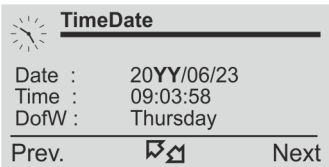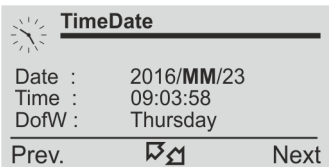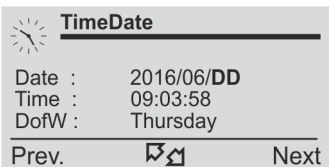20. Date and Time

In this menu it is possible to configure the Date and Time

Date:	20YY / MM / DD	(2000/01/01 ÷ 2099/12/31) YY = Year / MM = Month / DD = Day
Time:	HH : MM : 00	HH = hour / MM = Minutes / 00
DofW:	Day	Es: Wednesday

- 1 
 - Press "**Menu**" for access to the main menu with icons.
- 2 
 - Select icon "**TimeDate**" by pushbuttons "**Increase**" or "**Decrease**".
 - Press "**Select**".
- 3 
 - Press "**Modify**".
- 4 
 - The last two figures of the Year will appear in bold character; by pushbuttons "**Increase**" or "**Decrease**" set the new figures.
 - Press "**Next**" to go to the next setting.
- 5 
 - As above for changing the "Month"
 - Press "**Next**" to go to the next setting.
- 6 
 - As above for changing the "Day"
 - Press "**Next**" to go to the next setting.

- 7
- **TimeDate**
Date : 2016/06/23
Time : HH:03:58
DofW : Thursday
Prev.  Next
- As above for changing the "Hours"
 - Press "**Next**" to go to the next setting.
- 8
- **TimeDate**
Date : 2016/06/23
Time : 09:MM:58
DofW : Thursday
Prev.  Next
- As above for changing the "Minutes"
 - Press "**Next**" to go to the next setting.
- 9
- **TimeDate**
Date : 2016/06/23
Time : 09:04:00
DofW : Thursday
Prev.  Next
- The **Day of the Week** is calculated and displayed automatically.
 - Press "**Exit**" to go back to the main menu.
 - Press "**Modify**" to go back to the step "3"



Press the button "**Next**" to go back to the previous display.

20.1- Clock synchronization

The internal clock has 1ms resolution and a stability of $\pm 35\text{ppm}$ in the operational temperature range.

It can be synchronized with an external time reference in the following ways:

Using the standard "Time Synchronization" procedure of the "IEC870-5-103" protocol.

Using the software or from the DCS with the Modbus RTU protocol.

21. Healthy (Diagnostic Information)

The relay operates a continuous checking of the vital functionalities and in case an internal failure is detected, the I.R.F. function (see § I.R.F.) is activated and the Power/IRF led is set to flashing.

Device	→	<i>No Fail</i>	→	No Fail
		<i>Fail</i>	→	Fail present
		<i>MinorFail</i>	→	Minor Fail
		<i>HistoricalFail</i>	→	Cleared Fail
		<i>IAU FW notC</i>	→	Firmware MPUs not compatible

Boards	→	<i>Int.Ram</i>	→	Internal RAM fault
		<i>SCI 1</i>	→	Serial comm. Controller 1
		<i>SCI 2</i>	→	Serial comm. Controller 2
		<i>SDRAM</i>	→	SDRAM fault
		<i>Keys</i>	→	Keyboard failure
		<i>TK stop/fail</i>	→	Time Keeper to sync or stopped/failure
		<i>E2pCorrupt</i>	→	E2P Corrupt
		<i>SRAM</i>	→	SRAM Corrupt
		<i>Code Corrupt</i>	→	Code Corrupt
		<i>Data Corrupt</i>	→	Data Corrupt
		<i>SPI</i>	→	Serial peripheral interface
		<i>IIC</i>	→	I2C bus failure

If an internal self-clearing (transient) fault is detected, it is recorded into an historical file without any other action.

22. Dev.Info (Relay Version)


In this menu it is possible to read the information relevant to relay unit.

<i>SW Version</i>	<i>IPU-R</i>	→	####.##.##.##	Firmware version
<i>Protect.Model</i>		→	xxxxxx	Protection Type
<i>Serial Number</i>		→	###/##/##/####	Relay Serial Number
<i>User Tag</i>		→	xxxxxxx	Relay identification label. This information can only be modified by the interface program software and allows the user to give to the relay any suitable denomination.
<i>Build</i>		→	#####	Build identification label.
<i>Line</i>		→	#####	Line identification label.


23. Maintenance

No maintenance is required. In case of malfunctioning please contact Service or the local Authorized Dealer mentioning the relay's Serial No reported in the label on relays enclosure.

24. Wiring Diagram

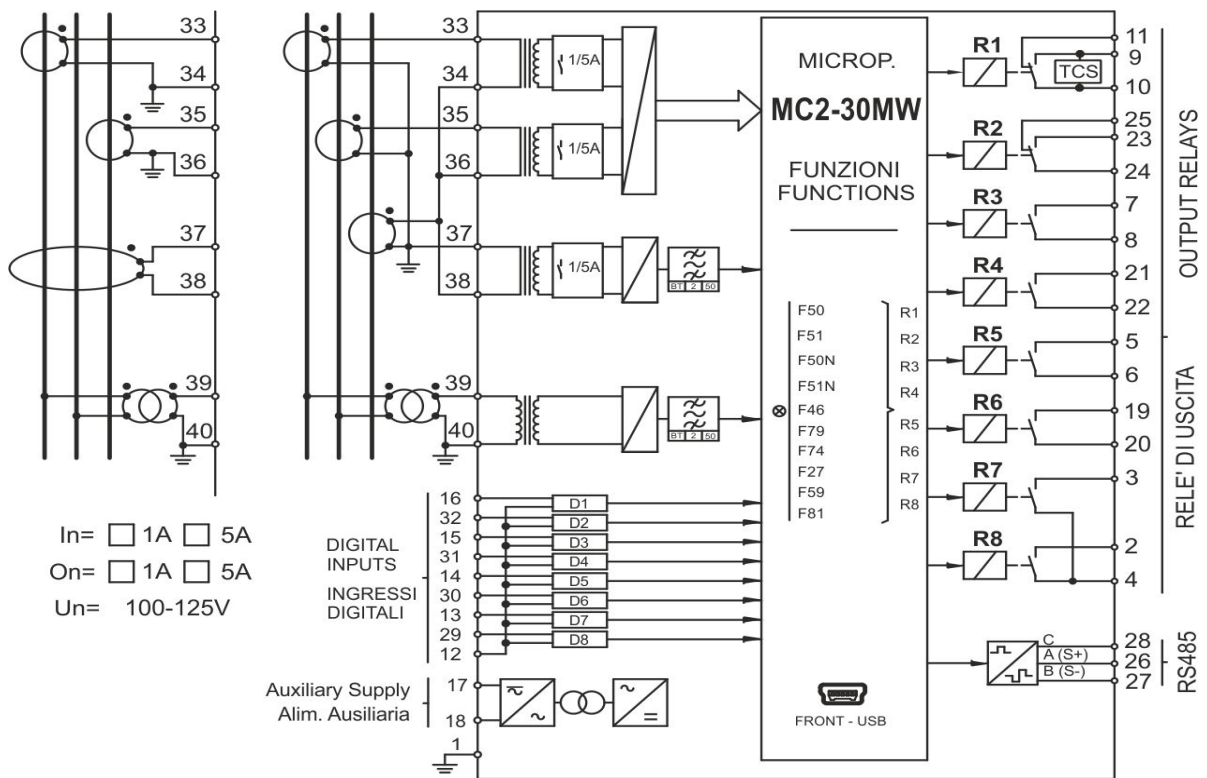

25. Overall Dimensions

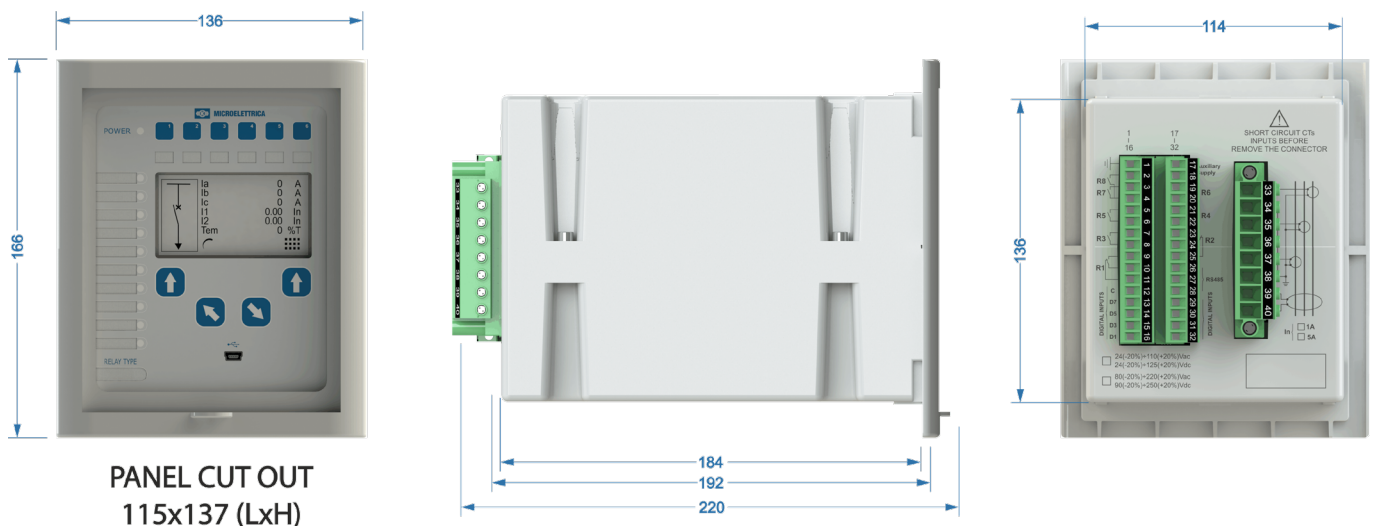

26. Electrical Characteristics

Approval: CE

Reference Standards IEC 60255 - CE Directive - EN/IEC61000 - IEEE C37

Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) – 1,2/50µs
Insulation resistance	> 100MΩ	

Environmental Std. Ref. (IEC 60068)

Operation ambient temperature	-10°C / +55°C		
Storage temperature	-25°C / +70°C		
Environmental testing	(Cold)	IEC60068-2-1	
	(Dry heat)	IEC60068-2-2	
	(Change of temperature)	IEC60068-2-14	
	(Damp heat, steady state)	IEC60068-2-78	RH 93% Without Condensing AT 40°C

CE EMC Compatibility (EN61000-6-2 - EN61000-6-4 - EN50263)

Electromagnetic emission	EN55011	industrial environment		
Radiated electromagnetic field immunity test	IEC61000-4-3	level 3	80-2000MHz	10V/m
	ENV50204		900MHz/200Hz	10V/m
Conducted disturbances immunity test	IEC61000-4-6	level 3	0.15-80MHz	10V
Electrostatic discharge test	IEC61000-4-2	level 3	6kV contact / 8kV air	
Power frequency magnetic test	IEC61000-4-8		1000A/m	50/60Hz
Pulse magnetic field	IEC61000-4-9		1000A/m, 8/20µs	
Damped oscillatory magnetic field	IEC61000-4-10		100A/m, 0.1-1MHz	
Immunity to conducted common mode disturbance 0Hz-150KHz	IEC61000-4-16	level 4		
Electrical fast transient/burst	IEC61000-4-4	level 3	2kV, 5kHz	
HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3	400pps, 2,5kV (m.c.), 1kV (d.m.)	
Oscillatory waves (Ring waves)	IEC61000-4-12	level 4	4kV(c.m.), 2kV(d.m.)	
Surge immunity test	IEC61000-4-5	level 4	2kV(c.m.), 1kV(d.m.)	
Voltage interruptions	IEC60255-4-11			
Resistance to vibration and shocks	IEC60255-21-1 - IEC60255-21-2 10-500Hz 1g			

Characteristics

Accuracy at reference value of influencing factors	1% In	for measure
	2% + to (to=20÷30ms @ 2xIs)	for times
Rated Current	In = 1 or 5A - On = 1 or 5A	
Current Overload	100 In for 1 sec; 4 In continuous	
Burden on current inputs	Phase : 0.01VA at In = 1A; 0.2VA at In = 5A	
	Neutral : 0.01VA at In = 1A ; 0.2VA at In = 5A	
Rated Voltage	Un = 100 – 125 Vac	
Voltage Overload	2 Un permanent	
Burden on current inputs	0.1VA at Un	
Average power supply consumption	< 10 VA	
Output relays	rating 5 A; Vn = 380 V	
	A.C. resistive switching = 1100W (380V max)	
	make = 30 A (peak) 0,5 sec.	
	break = 0.3 A, 110 Vcc, L/R = 40 ms (100.000 op.)	

Communication Parameter

Rear serial port (Terminal Blocks)	RS485 – 9600 to 38400 bps – 8,n,1 – Modbus RTU – IEC60870-5-103
Front serial port (USB)	RS232(virtual) – 9600 to 57600 bps – 8,n,1 – Modbus RTU

This publication may be subject to alteration without prior notice. Therefore, a printed copy of this document may not be the latest revision. Please contact your local representative for the latest update. The trademarks MS Microelettrica Scientifica, Knorr and Knorr-Bremse as well as the figurative mark "K" are registered. Copyright © Knorr-Bremse AG and Microelettrica Scientifica SpA - all rights reserved, including industrial property rights application. Knorr-Bremse AG and Microelettrica Scientifica SpA retain any power of disposal, such as for copying and transferring.



Microelettrica Scientifica S.p.A.

20090 Buccinasco (MI) · Via Lucania 2 · Italy · Tel.: +39 02 575731
E-Mail: info@microelettrica.com · www.microelettrica.com