


MICROPROCESSOR OVERCURRENT AND EARTH FAULT PROTECTION RELAY

TYPE IM30-ABC

OPERATION MANUAL

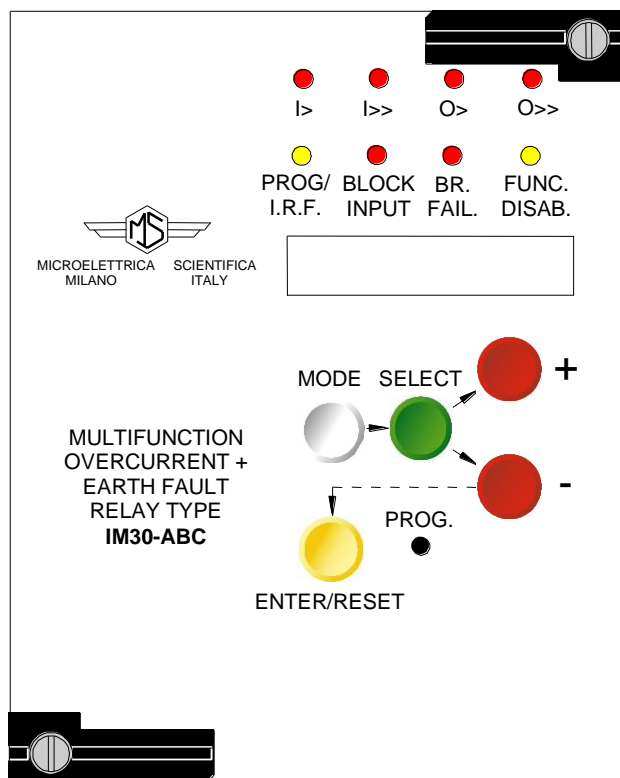

**INDEX**

1 General utilization and commissioning directions	3
1.1 Storage and transportation	3
1.2 Installation	3
1.3 Electrical connection	3
1.4 Measuring inputs and power supply	3
1.5 Outputs loading	3
1.6 Protection earthing	3
1.7 Setting and calibration	3
1.8 Safety protection	3
1.9 Handling	3
1.10 Maintenance	4
1.11 Fault detection and repair	4
2 General characteristics and operation	4
2.1 Power supply	4
2.2 Operation and Algorithms	5
2.2.1 Input Quantities	5
2.2.2 1F50/51 – First Overcurrent element	6
2.2.3 2F50/51 – Second Overcurrent element	7
2.2.4 3F50/51 – Third Overcurrent element	7
2.2.5 1F50N/51N – First Earth Fault element	8
2.2.6 2F50N/51N – Second Earth Fault element	9
2.2.7 3F50N/51N – Third Earth Fault element	9
2.2.8 Breaker Failure	9
2.2.9 Algorithm of the time current curves	10
2.2.10 Special curves (for the low-set overcurrent element)	10
3 Controls and measurements	11
4 Signalization	12
5 Output relays	13
6 Serial communication	13
7 Digital inputs	14
8 Test	14
9 Keyboard and display operation	15
10 Reading of measurements and recorded parameters	16
10.1 ACT. MEAS (Actual measure)	16
10.2 MAX VAL (Max values)	16
10.3 LASTTRIP (Last trip)	17
10.4 TRIP NUM (Trip number)	17
11 Reading of programmed settings and relay's configuration	17
12 Programming	18
12.1 Programming of functions settings	18
12.2 Programming the configuration of output relay	20
13 Manual and automatic test operation	21
13.1 Mode "TESTPROG" subprogram "W/O TRIP"	21
13.2 Mode "TESTPROG" subprogram "With TRIP"	21
14 Maintenance	21
15 Power frequency insulation test	21
16 Electrical characteristics	22
17 Connection diagram (Standard Output)	23
17.1 Connection Diagram (Double Output)	23
18 Wiring the serial communication bus	24
19 Change phase rated input 1A or 5A	24
20 Time current curves IEC	25
21 Time current curves IEEE	26
22 Time current curve C1	27
23 Time current curve P	28
24 Direction for pcb's draw-out and plug-in	29
24.1 Draw-out	29
24.2 Plug-in	29
25 Overall dimensions	30
26 Keyboard operational diagram	31
27 Setting's form	32

 Microelettrica Scientifica	<h1>IM30-ABC</h1>	Doc. N° MO-0077-ING Rev. 1 Pag. 3 of 32
---	-------------------	---

1. General utilization and commissioning directions

Always make reference to the specific description of the product and to the Manufacturer's instruction. Carefully observe the following warnings.

1.1 - STORAGE AND TRANSPORTATION,

must comply with the environmental conditions stated on the product's instruction or by the applicable IEC standards.

1.2 - INSTALLATION,

must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

1.3 - ELECTRICAL CONNECTION,

must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

1.4 - MEASURING INPUTS AND POWER SUPPLY,

carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

1.5 - OUTPUTS LOADING,

must be compatible with their declared performance.

1.6 - PROTECTION EARTHING

When earthing is required, carefully check its effectiveness.

1.7 - SETTING AND CALIBRATION

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

1.8 - SAFETY PROTECTION

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.

1.9 - HANDLING

Notwithstanding the highest practicable protection means used in designing M.S. electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules. The damage caused by electrostatic discharge may not be immediately apparent but the design reliability and the long life of the product will have been reduced. The electronic circuits reduced by M.S. are completely safe from electrostatic discharge (8 KV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-ABC</h1>	Doc. N° MO-0077-ING
		Rev. 1 Pag. 4 of 32

- a. Before removing a module, ensure that you are at the same electrostatic potential as the equipment by touching the case.
- b. Handle the module by its front-plate, frame, or edges of the printed circuit board. Avoid touching the electronic components, printed circuit tracks or connectors.
- c. Do not pass the module to any person without first ensuring that you are both at the same electrostatic potential. Shaking hands achieves equipotential.
- d. Place the module on an antistatic surface, or on a conducting surface which is at the same potential as yourself.
- e. Store or transport the module in a conductive bag.

More information on safe working procedures for all electronic equipment can be found in BS5783 and IEC 147-OF.

1.10 - MAINTENANCE

Make reference to the instruction manual of the Manufacturer ;maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

1.11 - FAULT DETECTION AND REPAIR

Internal calibrations and components should not be altered or replaced.
For repair please ask the Manufacturer or its authorised Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

2. GENERAL

Input currents are supplied to 4 current transformers: - three measuring phase current - one measuring the earth fault zero-sequence current.

Phase current input can be 1 or 5A

For zero-sequence current, taps for 1A and 5A input are provided on relay's terminal board dimension drawings.

Make electric connection in conformity with the diagram reported on relay's enclosure.

Check that input currents are same as reported on the diagram and on the test certificate.

The auxiliary power is supplied by a built-in interchangeable module fully isolated and self protected

2.1 POWER SUPPLY

The relay can be fitted with two different types of **power supply** module :

- | | | | |
|--------|-----------------------------|--------|-----------------------------|
| a) - { | 24V(-20%) / 110V(+15%) a.c. | b) - { | 80V(-20%) / 220V(+15%) a.c. |
| { | 24V(-20%) / 125V(+20%) d.c. | { | 90V(-20%) / 250V(+20%) d.c. |

Before energising the unit check that supply voltage is within the allowed limits.

 Microelettrica Scientifica	<h1>IM30-ABC</h1>	Doc. N° MO-0077-ING Rev. 1 Pag. 5 of 32
---	-------------------	---

2.2 – Operation and Algorithms

2.2.1 – Input Quantities

System Frequency

The system frequency F_n can be set to 50 or 60 Hz

Current inputs (See Connection Diagram § 17)

The relay directly displays the r.m.s. value of Phase Currents “ **IA, IB, IC** “ flowing in the Primary of the input Current Transformers and refers all its measurements to that value.

To make the relay properly working with any C.T., when programming the relay settings we have to load the value of the Rated Primary Current “ **In** “ of the phase CTs:

In = (1-9999)A, adjustable in steps of 1A.

Similarly for the Residual (Zero Sequence) Current, we have to load the value of the Rated Primary Current **On**=(1-9999)A, adjustable in steps of 1A.

If the input of the Earth Fault element is supplied by the Residual connection of the 3 phase CTs, we shall set for “ **On** “ the same value as “ **In** “.

If the input of the Earth Fault element is supplied by a separated Core Balance CT, or by another CT, “ **On** “ value will be the Rated Primary Current of this CT, normally different from “ **In** “.

The Rated Secondary Current of the CTs, can be either 1A or 5A.

For the Phase Current inputs, 1A or 5A configuration can be selected by moving the jumpers provided on the CT input card (see § 19).

For the Earth Fault Current input, 1A or 5A taps are provided on relay terminals board : 1A or 5A configuration is obtained by connecting the Residual Current inputs respectively to terminal 32-33 or 32-31 (see Connection Diagram § 17).

Example :

- ☐ Phase CTs 1500/5A and Core Balance CT 100/1A
- ☐ Load **In** = 1500A and **On** = 100A
- ☐ Configure CT input card with jumpers J1, J2, J3 in the 5A position.
- ☐ Connect Earth Fault input to terminals 32-33

 Microelettrica Scientifica	<h1>IM30-ABC</h1>	Doc. N° MO-0077-ING Rev. 1 Pag. 6 of 32
---	-------------------	---

2.2.2 – 1F50/51 – First Overcurrent element

Operation mode : **F(I>)** = D, A, B, C, MI, SI, VI, EI, P, C1.

The time-current operation characteristics of this element can be

- Independent definite time : **F(I>) = D**
- Inverse time according to different time-current curves (see § 2.2.8)

Operation level : **I>** = (0.25-4)I_n, adjustable in steps of 0.01I_n.

The value set for the variable **I>** is the minimum r.m.s. value of the current flowing in at least one of the 3 phase currents “ IA, IB, IC “ which makes the element start functioning.

Trip time delay : **tl>** = (0.05-30)s, adjustable in steps of 0.01s.

As soon as the current of any phase (IA, IB, IC), exceeds the set value [**I>**] the element starts to operate:

- The led “ **I>** “ starts flashing.
- The timer “ **tl>** “ starts counting down
- Any output relay programmed to be operated by the instantaneous element “ **I>** “ (see § 12.2) gets energized and picks-up operating its contacts accordingly.

If during “ **tl>** “ count down, the current in all the 3-phases drops below 0.95 [**I>**] the element and the timer are reset.

In the Independent Definite Time mode **F(I>) = D** at the end of the set time [**tl>**] - if the current remained continuously above the reset level 0.95 [**I>**] – the element trips:

- The led “ **I>** “ is steadily illuminated.
- Any output relay programmed to be operated by the time delayed element “ **tl>** “ (see § 12.2) gets energized and picks-up operating its contacts accordingly.

In the Inverse time operation modes, the Trip Time delay is that resulting from the equations of the selected Time-Current-curve (see § 2.2.8).

Reset of the Led is operated by pressing the yellow Reset push button on relays front face or via Serial Port (see MScCom operation). Reset of the output relay takes place as explained in § 5.

Any time the time delayed element trips, the Event Recording “ Last Trip “ is activated (See § 10.3) and the trip counter “ TRIP NUM “ is increased (See § 10.4).

 Microelettrica Scientifica	<h1>IM30-ABC</h1>	Doc. N° MO-0077-ING Rev. 1 Pag. 7 of 32
---	-------------------	---

2.2.3 – 2F50/51 – Second Overcurrent element

The time-current operation characteristics of this element is Independent Definite Time

Operation level : $I_{>>} = (0.5-40)I_n$, adjustable in steps of $0.1I_n$.

The value set for the variable “ $I_{>>}$ ” is the minimum r.m.s. value of the current flowing in at least one of the 3 phase currents “ I_A , I_B , I_C ” which makes the element start functioning.

The set value [$I_{>>}$] of the operation level can be automatically doubled during inrush transients if the variable [$2I_{>>}$] is set to ON (See § 12).

Trip time delay : $tI_{>>} = (0.05-3)s$, adjustable in steps of $0.01s$.

As soon as the current of any phase (I_A , I_B , I_C), exceeds the set value [$I_{>>}$] the element starts to operate:

- The led “ $I_{>>}$ ” starts flashing.
- The timer “ $tI_{>>}$ ” starts counting down
- Any output relay programmed to be operated by the instantaneous element $I_{>>}$ (see § 12.2) gets energized and picks-up operating its contacts accordingly.

If during “ $tI_{>>}$ ” count down, the current in all the 3-phases drops below $0.95 [I_{>>}]$ the element and the timer are reset.

At the end of the set time [$tI_{>>}$] - if the current remained continuously above the reset level $0.95 [I_{>>}]$ – the element trips:

- The led “ $I_{>>}$ ” is steadily illuminated.
- Any output relay programmed to be operated by the time delayed element “ $tI_{>}$ ” (see § 12.2) gets energized and picks-up operating its contacts accordingly.

In the Inverse time operation modes, the Trip Time delay is that resulting from the equations of the selected Time-Current-curve (see § 2.2.8).

Reset of the Led is operated by pressing the yellow Reset push button on relays front face or via Serial Port (see MScOm operation). Reset of the output relay takes place as explained in § 5.

Any time the time delayed element trips, the Event Recording “ Last Trip ” is activated (See § 10.3) and the trip counter “ TRIP NUM ” is increased (See § 10.4).

 Microelettrica Scientifica	<h1>IM30-ABC</h1>	Doc. N° MO-0077-ING Rev. 1 Pag. 8 of 32
---	-------------------	---

2.2.5 – 1F50N/51N – First Earth Fault element

Operation mode : **F(O>)** = D, A, B, C, MI, SI, VI, EI, P, C1.

The time-current operation characteristics of this element can be

- Independent definite time : **F(O>) = D**
- Inverse time according to different time-current curves (see § 2.2.8)

Operation level : **O>** = (0.02-0.4)On, adjustable in steps of 0.01On.

The value set for the variable “ O> ” is the minimum r.m.s. value of the Residual Current (3Io) flowing which makes the element start functioning.

Trip time delay : **tO>** = (0.05-30)s, adjustable in steps of 0.01s.

As soon as the Residual Current exceeds the set value [O>] the element starts to operate:

- The led “ **O>** ” starts flashing.
- The timer “ **tO>** ” starts counting down
- Any output relay programmed to be operated by the instantaneous element “ O> ” (see § 12.2) gets energized and picks-up operating its contacts accordingly.

If during “ tO> ” count down, the Residual current drops below 0.95 [O>] the element and the timer are reset.

In the Independent Definite Time mode “ **F(O>) = D** ” at the end of the set time [tO>] - if the current remained continuously above the reset level 0.95 [O>] – the element trips:

- The led “ **O>** ” is steadily illuminated.
- Any output relay programmed to be operated by the time delayed element “ tO> ” (see § 12.2) gets energized and picks-up operating its contacts accordingly.

In the Inverse time operation modes, the Trip Time delay is that resulting from the equations of the selected Time-Current-curve (see § 2.2.8).

Reset of the Led is operated by pressing the yellow Reset push button on relays front face or via Serial Port (see MScOm operation). Reset of the output relay takes place as explained in § 5.

Any time the time delayed element trips, the Event Recording “ Last Trip ” is activated (See § 10.3) and the trip counter “ TRIP NUM ” is increased (See § 10.4).

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-ABC</h1>	Doc. N° MO-0077-ING
		Rev. 1 Pag. 9 of 32

2.2.6 – 2F50N/51N – Second Earth Fault element

The time-current operation characteristics of this is Independent Definite Time

Operation level : **O>>** = (0.02-0.4)On, adjustable in steps of 0.01On.

The value set for the variable **O>>** is the minimum r.m.s. value of the Residual Current (3I₀) flowing which makes the element start functioning.

Trip time delay : **tO>>** = (0.05-3)s, adjustable in steps of 0.01s.

As soon as the Residual Current exceeds the set value [**O>>**] the element starts to operate:

- The led " **O>>** " starts flashing.
- The timer " **tO>>** " starts counting down
- Any output relay programmed to be operated by the instantaneous element " **O>>** " (see § 12.2) gets energized and picks-up operating its contacts accordingly.

If during " **tO>>** " count down, the Residual current drops below 0.95 [**O>>**] the element and the timer are reset.

At the end of the set time [**tO>>**] - if the current remained continuously above the reset level 0.95 [**O>>**] – the element trips:

- The led " **O>>** " is steadily illuminated.
- Any output relay programmed to be operated by the time delayed element " **tO>>** " (see § 12.2) gets energized and picks-up operating its contacts accordingly.

In the Inverse time operation modes, the Trip Time delay is that resulting from the equations of the selected Time-Current-curve (see § 2.2.8).

Reset of the Led is operated by pressing the yellow Reset push button on relays front face or via Serial Port (see MSCom operation). Reset of the output relay takes place as explained in § 5.

Any time the time delayed element trips, the Event Recording " Last Trip " is activated (See § 10.3) and the trip counter " TRIP NUM " is increased (See § 10.4).

2.2.8 – Breaker Failure

It is supposed that all the Protection Functions that have to trip the Circuit breaker, are programmed to operate the Output Relay " R1 " (see § 12.2).

As soon as the Relay " R1 " picks-up, the timer " tBF " is started: the timer can be programmed to control one of the Output Relays " R2, R3, R4 ".

When " tBF " times-out, if any current flow is still measured (Breaker still closed), the relay programmed to be operated by " tBF " picks-up thus issuing the Breaker Failure Alarm.

2.2.9 - ALGORITHM OF THE TIME CURRENT CURVES

The Time Current Curves are generally calculated with the following equation :

$$t(I) = \left[\frac{A}{\left(\frac{I}{I_s} \right)^a - 1} + B \right] \bullet K \bullet T_s + t_r \quad \text{where :}$$

$t(I)$ = Actual trip time delay when the input current equals I

I_s = Set minimum pick-up level

$$K = \left(\frac{A}{10^a - 1} + B \right)^{-1}$$

T_s = Set time delay : $t(I) = T_s$ when $\frac{I}{I_s} = 10$

t_r = Operation time of the output relay on pick-up.

The parameters A, B and a have different values for the different Time Current Curves.

Curve Name	Curve Identifier	A	B	a
IEC A Inverse	A	0.14	0	0.02
IEC B Very Inverse	B	13.5	0	1
IEC C Extremely Inverse	C	80	0	2
IEEE Moderate Inverse	MI	0.0104	0.0226	0.02
IEEE Short Inverse	SI	0.00342	0.00262	0.02
IEEE Very Inverse	VI	3.88	0.0963	2
IEEE Inverse	I	5.95	0.18	2
IEEE Extremely Inverse	EI	5.67	0.0352	2

2.2.10 – SPECIAL CURVES (FOR THE LOW-SET OVERCURRENT ELEMENT)



Two custom made TCC are also available:

- **C1** = Curve as showed on DWG TU0373 (see page 27)
- **P** = Curve as showed on DWG TU0316 (see page 28) for low-set overcurrent element only

3. CONTROLS AND MEASUREMENTS


Five key buttons allow for local management of all relay's functions.
 A 8-digit high brightness alphanumerical display shows the relevant readings (xxxxxxxx)
 (see synoptic table fig.1)

FIG.1

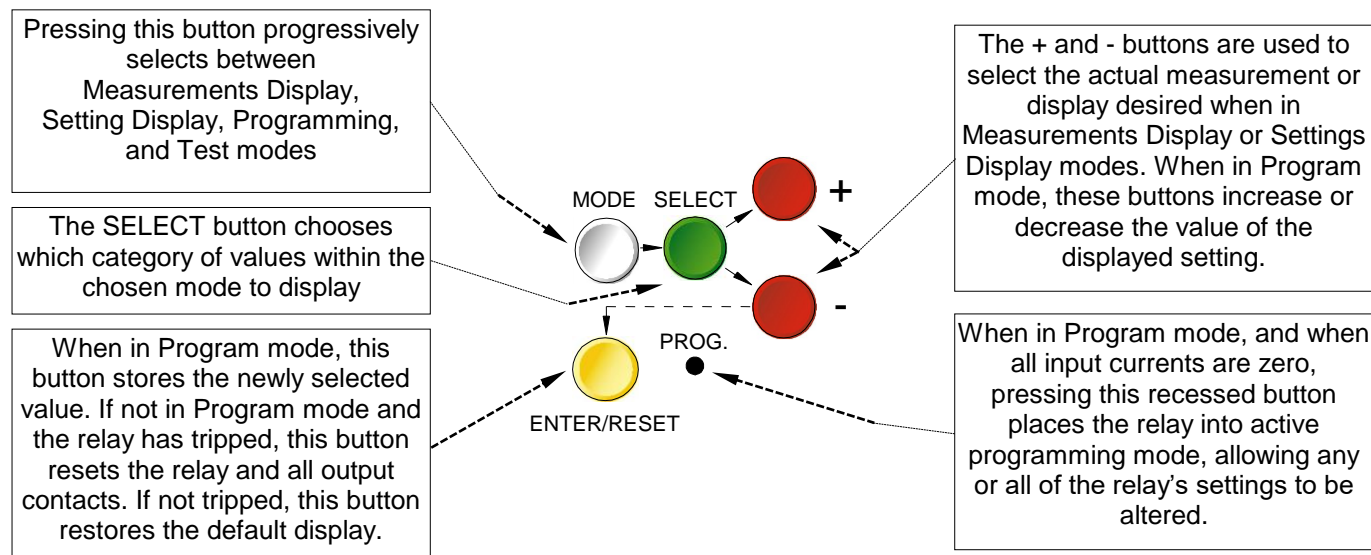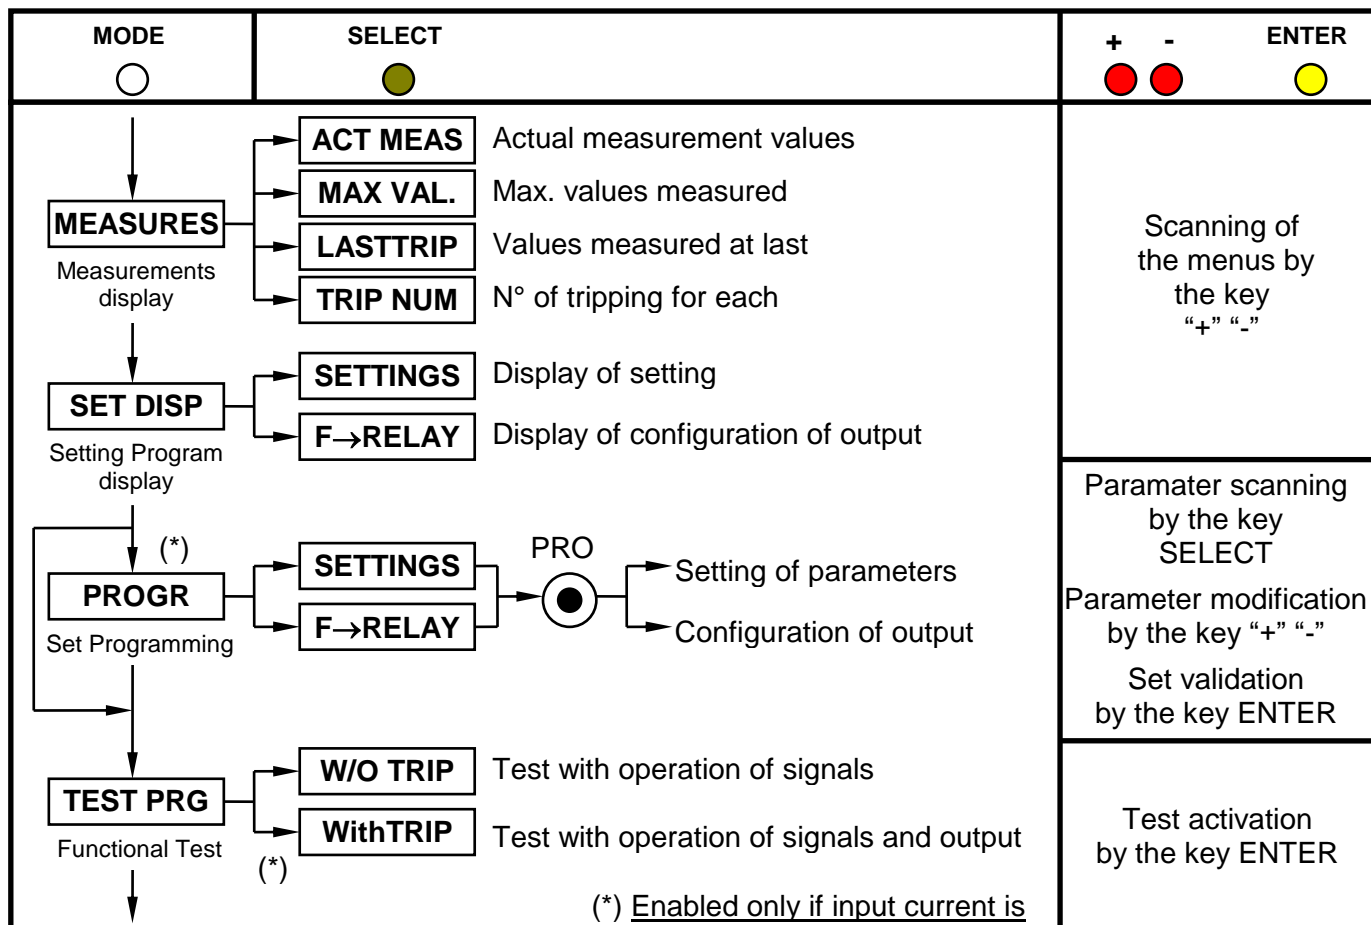

4. SIGNALIZATIONS

Eight signal leds (normally off) are provided:

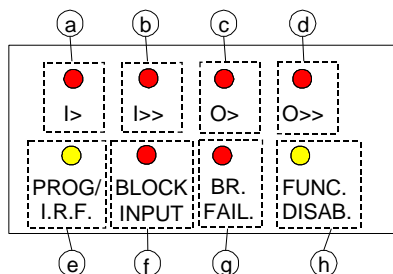

a) Red LED	I>	<input type="checkbox"/> Flashing when measured current exceeds the set trip level [I>]. <input type="checkbox"/> Illuminated on trip after expiry of the set trip time delay [tI>].
b) Red LED	I>>	<input type="checkbox"/> Same as above related to [I>>], [tI>>].
c) Red LED	O>	<input type="checkbox"/> Same as above related to [O>], [tO>].
d) Red LED	O>>	<input type="checkbox"/> Same, as above related to [O>>], [tO>>].
e) Yellow LED	PROG/IRF	<input type="checkbox"/> Flashing during the programming of the parameters or in case of Internal Relay Fault.
f) Red LED	BLOCK INPUT	<input type="checkbox"/> Flashing when a blocking signal is present at the relevant input terminals.
g) Red LED	BR.FAIL.	<input type="checkbox"/> Lit-on when the BREAKER FAILURE function is activated.
h) Yellow LED	FUNC. DISAB.	<input type="checkbox"/> Lit-on when the operation of one or more of the relay functions has been disactivated in the programming.

The reset of the leds takes place as follows:

<input type="checkbox"/> Leds a,b,c,d,g :		<input type="checkbox"/> From flashing to off, automatically when the lit-on cause disappears. <input type="checkbox"/> From ON to OFF, by "ENTER/RESET" push button only if the tripping cause has disappeared.
<input type="checkbox"/> Leds e,f,h :		<input type="checkbox"/> From ON to OFF, automatically when the lit-on cause disappears.

In case of auxiliary power supply failure the status of the leds is recorded and reproduced when power supply is restored.

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-ABC</h1>	Doc. N° MO-0077-ING
		Rev. 1 Pag. 13 of 32

5. OUTPUT RELAYS

Five output relays are available (R1, R2, R3, R4, R5)

a) - The relays **R1,R2,R3,R4** are normally deenergized (energised on trip): these output relays are user programmable and any of them can be associated to any (one or more) of the IM30-ABC's functions. One relay eventually associated to the instantaneous element of one of the functions, after pick-up normally drops-out as soon as the tripping cause disappears (current below the set trip level). If the current remains above the trip level longer than the time delay programmed for the relevant function, the drop-out of the instantaneous relay is anyhow forced after an adjustable waiting time [tBO]. (Deactivation of the blocking output eventually used to block a relay upstream in the distribution system).

Reset of the output relays associated to any time delayed function can be programmed to take place "Automatically" (tFRes= A) as soon as the tripping cause has disappeared, or "Manually" (tFRes= M) only by operating the ENTER/RESET key on relay's front or via the serial bus.

b) - The relay **R5**, normally energised, is not programmable and it is deenergized on:

- ☐ internal fault
- ☐ power supply failure
- ☐ during the programming

6. SERIAL COMMUNICATION

The relays fitted with the serial communication option can be connected via a cable bus or (with proper adapters) a fiber optic bus for interfacing with a Personal Computer (type IBM or compatible).

All the operations which can be performed locally (for example reading of measured data and changing of relay's settings) are also possible via the serial communication interface.

Furthermore the serial port allows the user to read the demand recording data.

The unit has a RS232 / RS485 interface and can be connected either directly to a P.C. via a dedicated cable or to a RS485 serial bus, thus having many relays to exchange data with a single master P.C. using the same physical serial line. A RS485/232 converter is available on request.

The communication protocol is MODBUS RTU (only functions 3, 4 and 16 are implemented).

Each relay is identified by its programmable address code (NodeAd) and can be called from the P.C.

A dedicated communication software (MSCOM) for Windows 95/98/NT4 SP3 (or later) is available.

Please refer to the MSCOM instruction manual for more information Microelettrica Scientifica.

 Microelettrica Scientifica	IM30-ABC	Doc. N° MO-0077-ING
		Rev. 1 Pag. 14 of 32

7. DIGITAL INPUTS

Three digital inputs are provided: they are active when the relevant terminals are shorted

- | | |
|---|---|
| <input type="checkbox"/> D2 (terminals 1 - 2) | : When activated it energized the output relay programmed to be controlled by the Digital Input "D2"; the Signal Led "B.I." flashes, the event recording shows cause "D2" and Trip Counter "D2" is incremented. |
| <input type="checkbox"/> D3 (terminals 1 - 3) | : When activated it energized the output relay programmed to be controlled by the Digital Input "D1"; the Signal Led "B.I." flashes, the event recording shows cause "D1" and Trip Counter "D1" is incremented. |
| <input type="checkbox"/> RT (terminals 1 - 14) | : When activated it energized the output relay programmed to be controlled by the Digital Input "RT"; the Signal Led "B.I." flashes, the event recording shows cause "RT" and Trip Counter "RT" is incremented. |

The controls "D2", "D3" and "RT" can also be operated via serial communication bus by the MSCom interface program which also monitors their status.

8. TEST


Besides the normal "WATCHDOG" and "POWERFAIL" functions, a comprehensive program of self-test and self-diagnostic provides:

- ☐ Diagnostic and functional test, with checking of program routines and memory's content, run every time the aux. power is switched-on: the display shows the type of relay and its version number.
- ☐ Dynamic functional test run during normal operation every 15 min. (relay's operation is suspended for less than ≤ 4 ms). If any internal fault is detected, the display shows a fault message, the Led "PROG/IRF" illuminates and the relay R5 is deenergized.
- ☐ Complete test activated by the keyboard or via the communication bus either with or without tripping of the output relays.

9. KEYBOARD AND DISPLAY OPERATION

All controls can be operated from relay's front or via serial communication bus.

The keyboard includes five hand operable buttons (**MODE**) - (**SELECT**) - (**+**) - (**-**) - (**ENTER/RESET**) plus one indirect operable key (**PROG**) (see synoptic table a fig.1):

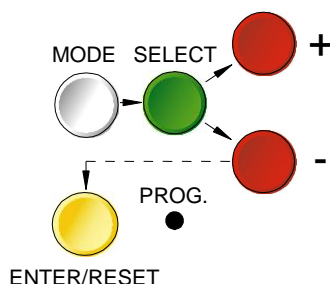

a) - White key	MODE	: when operated it enters one of the following operation modes indicated on the display :
	MEASURES	= Reading of all the parameters measured and of those recorded in the memory
	SET DISP	= Reading of the settings and of the configuration of the output relays as programmed.
	PROG	= Access to the programming of the settings and of relay configuration.
	TEST PROG	= Access to the manual test routines.
b) - Green key	SELECT	: When operated it selects one of the menus available in the actual operation MODE
c) - Red key	“+” AND “-”	: When operated they allow to scroll the different information available in the menu entered by the key SELECT
d) - Yellow key	ENTER/RESET	: It allows the validation of the programmed settings <ul style="list-style-type: none"> - the actuation of test programs - the forcing of the default display indication - the reset of signal Leds.
e) - Indirect key	●	: Enables access to the programming.

 Microelettrica Scientifica	<h1>IM30-ABC</h1>	Doc. N° MO-0077-ING Rev. 1 Pag. 16 of 32
---	-------------------	---

10. READING OF MEASUREMENTS AND RECORDED PARAMETERS

Enter the MODE "MEASURE", SELECT the menus "ACT.MEAS"-"MAX VAL"-"LASTTRIP"-"TRIP NUM", scroll available information by key "+" or "-" .

10.1 - ACT.MEAS

Actual values as measured during the normal operation.
The values displayed are continuously refreshed.

Display	Description
I/Inxxx%	Highest among the 3 phase-currents displayed as % of the rated current of phase C.Ts (0-999%)
IAxxxxxA	True R.M.S. value of the current of phase A displayed as primary Amps.(0 - 99999)
IBxxxxxA	As above, phase B.
ICxxxxxA	As above, phase C.
IoxxxxxA	As above, earth fault current.

10.2 - MAX VAL

Maximum demand values recorded starting from 100ms after closing of main Circuit Breaker plus highest inrush values recorded within the first 100ms from Breaker closing, (updated any time the breaker closes).

Display	Description
ImxxxxIn	Highest among the 3 phase-currents displayed as p.u. of CTs rated current.(0-99,9)%
IAxxxxIn	Max. value of phase A current after the first 100ms, displayed as p.u. of C.Ts rated current.
IBxxxxIn	As above, phase B.
ICxxxxIn	As above, phase C.
IoxxxxOn	As above, earth fault current.
SAxxxxIn	Max. current of phase A during the first 100ms.
SBxxxxIn	As above, phase B.
SCxxxxIn	As above, phase C.
SoxxxxOn	As above, earth fault current.

10.3 - LASTTRIP

Display of the function which caused the tripping of the relay plus values of the parameters at the moment of tripping. The last five events are recorded

The memory buffer is refreshed at each new relay tripping with a decreasing numbering (FIFO logic).

Display	Description
LastTr-x	Indication of the recorded event (x= 0 to 4) Example: Last event (LastTr -0) Last but one event (LastTr-1) etc...
F:xxxxxx	Function which produced the event being displayed and faulty phase in case of phase current element's trip l> ph A,B,C; l>> ph A,B,C; O>; O>>;D2; D3; RT.
IAxxxxIn	Current of phase A. (value recorded at the moment of tipping)
IBxxxxIn	Current of phase B. (as above)
ICxxxxIn	Current of phase C. (as above)
IxxxxOn	Earth fault current. (as above)

10.4 - TRIP NUM

Counters of the number of operations for each of the relay functions.

The memory is non-volatile and can be cancelled only with a secret procedure.

Display	Description
l> xxxx	Trip number of Low set overcurrent time delayed element [tl>].
l>>xxxx	Trip number of High set overcurrent time delayed element[tl>>].
lo> xxxx	Trip number of Low set earth fault time delayed element [tO>].
lo>>xxxx	Trip number of High set earth fault time delayed element [tO>>].
D2	Operation n° of Digital Input "D2"
D3	Operation n° of Digital Input "D3"
RT	Operation n° of Digital Input "RT"

11. READING OF PROGRAMMED SETTINGS AND RELAY'S CONFIGURATION

Enter the mode "SET DISP", select the menu "SETTINGS" or "F→RELAY", scroll information available in the menu by keys "+" or "-".

SETTINGS= values of relay's operation parameters as programmed

F→RELAY= output relays associated to the different functions as programmed.

12. PROGRAMMING

The relay is supplied with the standard default programming used for factory test. [Values here below reported in the "Display" column].

All parameters can be modified as needed in the mode PROG and displayed in the mode SET DISP. **Local Programming by the front face key board is enabled only if no input current is detected (main switch open). Programming via the serial port is always enabled but a password is required to access the programming mode. The default password is the null string; in the standard application program for communication "MS-COM" it is also provided an emergency which can be disclosed on request only.**


As soon as programming is enabled, the Led PRG/IRF flashes and the reclosing lock-out relay R5 is deenergized..

Enter MODE "PROG" and SELECT either "SETTINGS" for programming of parameters or "F → RELAY" for programming of output relays configuration; enable programming by the indirect operation key PROG.

The key SELECT now scrolls the available parameters. By the key (+) , (-) the displayed values can be modified; to speed up parameter's variation press the key SELECT while "+" or "-" are pressed.

Press key "ENTER/RESET" to validate the set values.

12.1 - PROGRAMMING OF FUNCTIONS SETTINGS

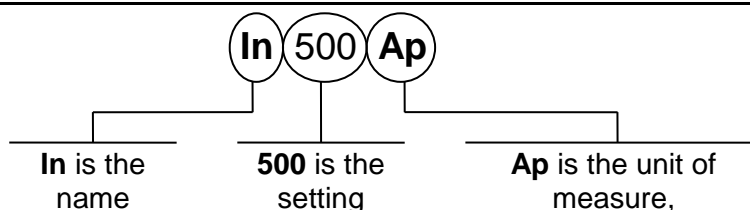

Mode PROG menu SETTINGS. (Production standard settings here under shown).

Display	Description	Setting Range	Step	Unit
Fn 50 Hz	Mains frequency	50 - 60	10	Hz
In 500Ap	Rated primary current of the phase C.Ts.	1 - 9999	1	A
On 500Ap	Rated primary current of the C.Ts. or of the tore C.T. supplying the zero sequence current	1 - 9999	1	A
F(I>) D	Operation characteristic of the low-set overcurrent element: (D) = Independent definite time (A) = IEC Inverse Curve type A (B) = IEC Very Inverse Curve type B (C) = IEC Extremely Inverse Curve type C (MI) = IEEE Moderate Inverse Curve (SI) = IEEE Short Inverse Curve (VI) = IEEE Very Inverse Curve (I) = IEEE Inverse Curve (EI) = IEEE Extremely Inverse Curve (P) = Special curves TU0316 (C1) = Special curves TU0373	D A B C MI SI VI I EI P C1	-	-


 Microelettrica Scientifica	<h1>IM30-ABC</h1>	Doc. N° MO-0077-ING
		Rev. 1 Pag. 19 of 32

Display	Description	Setting Range	Step	Unit
I> 0.5In	Trip level of low-set overcurrent element (p.u. of the rated current of the phase C.Ts.)	0.25 - 4 - Dis	0.01	In
tl> 0.05s	Trip time delay of the low-set overcurrent element In the inverse time operation [tl>] is the trip time delay at $I = 10 \times [I>]$.	0.05 - 30	0.01	s
I>> 0.5In	Trip level of high-set overcurrent element (p.u. of the rated current of the phase C.Ts.):	0.5 - 40 - Dis	0.1	In
tl>> 0.05s	Trip time delay of the high-set overcurrent element	0.05 - 3	0.01	s
F(O>) D	Operation characteristic of the low-set earth fault element: (D) = Independent definite time (A) = IEC Inverse Time Curve type A (B) = IEC Very Inverse Time Curve type B (C) = IEC Extremely Inverse Time Curve type C (MI) = IEEE Moderate Inverse Curve (SI) = IEEE Short Inverse Curve (VI) = IEEE Very Inverse Curve (I) = IEEE Inverse Curve (EI) = IEEE Extremely Inverse Curve (C1) = Special curves TU0373	D A B C MI SI VI I EI C1	-	-
O> 0.02On	Trip level of low-set earth fault element (p.u. of the rated current of the C.Ts. for zero sequence detection)	0.02 - 0.4 - Dis	0.01	On
tO> 0.05s	Trip time delay of low-set earth fault element. In the inverse time operation [tO>] is the trip time delay at $I = 10 \times [O>]$.	0.05 - 30	0.01	s
O>> 0.02On	Trip level of high-set earth fault element (p.u. of the rated current of the C.Ts. for zero sequence detection)	0.02 - 4 - Dis	0.01	On
tO>> 0.05s	Trip time delay of the high-set earth fault element	0.05 - 3	0.01	s
tBO 0.05s	Max. reset time delay of the instantaneous elements after tripping of the time delayed elements and time delay for activation of the output relay associated to the Breaker Failure function	0.05 - 0.25	0.01	s
2I>> OFF	Automatic doubling of high set overcurrent level. When set to ON the level I>> is automatically doubled (from I>> to 2I>>) If within the first 60ms from switch-on, the inrush current gets higher than 1,5 In. As soon as the current drops below 1,25 In the level I>> comes back to its normal set value (from 2I>> to I>>).	ON - OFF	ON-OFF	-
NodAd 1	Identification number for connection on serial communication bus	1 - 250	1	-

The setting Dis indicates that the function is disactivated.



12.2 - PROGRAMMING THE CONFIGURATION OF OUTPUT RELAYS

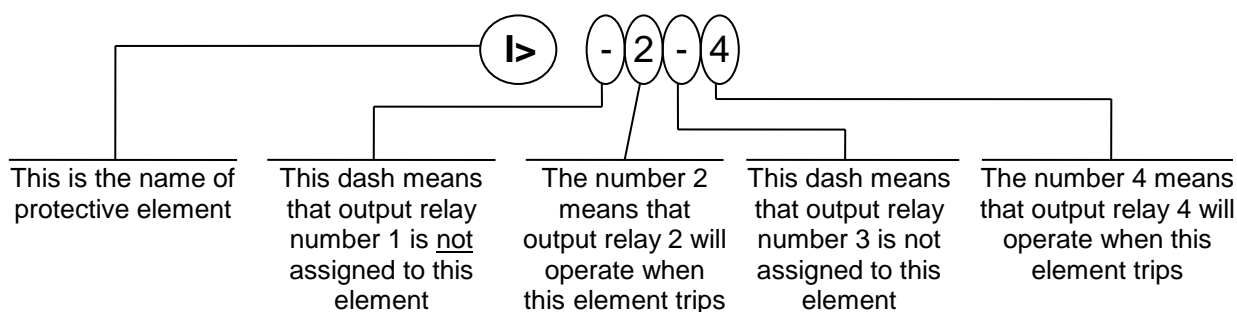

Mode PROG menu F→RELAY (Production standard settings here under shown).

The key "+" operates as cursor; it moves through the digits corresponding to the four programmable relays in the sequence 1,2,3,4,(1= relay R1, etc.) and makes start flashing the information actually present in the digit. The information present in the digit can be either the number of the relay (if this was already associated to the function actually on programming) or a dot (-) if the relay was not yet addressed.

The key "-" changes the existing status from the dot to the relay number or viceversa.

Display	Description	
I> --3-	Instantaneous element of low-set overcurrent (only one or more, whatever combination)	operates relays R1,R2,R3,R4.
tl> 1---	As above, time delayed element.	operates relay R1,R2,R3,R4.
I>> --3-	Instantaneous element of high-set overcurrent	operates relay R1,R2,R3,R4.
tl>> 1---	As above, time delayed element.	operates relay R1,R2,R3,R4.
O> ---4	Instantaneous element of low-set earth fault element.	operates relay R1,R2,R3,R4.
tO> -2--	As above, time delayed element.	operates relay R1,R2,R3,R4.
O>> ---4	Instantaneous element of high-set earth fault element	operates relay R1,R2,R3,R4.
tO>> -2--	As above, time delayed element.	operates relay R1,R2,R3,R4.
D2 ----	Digital Input "D2".	operates relay R1,R2,R3,R4.
D3 ----	Digital Input "D3".	operates relay R1,R2,R3,R4.
RT ----	Digital Input "RT".	operates relay R1,R2,R3,R4.
tBF ----	Breaker Failure Function.	operates relay --,R2,R3,R4.
tFRes: A	The reset after tripping of the relays associated to the time delayed elements is automatic.	

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-ABC</h1>	Doc. N° MO-0077-ING
		Rev. 1 Pag. 21 of 32

13. MANUAL AND AUTOMATIC TEST OPERATION

13.1 - Mode "TESTPROG" subprogram "W/O TRIP"

Operation of the yellow key activates a complete test of the electronics and the process routines. All the leds are lit-on and the display shows (TEST RUN). If the test routine is successfully completed the display switches-over to the default reading (I/Inxxx%).
If an internal fault is detected, the display shows the fault identification code and the relay R5 is deenergized. This test can be carried-out even during the operation of the relay without affecting the relay tripping in case a fault takes place during the test itself.

13.2 - Mode "TESTPROG" subprogram "WithTRIP"

Access to this program is enabled only if the current detected is zero (breaker open). Pressing the yellow key the display shows "TEST RUN?". A second operation of the yellow key starts a complete test which also includes the activation of all the output relays.
The display shows (TEST RUN) with the same procedure as for the test with W/O TRIP.
Every 15 min during the normal operation the relay automatically initiates an auto test procedure (duration ≤ 10 ms). If any internal fault is detected during the auto test, the relay R5 is deenergized, the relevant led is activated and the fault code is displayed.



WARNING

Running the **WithTRIP** test will operate all of the output relays. Care must be taken to ensure that no unexpected or harmful equipment operations will occur as a result of running this test.
It is generally recommended that this test be run only in a bench test environment or after all dangerous output connections are removed.

14. MAINTENANCE

No maintenance is required. Periodically a functional check-out can be made with the test procedures described under MANUAL TEST chapter. In case of malfunctioning please contact Microelettrica Scientifica Service or the local Authorised Dealer mentioning the relay's Serial No reported in the label on relays enclosure.



WARNING

In case of Internal Relay Fault detection, proceed as here-below indicated :

- ☐ If the error message displayed is one of the following "DSP Err", "ALU Err", "KBD Err", "ADC Err", switch off power supply and switch-on again. If the message does not disappear send the relay to Microelettrica Scientifica (or its local dealer) for repair.
- ☐ If the error message displayed is "E2P Err", try to program any parameter and then run "W/OTRIP".
- ☐ If message disappear please check all the parameters.
- ☐ If message remains send the relay to Microelettrica Scientifica (or its local dealer) for repair.

15. POWER FREQUENCY INSULATION TEST

Every relay individually undergoes a factory insulation test according to IEC255-5 standard at 2 kV, 50 Hz 1min. Insulation test should not be repeated as it unusefully stresses the dielectrics.
When doing the insulation test, the terminals relevant to serial output must always be short circuited to ground. When relays are mounted in switchboards or relay boards that have to undergo the insulation tests, the relay modules must be drawn-out of their enclosures and the test must only include the fixed part of the relay with its terminals and the relevant connections.
This is extremely important as discharges eventually taking place in other parts or components of the board can severely damage the relays or cause damages, not immediately evident to the electronic components.

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-ABC</h1>	Doc. N° MO-0077-ING
		Rev. 1 Pag. 22 of 32

16. ELECTRICAL CHARACTERISTICS

APPROVAL: CE – RINA – UL and CSA approval File : E202083

REFERENCE STANDARDS IEC 60255 - EN50263 - CE Directive - EN/IEC61000 - IEEE C37

<input type="checkbox"/> Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
<input type="checkbox"/> Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) – 1,2/50µs
<input type="checkbox"/> Insulation resistance	> 100MΩ	

Environmental Std. Ref. (IEC 68-2-1 - 68-2-2 - 68-2-33)

<input type="checkbox"/> Operation ambient temperature	-10°C / +55°C
<input type="checkbox"/> Storage temperature	-25°C / +70°C
<input type="checkbox"/> Humidity	IEC68-2-3 RH 93% Without Condensing AT 40°C

CE EMC Compatibility (EN50081-2 - EN50082-2 - EN50263)

<input type="checkbox"/> Electromagnetic emission	EN55022 industrial environment				
<input type="checkbox"/> Radiated electromagnetic field immunity test	IEC61000-4-3	level 3	80-1000MHz	10V/m	
	ENV50204		900MHz/200Hz	10V/m	
<input type="checkbox"/> Conducted disturbances immunity test	IEC61000-4-6	level 3	0.15-80MHz	10V	
<input type="checkbox"/> Electrostatic discharge test	IEC61000-4-2	level 4	6kV contact / 8kV air		
<input type="checkbox"/> Power frequency magnetic test	IEC61000-4-8		1000A/m	50/60Hz	
<input type="checkbox"/> Pulse magnetic field	IEC61000-4-9		1000A/m, 8/20µs		
<input type="checkbox"/> Damped oscillatory magnetic field	IEC61000-4-10		100A/m, 0.1-1MHz		
<input type="checkbox"/> Electrical fast transient/burst	IEC61000-4-4	level 3	2kV, 5kHz		
<input type="checkbox"/> HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3	400pps, 2,5kV (m.c.), 1kV (d.m.)		
<input type="checkbox"/> Oscillatory waves (Ring waves)	IEC61000-4-12	level 4	4kV(c.m.), 2kV(d.m.)		
<input type="checkbox"/> Surge immunity test	IEC61000-4-5	level 4	2kV(c.m.), 1kV(d.m.)		
<input type="checkbox"/> Voltage interruptions	IEC60255-4-11				
<input type="checkbox"/> Resistance to vibration and shocks	IEC60255-21-1 - IEC60255-21-2 10-500Hz 1g				

CHARACTERISTICS

<input type="checkbox"/> Accuracy at reference value of influencing factors	2% In for measure 0,2% On 2% +/- 10ms for times
<input type="checkbox"/> Rated Current	In = 1 or 5A - On = 1 or 5A
<input type="checkbox"/> Current overload	200 A for 1 sec; 10A continuous
<input type="checkbox"/> Burden on current inputs	Phase : 0.01VA at In = 1A; 0.2VA at In = 5A Neutral : 0.03VA at In = 1A ; 0.2VA at In = 5A
<input type="checkbox"/> Average power supply consumption	8.5 VA
<input type="checkbox"/> Output relays	rating 5 A; Vn = 380 V A.C. resistive switching = 1100W (380V max) make = 30 A (peak) 0,5 sec. break = 0.3 A, 110 Vcc, L/R = 40 ms (100.000 op.)

Microelettrica Scientifica S.p.A. - 20089 Rozzano (MI) - Italy - Via Alberelle, 56/68


Tel. (##39) 02 575731 - Fax (##39) 02 57510940

<http://www.microelettrica.com> e-mail : ute@microelettrica.com


The performances and the characteristics reported in this manual are not binding and can modified at any moment without notice



17. CONNECTION DIAGRAM (SCE1784 Rev.0 Standard Output)

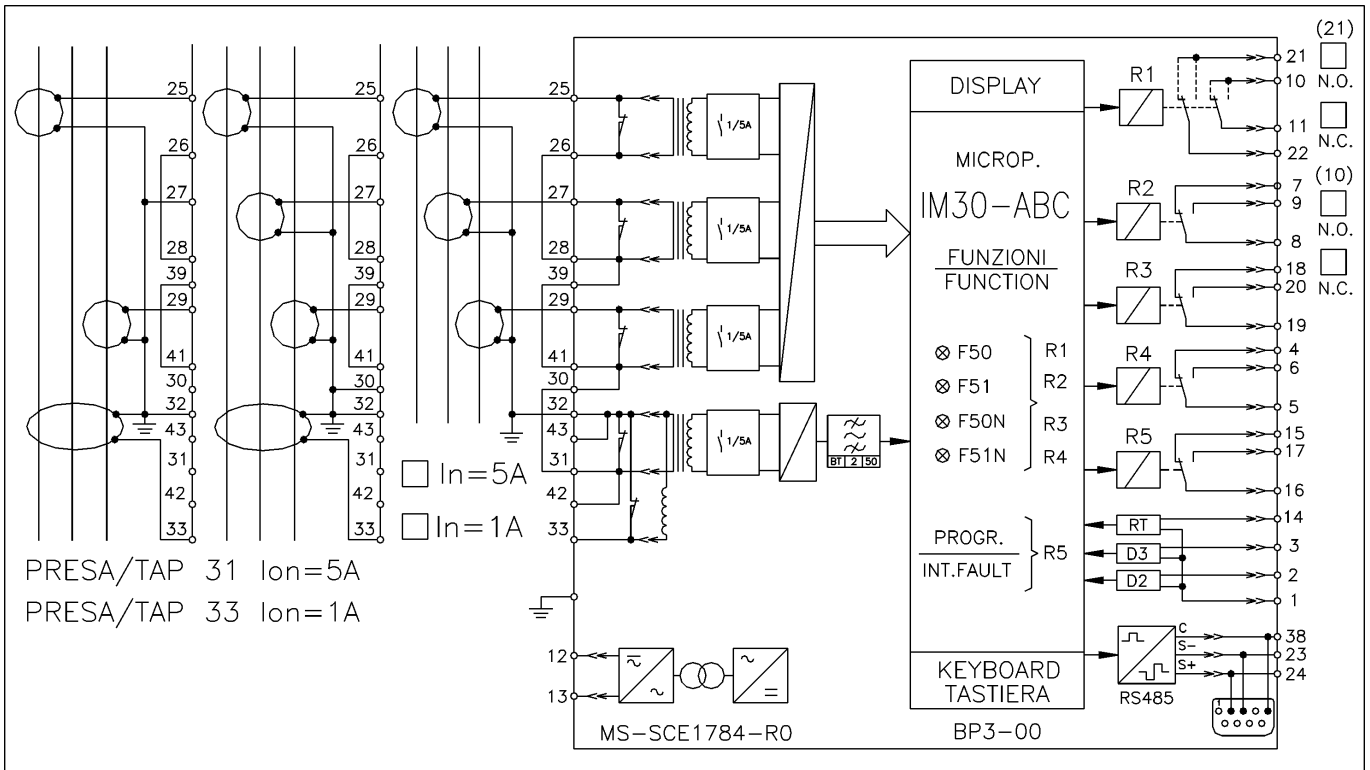


17.1 - CONNECTION DIAGRAM (SCE1785 Rev.0 Double Output)

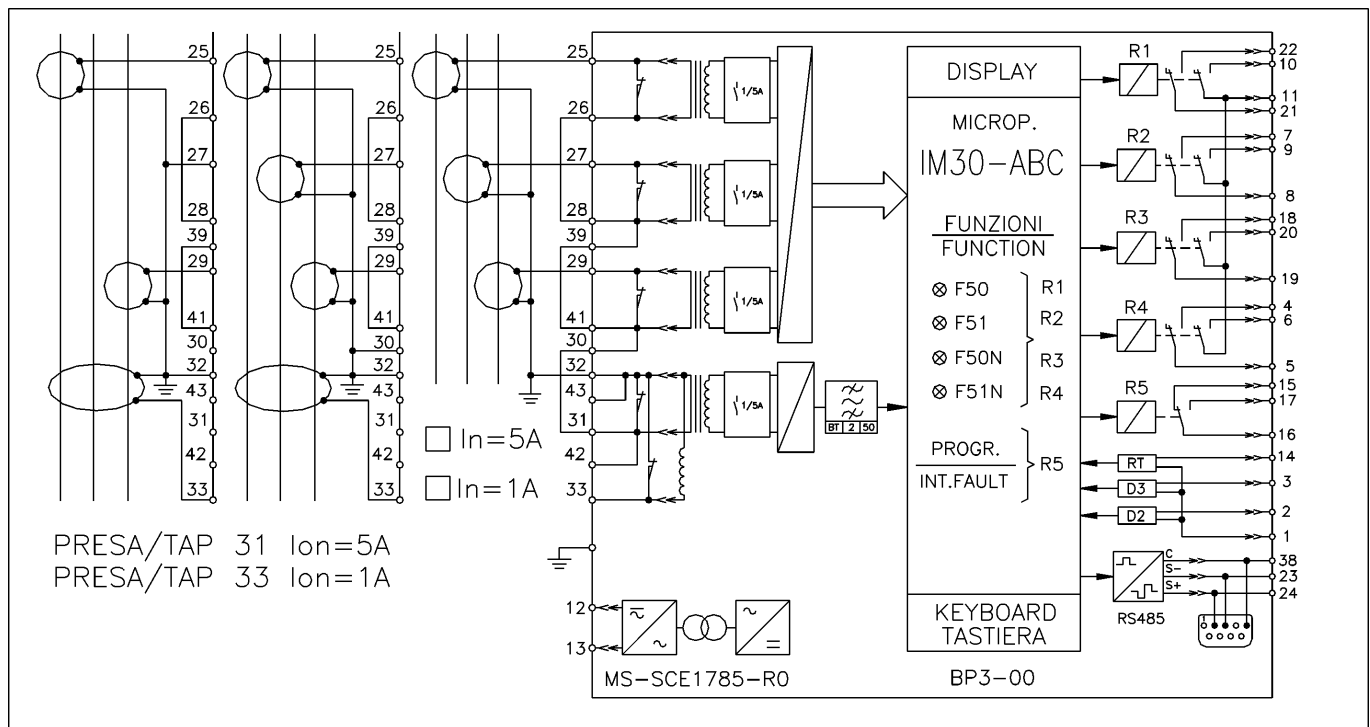




18. WIRING THE SERIAL COMMUNICATION BUS (SCE1309 Rev.0)


CONNECTION TO RS485

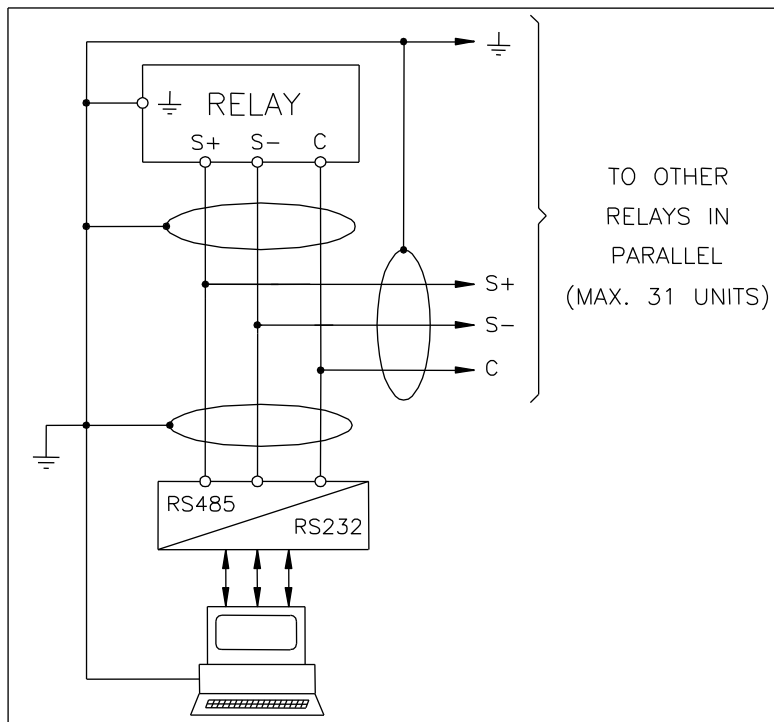

FIBER OPTIC CONNECTION

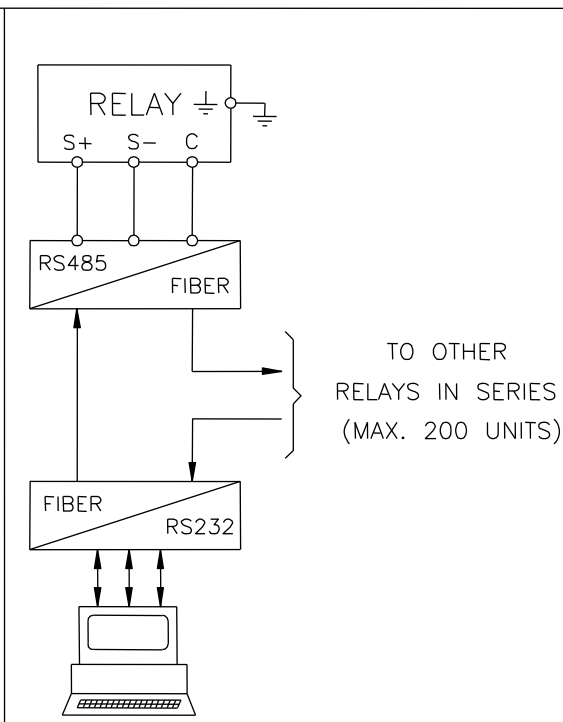


19. CHANGE PHASE CURRENT RATED INPUT 1 OR 5A

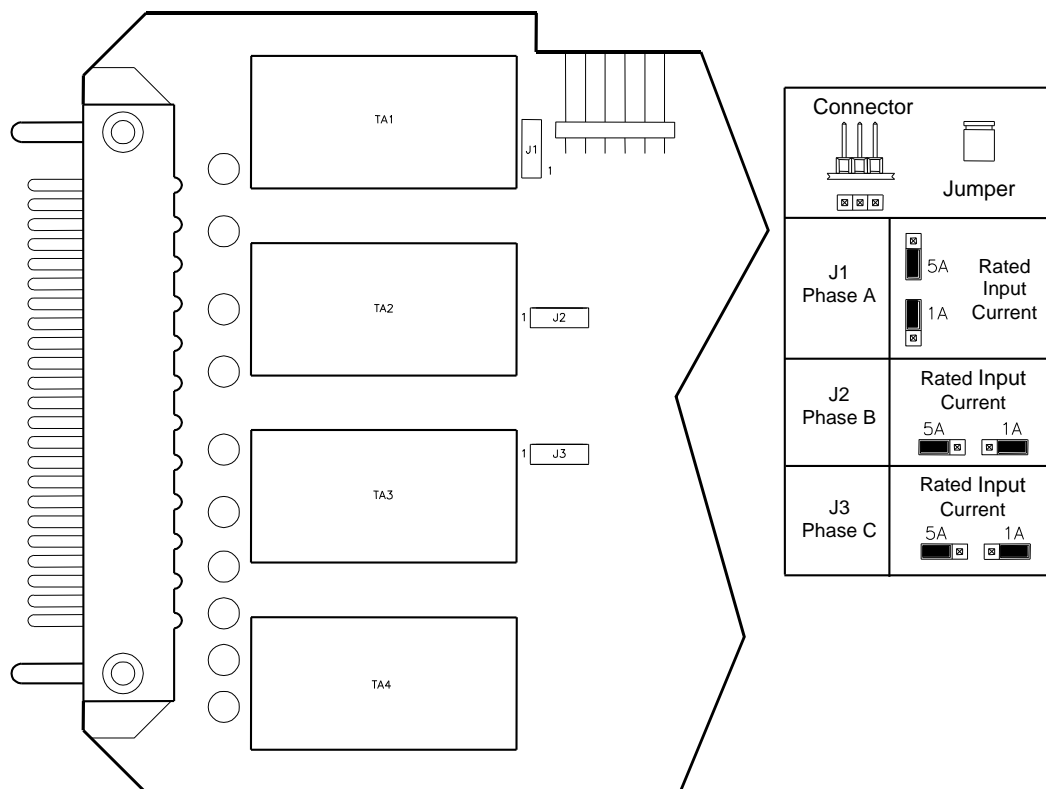



20. TIME CURRENT CURVES IEC (TU0353 Rev.0 1/2)

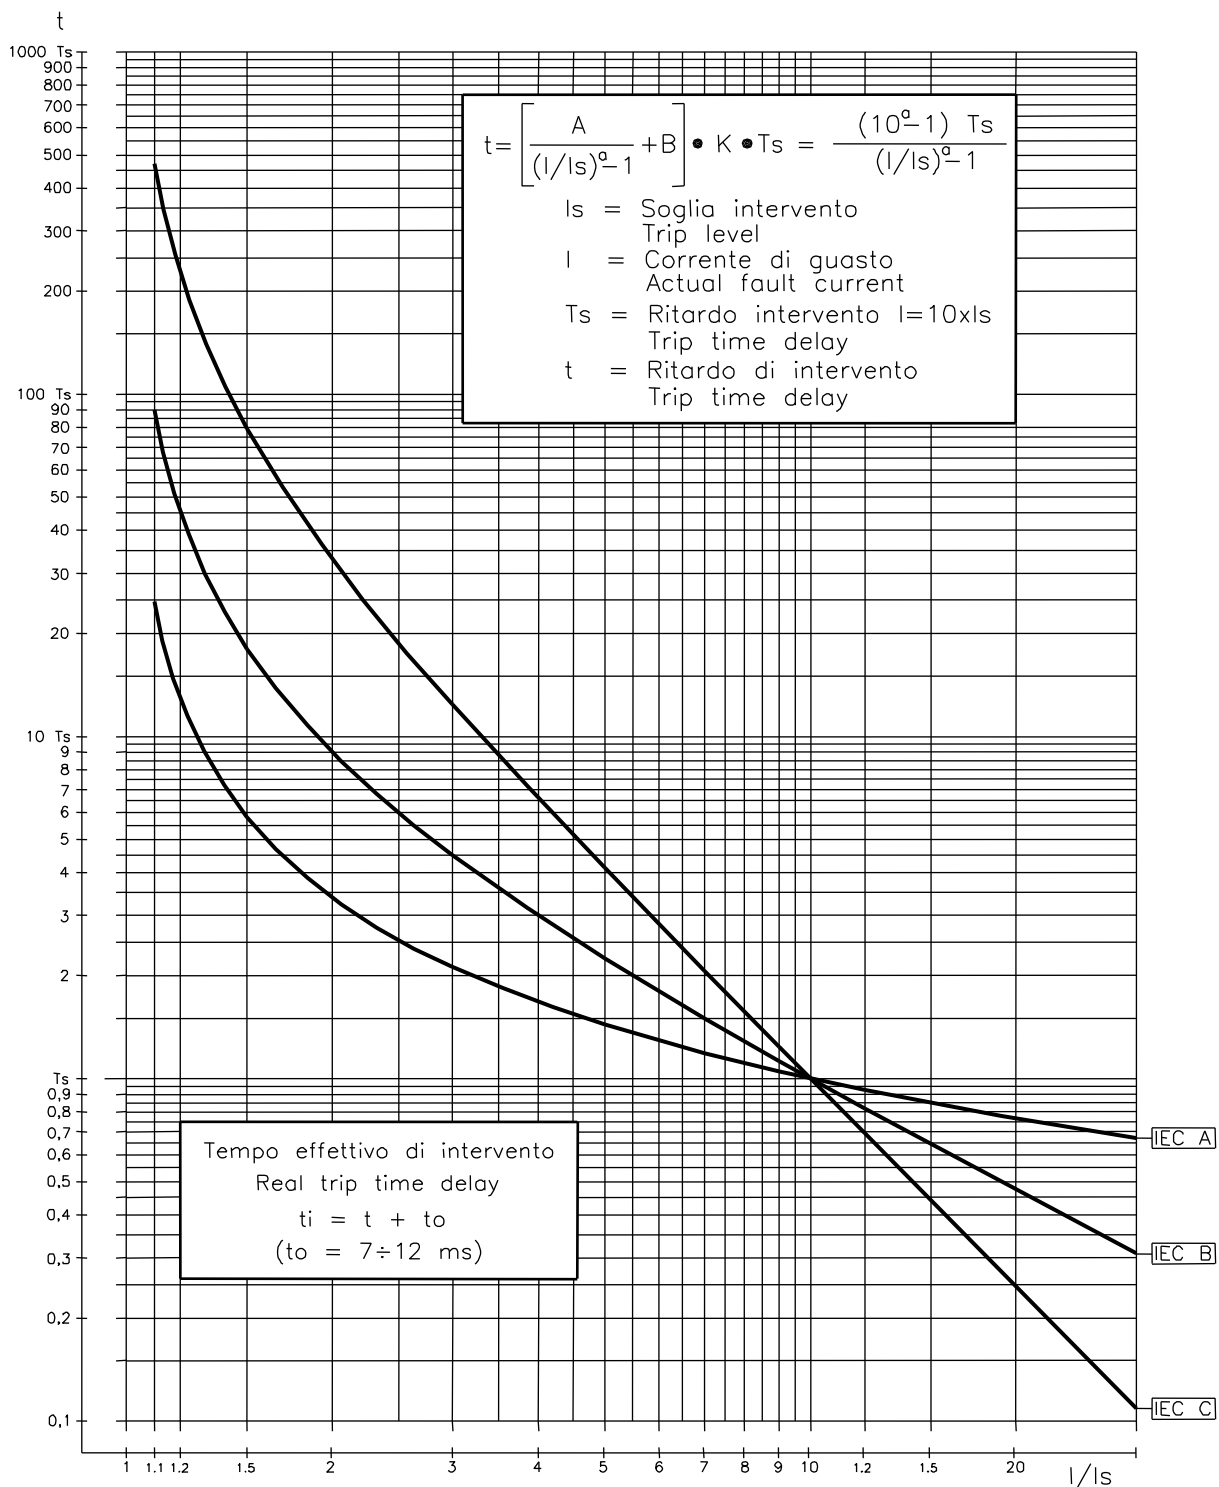


Curve Type	A	B	K	a
IEC A	0.14	0	0.336632	0.02
IEC B	13.5	0	0.666667	1
IEC C	80	0	1.2375	2

$$F51 \begin{cases} I_s = I > = (0.25 - 4) I_n \\ T_s = t I > = (0.05 - 30) s \end{cases}$$

$$F51N \begin{cases} I_s = 0 > = (0.02 - 0.4) I_n \\ T_s = t 0 > = (0.05 - 30) s \end{cases}$$



21. TIME CURRENT CURVES IEEE (TU0353 Rev.0 2/2)

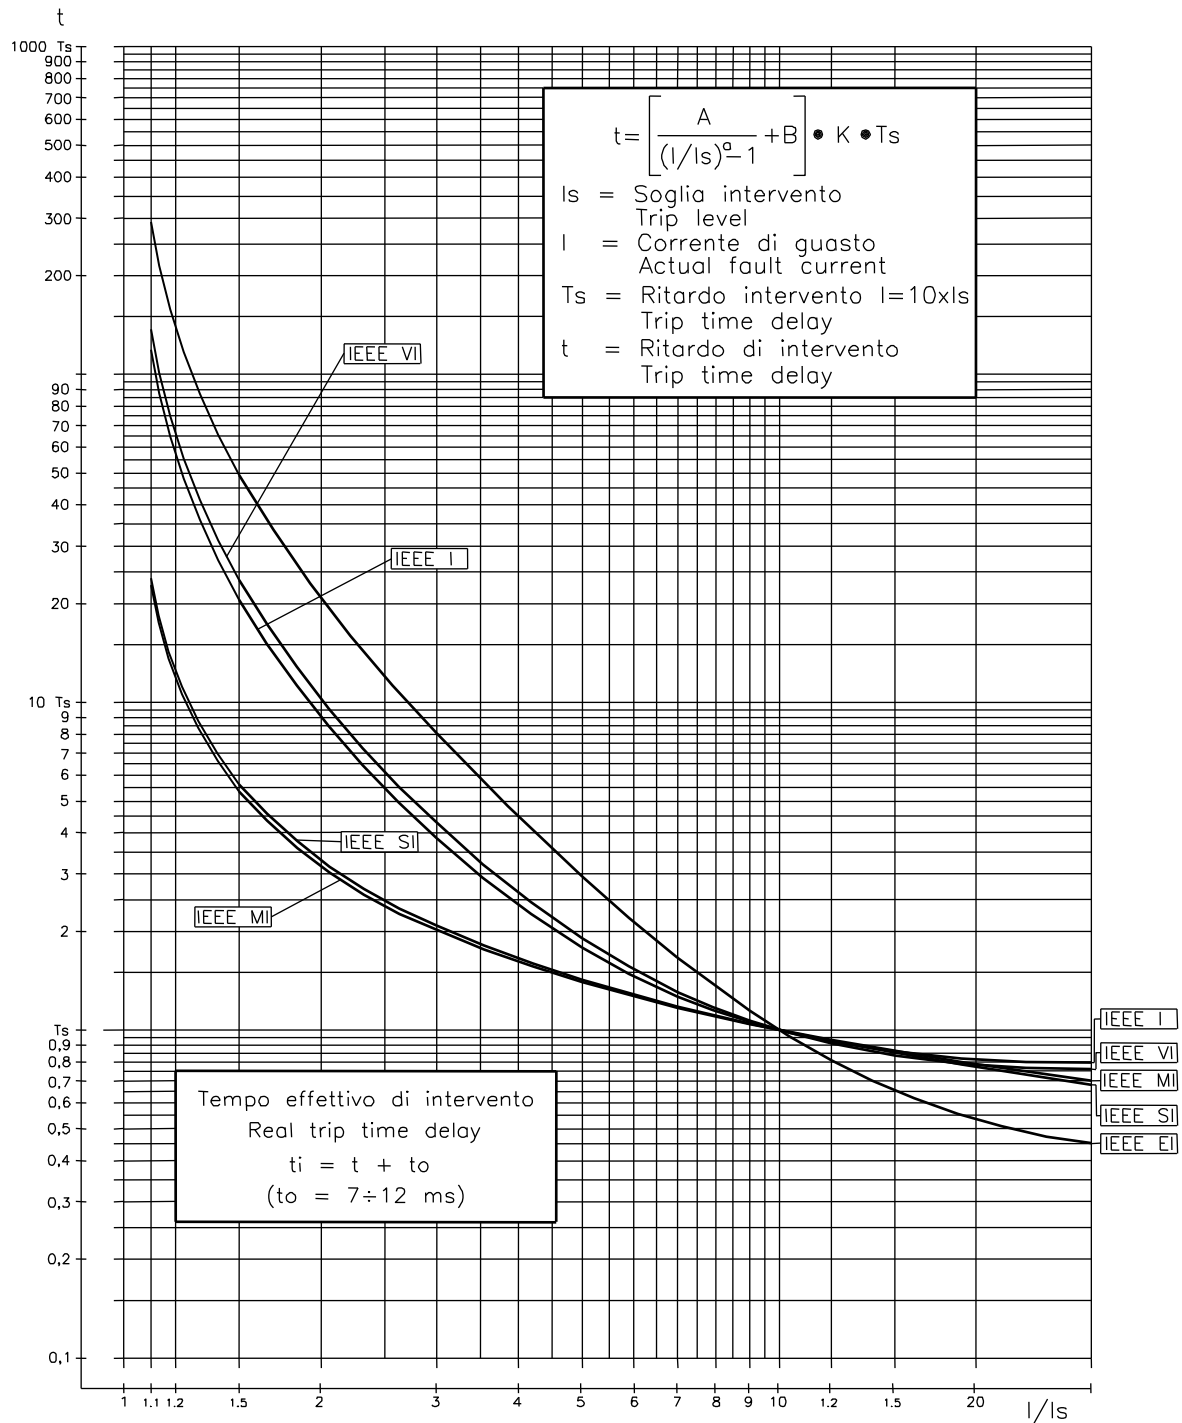


Curve Type	A	B	K	a
MI=IEEE Moderate Inv.	0.0104	0.0226	4.110608	0.02
SI=IEEE Short Inv.	0.00342	0.00262	13.30009	0.02
VI=IEEE Very Inv.	3.88	0.0963	7.380514	2
I=IEEE Inverse	5.95	0.18	4.164914	2
EI=IEEE Extremely Inv.	5.67	0.0352	10.814	2

$$\begin{aligned}
 &F51 \quad \begin{cases} I_s = I > = (0.25-4)I_n \\ T_s = tI > = (0.05-30)s \end{cases} \\
 &F51N \quad \begin{cases} I_s = 0 > = (0.02-0.4)0_n \\ T_s = t0 > = (0.05-30)s \end{cases}
 \end{aligned}$$



22. TIME CURRENT CURVE C1 (TU0373 Rev.0)

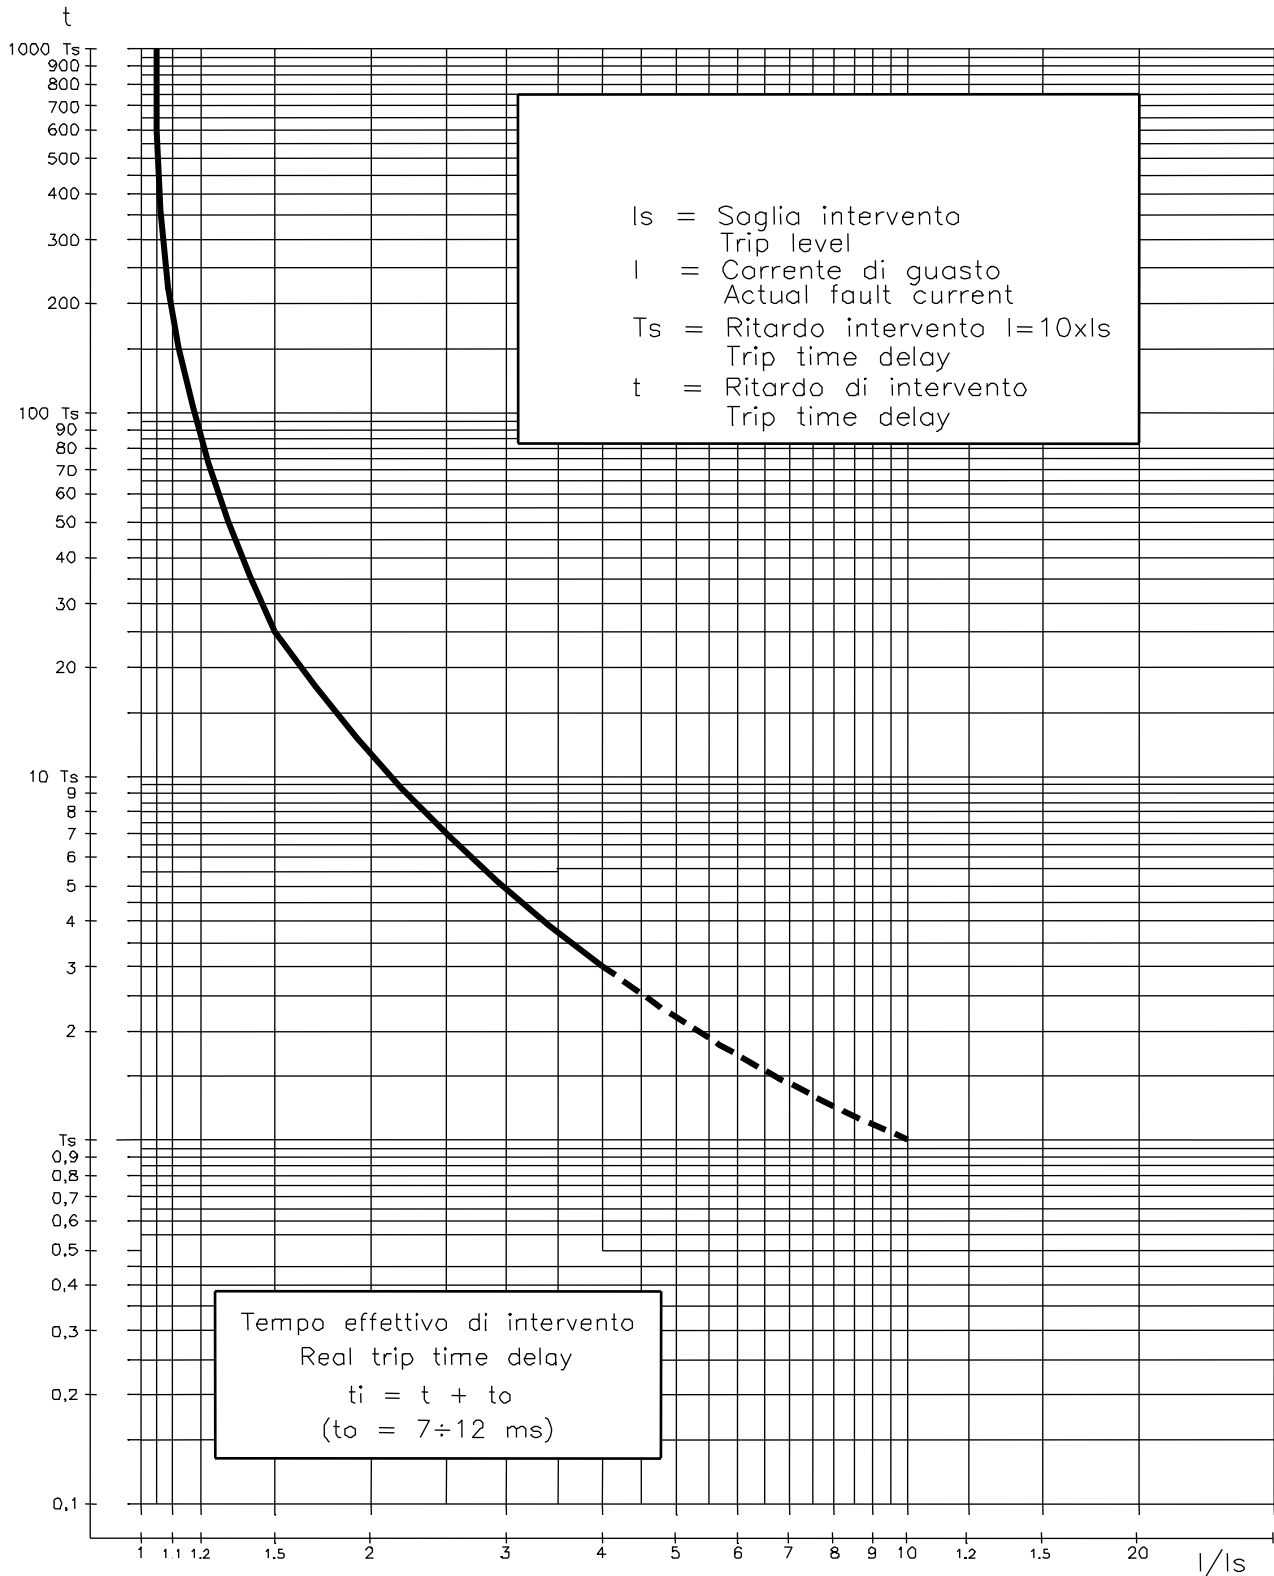


$$F51N \begin{cases} I_s = 0 > = (0.0 - 0.4) I_n \\ T_s = t_0 > = (0.05 - 30) s \end{cases}$$

$$F51 \begin{cases} I_s = I > = (0.25 - 4) I_n \\ T_s = t_1 > = (0.05 - 30) s \end{cases}$$



23. TIME CURRENT CURVE P (TU0316 Rev.1)

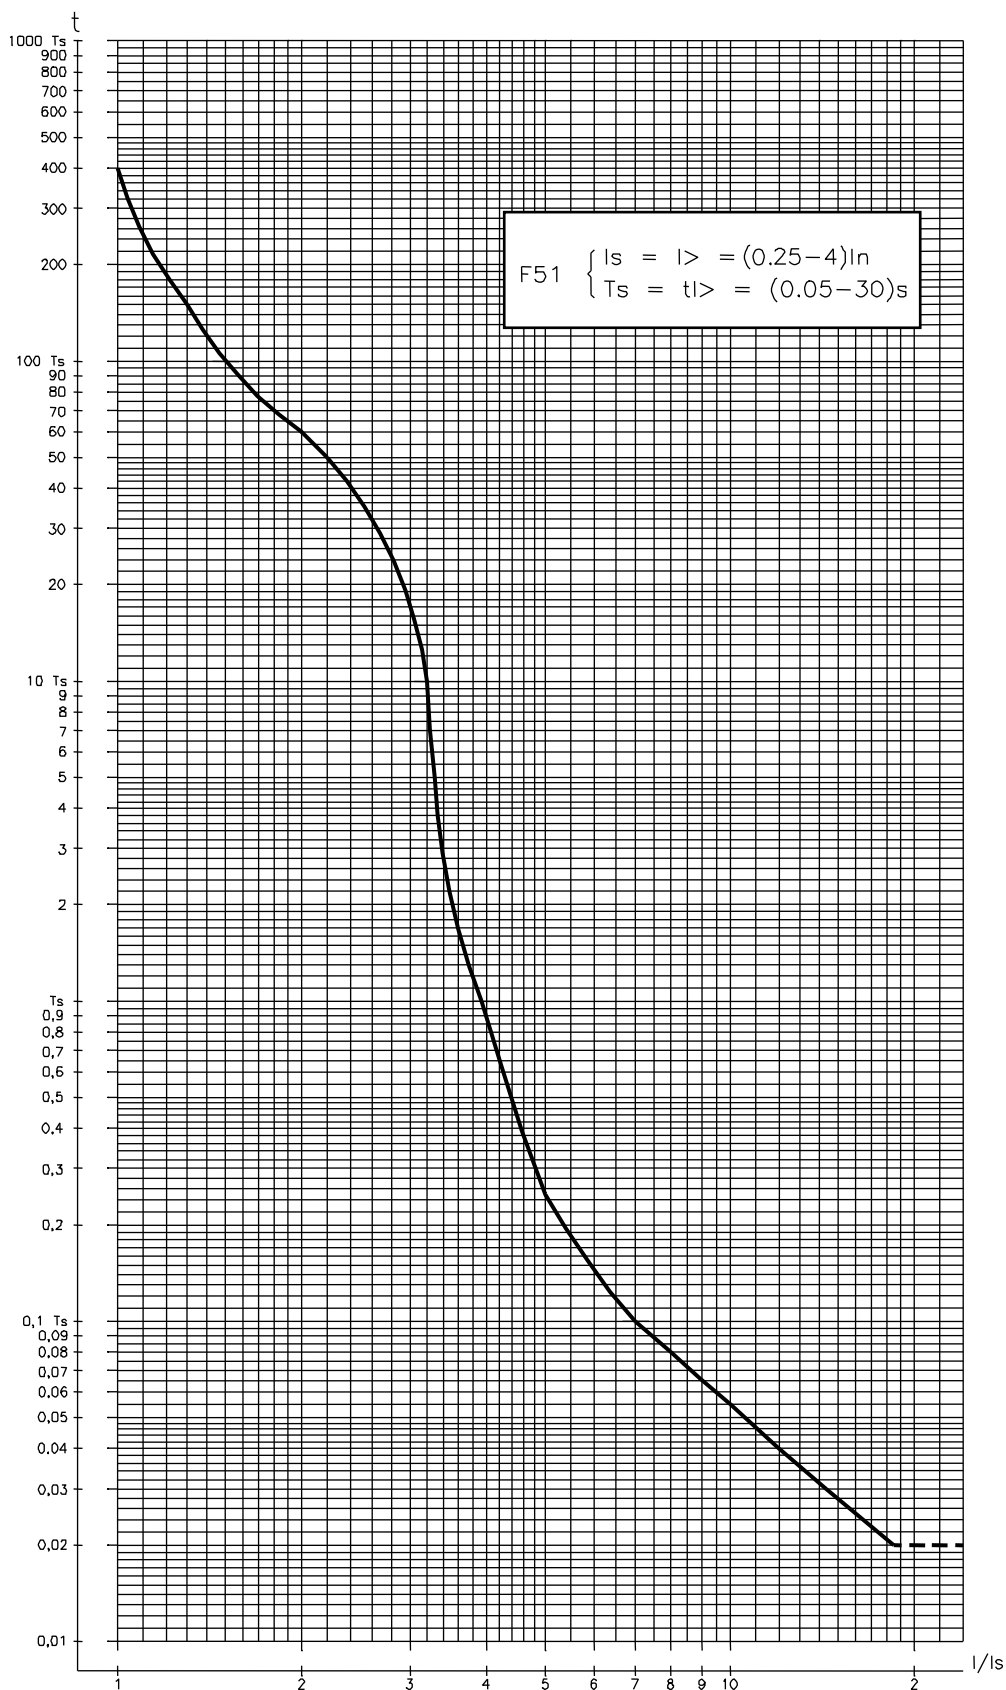




24. DIRECTION FOR PCB'S DRAW-OUT AND PLUG-IN

24.1 Draw-out

Rotate clockwise the screws ① and ② in the horizontal position of the screws-driver mark.
Draw-out the PCB by pulling on the handle ③

24.2 Plug-in

Rotate clockwise the screws ① and ② in the horizontal position of the screws-driver mark.
Slide-in the card on the rails provided inside the enclosure.
Plug-in the card completely and by pressing the handle to the closed position.
Rotate anticlockwise the screws ① and ② with the mark in the vertical position (locked).

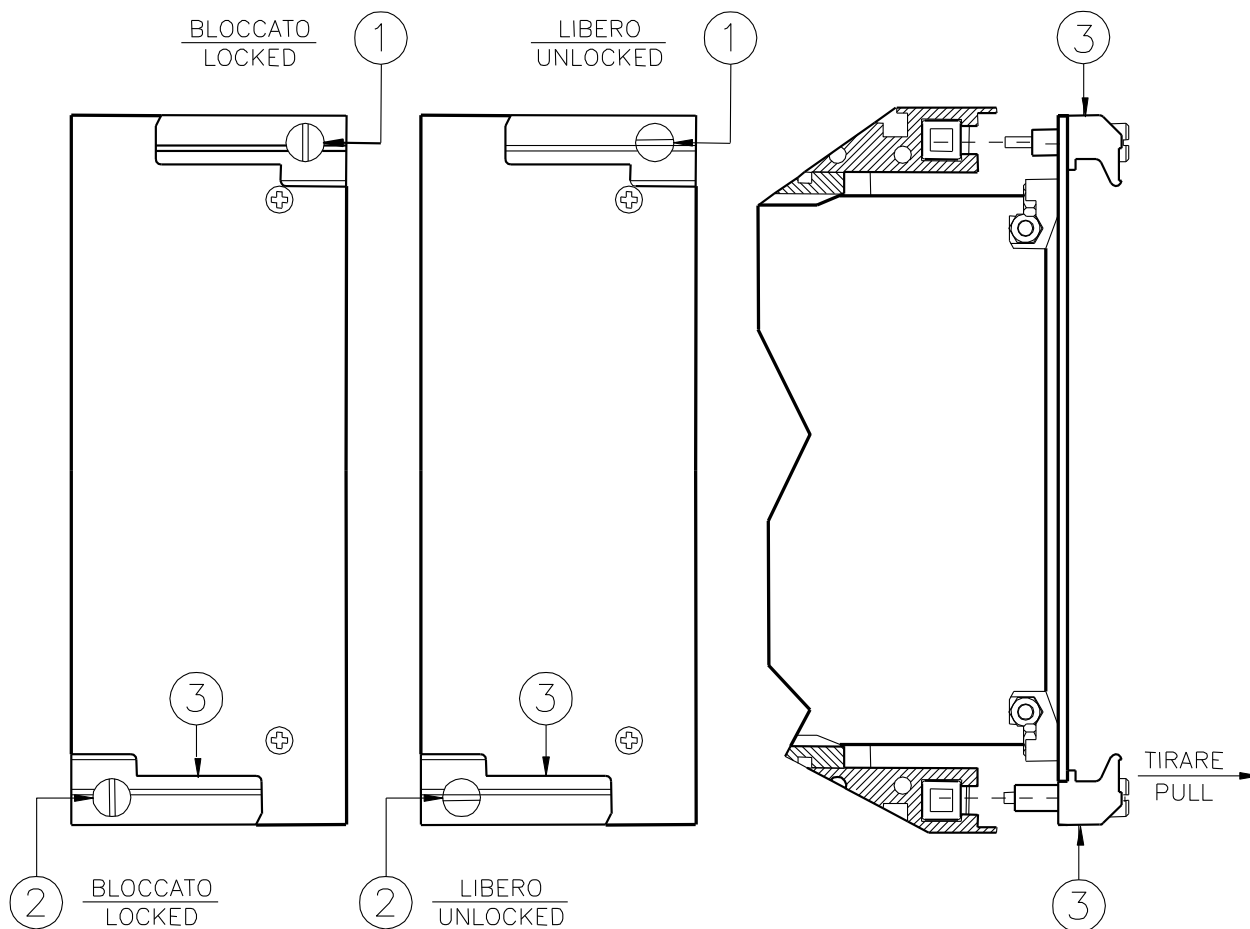



Microelettrica Scientifica



IM30-ABC

Doc. N° MO-0077-ING



Rev. 1

Pag. 30 of 32

25. MOUNTING

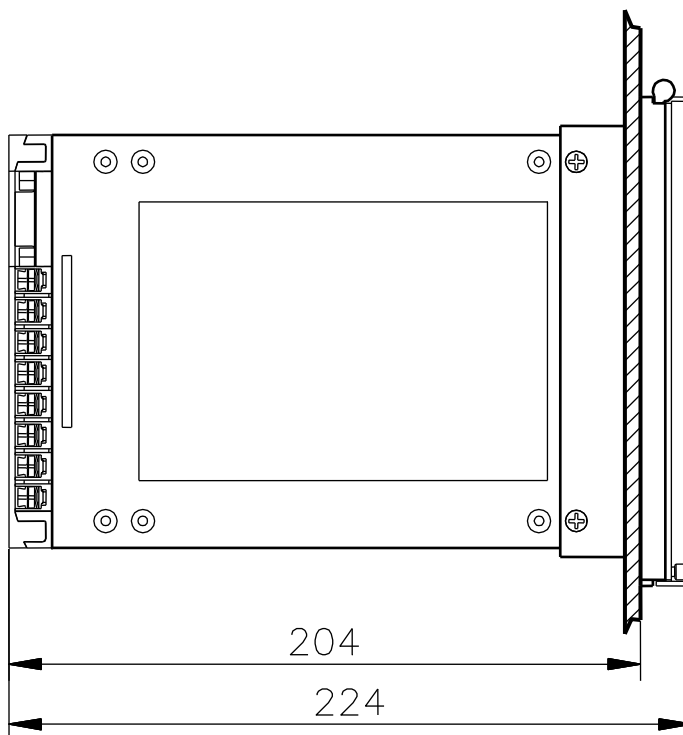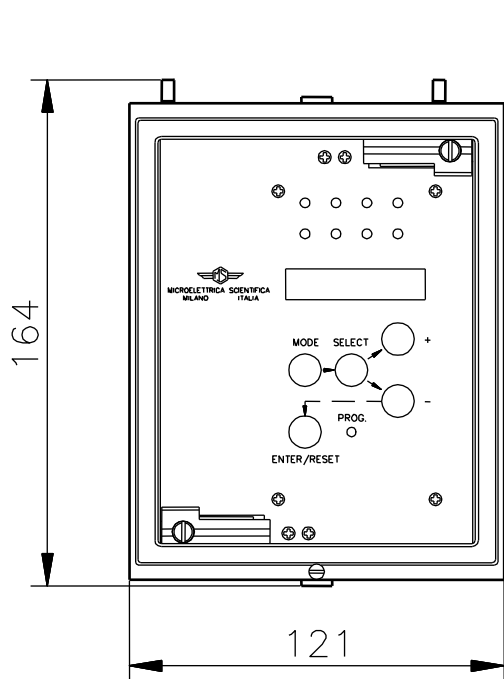


View of Rear
Terminal Connection

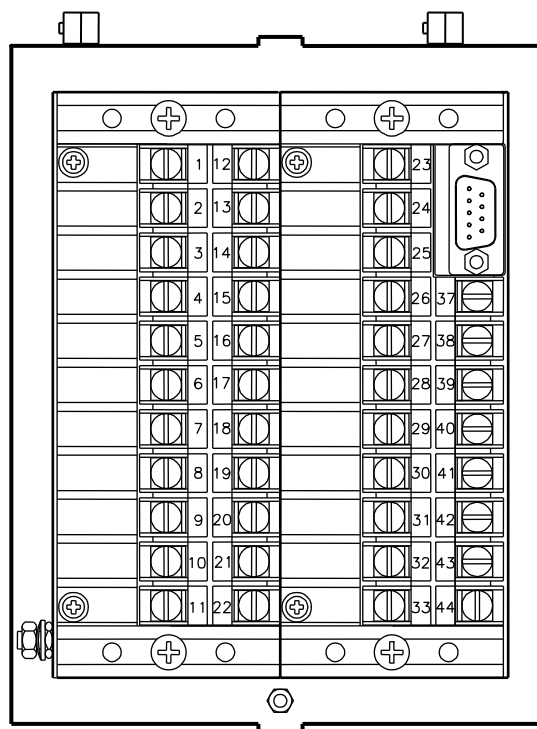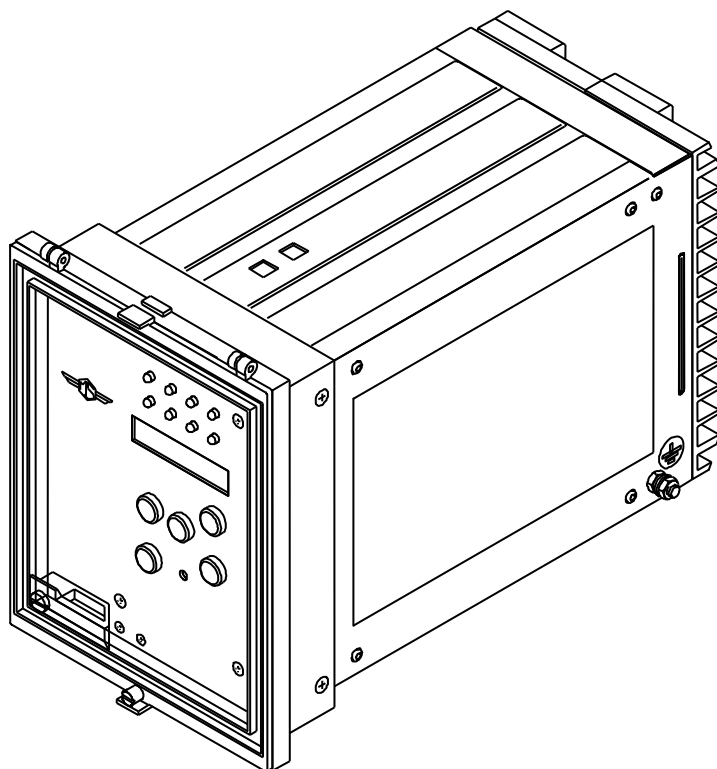



26. KEYBOARD OPERATIONAL DIAGRAM

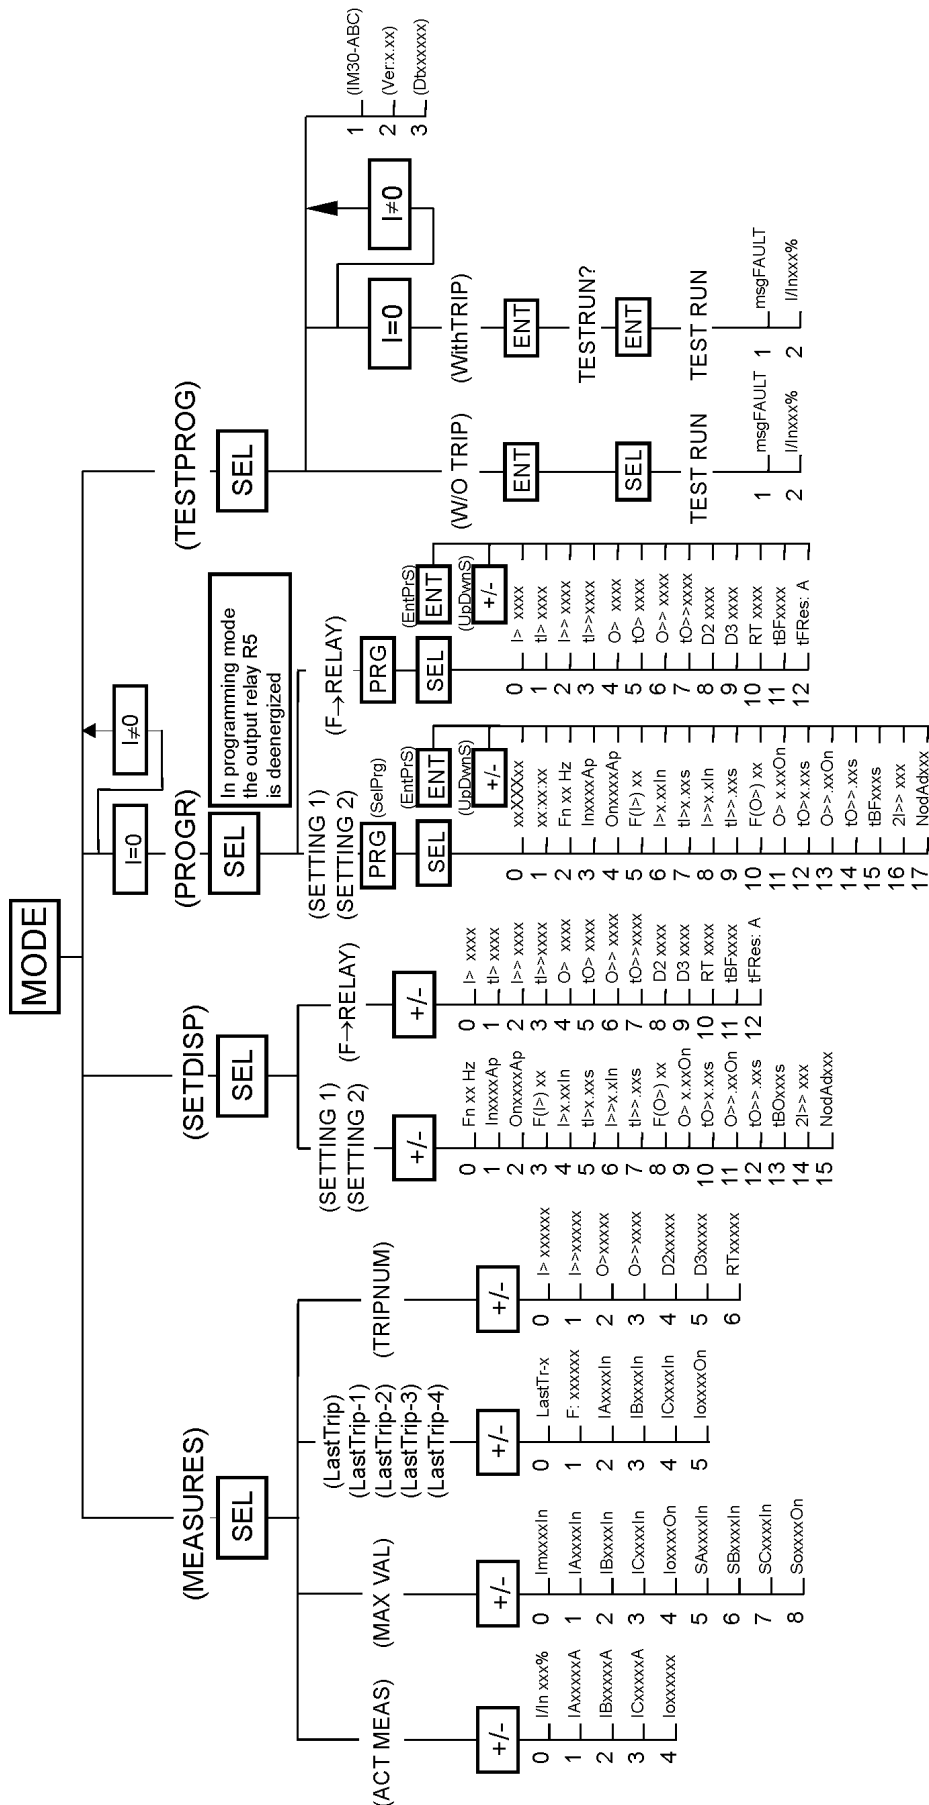

 Microelettrica Scientifica	<h1 style="margin: 0;">IM30-ABC</h1>	Doc. N° MO-0077-ING Rev. 1 Pag. 32 of 32
---	--------------------------------------	--

27. SETTING'S FORM

Relay Type	IM30-ABC	Station :	Circuit :
Date :	/ /	Relay Serial Number :	
Power Supply	<input type="checkbox"/> 24V(-20%) / 110V(+15%) a.c.	24V(-20%) / 125V(+20%) d.c.	Rated Current :
	<input type="checkbox"/> 80V(-20%) / 220V(+15%) a.c.	90V(-20%) / 250V(+20%) d.c.	
		<input type="checkbox"/> 1A	<input type="checkbox"/> 5A

RELAY PROGRAMMING

Variable	Description	Setting Range	Default Setting	Actual Setting	Test Result	
					Pick-up	Reset
Fn	Mains frequency	50 - 60 Hz	50			
In	Rated primary current of the phase C.Ts.	1 - 9999 Ap	500			
On	Rated primary current of the C.Ts. or of the tore C.T. supplying the zero sequence current	1 - 9999 Ap	500			
F(l>)	Operation characteristic of the low-set overcurrent element	D,A,B,C Ml,Sl,Vl,I,El P,C1	D			
l>	Trip level of low-set overcurrent element	0.25 - 4 - Dis	In	0.5		
tl>	Trip time delay of the low-set overcurrent element	0.05 - 30	s	0.05		
l>>	Trip level of high-set overcurrent element	0.5 - 40 - Dis	In	0.5		
tl>>	Trip time delay of the high-set overcurrent element	0.05 - 3	s	0.05		
F(O>)	Operation characteristic of the low-set earth fault element	D,A,B,C Ml,Sl,Vl,I,El P,C1	D			
O>	Trip level of low-set earth fault element	0.02-0.4-Dis	On	0.02		
tO>	Trip time delay of low-set earth fault element.	0.05 - 30	s	0.05		
O>>	Trip level of high-set earth fault element	0.02 - 4 - Dis	On	0.02		
tO>>	Trip time delay of the high-set earth fault element	0.05 - 3	s	0.05		
tBO	Max. reset time delay of the instantaneous elements	0.05 - 0.25	s	0.05		
2l>>	Automatic doubling of high set overcurrent level.	ON - OFF	-	OFF		
NodAd	Identification number for serial communication bus	1 - 250	-	1		

CONFIGURATION OF OUTPUT RELAYS

Default Setting					Actual Setting				
Protect. Element	Output Relays				Description	Protect. Element	Output Relays		
l>	-	-	3	-	Instantaneous element of low-set overcurrent	l>			
tl>	1	-	-	-	As above, time delayed element.	tl>			
l>>	-	-	3	-	Instantaneous element of high-set overcurrent	l>>			
tl>>	1	-	-	-	As above, time delayed element.	tl>>			
O>	-	-	-	4	Instantaneous element of low-set earth fault element.	O>			
tO>	-	2	-	-	As above, time delayed element.	tO>			
O>>	-	-	-	4	Instantaneous element of high-set earth fault element	O>>			
tO>>	-	2	-	-	As above, time delayed element.	tO>>			
D2	-	-	-	-	Digital Input "D2".	D2			
D3	-	-	-	-	Digital Input "D3".	D3			
RT		-	-	-	Digital Input "RT".	RT			
tFRes:	A				Relay reset mode is Automatic.	tFRes:			

Commissioning Engineer : _____

Date : _____

Customer Witness : _____

Date : _____