


OVERCURRENT, EARTH FAULT, SENSITIVE EARTH FAULT, AUTORECLOSE MICROPROCESSOR PROTECTION RELAY

TYPE

IM30-SR

(A 3.00)

OPERATION MANUAL

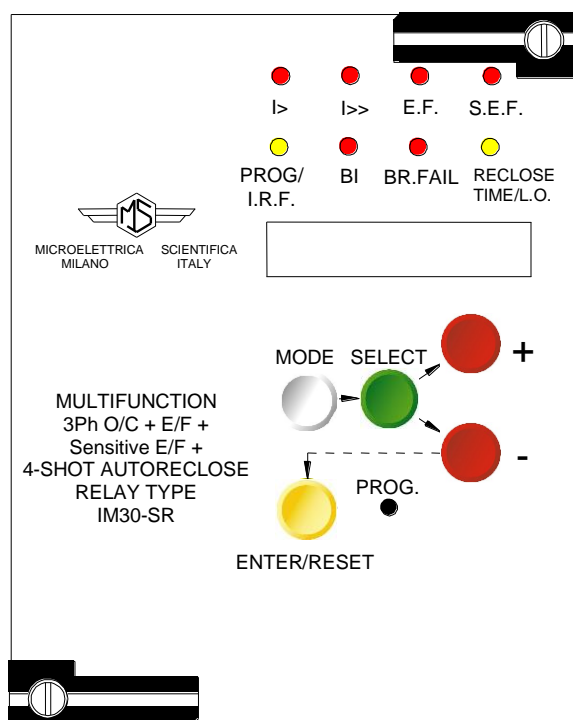

**INDEX**

1	General utilization and commissioning directions	3
1.1	Storage and transportation	3
1.2	Installation	3
1.3	Electrical connection	3
1.4	Measuring inputs and power supply	3
1.5	Outputs loading	3
1.6	Protection earthing	3
1.7	Setting and calibration	3
1.8	Safety protection	3
1.9	Handling	3
1.10	Maintenance	4
1.11	Fault detection and repair	4
2	General characteristics and operation	4
2.1	Power supply	4
2.2	Algorithm of the time current curves	5
2.3	Automatic cold load pick-up	6
2.4	Breaker fail	6
2.5	Autoreclose function	6
2.5.1	Operation	6
2.5.2	Reclaim time tr and lock-out status L.O	6
2.5.3	Reclose command	7
2.5.4	Programmable reclosing sequence	7
2.5.5	Dual setting	8
2.5.6	Sequence coordination	8
2.5.7	External lock-out	8
2.5.8	Reclose counters	8
2.6	Clock and Calendar	9
2.6.1	Clock synchronization	9
2.6.2	Date and time setting	9
2.6.3	Time resolution	9
2.6.4	Operation during power off	9
2.6.5	Time tolerance	9
3	Controls and measurements	10
4	Signalization	11
5	Output relays	12
6	Serial communication	12
7	Digital inputs	13
8	Test	13
9	Keyboard and display operation	14
10	Reading of measurements and recorded parameters	15
10.1	ACT. MEAS (Actual measure)	15
10.2	MAX VAL (Max values)	15
10.3	EVENT RECORDING (Last trip)	15
10.4	TRIP NUM (Trip number)	16
11	Reading of programmed settings and relay's configuration	16
12	Programming	17
12.1	Programming of functions settings	17
12.2	Programming the configuration of output relay	19
13	Manual and automatic test operation	20
13.1	W/O TRIP	20
13.2	WithTRIP	20
14	Maintenance	20
15	Power Frequency Insulation Test	20
16	Electrical characteristics	21
17	Connection diagram (Standard Output)	22
16.1	(Double Output)	22
18	Wiring the serial communication bus	23
19	Change phase current rated input 1A or 5A	23
20	Overall dimensions / Mounting	24
21	Time current curves 1/2	25
22	Time current curves 2/2	26
23	Direction for pcb's draw-out and plug-in	27
22.1	Draw-out	27
22.2	Plug-in	27
24	Keyboard operational diagram	28
25	Setting's form	29

 Microelettrica Scientifica	<h1>IM30-SR</h1>	Doc. N° MO-0094-ING Rev. 2 Pag. 3 of 30
---	------------------	--

1. General utilization and commissioning directions

Always make reference to the specific description of the product and to the Manufacturer's instruction. Carefully observe the following warnings.

1.1 - STORAGE AND TRANSPORTATION

must comply with the environmental conditions stated on the product's instruction or by the applicable IEC standards.

1.2 - INSTALLATION

must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

1.3 - ELECTRICAL CONNECTION

must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

1.4 - MEASURING INPUTS AND POWER SUPPLY

carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

1.5 - OUTPUTS LOADING,

must be compatible with their declared performance.

1.6 - PROTECTION EARTHING

When earthing is required, carefully check its efficiency.

1.7 - SETTING AND CALIBRATION

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

1.8 - SAFETY PROTECTION

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.

1.9 - HANDLING

Notwithstanding the highest practicable protection means used in designing M.S. electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules. The damage caused by electrostatic discharge may not be immediately apparent but the design reliability and the long life of the product will have been reduced. The electronic circuits reduced by M.S. are completely safe from electrostatic discharge (8 KV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

<div> <i>Microelettrica Scientifica</i></div>	IM30-SR	Doc. N° MO-0094-ING
		Rev. 2 Pag. 4 of 30

- a. Before removing a module, ensure that you are at the same electrostatic potential as the equipment by touching the case.
- b. Handle the module by its front-plate, frame, or edges of the printed circuit board. Avoid touching the electronic components, printed circuit tracks or connectors.
- c. Do not pass the module to any person without first ensuring that you are both at the same electrostatic potential. Shaking hands achieves equipotential.
- d. Place the module on an antistatic surface, or on a conducting surface which is at the same potential as yourself.
- e. Store or transport the module in a conductive bag.

More information on safe working procedures for all electronic equipment can be found in BS5783 and IEC 147-OF.

1.10 - MAINTENANCE

Make reference to the instruction manual of the Manufacturer ; maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

1.11 - FAULT DETECTION AND REPAIR

Internal calibrations and components should not be altered or replaced.
For repair please ask the Manufacturer or its authorised Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

2. GENERAL CHARACTERISTICS and OPERATION

Input quantities are supplied to 4 Current Transformers (- three measuring phase currents - one measuring the earth fault zero-sequence current).

Rated current input can be 1 or 5A

Make electric connection in conformity with the diagram reported on relay's enclosure.

Check that input currents are same as reported on the diagram and on the test certificate.

The auxiliary power is supplied by a built-in interchangeable module fully isolated and self protected

2.1 - POWER SUPPLY

The relay can be fitted with two different types of **power supply** module :

- | | | | | | |
|--------|---|-----------------------------|--------|---|-----------------------------|
| a) - { | { | 24V(-20%) / 110V(+15%) a.c. | b) - { | { | 80V(-20%) / 220V(+15%) a.c. |
| | | 24V(-20%) / 125V(+20%) d.c. | | | 90V(-20%) / 250V(+20%) d.c. |

Before energising the unit check that supply voltage is within the allowed limits.

2.2 - ALGORITHM OF THE TIME CURRENT CURVES

The Time Current Curves are generally calculated with the following equation :

$$t(I) = \left[\frac{A}{\left(\frac{I}{I_s} \right)^{a\alpha} - 1} + B \right] \bullet K \bullet T_s + t_r \quad \text{where :}$$

t(I) = Actual trip time delay when the input current equals **I**

I_s = Set minimum pick-up level

$$K = \left(\frac{A}{10^a - 1} + B \right)^{-1}$$

T_s = Set time delay : **t(I) = T_s** when $\frac{I}{I_s} = 10$

t_r = Operation time of the output relay on pick-up.

The constants **A**, **B**, **K** and **a** have different values for the different Time Current Curves.

Curve Name	Curve Identifier	A	B	a	K
IEC A Inverse	A	0.14	0	0.02	0.3366
IEC B Very Inverse	B	13.5	0	1	0.6667
IEC C Extr. Inverse	C	80	0	2	1.2375
IEEE Moderate Inverse	MI	0.0104	0.0226	0.02	4.1106
IEEE Short Inverse	SI	0.00342	0.00262	0.02	13.3001
IEEE Very Inverse	VI	3.88	0.0963	2	7.3805
IEEE Inverse	I	5.95	0.18	2	4.1649
IEEE Extremely Inverse	EI	5.67	0.0352	2	10.814
Independent Definite time	D	t = T _s			

Curves are user selectable for the following relay's functions

- ☐ **1F51** (FI>) = Low-set phase overcurrent
- ☐ **1F51N** (FN>) = Low-set Earth Fault current

For functions

- ☐ **2F51** (I>>, tI>>) = High-set phase overcurrent
- ☐ **2F51N** (N>>, tN>>) = High-set Earth Fault current
- ☐ **1SEF** (O>, tO>) = Low-set Sensitive Earth Fault
- ☐ **2SEF** (O>>, tO>>) = Low-set Sensitive Earth Fault

the operation is Independent Definite time only

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-SR</h1>	Doc. N° MO-0094-ING
		Rev. 2 Pag. 6 of 30

2.3 – Automatic Cold Load pick-up

When selected (2I>=ON), the pick-up level of the high set overcurrent element is changed as follows: If during the first 60 msec from the breaker closing, the current exceeds 1.5 pu of the CTs rated primary current, the setting for the phase high set element is doubled until the phase current drops below 1.25 pu of the rated CT primary current. This prevents nuisance trips associated with extended term cold load pick-up situation, or transformer inrush.

2.4 - Breaker Fail

A programmable time delay (tBF) is set equal to the breaker's clearing time. If the fault is not cleared (i.e. the element has not dropped out) before this timer expires, a breaker fail is indicated. The Breaker Failure function is started by tripping of the relay BT if this is programmed. If no output relay is programmed to BT, the BF function is started at pick-up of any time delayed protection element.

2.5 - Autoreclose Function

2.5.1 - Operation

- ❑ The status of the Circuit Breaker (C/B) is indicated by one normally open contact of the C/B itself and is detected by the digital input "B2" (terminals 1-2) of the relay.
- ❑ A reclose shot is started after a C/B's opening operated by one of the relay's protection elements programmed to control this reclose shot; C/B's opening operated manually, or by one element not programmed to control the reclosure shot, activates the Lock-out status of the Reclosure function.

2.5.2 - Reclaim time tr and lock-out status L.O.

- ❑ Any time the Circuit Breaker is closed, either manually or automatically, the Reclaim time "**tr**" is started.
- ❑ After a manual closure of the C/B, tripping during "**tr**" of any of the relay's time delayed protection elements, makes the relay enter into the Lock-Out status (L.O.). In the L.O. status, the relay does not produce any command for automatic reclose; the lock-out status is monitored by the relevant LED flashing and (if programmed) by pick-up of one output relay. Reset from the L.O. status takes places when the C/B is opened and then manually reclosed.
- ❑ If no tripping of relay's time delayed elements takes places during "**tr**" after a manual closure of the C/B, the relay is ready to start the Automatic Reclose Sequence.
- ❑ If "**tr**" is started by an automatic reclosure, any tripping during "**tr**" of one element programmed for the operation of the next reclosure, starts the reclosure itself.
- ❑ After "**tr**" is expired, the reclosing cycle restarts from the first reclosure (1C). Pick-up of the time start of any element programmed for the control of the next reclosure, stops the counting down of "**tr**" which is restarted as soon as the element is reset.

2.5.3 - Reclose Command

As soon as the C/B is opened due to tripping of one of the relay's elements programmed to initiate the next automatic reclose, the relevant reclose time delay (t1C, t2C, t3C, t4C) is started and, at the end of this txC time, the reclose command is issued by the relay. The C/B is then automatically reclosed and the reclaim time "tr" is started again. If during "tr" the C/B is again opened by a relay's element programmed to initiate the next automatic reclose, the next reclosure takes place after the relevant time txC; the C/B is reclosed and "tr" restarted. When the last Automatic Reclose shot of the sequence has been done, any further tripping during "tr" produces a relay's lock-out status. If after any reclose shot no tripping takes place during "tr", the Reclose Sequence is restarted from the beginning (starting from the first reclose shot 1C)

2.5.4 - Programmable Reclosing Sequence

A reclose sequence can be programmed to operate from 1 up to 4 reclose shots to lock-out. The variable "LO#" = 1, 2, 3, 4 determines the number of shots to Lock-out. Each of the four reclose shots (1C, 2C, 3C, 4C) can be programmed to be initiated when the Circuit Breaker has been opened by tripping of any of the relay's time delayed protection elements (see § 12.1). The elements which are programmed for 1C, 2C etc. can also operate one of the output relays "BT" used as breaker trip relay.

Example :

1C	=	tl> + tl>> + tO> + tO>> + tN>+ tN>>	t1C	=	0.3s
2C	=	tN>> + tO> + tO>>	t2C	=	1s
3C	=	tl> + tO>	t3C	=	3s
4C	=	- - - - -	t4C	=	10s

- ❑ **1st Reclosure** shot is operated after 0.3s if C/B was opened on tripping of any of the relay's protection elements. (tl>, tl>>, tO>, tO>>, tN>, tN>>)
- ❑ **2nd Reclosure** shot is operated after 1s if C/B's opening was caused, during the reclaim time "tr", by tripping of one of the relay's element tN>>, tO>, tO>> only; if tripping was caused by another protection element not included in those programmed for this reclosure shot (for example tl>>) the relay will enter into the lock-out status.
- ❑ **3rd Reclosure** shot is operated after 3s if C/B's opening was caused, during "tr", by tripping of one of the elements tl>, tO> only.
- ❑ **4th Reclosure** shot is not programmed : any new tripping of the C/B during "tr" after the 3rd reclosure will make the relay enter into the L.O. status. By not setting any elements as being enabling elements for a given reclose shot, it is possible to shorten the reclosing cycle. For example, by not defining any overcurrent elements for the 3rd and 4th reclose shots, then any fault sensed after the second shot will cause a lock-out condition. In this manner it is possible to set up one, two, three or four shot to lock-out reclose sequences.

It is also possible to have one of the output relays programmed as Breaker trip (BT) relay. Any element which is enabled for the reclosing sequence and only these, will operate the BT relay in addition to the relay the individual element is programmed for; the other elements, not on the list of the next reclosing shot, will operate only the relay associated with their output relay settings, not the relay BT. If the Breaker tripping is controlled only by the output relay BT, the operation of any element not in the list of the next reclosure, will not open the breaker and then will not start a reclosure. When the programmed number of shots to Lock-out is met the relay locks-out and no further reclosure is started.

 Microelettrica Scientifica	<h1>IM30-SR</h1>	Doc. N° MO-0094-ING
		Rev. 2 Pag. 8 of 30

2.5.5 - Dual Setting

In addition to this flexibility, the relay has two setting groups. Two setting groups enables two different reclose sequences to be made available for changing system conditions: for example, for “storm” and “clear weather” conditions, or for blocking the tripping of any function after any reclosure shot.

Selection between which setting group is active can be made manually via the relay’s keyboard or via serial interface programming.

Moreover swiching-over from setting program 1 to setting program2 can be made automatically after any of the reclosing shots by programming the variable “ ChSet = 1-2-3-4-Dis ”.

For example : Programming ChSet = 3 means that after the third reclose shot the relay will automatically switch from setting 1 to setting 2 and Ch will operate according to Settings 2 program

Setting program 1 is automatically restarted as soon as tr expires.

If Setting program 2 was originally programmed the ChSet function does not operate.

2.5.6 - Sequence Coordination

When selected, (SEQ = ON) Sequence Coordination allows the reclose element to count downstream recloser operations as its own, thereby preventing unnecessary operations of the back-up device for a fault beyond the downstream device. This is particularly useful when the back-up breaker feeds several branch reclosers, only one of which is experiencing a fault.

2.5.7 - External LOCK-OUT

The lock-out status can also be produced by activating the digital input “BX” (terminals 1-44).

If the lock-out input is removed when the C/B is still closed, the relay will come back to its normal status after a time delay “tr”.

2.5.8 - Reclose Counters

Any automatic Reclose Shot is counted by an individual counter (1Cn°, 2Cn°, 3Cn°, 4Cn°) and displayed in the menu “TripNum”. If after a reclose command the status of the C/B does not change (the C/B does not open) the reclose shot is not counted and the relay goes into the lock-out status. Another counter counts any C/B’s operation (OPSn°).

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-SR</h1>	Doc. N° MO-0094-ING
		Rev. 2 Pag. 9 of 30

2.6 - CLOCK AND CALENDAR

The unit features a built in clock calendar with Years, Months, Days, Hours, Minutes, Seconds, Tenths of seconds and Hundredths of seconds.

2.6.1 - Clock synchronization.

The clock can be synchronized via the serial communication interface.

The following synchronization periods can be set: 5, 10, 15, 30, 60 minutes.

Synchronization can also be disabled, in which case the relay ignores the serial broadcast signal.

In case synchronization is enabled, the unit expects to receive a sync signal at the beginning of every hour and once every T_{syn} minutes. When a sync signal is received, the clock is automatically set to the nearest expected synchronization time.

For example: if T_{syn} is 10min and a sync signal is received at 20:03:10 January the 10th, 98, then the clock is set to 20:00:00 January the 10th, 1998.

On the other hand, if the same sync signal were received at 20:06:34, the clock would be set to 20:10:00, January the 10th 98.

Note that if a sync signal is received exactly in the middle of a T_{syn} period, the clock is set to the previous expected synchronization time.

2.6.2 - Date and time setting.

When the PROG/SETTINGS menu is entered, the current date is displayed with one of the groups of digits (YY, MMM or DD) blinking.

The DOWN key operates as a cursor. It moves through the groups of digits in the sequence YY => MMM => DD => YY => ...

The UP key allows the user to modify the currently blinking group of digits.

If the ENTER button is pressed the currently displayed date is set.

Pressing the SELECT button the current time is displayed which can be modified using the same procedure as for the date.

If synchronization is enabled and the date (or time) is modified, the clock is stopped until a sync signal is received via the serial port. This allows the user to manually set many units and have them to start their clocks in a synchronized fashion.

If synchronization is disabled the clock is never stopped.

Note that the setting of a new time always clears 10ths and 100ths of sec.

2.6.3 - Time resolution.

The clock has a 10ms resolution. This means that any event can be time-stamped with a 10ms accuracy, although the information concerning 10ths and 100ths of sec. can be accessed only via the serial communication interface.

2.6.4 - Operation during power off.

The unit has an on board Real Time Clock which maintains time information for at least 1 hour in case of power supply failure.

2.6.5 - Time tolerance.

During power on, time tolerance depends on the on board crystal (+/-50ppm typ, +/-100ppm max. over full temperature range).


During power off, time tolerance depends on the RTC's oscillator (+65 /-270 ppm max over full temperature range).

3. CONTROLS AND MEASUREMENTS

Five key buttons allow for local management of all relay's functions.

A 8-digit high brightness alphanumerical display shows the relevant readings (xxxxxxx) (see synoptic table fig.1)


FIG.1

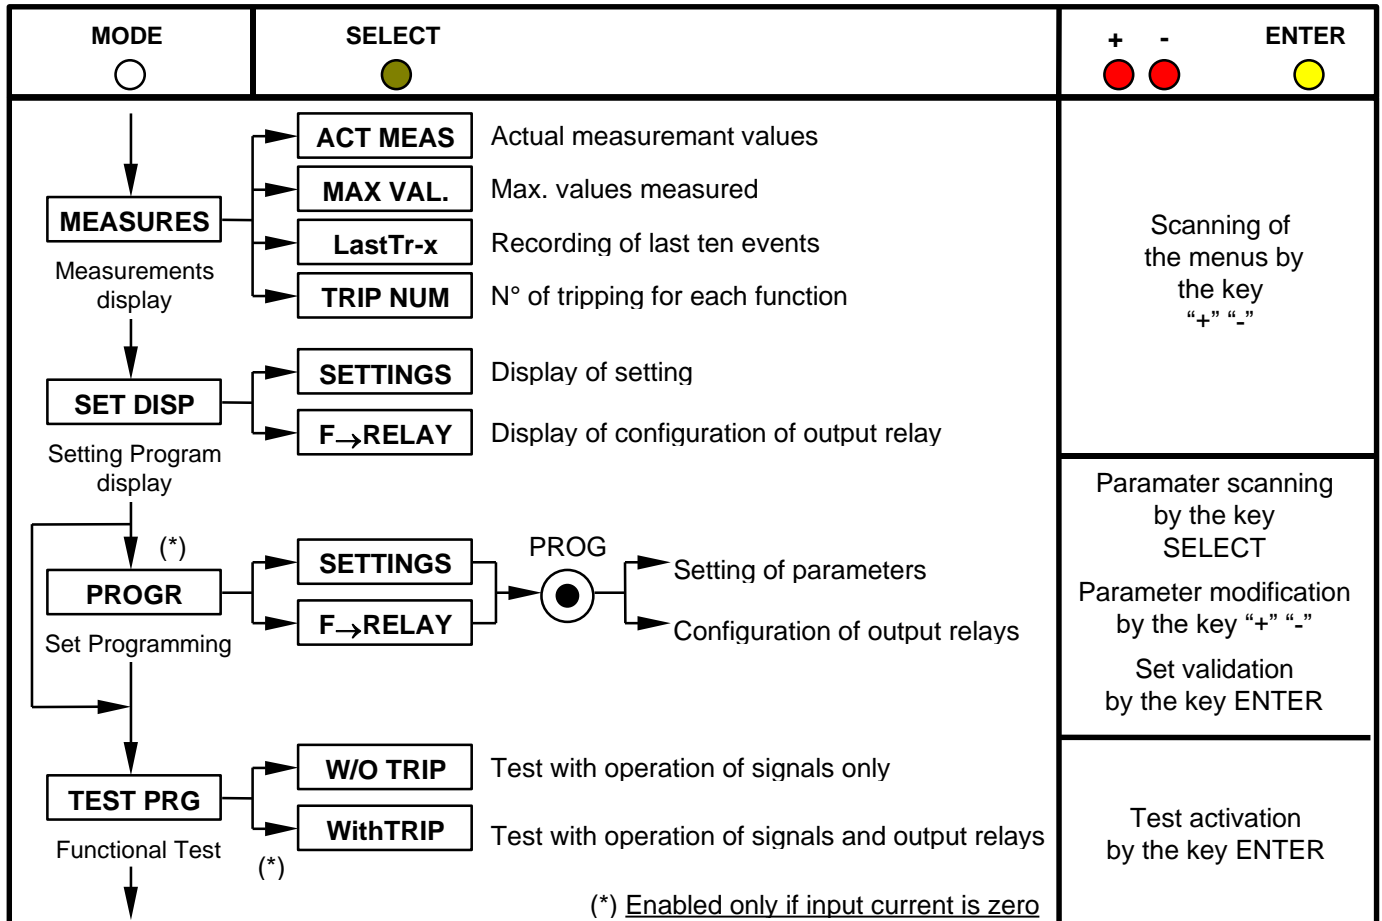

Pressing this button progressively selects between Measurements Display, Setting Display, Programming, and Test modes

The SELECT button chooses which category of values within the chosen mode to display

When in Program mode, this button stores the newly selected value. If not in Program mode and the relay has tripped, this button resets the relay and all output contacts. If not tripped, this button restores the default display.

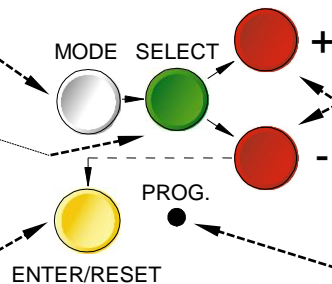


The + and - buttons are used to select the actual measurement or display desired when in Measurements Display or Settings Display modes. When in Program mode, these buttons increase or decrease the value of the displayed setting.

When in Program mode, and when all input currents are zero, pressing this recessed button places the relay into active programming mode, allowing any or all of the relay's settings to be altered.

4. SIGNALIZATIONS

Eight signal leds (normally off) are provided:

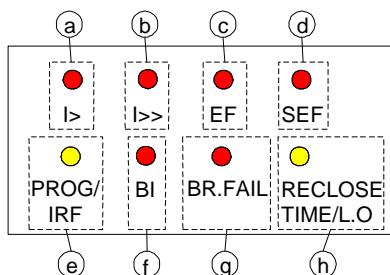

a) Red LED	I>	<input type="checkbox"/> Flashing when measured current exceeds the set trip level [$I_{2>}$]. <input type="checkbox"/> Illuminated on trip after expiry of the set trip time delay [$tI_{2>}$].
b) Red LED	I>>	<input type="checkbox"/> Same as above related to [$I_{2>>}$], [$tI_{2>>}$].
c) Red LED	EF	<input type="checkbox"/> Same as above related to [$N>$], [$tN>$], [$N>>$], [$tN>>$].
d) Red LED	S.E.F.	<input type="checkbox"/> Same, as above related to [$O>$], [$tO>$], [$O>>$], [$tO>>$].
e) Yellow LED	PROG/ I.R.F.	<input type="checkbox"/> Flashing during the programming of the parameters or in case of Internal Relay Fault.
f) Red LED	B.I.	<input type="checkbox"/> Flashing when a blocking signal is present at the relevant input terminals.
g) Red LED	BR.FAIL.	<input type="checkbox"/> Lit-on when the BREAKER FAILURE function is activated.
h) Yellow LED	RECLOSE TIME/L.O.	<input type="checkbox"/> Flashing during reclose timing (txC) <input type="checkbox"/> Lit-on when reclosing function is in the lock-out status

The reset of the leds takes place as follows:

- ☐ From flashing to off, automatically when the lit-on cause disappears.
- ☐ From ON to OFF, by "ENTER/RESET" push button only if the tripping cause has disappeared.

In case of auxiliary power supply failure the status of the leds is recorded and reproduced when power is restored.

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-SR</h1>	Doc. N° MO-0094-ING
		Rev. 2 Pag. 12 of 30

5. OUTPUT RELAYS

Five output relays are available (R1, R2, R3, R4, R5)

- a) - The relays **R1,R2,R3,R4** are normally deenergized (energized on trip): these output relays are user programmable and any of them can be associated to any of the IM30-SR's functions.
Reset of the output relays after pick-up takes place automatically as soon as the tripping cause is cleared. For relays controlled by the time delayed elements of the protection functions (tl>, tl>>, tO>,tO>>, tN>,tN>>) it is possible to select Automatic reset or Manual Reset by the front reset button (see programming of tFRes § 12.2).
The reset of the relay associated to BT (see § 2.6.4) is always automatic.
- b) - The relay **R5**, normally energized, is not programmable and it is deenergized on:
- ☐ internal fault
 - ☐ power supply failure
 - ☐ during the programming

6. SERIAL COMMUNICATION

The relays fitted with the serial communication option can be connected via a cable bus a fiber optic bus for interfacing with a Personal Computer (type IBM or compatible).

All the functionalities that can be operated locally (for example reading of input measurement and changing of relay's settings) are also possible via the serial communication interface.

Furthermore the serial port allows the user to read event recording and stored data.

The unit has a RS232 / RS485 interface and can be connected either directly to a P.C. via a dedicated cable or to a RS485 serial bus, allowing having many relays to exchange data with a single master P.C. using the same physical serial line. A RS485/232 converter is available on request.

The communication protocol is MODBUS RTU (only functions 3, 4 and 16 are implemented).

Each relay is identified by its programmable address code (NodeAd) and can be called from the P.C.

A dedicated communication software (MSCOM) for Windows 95/98/NT4 SP3 (or later) is available.

Please refer to the MSCOM instruction manual for more information Microelettrica Scientifica.

7. DIGITAL INPUTS

Three optoisolated digital inputs are available:

- ❑ Open circuit voltage at relevant terminals (1-2, 1-3, 1-14) is 15 Vdc
- ❑ Internal resistance 2,2kΩ

The inputs are activated when relevant terminals are shorted (external resistance < 2kΩ)

❑ B2 (terminals 1 - 2) :	connected to a normally open auxiliary contact of the Circuit Breaker, it discriminates Open Status (contact open) or Closed Status (contact closed) of the C/B. This input is used for operation of the autoreclose functions.
❑ B3 (terminals 1 - 3) :	it blocks the operation of the time delayed element of the functions as programmed: the blocking input blocks the operation of the output relay of the function blocked but not its time delay; when the block input is removed the output relay will trip instantaneously (if the function's trip time delay is already expired) or after the remaining time delay. (see "Programming of function settings" § 12.1)
❑ B4 (terminals 1 - 14) :	Remote Trip control. Activation of the input R.T. (Terminals 1-14 shorted) produces the following operation : <ul style="list-style-type: none"> ❑ The output relay associated to the function R.T. is energized ❑ The Trip Number Counter R.T. is incremented by 1 unit ❑ The event recording is activated and shows "CAUSE: RT"
❑ BX (terminals 1 - 44) :	It blocks the operation of the Autoreclose function : the blocking input makes the reclose lock-out led "h" lit-on, the Alarm relay (if programmed) pick-up and the reclose function to go into the Locked Status. When the blocking input is removed the relay comes back to the normal status after the waiting time 5s . The presence of a blocking input signal is monitored by the red led "g" flashing.

8. TEST


Besides the normal "WATCHDOG" and "POWERFAIL" functions, a comprehensive program of self-test and self-diagnostic provides:

- ❑ Diagnostic and functional test, with checking of program routines and memory's content, run every time the aux. power is switched-on: the display shows the type of relay and its version number.
- ❑ Dynamic functional test run during normal operation every 15 min. (relay's operation is suspended for less than ≤4 ms). If any internal fault is detected, the display shows a fault message, the Led "PROG/IRF" illuminates and the relay R5 is deenergized.
- ❑ Complete test activated by the keyboard or via the communication bus either with or without tripping of the output relays.

9. KEYBOARD AND DISPLAY OPERATION

All controls can be operated from relay's front or via serial communication bus.

The keyboard includes five hand operable buttons **(MODE)** - **(SELECT)** - **(+)** - **(-)** - **(ENTER/RESET)** plus one indirect operable key **(PROG)** (see synoptic table a fig.1):

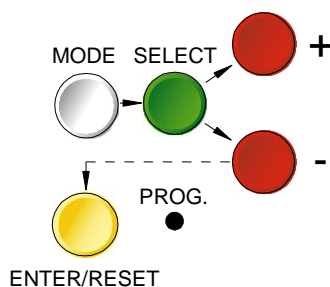

a) - White key	MODE	: when operated it enters one of the following operation modes indicated on the display :
	MEASURES	= Reading of all the parameters measured and of those recorded in the memory
	SET DISP	= Reading of the settings and of the configuration of the output relays as programmed.
	PROG	= Access to the programming of the settings and of relay configuration.
	TEST PROG	= Access to the manual test routines.
b) - Green key	SELECT	: When operated it selects one of the menus available in the actual operation MODE
c) - Red key	“+” AND “-”	: When operated they allow to scroll the different information available in the menu entered by the key SELECT
d) - Yellow key	ENTER/RESET	: It allows the validation of the programmed settings <ul style="list-style-type: none"> - the actuation of test programs - the forcing of the default display indication - the reset of signal Leds.
e) - Indirect key	●	: Enables access to the programming.

 Microelettrica Scientifica	<h1>IM30-SR</h1>	Doc. N° MO-0094-ING Rev. 2 Pag. 15 of 30
--	------------------	---

10. READING OF MEASUREMENTS AND RECORDED PARAMETERS

Enter the MODE "MEASURE", SELECT the menus "ACT.MEAS"- "MAX VAL"- "LASTTRIP"- "TRIP NUM", scroll available information by key "+" or "-".

10.1 - ACT.MEAS

Actual values as measured during the normal operation. The values displayed are continuously refreshed.

Display	Description
xxXXXxx	Date : Day, Month, Year
xx:xx:xx	Hour : Hours, Minutes, Seconds
IAxxxxxA	True R.M.S. value of the current of phase A displayed as primary Amps. (0 – 99999)
IBxxxxxA	As above, phase B.
ICxxxxxA	As above, phase C.
NxxxxxA	As above, earth fault current calculated as $\overline{IA} + \overline{IB} + \overline{IC}$
OxxxxxA	As above, earth fault current measured on SEF input

10.2 - MAX VAL

Highest values recorded starting from 100ms after closing of main Circuit Breaker plus inrush values recorded within the first 100ms from Breaker closing, (refreshed any time the breaker closes).

Display	Description
IAxx.xIn	Max demand of phase A current after the first 100ms, displayed as p.u. of C.Ts rated current
IBxx.xIn	As above, phase B.
ICxx.xIn	As above, phase C.
Nxx.xIn	As above, earth fault current calculated.
Ox.xxOn	As above, earth fault measured.
SAxx.xIn	Max demand current of phase A during the first 100ms.
SBxx.xIn	As above, phase B.
SCxx.xIn	As above, phase C.
SOx.xxOn	As above, earth fault current measured.

10.3 - EVENT RECORDING

Display of the function which caused the tripping of the relay plus values of the parameters at the moment of tripping. The last eight events are recorded
The memory buffer is refreshed at each new relay tripping with a decreasing numbering (FIFO logic).

Display	Description
LastTr-x	Indication of the recorded event (x= 0 to 7) Example: Last event (LastTr-0) Last but one event (LastTr-1) etc...
xxXXXxx	Date : Day, Month, Year
xx:xx:xx	Hour : Hours, Minutes, Seconds
F: xxxxx	Display of the function which caused the last tripping: $i = tI>; I = tI>>; o = tO>; O = tO>>; n=tN>; N=tN>>; RT$
IAxx.xIn	Current of phase A.
IBxx.xIn	Current of phase B.
ICxx.xIn	Current of phase C.
Nxx.xIn	Earth fault current calculated.
Ox.xxOn	Earth fault current measured.
trxxxxxs	Remaining time to elapse of tr – If tr≠0 the trip has taken place during tr after a closure

10.4 - TRIP NUM

Counters of the number of operations for each of the relay functions.
The memory is non-volatile and can be cancelled only with a secret procedure.

Display	Description
I> xxxxx	Low set timed overcurrent element [tl>] operations
I>> xxxxx	High set overcurrent element [tl>>] operations
N> xxxxx	Low set earth fault element [tN>] operations
N>> xxxxx	High set earth fault element [tN>>] operations
O> xxxxx	Low set S.E.F. element [tO>] operations
O>> xxxxx	High set S.E.F. element [tO>>] operations
1C xxxxxx	N° of reclosure operated by the first reclosing shot 1C
2C xxxxxx	N° of reclosure operated by the 2 nd reclosing shot 2C
3C xxxxxx	N° of reclosure operated by the 3 rd reclosing shot 3C
4C xxxxxx	N° of reclosure operated by the 4 th reclosing shot 4C
OPS xxxxx	Number of Circuit Breaker's operations
RT xxxxx	Remote trip

11. READING OF PROGRAMMED SETTINGS AND RELAY'S CONFIGURATION

Enter the mode "SET DISP", select the menu "SETTINGS" or "F → RELAY", scroll information available in the menu by keys "+" or "-".

- ☐ **SETTINGS** = values of relay's operation parameters as programmed
- ☐ **F → RELAY** = output relays associated to the different functions as programmed.

12. PROGRAMMING

The relay is supplied with the standard default programming used for factory test. [Values here below reported in the “ Display “ column].

The same factory programming is used for both the two settings – Setting 1 and Setting 2 – available as explained at § 2.6.3.


All parameters can be modified as needed in the mode PROG and displayed in the mode SET DISP
Local Programming by the front face key board is enabled only if no input current is detected (main switch open). Programming via the serial port is always enabled but a password is required to access the programming mode. The default password is the null string; in the standard application program for communication “MS-COM” it is also provided an emergency password which can be disclosed on request only.

As soon as programming is enabled, the Led PRG/IRF flashes and the alarm relay R5 is deenergized.. Enter MODE “PROG” and SELECT either “SETTING1” or “SETTING2” for programming of parameters or “F→RELAY” for programming of output relays configuration; enable programming by the indirect operation key PROG.

The key SELECT now scrolls the available parameters. By the key (+) , (-) the displayed values can be modified; to speed up parameter’s variation press the key SELECT while “+” or “-” are pressed.

Press key “ENTER/RESET” to validate the set values.

12.1 - PROGRAMMING OF FUNCTIONS SETTINGS

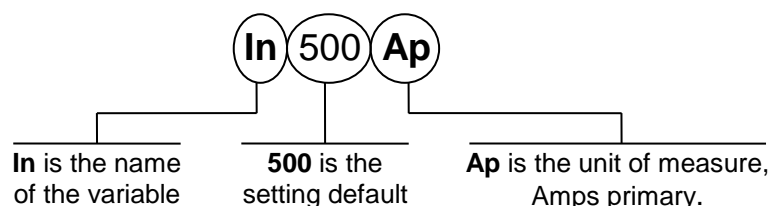

Mode PROG menu SETTINGS. (Production standard settings here under shown).


Display	Description	Setting Range	Step	Unit
xxxxxxx	Current date	DDMMYY	-	-
xx:xx:xx	Current time	HH:MM:SS	-	-
Fn 50 Hz	Mains frequency	50 – 60	10	Hz
In 500Ap	Rated primary current of the phase C.Ts.	1 – 9999	1	A
On 500Ap	Rated primary current of the C.Ts. or of the tore C.T. supplying the zero sequence current	1 – 9999	1	A
F(I>) D	Operation characteristic of the low-set overcurrent element: (D) = Independent definite time (A) = IEC Inverse Curve type A (B) = IEC Very Inverse Curve type B (C) = IEC Extremely Inverse Curve type C (MI) = IEEE Moderate Inverse Curve (SI) = IEEE Short Inverse Curve (VI) = IEEE Very Inverse Curve (I) = IEEE Inverse Curve (EI) = IEEE Extremely Inverse Curve	D A B C MI SI VI I EI	D A B C MI SI VI I EI	-
I> 1.0In	Trip level of low-set overcurrent element (p.u. of the rated current of the phase C.Ts.)	0.1 - 4 - Dis	0.01	In
tl> 2.0s	Trip time delay of the low-set overcurrent element In the inverse time operation [tl>] is the trip time delay at I = 10x[I>]	0.01 - 30	0.01	s
I>> 2In	Trip level of high-set overcurrent element (p.u. of the rated current of the phase C.Ts)	0.1 - 40 - Dis	0.1	In
tl>> 1.0s	Trip time delay of the high-set overcurrent element	0.01 - 3	0.01	s

 Microelettrica Scientifica	<h1 style="text-align: center;">IM30-SR</h1>	Doc. N° MO-0094-ING
		Rev. 2 Pag. 18 of 30

Display	Description	Setting Range	Step	Unit
2I>> ON	Automatic Cold Load pick-up	ON - OFF	ON-OFF	-
F(N>) D	Operation characteristic of the low-set earth fault element: (D) = Independent definite time (A) = IEC Inverse Curve type A (B) = IEC Very Inverse Curve type B (C) = IEC Extremely Inverse Curve type C (MI) = IEEE Moderate Inverse Curve (SI) = IEEE Short Inverse Curve (VI) = IEEE Very Inverse Curve (I) = IEEE Inverse Curve (EI) = IEEE Extremely Inverse Curve	D A B C MI SI VI I EI	D A B C MI SI VI I EI	-
N> 1In	Trip level of low-set earth fault element (p.u. of the rated current of the phase C.Ts.)	0.5 – 4 -Dis	0.01	In
tN> 1 s	Trip time delay of low-set earth fault element. In the inverse time operation [tO>] is the trip time delay at I = 10x[O>].	0.01 - 30	0.01	s
N>> 2 In	Trip level of high-set earth fault element (p.u. of the rated current of the phase C.Ts.)	0.5 - 40 - Dis	0.1	In
tN>> 3 s	Trip time delay of the high-set earth fault element	0.01 – 3	0.01	s
O> 0.1On	Trip level of low-set S.E.F. element (p.u. of the rated current of the S.E.F. C.Ts.)	0.02 – 4 - Dis	0.01	On
tO> 3 s	Trip time delay of low-set S.E.F. element	0.01 - 30	0.01	s
O>> 0.5 On	Trip level of high-set earth fault element (p.u. of the rated current of the S.E.F. C.Ts.)	0.02 – 4 - Dis	0.01	On
tO>> 2 s	Trip time delay of the high-set S.E.F. element	0.01 – 9.9	0.01	s
1C —I—O	Selection of the function(s) selected to initiate the first reclosing shot 1C (i = tI>; I = tI>>; o = tO>; O = tO>>; n=tN>; N=Tn>>)	----- n N i l o O	-	-
2C -i-oO	As above for second reclosing shot 2C (i = tI>; I = tI>>; o = tO>; O = tO>>; n=tN>; N=Tn>>)	----- n N i l o O	-	-
3C —oO	As above for third reclosing shot 3C (i = tI>; I = tI>>; o = tO>; O = tO>>; n=tN>; N=Tn>>)	----- n N i l o O	-	-
4C —I—O	As above for fourth reclosing shot 4C (i = tI>; I = tI>>; o = tO>; O = tO>>; n=tN>; N=Tn>>)	----- n N i l o O	-	-
t1C 2s	Reclosing time interval of first reclosing shot	0.1 - 1800	0.1	s
t2C 4s	As above for 2 nd reclosing shot	0.1 - 1800	0.1	s
t3C 6s	As above for 3 rd reclosing shot	0.1 - 1800	0.1	s
t4C 8s	As above for 4 th reclosing shot	0.1 - 1800	0.1	s
tr 8s	Reset interval (reclaim time) after any successful reclosure	0.1 - 200	0.1	s
LO# 3	Lock-out number. Determines the number of shots to Lock-out	1 – 2 – 3 – 4	1-2-3-4	-
ChSet 2	Change Setting. Determines when the relay automatically changes from setting group 1 to setting group 2 (not viceversa)	1-2-3-4-Dis	1-2-3-4-Dis	-
SEQ COFF	Sequence coordination with downstream recloser	ON - OFF	ON-OFF	-
tBF 0.25s	Time delay for Breaker Failure alarm	0.05 - 0.75	0.01	s
B→I> OFF	Blocking Input at terminals 1-3, blocks the timed output of the funct. I>	ON - OFF	ON-OFF	-
B→I>>OFF	As above, for function I>>	ON - OFF	ON-OFF	-
B→N> OFF	As above, for function N>	ON - OFF	ON-OFF	-
B→N>>OFF	As above, for function N>>	ON - OFF	ON-OFF	-
B→O> OFF	As above, for function O>	ON - OFF	ON-OFF	-
B→O>>OFF	As above, for function O>>	ON - OFF	ON-OFF	-
B→RcIOFF	Blocking Input at terminals 1-44, blocks the reclose function	ON - OFF	ON-OFF	-
Tsyn Dis m	Synchronisation Time Expected time interval between sync. pulses.	5 - 60 - Dis	5-10 15-30 60-Dis	m
NodAd 1	Identification number for connection on serial communication bus	1 - 250	1	-

The setting Dis indicates that the function is disactivated.

12.2 - PROGRAMMING THE CONFIGURATION OF OUTPUT RELAYS

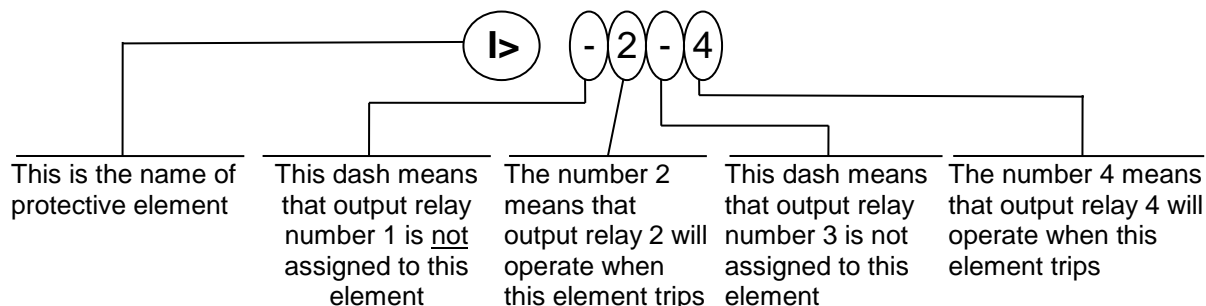

Mode PROG menu F→RELAY (Production standard settings here under shown).

The key "+" operates as cursor; it moves through the digits corresponding to the four programmable relays in the sequence 1,2,3,4,(1= relay R1, etc.) and makes start flashing the information actually present in the digit. The information present in the digit can be either the number of the relay (if this was already associated to the function actually on programming) or a dot (-) if the relay was not yet addressed.

The key "-" changes the existing status from the dot to the relay number or viceversa.

Display	Description	
I> ----	Instantaneous element of low-set overcurrent (only one or more, whatever combination)	operates relays R1,R2,R3,R4.
tl> 1---	As above, time delayed element.	operates relays R1,R2,R3,R4.
I>> ----	Instantaneous element of high-set overcurrent	operates relays R1,R2,R3,R4.
tl>> -2--	As above, time delayed element.	operates relays R1,R2,R3,R4.
N> ----	Instantaneous element of low-set earth fault element	operates relays R1,R2,R3,R4.
tN> 1---	As above, time delayed element.	operates relays R1,R2,R3,R4.
N>> ----	Instantaneous element of high-set earth fault element	operates relays R1,R2,R3,R4.
tN>> -2--	As above, time delayed element.	operates relays R1,R2,R3,R4.
O> ----	Instantaneous element of low-set earth S.E.F.	operates relays R1,R2,R3,R4.
tO> 1---	As above, time delayed element.	operates relays R1,R2,R3,R4.
O>> ----	Instantaneous element of high-set earth S.E.F.	operates relays R1,R2,R3,R4.
tO>> -2--	As above, time delayed element.	operates relays R1,R2,R3,R4.
C ---4	Reclosure	operates relays R1,R2,R3,R4.
rLO --3-	Reclose Lock-out status	operates relays R1,R2,R3,R4.
tBF ----	Breaker failure alarm	operates relays R1,R2,R3,R4.
BT ----	Breaker Trip relay. (see § 2.6.2)	
RT ----	Remote trip command (input 1-14)	operates relays R1,R2,R3,R4.
tFRes: A	The reset after tripping of the relays associated to the time delayed elements can take place: (A) automatically when current drops below the trip level. (M) manually by the operation of the "ENTER/RESET" key. The reset is always automatic for relays assigned to instantaneous element or to the Reclose function.	

13. MANUAL AND AUTOMATIC TEST OPERATION

13.1 - Mode "TESTPROG" subprogram "W/O TRIP"

Operation of the yellow key activates a complete test of the electronics and the process routines. All the leds are lit-on and the display shows (TEST RUN). If the test routine is successfully completed the display switches-over to the default reading (xxxxxxx). If an internal fault is detected, the display shows the fault identification code and the relay R5 is deenergized. This test can be carried-out even during the operation of the relay without affecting the relay tripping in case a fault takes place during the test itself.

13.2 - Mode "TESTPROG" subprogram "With TRIP"

Access to this program is enabled only if the current detected is zero (breaker open). Pressing the yellow key the display shows "TEST RUN?". A second operation of the yellow key starts a complete test which also includes the activation of all the output relays. The display shows (TEST RUN) with the same procedure as for the test with W/O TRIP. Every 15 min during the normal operation the relay automatically initiates an auto test procedure (duration ≤ 10 ms). If any internal fault is detected during the auto test, the relay R5 is deenergized, the relevant led is activated and the fault code is displayed.



WARNING

Running the **With TRIP** test will operate all of the output relays. Care must be taken to ensure that no unexpected or harmful equipment operations will occur as a result of running this test. It is generally recommended that this test be run only in a bench test environment or after all dangerous output connections are removed.

14. MAINTENANCE

No maintenance is required. Periodically a functional check-out can be made with the test procedures described under MANUAL TEST chapter. In case of malfunctioning please contact Microelettrica Scientifica Service or the local Authorised Dealer mentioning the relay's Serial No reported in the label on relays enclosure.



WARNING

In case of Internal Relay Fault detection, proceed as here-below indicated :

- ☐ If the error message displayed is one of the following "DSP Err", "ALU Err", "KBD Err", "ADC Err", switch off power supply and switch-on again. If the message does not disappear send the relay to Microelettrica Scientifica (or its local dealer) for repair.
- ☐ If the error message displayed is "E2P Err", try to program any parameter and then run "W/OTRIP".
- ☐ If message disappear please check all the parameters.
- ☐ If message remains send the relay to Microelettrica Scientifica (or its local dealer) for repair.

15. POWER FREQUENCY INSULATION TEST

Every relay individually undergoes a factory insulation test according to IEC255-5 standard at 2 kV, 50 Hz 1min. Insulation test should not be repeated as it unusefully stresses the dielectrics. When doing the insulation test, the terminals relevant to serial output must always be short circuited to ground. When relays are mounted in switchboards or relay boards that have to undergo the insulation tests, the relay modules must be drawn-out of their enclosures and the test must only include the fixed part of the relay with its terminals and the relevant connections.

This is extremely important as discharges eventually taking place in other parts or components of the board can severely damage the relays or cause damages, not immediately evident to the electronic components.

16. ELECTRICAL CHARACTERISTICS

APPROVAL: CE – RINA – UL and CSA approval File : E202083

REFERENCE STANDARDS IEC 60255 - EN50263 - CE Directive - EN/IEC61000 - IEEE C37

<input type="checkbox"/> Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
<input type="checkbox"/> Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) – 1,2/50µs
<input type="checkbox"/> Insulation resistance	> 100MΩ	

Environmental Std. Ref. (IEC 68-2-1 - 68-2-2 - 68-2-33)

<input type="checkbox"/> Operation ambient temperature	-10°C / +55°C	
<input type="checkbox"/> Storage temperature	-25°C / +70°C	
<input type="checkbox"/> Humidity	IEC68-2-3 RH 93% Without Condensing AT 40°C	

CE EMC Compatibility (EN50081-2 - EN50082-2 - EN50263)

<input type="checkbox"/> Electromagnetic emission	EN55022 industrial environment			
<input type="checkbox"/> Radiated electromagnetic field immunity test	IEC61000-4-3	level 3	80-1000MHz	10V/m
	ENV50204		900MHz/200Hz	10V/m
<input type="checkbox"/> Conducted disturbances immunity test	IEC61000-4-6	level 3	0.15-80MHz	10V
<input type="checkbox"/> Electrostatic discharge test	IEC61000-4-2	level 4	6kV contact / 8kV air	
<input type="checkbox"/> Power frequency magnetic test	IEC61000-4-8		1000A/m	50/60Hz
<input type="checkbox"/> Pulse magnetic field	IEC61000-4-9		1000A/m, 8/20µs	
<input type="checkbox"/> Damped oscillatory magnetic field	IEC61000-4-10		100A/m, 0.1-1MHz	
<input type="checkbox"/> Electrical fast transient/burst	IEC61000-4-4	level 3	2kV, 5kHz	
<input type="checkbox"/> HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3	400pps, 2,5kV (m.c.), 1kV (d.m.)	
<input type="checkbox"/> Oscillatory waves (Ring waves)	IEC61000-4-12	level 4	4kV(c.m.), 2kV(d.m.)	
<input type="checkbox"/> Surge immunity test	IEC61000-4-5	level 4	2kV(c.m.), 1kV(d.m.)	
<input type="checkbox"/> Voltage interruptions	IEC60255-4-11			
<input type="checkbox"/> Resistance to vibration and shocks	IEC60255-21-1 - IEC60255-21-2 10-500Hz 1g			

CHARACTERISTICS

<input type="checkbox"/> Accuracy at reference value of influencing factors	2% Rated Input for measure 0,2% On 2% +/- 10ms for times
<input type="checkbox"/> Rated Current	In = 1 or 5A - On = 1 or 5A
<input type="checkbox"/> Current overload	200 A for 1 sec; 10A continuous
<input type="checkbox"/> Burden on current inputs	Phase : 0.01VA at In = 1A; 0.2VA at In = 5A 0.02VA at On = 1A; 0.4VA at On = 5A
<input type="checkbox"/> Rated Voltage	Un = 100V (different on request)
<input type="checkbox"/> Voltage overload	2 Un continuous
<input type="checkbox"/> Burden on voltage input	0,04 VA at Un
<input type="checkbox"/> Average power supply consumption	8.5 VA
<input type="checkbox"/> Output relays	rating 5 A; Vn = 380 V A.C. resistive switching = 1100W (380V max) make = 30 A (peak) 0,5 sec. break = 0.3 A, 110 Vcc, L/R = 40 ms (100.000 op.)

Microelettrica Scientifica S.p.A. - 20089 Rozzano (MI) - Italy - Via Alberelle, 56/68


Tel. (##39) 02 575731 - Fax (##39) 02 57510940

<http://www.microelettrica.com> e-mail : ute@microelettrica.com


The performances and the characteristics reported in this manual are not binding and can modified at any moment without notice

18. WIRING THE SERIAL COMMUNICATION BUS (SCE1309 Rev.0)


CONNECTION TO RS485

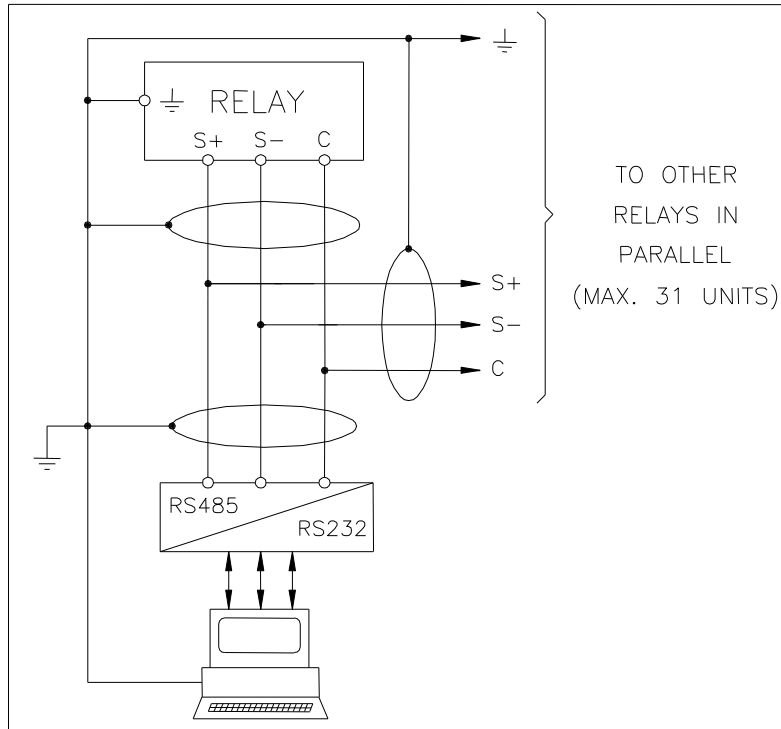

FIBER OPTIC CONNECTION

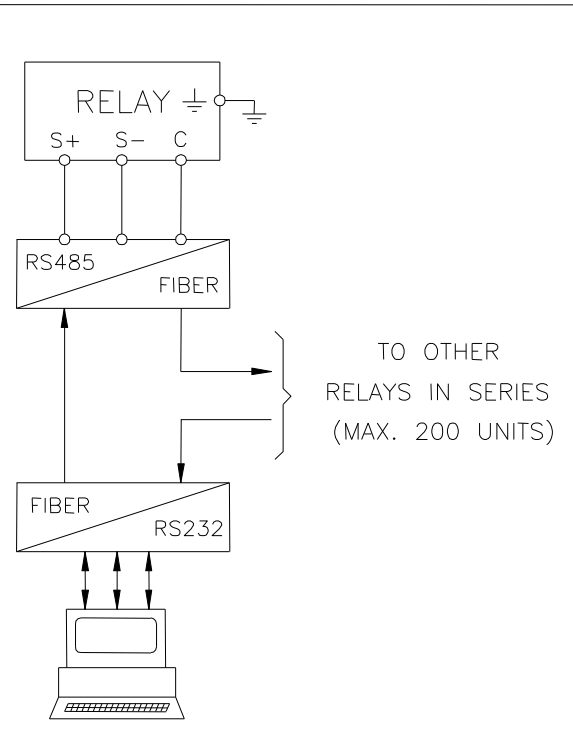

19. CHANGE PHASE CURRENT RATED INPUT 1 OR 5A

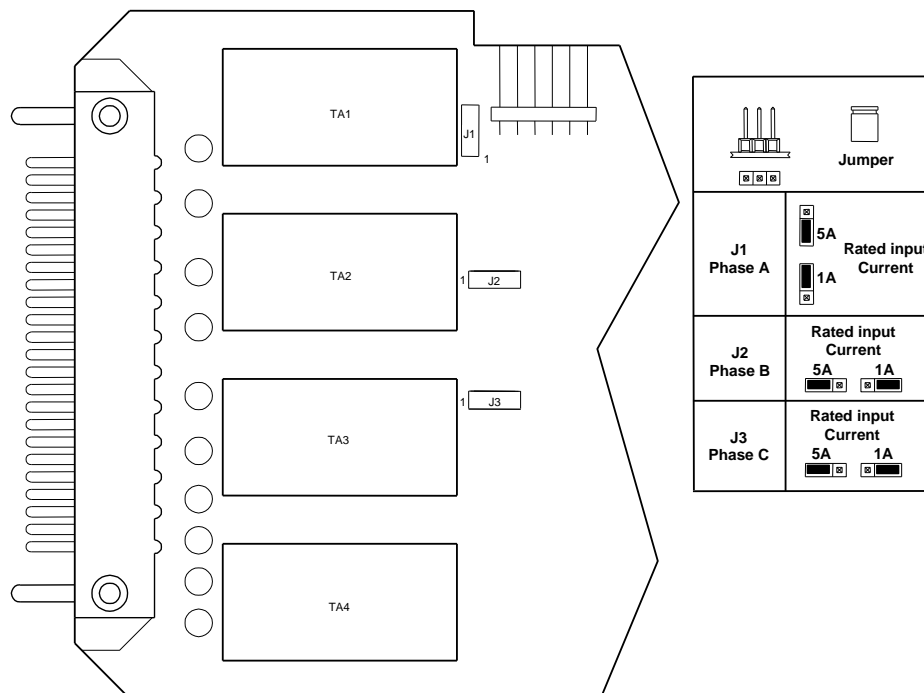



Microelettrica Scientifica


IM30-SR

Doc. N° MO-0094-ING

Rev. 2



Pag. 24 of 30

20. MOUNTING

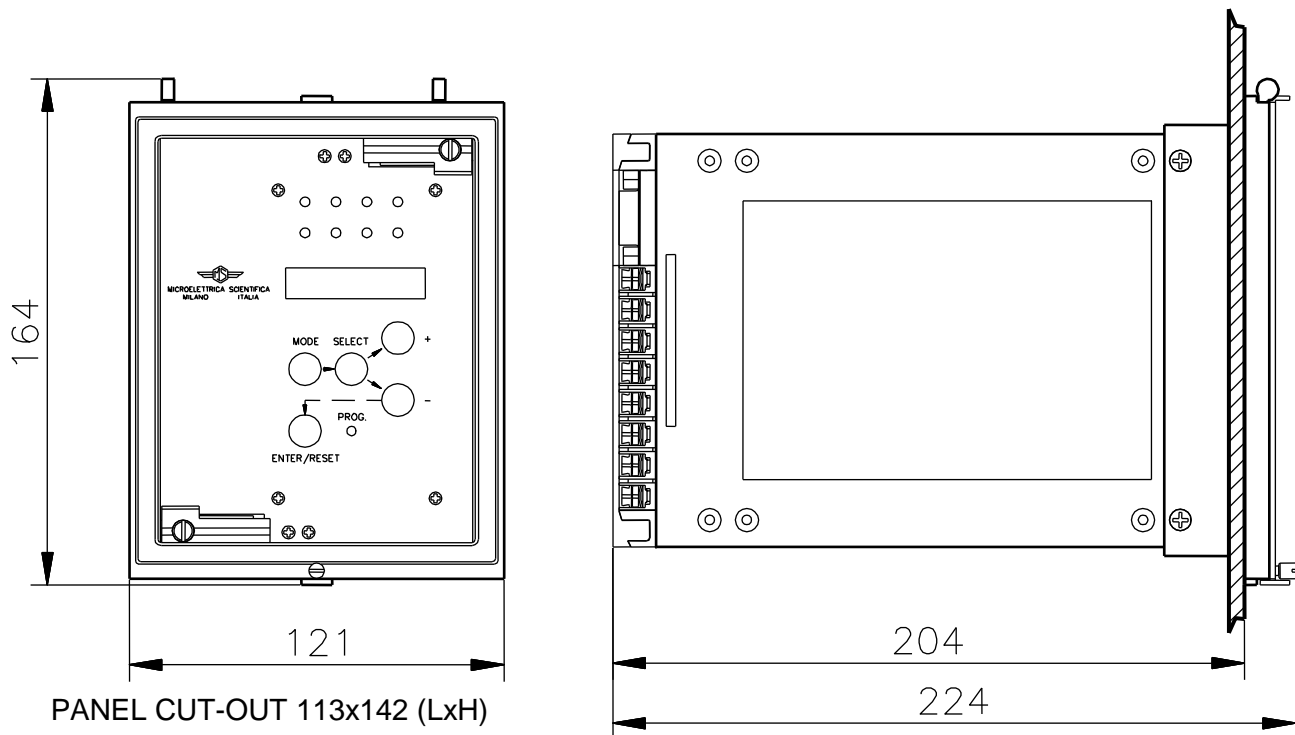


PANEL CUT-OUT 113x142 (LxH)

View of Rear
Terminal Connection

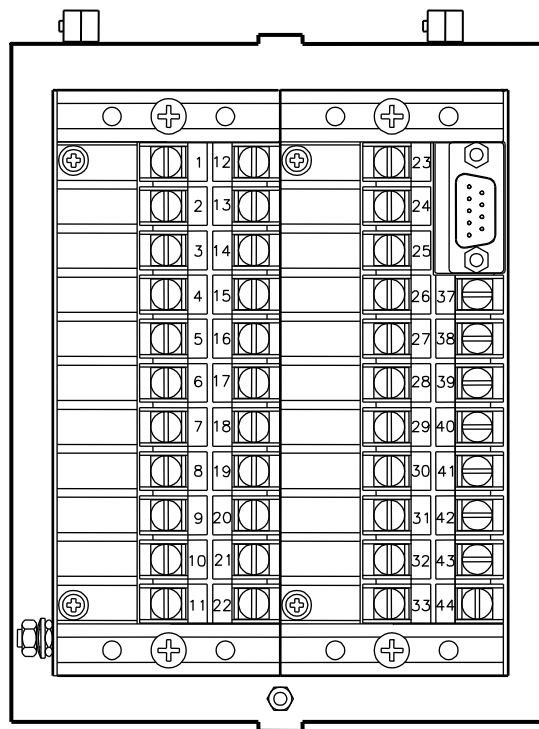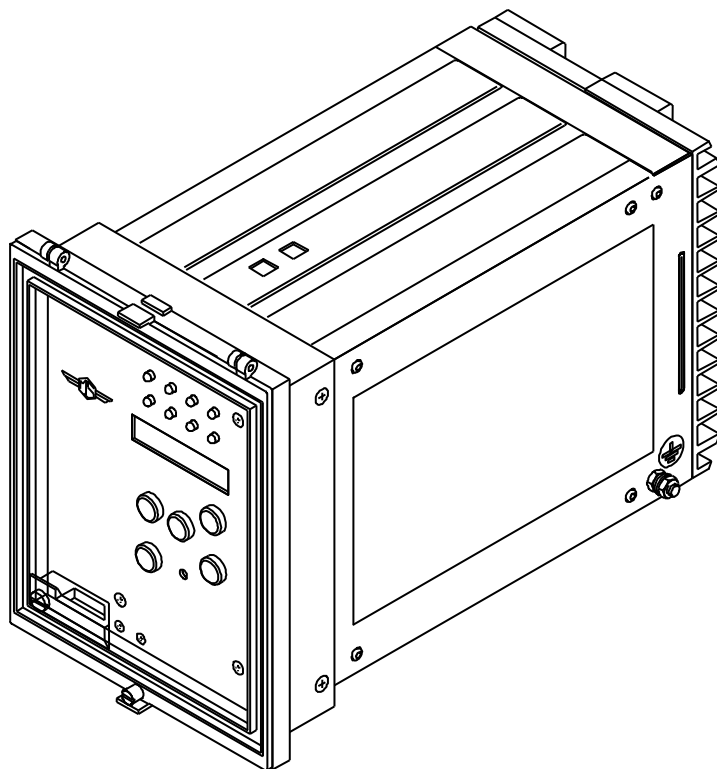



21. TIME CURRENT CURVES (TU0353 Rev.0) 1/2

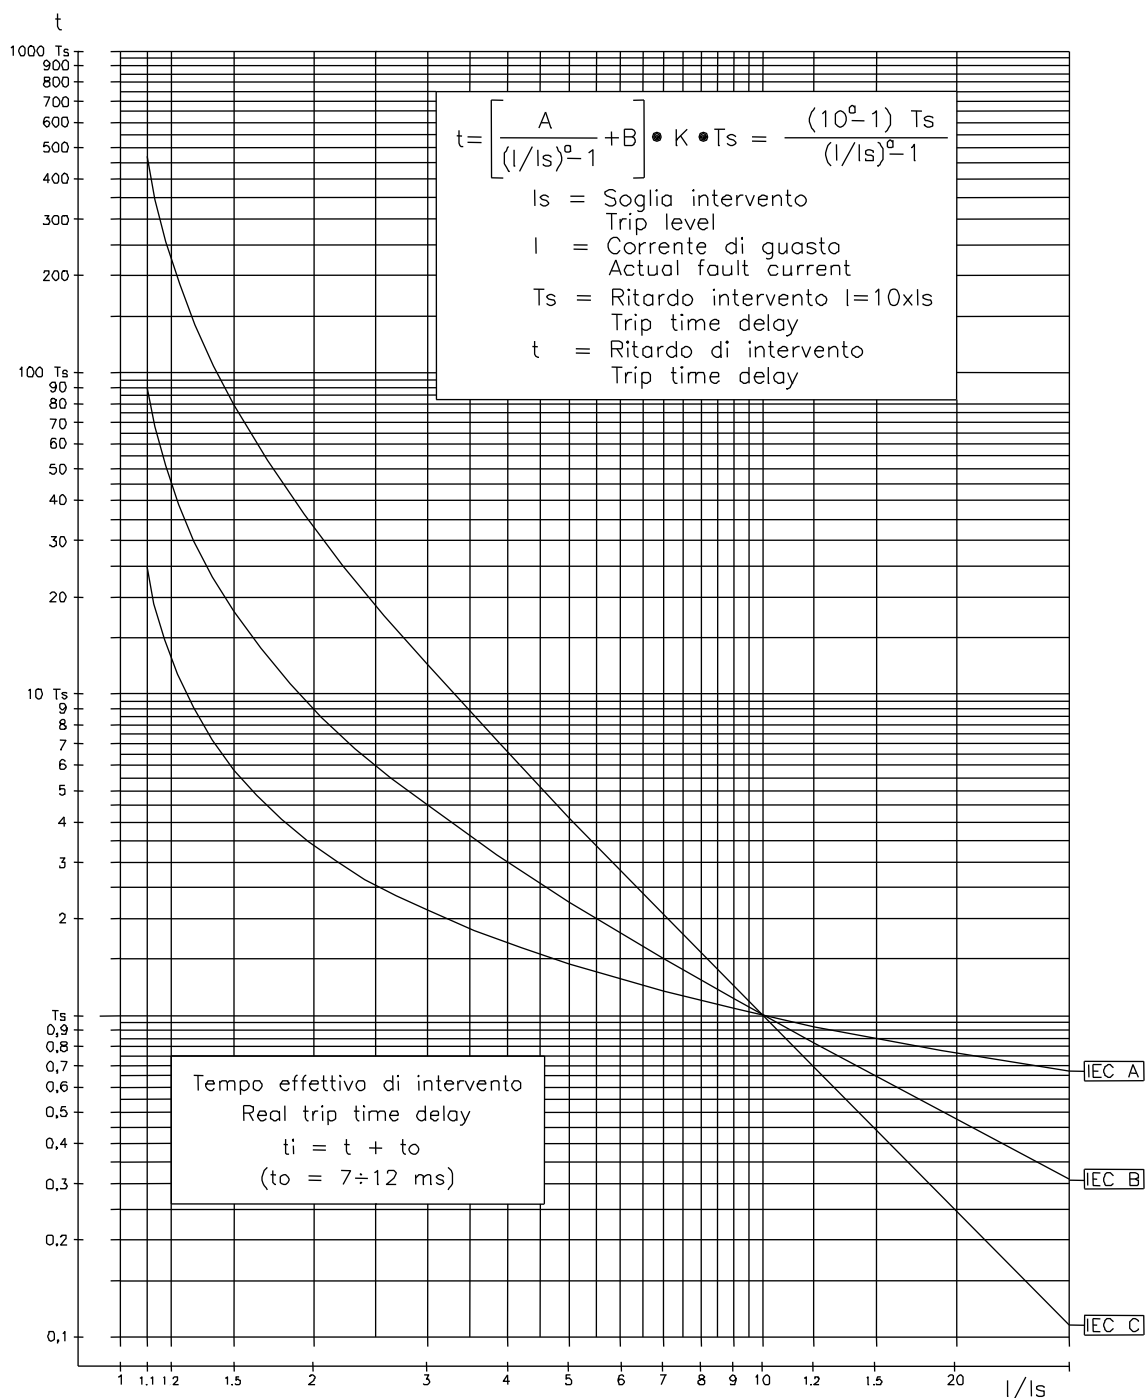

Curve Type	A	B	K	a
IEC A	0.14	0	0.336632	0.02
IEC B	13.5	0	0.666667	1
IEC C	80	0	1.2375	2


$$F51 \begin{cases} I_s = I > = (0.5-4)I_n \\ T_s = tI > = (0.05-30)s \end{cases}$$

$$F51N \begin{cases} I_s = 0 > = (0.02-0.4)I_n \\ T_s = t0 > = (0.05-30)s \end{cases}$$

For F51- F51N saturation at $I > 50 I_n$



22. TIME CURRENT CURVES (TU0353 Rev.0) 2/2

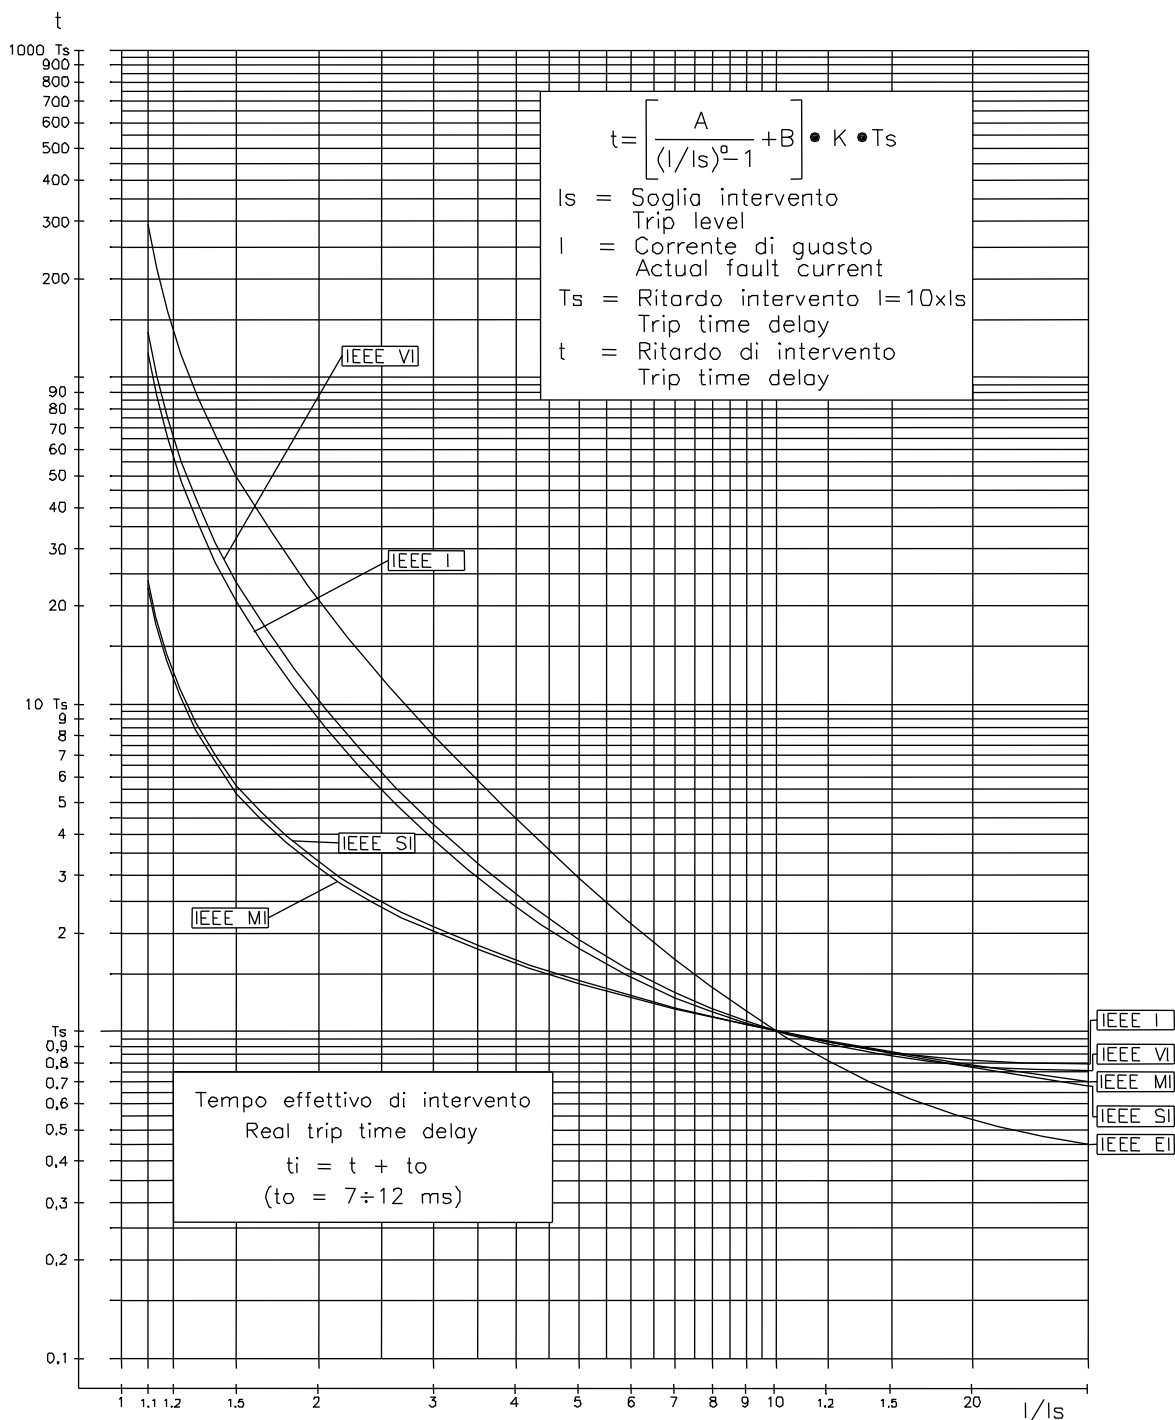

Curve Type	A	B	K	a
MI= IEEE Moderate Inv.	0.0104	0.0226	4.110608	0.02
SI= IEEE Short Inv.	0.00342	0.00262	13.30009	0.02
VI= IEEE Very Inv.	3.88	0.0963	7.380514	2
I= IEEE Inverse	5.95	0.18	4.164914	2
EI= IEEE Extremely Inv.	5.67	0.0352	10.814	2

$$\begin{aligned}
 &F51 \quad \begin{cases} I_s = I > = (0.5-4)I_n \\ T_s = tI > = (0.05-30)s \end{cases} \\
 &F51N \quad \begin{cases} I_s = 0 > = (0.02-0.4)I_n \\ T_s = t0 > = (0.05-30)s \end{cases}
 \end{aligned}$$

For F51- F51N saturation at $I > 50 I_n$


23. DIRECTION FOR PCB'S DRAW-OUT AND PLUG-IN

23.1 Draw-out

Rotate clockwise the screws ① and ② in the horizontal position of the screws-driver mark.
Draw-out the PCB by pulling on the handle ③

23.2 Plug-in

Rotate clockwise the screws ① and ② in the horizontal position of the screws-driver mark.
Slide-in the card on the rails provided inside the enclosure.
Plug-in the card completely and by pressing the handle to the closed position.
Rotate anticlockwise the screws ① and ② with the mark in the vertical position (locked).

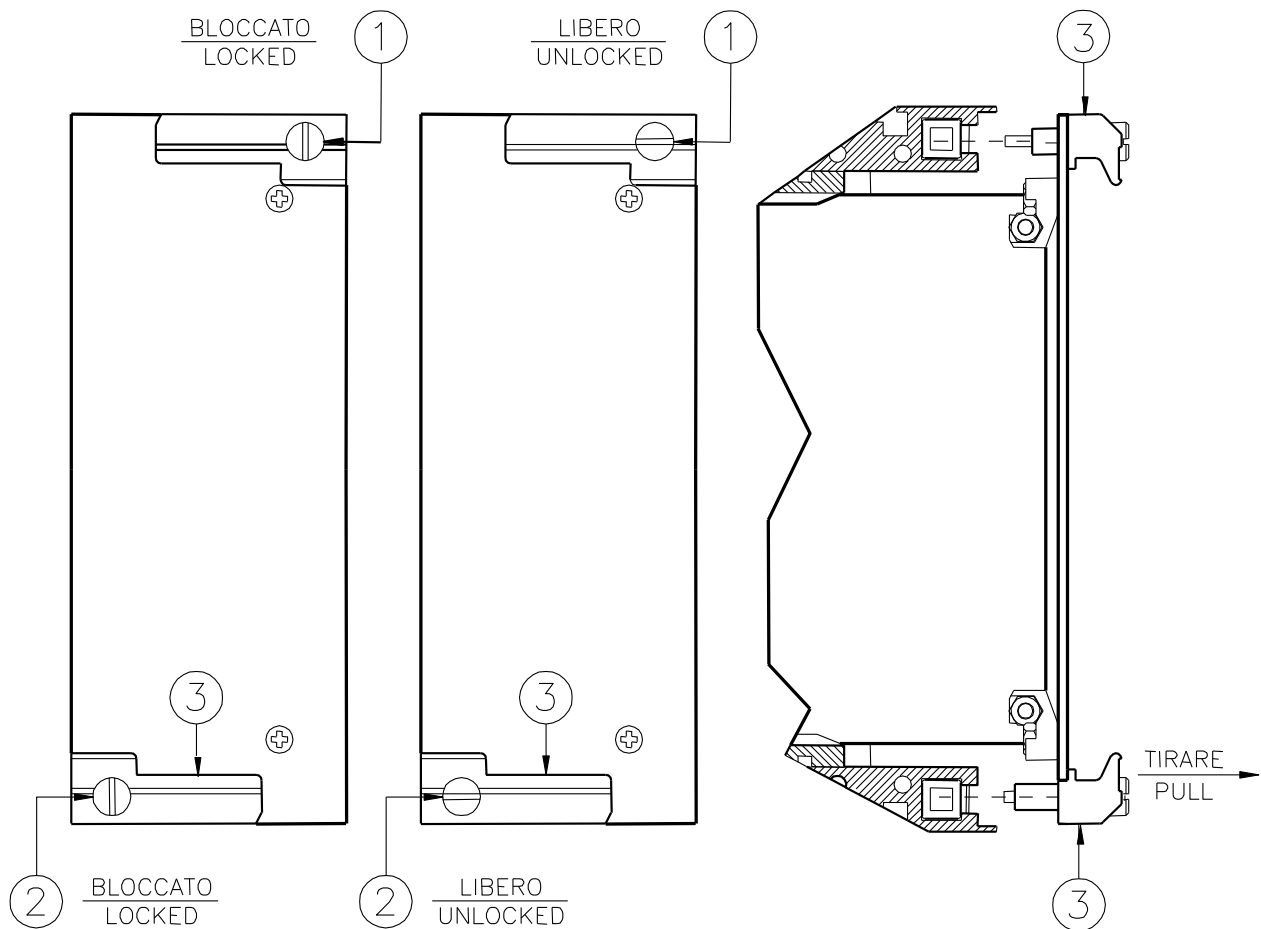



Microelettrica Scientifica

IM30-SR

Doc. N° MO-0094-ING

Rev. 2

Pag. 29 of 30

25. SETTINGS' FORM

Relay Type	IM30-SR	Station :	Circuit :	
Date :	/ /	FW Version:	Relay Serial Number :	
Power Supply	<input type="checkbox"/> 24V(-20%) / 110V(+15%) a.c. 24V(-20%) / 125V(+20%) d.c. <input type="checkbox"/> 80V(-20%) / 220V(+15%) a.c. 90V(-20%) / 250V(+20%) d.c.	Rated Current :	<input type="checkbox"/> 1A	<input type="checkbox"/> 5A

RELAY PROGRAMMING							
Variable	Description	Setting Range	Default Setting	Actual Setting	Test Result		
					Pick-up	Reset	
xxxxxxx	Current date	DDMMYY	-	random			
xx:xx:xx	Current time	HH:MM:SS	-	random			
Fn	Mains frequency	50 – 60	Hz	50			
In	Rated primary current of the phase C.Ts.	1 – 9999	Ap	500			
On	Rated primary current of the C.Ts.	1 – 9999	Ap	500			
F(I>)	Operation characteristic of the low-set overcurrent element	D,A,B,C MI,SI,VI,I,El	-	D			
I>	Trip level of low-set overcurrent element	0.1 - 4 - Dis	In	1.0			
tl>	Trip time delay of the low-set overcurrent element	0.01 - 30	s	2.0			
I>>	Trip level of high-set overcurrent element	0.1 - 40 - Dis	In	2			
tl>>	Trip time delay of the high-set overcurrent element	0.01 - 3	s	1.0			
2I>>	Automatic Cold Load pick-up	ON - OFF	-	ON			
F(N>)	Operation characteristic of the low-set earth fault element	D,A,B,C MI,SI,VI,I,El	-	D			
N>	Trip level of low-set earth fault element	0.5 – 4 - Dis	In	1			
tN>	Trip time delay of low-set earth fault element.	0.01 - 30	s	1			
N>>	Trip level of high-set earth fault element	0.5 - 40 - Dis	In	2			
tN>>	Trip time delay of the high-set earth fault element	0.01 – 3	s	3			
O>	Trip level of low-set S.E.F. element	0.02 – 4 - Dis	On	0.1			
tO>	Trip time delay of low-set S.E.F. element	0.01 - 30	s	3			
O>>	Trip level of high-set earth fault element	0.02 – 4 - Dis	On	0.5			
tO>>	Trip time delay of the high-set S.E.F. element	0.01 – 9.9	s	2			
1C	Selection of the function(s) selected to initiate the first reclosing shot 1C	----- n N i l o O	-	—I—O			
2C	As above for second reclosing shot 2C	----- n N i l o O	-	—i—oO			
3C	As above for third reclosing shot 3C	----- n N i l o O	-	—o—oO			
4C	As above for fourth reclosing shot 4C	----- n N i l o O	-	—I—O			
t1C	Reclosing time interval of first reclosing shot	0.1 - 1800	s	2			
t2C	As above for 2 nd reclosing shot	0.1 - 1800	s	4			
t3C	As above for 3 rd reclosing shot	0.1 - 1800	s	6			
t4C	As above for 4 th reclosing shot	0.1 - 1800	s	8			
tr	Reset interval (reclaim time) after any successful reclosure	0.1 - 200	s	8			
LO#	Lock-out number. Determines the number of shots to Lock-out	1 – 2 – 3 – 4	-	3			
ChSet	Change Setting.	1-2-3-4-Dis	-	2			
SEQ C	Sequence coordination with downstream recloser	ON - OFF	-	OFF			
tBF	Time delay for Breaker Failure alarm	0.05 - 0.75	s	0.25			
B→I>	Blocking Input at terminals 1-3, blocks the timed output of the funct. I>	ON - OFF	-	OFF			
B→I>>	As above, for function I>>	ON - OFF	-	OFF			
B→N>	As above, for function N>	ON - OFF	-	OFF			
B→N>>	As above, for function N>>	ON - OFF	-	OFF			
B→O>	As above, for function O>	ON - OFF	-	OFF			
B→O>>	As above, for function O>>	ON - OFF	-	OFF			
B→Rcl	Blocking Input at terminals 1-44, blocks the reclose function	ON - OFF	-	OFF			
NodAd	Identification number serial communication bus	1 - 250	-	1			

 Microelettrica Scientifica	<h1>IM30-SR</h1>	Doc. N° MO-0094-ING
		Rev. 2 Pag. 30 of 30

CONFIGURATION OF OUTPUT RELAYS										
Default Setting					Description	Actual Setting				
Protective Element	Output Relays					Protective Element	Output Relays			
I>	-	-	-	-	Low-set phase overcurrent pick-up	I>				
tl>	1	-	-	-	Time delayed low-set phase overcurrent	tl>				
I>>	-	-	-	-	High-set phase overcurrent pick-up	I>>				
tl>>	-	2	-	-	Time delayed high-set phase overcurrent	tl>>				
N>	-	-	-	-	Low-set ground overcurrent pick-up	N>				
tN>	1	-	-	-	Time delayed low-set ground overcurrent	tN>				
N>>	-	-	-	-	High-set ground overcurrent pick-up	N>>				
tN>>	-	2	-	-	Time delayed high-set ground overcurrent	tN>>				
O>	-	-	-	-	Low-set S.E.F pick-up	O>				
tO>	1	-	-	-	Time delayed low-set S.E.F	tO>				
O>>	-	-	-	-	High-set S.E.F pick-up	O>>				
tO>>	-	2	-	-	Time delayed high-set S.E.F	tO>>				
C	-	-	-	4	Reclosure	C				
rLO	-	-	3	-	Reclose Lock-out status	rLO				
tBF	-	-	-	-	Breaker failure alarm	tBF				
BT	-	-	-	-	Breaker Trip relay	BT				
RT	-	-	-	-	Remote trip command (input 1-14)	RT				
tFRes:	A				Relay reset mode A=Automatic, M=Manual (*)	tFRes:				

(*) For **C** and **rLO** reset remains anyhow automatic