



# FEEDER MANAGER with AUTORECLOSING RELAY


TYPE







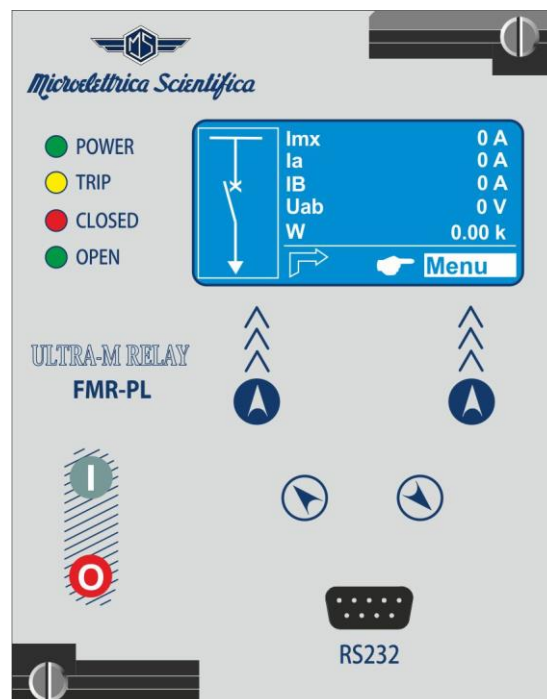

## **FMR-R-PL**

(Multiple I/O Boards)

## ULTRA Line

# OPERATION MANUAL







1. General Utilization and Commissioning Directions	5
1.1 - Storage and Transportation	5
1.2 - Installation	5
1.3 - Electrical Connection	5
1.4 - Measuring Inputs and Power Supply	5
1.5 - Outputs Loading	5
1.6 - Protection Earthing	5
1.7 - Setting and Calibration	5
1.8 - Safety Protection	5
1.9 - Handling	5
1.10 - Maintenance	5
1.11 - Waste Disposal of Electrical & Electronic Equipment	5
1.12 - Fault Detection and Repair	6
2. General	6
2.1 - Power Supply	6
3. Front Panel	6
4. Keyboard and Display	7
4.1 - Display	7
5. Icons of Display	8
6. Signalization	9
6.1 - Leds Manual Reset	9
6.2 - Display of the last trip	9
7. Signalization Module (optional)	10
 8. Cmd (Local Command)	17
 9. Measure	18
 10. Energy	19
 11. Trip Recording (LTrip)	20
 12. Counters	22
 13. RCE (Recorder Chronologic Events)	24
13.1 - Events on display	25
 14. Sys (System parameters)	27
 15. Settings	30
15.1 - Modifying the setting of variables	31
15.2 - Password	32
15.3 - Menu: <b>Comm.</b> (Communication parameters)	33
15.3.1 - Description of variables	33
15.3.2 - Front Panel serial communication port (RS232)	33
15.3.3 - Cable for direct connection of Relay to Personal Computer	33
15.3.4 - Main serial communication port (RS485)	33
15.4 - Menu: <b>LCD</b>	34
15.4.1 - Description of variables	34
15.5 - Function: <b>T&gt;</b> (Thermal Image F49)	36
15.5.1 - Description of variables	36
15.5.2 - Trip and Alarm	36
15.6 - Function: <b>1I&gt;</b> (First Overcurrent Element F50/51)	39
15.6.1 - Description of variables	39
15.6.2 - Algorithm of the time current curves	40
15.6.3 - IEC Curves	41
15.6.4 - IEEE Curves	42
15.6.5 - Operation of the phase Overcurrent Elements in function of variable "f(a)"	43
15.6.6 - Operation of the Overcurrent Element with Voltage Control f(U)	45
15.6.7 - Blocking Logic (BO-BI)	46
15.6.8 - Automatic doubling of Overcurrent thresholds on current inrush	46
15.7 - Function: <b>2I&gt;</b> (Second Overcurrent Element F50/51)	47
15.7.1 - Description of variables	47



15.8 - Function: <b>3I&gt;</b> (Third Overcurrent Element F50/51)	48
15.8.1 - Description of variables	48
15.9 - Function: <b>1Io&gt;</b> (First Earth Fault Element 50N/51N)	49
15.9.1 - Description of variables	49
15.9.2 - Operation mode of the Earth Fault elements programming the variable "f(a <sub>o</sub> )"	50
15.10 - Function: <b>2Io&gt;</b> (Second Earth Fault Element 50N/51N)	51
15.10.1 - Description of variables	51
15.11 - Function: <b>3Io&gt;</b> (Second Earth Fault Element 50N/51N)	52
15.11.1 - Description parameters	52
15.12 - Function: <b>1Is&gt;</b> (First Negative Sequence Element F46)	53
15.12.1 - Description of variables	53
15.12.2 - Time/Current operation of the first Current Unbalance element "f(t)"	53
15.13 - Function: <b>2Is&gt;</b> (Second Negative Sequence Element F46)	54
15.13.1 - Description of variables	54
15.14 - Function: <b>1U&gt;</b> (First Overvoltage Element F59)	55
15.14.1 - Description of variables	55
15.15 - Function: <b>2U&gt;</b> (Second Overvoltage Element F59)	55
15.15.1 - Description of variables	55
15.16 - Function: <b>1U&lt;</b> (First Undervoltage Element F27)	56
15.16.1 - Description of variables	56
15.17 - Function: <b>2U&lt;</b> (Second Undervoltage Element F27)	56
15.17.1 - Description of variables	56
15.18 - Function: <b>1f&gt;</b> (First Overfrequency Element F81>)	57
15.18.1 - Description of variables	57
15.19 - Function: <b>2f&gt;</b> (Second Overfrequency Element F81>)	57
15.19.1 - Description of variables	57
15.20 - Function: <b>1f&lt;</b> (First Underfrequency Element F81<)	58
15.20.1 - Description of variables	58
15.21 - Function: <b>2f&lt;</b> (Second Underfrequency Element F81<)	58
15.21.1 - Description of variables	58
15.22 - Function: <b>1Uo&gt;</b> (First Zero Sequence Overvoltage Element F59Uo)	59
15.22.1 - Description of variables	59
15.23 - Function: <b>2Uo&gt;</b> (Second Zero Sequence Overvoltage Element F59Uo)	59
14.23.1 - Description of variables	59
15.24 - Function: <b>U1&lt;</b> (Positive Sequence Undervoltage Element F27U1)	60
15.24.1 - Description of variables	60
15.25 - Function: <b>U2&gt;</b> (Negative sequence Overvoltage Element F59U2 or F47)	60
15.25.1 - Description of variables	60
15.26 - Function: <b>Wi</b> (Circuit Breaker maintenance level)	61
15.26.1 - Description of variables	61
15.26.2 - Operation (Accumulation of the interruption Energy)	61
15.27 - Function: <b>TCS</b> (Trip Circuit Supervision)	62
15.27.1 - Description of variables	62
15.27.2 - Operation	62
15.28 - Function: <b>IRF</b> (Internal Relay Fault)	63
15.28.1 - Description of variables	63
15.28.2 - Operation	63
15.29 - Function: <b>RT</b> (Remote Trip)	63
15.29.1 - Description of variables	63
15.29.2 - Operation	63
15.30 - Function: <b>TripTimeRd.</b> (Trip Time Reduction)	64
15.30.1 - Description of variables	64
15.30.2 - Operation	64
15.31 - Function: <b>Reclos</b> (Automatic Reclosure RCL)	65
15.31.1 - Definitions	65
15.31.2 - Description of variables	66
15.31.3 - Setting	67
15.31.4 - Operation	69
15.31.5 - Reclose Command	70
15.31.6 - Display Message	70
15.31.7 - Flow chart - Automatic Reclosure RCL	71
15.32 - Function: <b>CB Mngr</b> (Control C/B)	72
15.32.1 - Description of variables	72
15.32.2 - Display Message	73
15.33 - Function: <b>Oscillo</b> (Oscillographic Recording)	74
15.33.1 - Description of variables	74
15.33.2 - Operation	74
15.33.3 - Available on MCom2	75
15.33.4 - Setting "User Trigger Oscillo"	77



15.34 - Function: <b>BrkFail</b> (Breaker Failure)	82
15.34.1 - Description of variables	82
15.34.2 - Operation	82
15.35 - Function: <b>ExtReset</b> (External Reset Configuration)	83
15.35.1 - Description of variables	83
16. User Variables	84
16.1 - Name	84
16.2 - User Descr.	84
16.3 - Linked functions	84
16.4 - OpLogic	84
16.5 - Timer	84
16.6 - Timer type	84
16.7 - Logical status	84
16.8 - Example: Setting "User Variable"	85
16.8.1 - "User description" (User descr.)	86
16.8.2 - "Linked Functions"	87
16.8.3 - "Operation Logic" (Oplogic)	88
16.8.4 - "Timer"	88
16.8.5 - "Timer type"	89
17.  Input – Output (via MCom2 software)	90
17.1 – Digital Inputs	90
17.2 – "DI" Configuration (via MCom2 software)	91
17.2.1 – Example:	92
17.2.2 – Name	92
17.2.3 – Status	92
17.2.4 – OpLogic	92
17.2.5 – Functions	92
17.2.6 – Example: Setting "Digital Input"	92
17.3 – Outputs Relay	94
17.4 - "DO" Configuration	94
17.4.1 - Example configuration	96
17.4.1.1 - Relay	96
17.4.1.2 - Linked function	96
17.4.1.3 - Operation Logic	96
17.4.1.4 - Logical Status	96
17.4.1.5 - Output Configuration	96
17.4.1.6 - tON (Operation Time)	96
17.4.1.7 - Relay Status	96
17.5 - Functions - Operation Mode	97
18.  Date & Time	101
18.1 – Clock synchronization	102
19.  Healthy (Diagnostic Information)	103
20.  Info (Relay Version)	103
21. Battery	104
22. Maintenance	104
23. Power Frequency Insulation Test	104
24. Basic Relay - Wiring Diagram	105
24.1 – <b>UX10-4</b> - Expansion Module - Wiring Diagram (10 Digital Inputs + 4 Output Relays)	105
24.2 – <b>14DI</b> - Expansion Module - Wiring Diagram (14 Digital Inputs)	106
24.3 – <b>14DO</b> - Expansion Module - Wiring Diagram (14 Output Relays)	106
24.4 – <b>14DO-S</b> - Expansion Module - Wiring Diagram (14 Output Relays)	107
25. Wiring The Serial Communication Bus	108
26. Basic Relay - Overall Dimensions	109
26.1 – (1 Expansion Module) & (2 Expansion Module) - Overall Dimensions	110
26.2 – Rack 3U – Overall Dimensions	111
27. Direction for Pcb's Draw-Out and Plug-In	112
27.1 - Draw-out	112
27.2 – Plug-in	112
28. Electrical Characteristics	113
28. Software & Firmware Version	114



---

## **1. General Utilization and Commissioning Directions**

---

Always make reference to the specific description of the product and to the Manufacturer's instruction. Carefully observe the following warnings.

### *1.1 - Storage and Transportation*

---

Must comply with the environmental conditions stated in the product's specification or by the applicable IEC standards.

### *1.2 - Installation*

---

Must be properly made and in compliance with the operational ambient conditions stated by the Manufacturer.

### *1.3 - Electrical Connection*

---

Must be made strictly according to the wiring diagram supplied with the Product, to its electrical characteristics and in compliance with the applicable standards particularly with reference to human safety.

### *1.4 - Measuring Inputs and Power Supply*

---

Carefully check that the value of input quantities and power supply voltage are proper and within the permissible variation limits.

### *1.5 - Outputs Loading*

---

Must be compatible with their declared performance.

### *1.6 - Protection Earthing*

---

When earthing is required, carefully check its effectiveness.

### *1.7 - Setting and Calibration*

---

Carefully check the proper setting of the different functions according to the configuration of the protected system, the safety regulations and the co-ordination with other equipment.

### *1.8 - Safety Protection*

---

Carefully check that all safety means are correctly mounted, apply proper seals where required and periodically check their integrity.

### *1.9 - Handling*

---

Notwithstanding the highest practicable protection means used in designing M.S. electronic circuits, the electronic components and semiconductor devices mounted on the modules can be seriously damaged by electrostatic voltage discharge which can be experienced when handling the modules. The damage caused by electrostatic discharge may not be immediately apparent but the design reliability and the long life of the product will have been reduced. The electronic circuits produced by M.S. are completely safe from electrostatic discharge (8 kV IEC 255.22.2) when housed in their case; withdrawing the modules without proper cautions expose them to the risk of damage.

### *1.10 - Maintenance*

---

Make reference to the instruction manual of the Manufacturer; maintenance must be carried-out by specially trained people and in strict conformity with the safety regulations.

### *1.11 - Waste Disposal of Electrical & Electronic Equipment*

---

(Applicable throughout the European Union and other European countries with separate collection program). This product should not be treated as household waste when you wish dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequence to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resource.

### 1.12 - Fault Detection and Repair

Internal calibrations and components should not be altered or replaced.  
For repair please ask the Manufacturer or its authorized Dealers.

Misapplication of the above warnings and instruction relieves the Manufacturer of any liability.

## 2. General

Input currents are supplied to 4 current transformers: - three measuring phase current - one measuring the earth fault zero-sequence current.

Current input can be selected 1A or 5A by movable jumpers available on relay cards.

Input voltage are supplied to 4 Potential Transformers: three measuring phase-to-neutral voltage and one measuring the zero sequence voltage supplied by the secondary of three system P.Ts. Y/Open Delta connected.

**The Measuring Ranges of the different inputs respectively are:**

Phase Currents	: (0.1-40)In	Phase Voltage	: (0.01-2)Un
Neutral Current	: (0.01-10)On	Neutral Voltage	: (0.01-2)Un

Make electric connection in conformity with the diagram reported on relay's enclosure.

Check that input currents and voltages are same as reported on the diagram and on the test certificate.  
The auxiliary power is supplied by a built-in interchangeable module fully isolated and self protected.


### 2.1 - Power Supply

The relay can be fitted with two different types of **power supply**:

Type 1) - {	24V(-20%) / 110V(+15%) a.c.	Type 2) - {	80V(-20%) / 220V(+15%) a.c.
	24V(-20%) / 125V(+20%) d.c.		90V(-20%) / 250V(+20%) d.c.




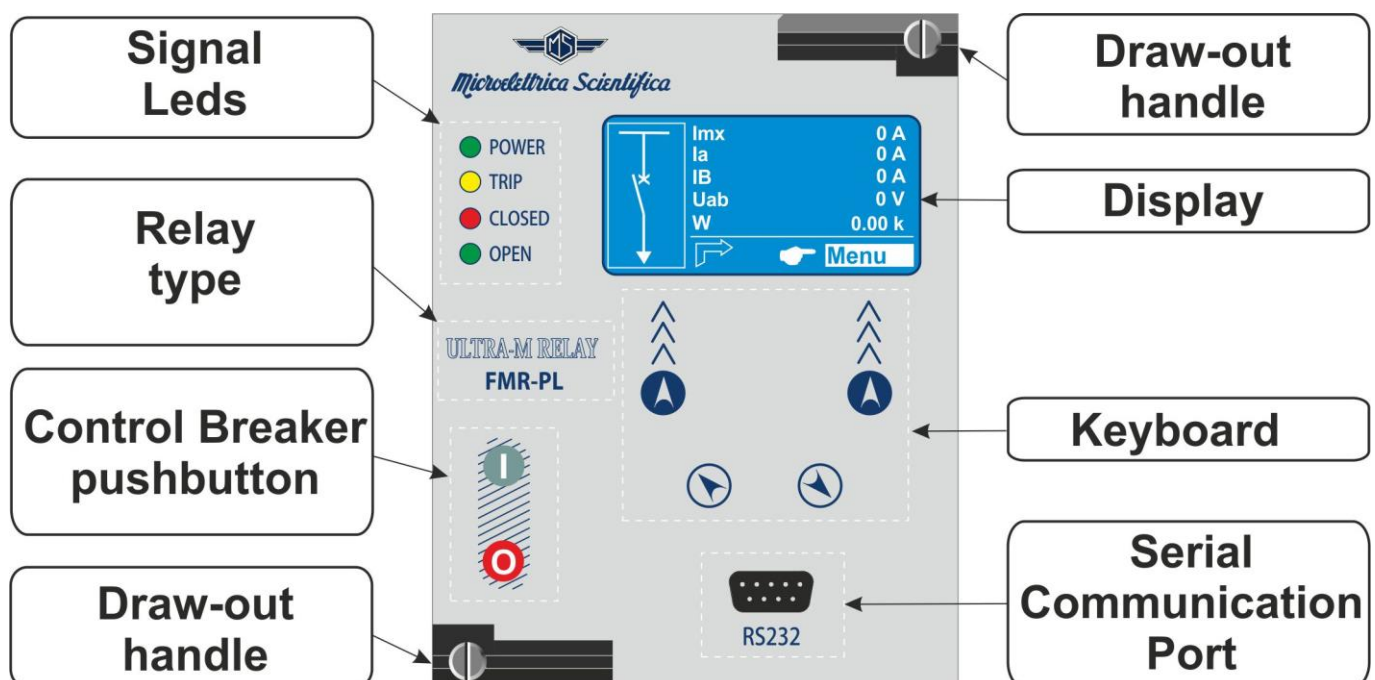


Before energizing the unit check that supply voltage is within the allowed limits.

## 3. Front Panel



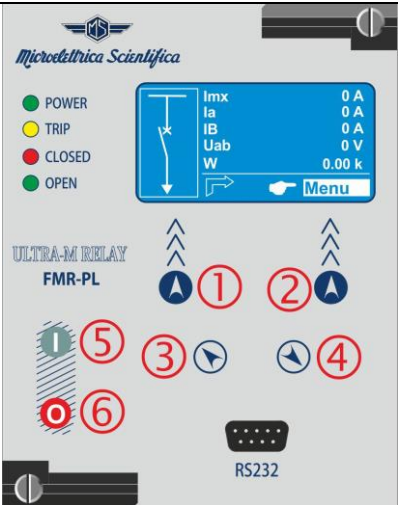

## 4. Keyboard and Display

		<b>Navigation menu</b>	By these buttons the options showed in correspondence on the display are selected.
		<b>Increase</b>	These buttons are used to scroll the items of the different menus (Local Control, Measurements, Energy metering etc).
		<b>Decrease</b>	
		<b>Open</b>	these buttons (when enabled) operate Circuit Breaker Open/Close control (see § C/B Mngn)
		<b>Close</b>	

□ By the key ② select the windows showing the ICONS of the available menus.


□ By the key ③, ④ select the desired icon and enter by key ①

□ The different elements can be selected by the key ③ and ④.

*The details of the individual menus are given in the following paragraphs.*

### 4.1 - Display

The 128x64 pixel LCD display the available information (menu, etc.).

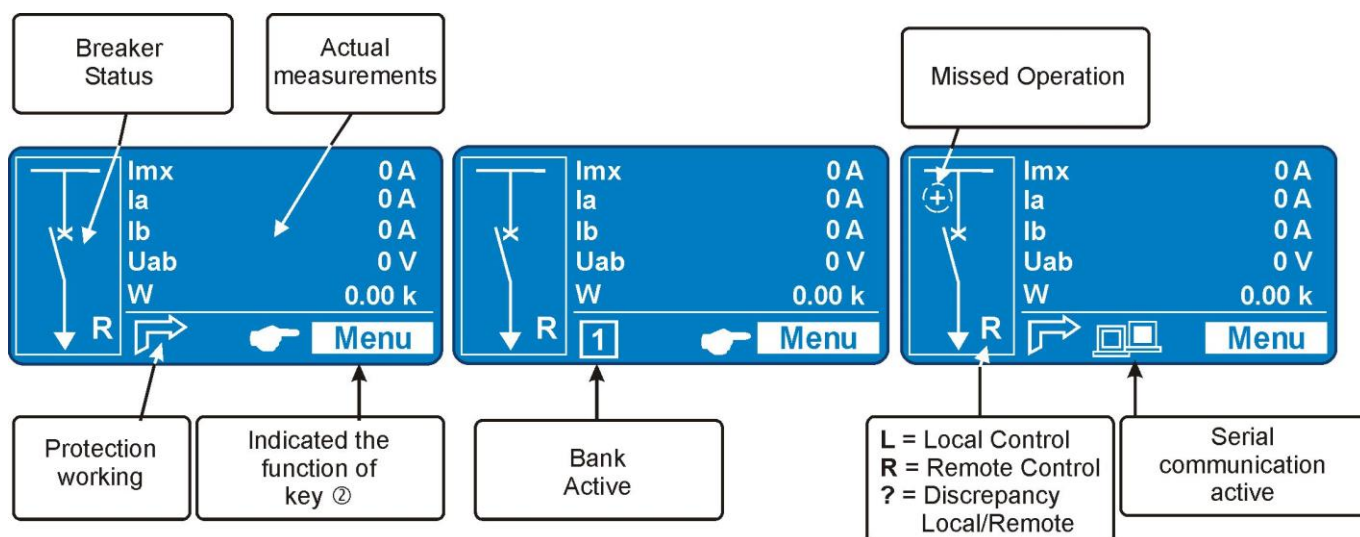



## 5. Icons of Display

---

**Cmd**

Local Commands

**Measure**

Actual Measurements

**Energy**

Energy Measurements

**LTrip**

Trip Recording

**Cnt**

Partial Counters (Resettable Counter)

**RCE**

Event Recording

**Setting**

Function Settings

**Sys**

System Settings

**TimeDate**

Time and Date

**Healthy**

Diagnostic Information


**Info**





Info Device

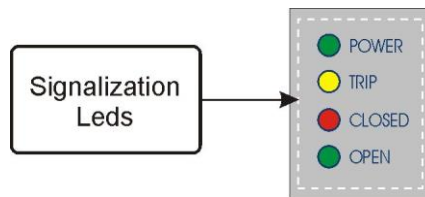

## 6. Signalization





Four signal leds are provided:



Green Led	 POWER	<input type="checkbox"/> Illuminated	- Relay working properly.	
		<input type="checkbox"/> Flashing	- Internal Relay Fault	
Yellow Led	 TRIP	<input type="checkbox"/> Off	- No Trip	
		<input type="checkbox"/> Illuminated	- Trip occurred	
		<input type="checkbox"/> Flashing	- Function Timing	
Reset from Illuminated status is manual				
Red Led	 CLOSED	<input type="checkbox"/> Off	- C/B Open	<u>Both Flashing</u>  Operation of Trip Circuit Supervision element.
		<input type="checkbox"/> Illuminated	- C/B Close	
Green Led	 OPEN	<input type="checkbox"/> Off	- C/B Close	
		<input type="checkbox"/> Illuminated	- C/B Open	
<input type="checkbox"/> In case of auxiliary power supply failure the status of the leds is recorded and reproduced when power supply is restored.				


### 6.1 - Leds Manual Reset

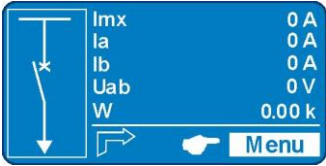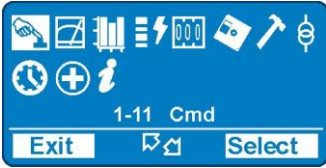For Leds' manual reset operate as follows:

- 
  - Press "**Menu**" for access to the main menu with icons.
- 
  - Select icon "**Cmd**".
- 
  - Select "**LedClear**".
  - Press "**Select**" to execute the command. (See § Password).
- 
  - When command has been executed the display shows "**! Command Done**";


### 6.2 – Display of the last trip

Beside the signalization of the yellow led "Trip", indicating a generic function trip, the display shows a window indicating the last function that was tripped and the number of events that are stored in the memory. The display will show this window until the reset button or external reset are operated.

- 
  - Press "**Menu**" to access to the main menu with icons. Press "**Res.**" to erase visualization. Ex. "t1l>" (flashing) is the last trip.

## 7. Signalization Module (optional)

The firmware can manage up to 53 signal leds, 4 led are available on the main relay module, the remaining are available on additional expansion modules (1 "Power" (green), 49 "Programmable" (red)) controlled via the CAN-Bus communication channel (external wired).

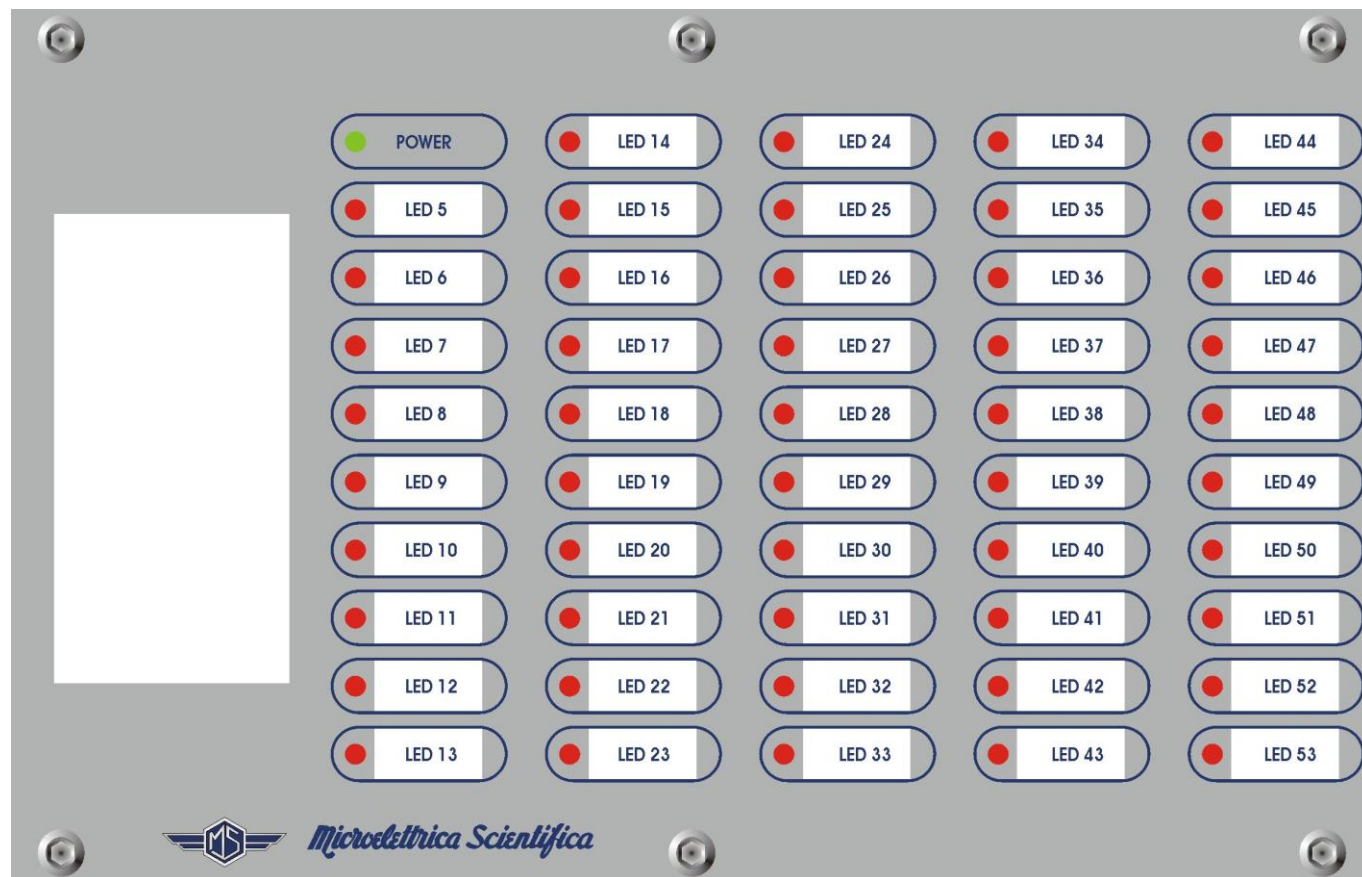


For Leds' programming (only via MCom2) operate as follows:

Open "MCom2" program and connect to the relay.  
Select "Change Windows" from "Menu" button



Select "Led Setting"

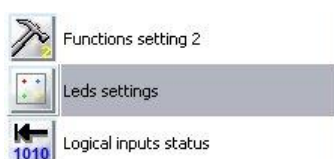



The window for led configuration will show:

ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	1l>

### Name

Led name – for leds position see picture

### Link enable

*Linked* = Enable to operate  
*No Linked* = Disable

### Status

*Light-OFF* = Normal condition  
*Light-ON* = When cause appear led is illuminated  
*Flashing* = When cause appear led is flashing

See “Light Prog”

### Light Prog.

*Light-ON* = When cause appear led is illuminated  
*Flashing* = When cause appear led is flashing

### Funct. Mode

*Volatile* = When cause disappear led turn-off (Not memorized)  
*Latched* = When cause disappear led remain illuminated (memorized)

### Functions

Select the function assigned to specific led (see table 1).  
 Its possible to configure only one function for each led.  
 For configuration multiple functions use “UserVar” function.

Table 1

	<b>SCDop</b>	Scada open breaker command
	<b>SCDcl</b>	Scada close breaker command
	<b>SCDop2</b>	Scada open breaker 2 command (generic command)
	<b>SCDcl2</b>	Scada close breaker 2 command (generic command)
	<b>SCDop3</b>	Scada open breaker 3 command (generic command)
	<b>SCDcl3</b>	Scada close breaker 3 command (generic command)
	<b>SCDop4</b>	Scada open breaker 4 command (generic command)
	<b>SCDcl4</b>	Scada close breaker 5 command (generic command)
	<b>DisRCL</b>	Scada disable reclose command
	<b>EnRCL</b>	Scada enable reclose command
<b>T&gt;</b>	<b>Tal</b> <b>T&gt;</b>	Alarm Trip Thermal Image T>
<b>1I&gt;</b>	<b>1I&gt;</b> <b>t1I&gt;</b>	Start Trip First overcurrent element F50-51
<b>2I&gt;</b>	<b>2I&gt;</b> <b>t2I&gt;</b>	Start Trip Second overcurrent element F50-51
<b>3I&gt;</b>	<b>3I&gt;</b> <b>t3I&gt;</b>	Start Trip Third overcurrent element F50-51
<b>1Io&gt;</b>	<b>1Io&gt;</b> <b>t1Io&gt;</b>	Start Trip First earth fault element F50N-51N
<b>2Io&gt;</b>	<b>2Io&gt;</b> <b>t2Io&gt;</b>	Start Trip Second earth fault element F50N-51N
<b>3Io&gt;</b>	<b>3Io&gt;</b> <b>t3Io&gt;</b>	Start Trip Third earth fault element F50N-51N
<b>1Is&gt;</b>	<b>1Is&gt;</b> <b>t1Is&gt;</b>	Start Trip First negative sequence current element F46
<b>2Is&gt;</b>	<b>2Is&gt;</b> <b>t2Is&gt;</b>	Start Trip Second negative sequence current element F46
<b>1U&gt;</b>	<b>1U&gt;</b> <b>t1U&gt;</b>	Start Trip First overvoltage element F59
<b>2U&gt;</b>	<b>2U&gt;</b> <b>t2U&gt;</b>	Star Trip Second overvoltage element F59
<b>1U&lt;</b>	<b>1U&lt;</b> <b>t1U&lt;</b>	Start Trip First undervoltage element F27
<b>2U&lt;</b>	<b>2U&lt;</b> <b>t2U&lt;</b>	Start Trip Second undervoltage element F27
<b>1f&gt;</b>	<b>1f&gt;</b> <b>t1f&gt;</b>	Start Trip First overfrequency element F81
<b>2f&gt;</b>	<b>2f&gt;</b> <b>t2f&gt;</b>	Start Trip Second overfrequency element F81
<b>1f&lt;</b>	<b>1f&lt;</b> <b>t1f&lt;</b>	Start Trip First underfrequency element F81
<b>2f&lt;</b>	<b>2f&lt;</b> <b>t2f&lt;</b>	Start Trip Second underfrequency element F81
<b>1Uo&gt;</b>	<b>1Uo&gt;</b> <b>t1Uo&gt;</b>	Start Trip First zero sequence voltage element F59Uo
<b>2Uo&gt;</b>	<b>2Uo&gt;</b> <b>t2Uo&gt;</b>	Start Trip Second zero sequence voltage element F59Uo
<b>U1&lt;</b>	<b>U1&lt;</b> <b>tU1&lt;</b>	Start Trip Positive sequence undervoltage element F27U1
<b>U2&gt;</b>	<b>U2&gt;</b> <b>tU2&gt;</b>	Start Trip Negative sequence overvoltage element F59U2
<b>Wi</b>	<b>tWi&gt;</b>	Circuit breaker maintenance level
<b>TCS</b>	<b>TCS</b> <b>tTCS</b>	Start Trip Trip coil supervision
<b>IRF</b>	<b>IRF</b> <b>tIRF</b>	Start Trip Internal Relay Failure
<b>RT</b>	<b>RT</b> <b>tRT</b>	Start Trip Element Remote Trip



<b>TripTimeR</b>	<i>Trip time reduction active</i>		
<b>RCLf</b>	<i>Autoreclosure failed</i>		
<b>RCLrun</b>	<i>Autoreclosure in progress</i>		
<b>TwRCL</b>	<i>Trip not enabled for Automatic Reclosure</i>		
<b>RCL-OK</b>	<i>Successful Automatic Reclosure</i>		
<b>ManCL-OK</b>	<i>Manual Closure</i>		
<b>BiRCL</b>	<i>Presence Reclosure external lockout cause (input/CB Failure)</i>		
<b>Gr1to2</b>	<i>Switch to SetUp Group2</i>		
<b>manOpCmd</b>	<i>Manual Open Command</i>		
<b>CL-Cmd</b>	<i>Close Command</i>		
<b>C/Bfail</b>	<i>Circuit Breaker failure</i>		
<b>L/Rdisc</b>	<i>Local/Remote signal Discrepancy</i>		
<b>BF</b>	<i>Breaker Failure</i>		
<b>Gen.Start</b>	<i>Start Generic</i>		
<b>Gen.Trip</b>	<i>Trip Generic</i>		
<b>UserTriggerOscillo</b>	<i>User Variable for Oscillographic Recording</i>		
<b>UserVar&lt;0&gt;</b>			
<b>to</b>	<i>User Variable</i>		
<b>UserVar&lt;24&gt;</b>			
<b>Vcc</b>	<i>Reserved</i>		
<b>Gnd</b>	<i>Reserved</i>		
<b>ResLog</b>	<i>Reset signal logic</i>		
<b>P1</b>	<i>Push-button Open</i>		
<b>P2</b>	<i>Push-button Close</i>		
<b>0.D1</b>	<i>Digital Input "0.D1"</i>	<i>activated</i>	<i>Digital Input on Main Relay</i>
<b>0.D1Not</b>	<i>Digital Input "0.D1"</i>	<i>deactivated</i>	
<b>to</b>			
<b>0.D4</b>	<i>Digital Input "0.D4"</i>	<i>activated</i>	
<b>0.D4Not</b>	<i>Digital Input "0.D4"</i>	<i>deactivated</i>	
<b>1.D1</b>	<i>Digital Input "1.D1"</i>	<i>activated</i>	<i>Digital input on Expansion Board</i>
<b>1.D1Not</b>	<i>Digital Input "1.D1"</i>	<i>deactivated</i>	
<b>to</b>			
<b>1.D15</b>	<i>Digital Input "1.D15"</i>	<i>activated</i>	
<b>1.D15Not</b>	<i>Digital Input "1.D15"</i>	<i>deactivated</i>	
<b>2.D1</b>	<i>Digital Input "2.D1"</i>	<i>activated</i>	<i>Digital input on Expansion Board</i>
<b>2.D1Not</b>	<i>Digital Input "2.D1"</i>	<i>deactivated</i>	
<b>to</b>			
<b>2.D15</b>	<i>Digital Input "2.D15"</i>	<i>activated</i>	
<b>2.D15Not</b>	<i>Digital Input "2.D15"</i>	<i>deactivated</i>	

### Example: Change settings for "Led5"

Change settings for **"Led5"** : **"Linked"**, **"Flashing"**, **"Latched"**, **"1I>"**.


- Led 1** = (see § Signalization on Main Relay)  
**Led 2** = If we change the link of these leds, the label written on the front panel will not match  
**Led 3** = anymore.  
**Led 4** =  
  
**Led 5** = are provided in signalization module  
to  
**Led 53** =

Main Windows:


ID	Name	Link enable	Status	Light prog.	Funct. Mode	Functions
1	Led 1	Not linked	Light off	Light on	Volatile	1I>
2	Led 2	Not linked	Light off	Light on	Volatile	1I>
3	Led 3	Not linked	Light off	Light on	Volatile	1I>
4	Led 4	Not linked	Light off	Light on	Volatile	1I>
5	Led 5	Not linked	Light off	Light on	Volatile	1I>

### "Linked"

Select **"Link enable"** related to **"Led 5"** and press right button on mouse, select **"Value change"**:

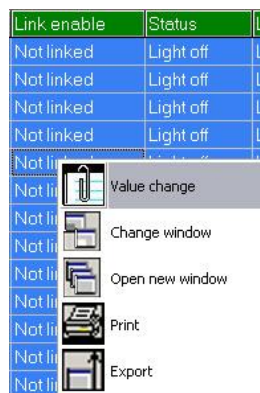

Select **"Linked"** from combo box and press **"OK"** (if Password is request, see § Password):

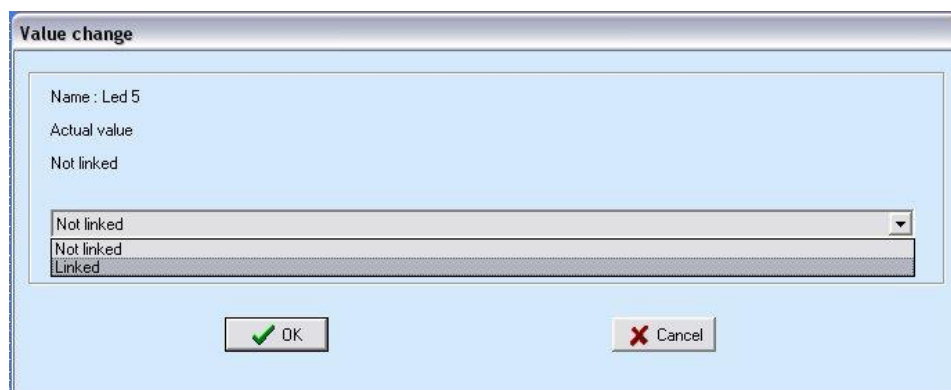







### "Flashing"

Select "**Light prog**" related to Led 5 and press right button on mouse, select "Value change":



Select "**Flashing**" from combo box and press "OK" (if Password is request, see § Password):

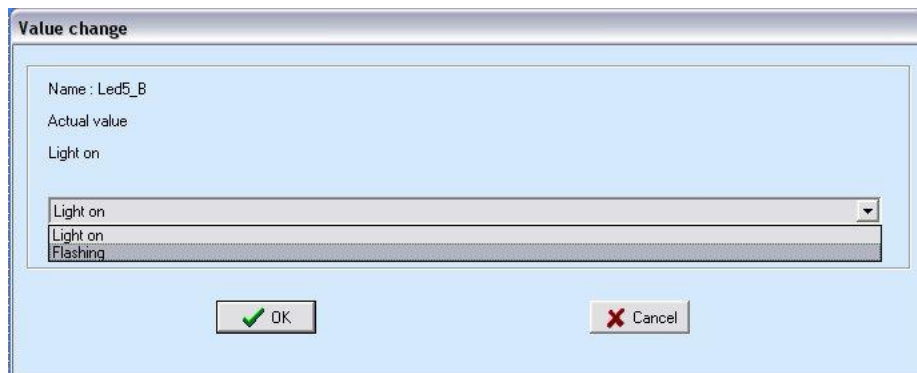

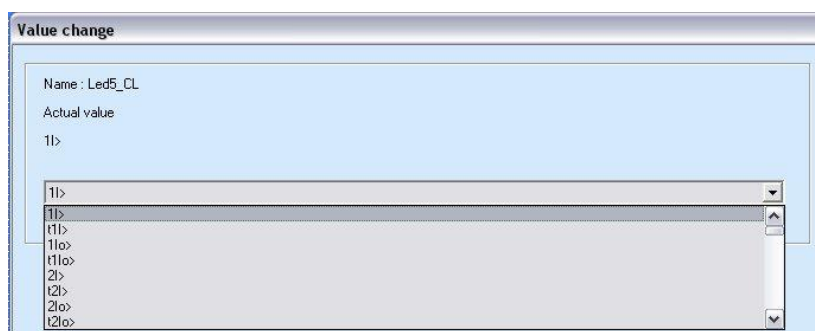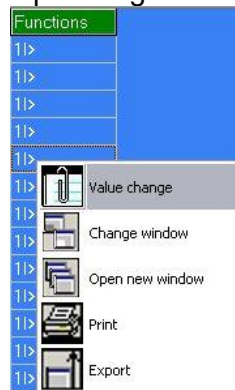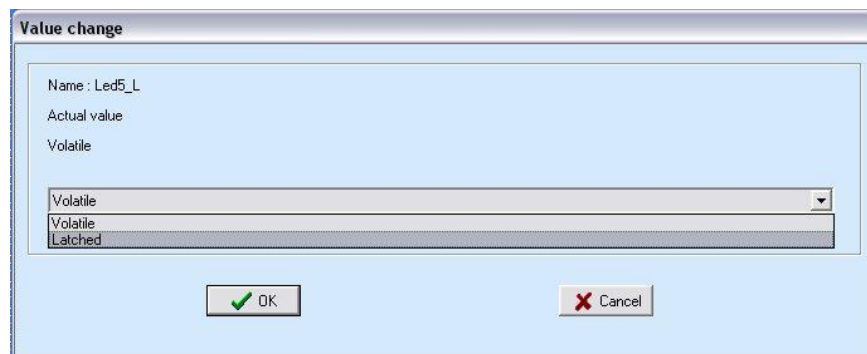
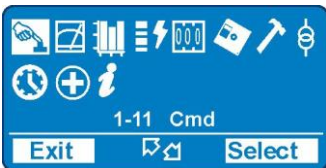
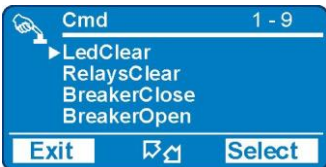
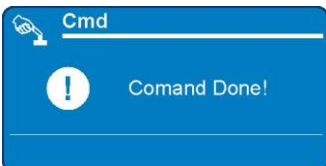


## 8. Cmd (Local Command)

“**Cmd**” allow to operate from relay front face controls like Thermal Memory reset, Leds reset, etc.


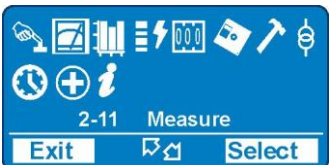

Menu	Description	Password
→ <b>Led</b> <b>Clear</b>	Reset of signal Leds	No
→ <b>Relays</b> <b>Clear</b>	Manual reset of output relays	No
→ <b>Breaker</b> <b>Close</b>	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ <b>Breaker</b> <b>Open</b>	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ <b>Breaker2</b> <b>Close</b>	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ <b>Breaker2</b> <b>Open</b>	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ <b>Breaker3</b> <b>Close</b>	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ <b>Breaker3</b> <b>Open</b>	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ <b>Breaker4</b> <b>Close</b>	Manual C/B closing <i>(conditioned by Password)</i>	Yes
→ <b>Breaker4</b> <b>Open</b>	Manual C/B opening <i>(conditioned by Password)</i>	Yes
→ <b>Event</b> <b>Clear</b>	Reset of all Events recorded	Yes
→ <b>HistFail</b> <b>Clear</b>	Reset of Internal Failure Historic records	Yes
→ <b>Reset</b> <b>Term</b>	Reset to zero of the accumulations relevant to Thermal Image and Interruption Energy.	Yes
→ <b>Leds</b> <b>Test</b>	Signal Leds test	No
→ <b>Force</b> <b>Osc</b>	Issue a trigger on oscillographic recording	Yes
→ <b>LastTrip</b> <b>Reset</b>	Reset all Last Trip recorded <i>Available only in MScOm2</i>	Yes
→ <b>Energy Counter</b> <b>Reset</b>	Reset Energy Counter <i>Available only in MScOm2</i>	Yes

To operate one command by the Front Face Keyboard, proceed as follows (Led Reset in the present example).

- 
  - Press “**Menu**” for access to the main menu with icons.
- 
  - Select “**Cmd**” icon with pushbutton “**Increase**” or “**Decrease**”.
  - Press “**Select**” for access.
- 
  - Select with pushbutton “**Increase**” or “**Decrease**” the menu “**LedClear**”.
  - Press “**Select**” to execute the command.  
(if Password is request, see § Password).
- 
  - When command has been executed the display shows “**! Command Done**”; go to “3”.

## 9. Measure

Real time values as measured during the normal operation.

- 1 
  - Press “**Menu**” for access to the main menu with icons.
- 2 
  - Select “**Measure**” icon with pushbutton “**Increase**” or “**Decrease**”.
  - Press “**Select**” for access.
- 3 
  - Scroll the menu “**Measure**” with pushbutton “**Increase**” or “**Decrease**” to display the measurement.
  - Press “**Exit**” to go to the main menu.







→ <b>Imx</b>	(0 ÷ 9999)	<b>A</b>	Largest phase current (Ia, Ib, Ic).	
→ <b>Ia</b>	(0 ÷ 9999)	<b>A</b>	Phase A current	(R.M.S. ampere)
→ <b>Ib</b>	(0 ÷ 9999)	<b>A</b>	Phase B current	(R.M.S. ampere)
→ <b>Ic</b>	(0 ÷ 9999)	<b>A</b>	Phase C current	(R.M.S. ampere)
→ <b>Io</b>	(0 ÷ 9999)	<b>A</b>	Zero Sequence Current	(fundamental frequency value 3Io)
→ <b>I1</b>	(0.00 ÷ 99.99)	<b>In</b>	Positive sequence current	
→ <b>I2</b>	(0.00 ÷ 99.99)	<b>In</b>	Negative sequence current	
→ <b>Frq</b>	(0.00 ÷ 99.99)	<b>Hz</b>	Frequency	
→ <b>Uan</b>	(0 ÷ 999999)	<b>V</b>	Phase Voltage “A-N”	(R.M.S. value)
→ <b>Ubn</b>	(0 ÷ 999999)	<b>V</b>	Phase Voltage “B-N”	(R.M.S. value)
→ <b>Ucn</b>	(0 ÷ 999999)	<b>V</b>	Phase Voltage “C-N”	(R.M.S. value)
→ <b>Uab</b>	(0 ÷ 999999)	<b>V</b>	Phase-to-phase Voltage “A-B”	(R.M.S. value)
→ <b>Ubc</b>	(0 ÷ 999999)	<b>V</b>	Phase-to-phase Voltage “B-C”	(R.M.S. value)
→ <b>Uca</b>	(0 ÷ 999999)	<b>V</b>	Phase-to-phase Voltage “C-A”	(R.M.S. value)
→ <b>Uo</b>	(0 ÷ 999999)	<b>V</b>	Zero Sequence Voltage	(fundamental frequency value 3Vo)
→ <b>V1</b>	(0.00 ÷ 99.99)	<b>Vn</b>	Positive Sequence Voltage	
→ <b>V2</b>	(0.00 ÷ 99.99)	<b>Vn</b>	Negative Sequence Voltage	
→ <b>PhA</b>	(0 ÷ 359)		° Phase angle “Ia ^ Uan”	
→ <b>PhB</b>	(0 ÷ 359)		° Phase angle “Ib ^ Ubn”	
→ <b>PhC</b>	(0 ÷ 359)		° Phase angle “Ic ^ Ucn”	
→ <b>Ph0</b>	(0 ÷ 359)		° Phase angle “Io ^ Uo”	
→ <b>W</b>	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	<b>k</b>	Three Phase Active Power	(kW)
→ <b>VAr</b>	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	<b>k</b>	Three Phase Reactive Power	(kVAr)
→ <b>VA</b>	(0.00 ÷ 99.99 ÷ 999.9 ÷ 9999999)	<b>k</b>	Three Phase Apparent Power	(kVA)
→ <b>Cos</b>	(0.000 ÷ 1.000)	-	Power Factor	
→ <b>Tem</b>	(0 ÷ 9999)	<b>%T</b>	Thermal status as % of the full load continuous operation temperature Tn	
→ <b>Wir</b>	(100 ÷ 0)	<b>%W</b>	Amount still remaining of permissible interruption energy before Circuit Breaker maintenance is requested.	

## 10. Energy

Real time energy measurements

<b>Display</b>	→ + kWh	(0 – 9999999)	Exported Active Energy
	→ - kWh	(0 – 9999999)	Imported Active Energy
	→ + kRh	(0 – 9999999)	Exported Reactive Energy
	→ - kRh	(0 – 9999999)	Imported Reactive Energy
<b>Erase</b>	→ All Energy counters are cleared		

When the measurement exceed “9999999” the counters restart from “0”.




- 
  - Press “**Menu**” for access to the main menu with icons.
- 
  - Select “**Energy**” icon with pushbutton “**Increase**” or “**Decrease**”.
  - Press “**Select**” for access.
- 
  - Select “**Display**” with pushbutton “**Increase**” or “**Decrease**”.
  - Press “**Select**” for access.
- 
  - Display of Real time Energy measurements.
  - Press “**Exit**” to go back to the level “3”.
- 
  - Select “**Erase**” with pushbutton “**Decrease**” to clear all reading.
  - Press “**Select**”. (if Password is request, see § Password).
- 
  - When command has been execute the display shows “**! Command Done**”; to go to the level “5”.
  - Press “**Exit**” to go back to the main menu.

## 11. Trip Recording (LTrip)

Display of the function which caused the tripping of the relay plus values of the measurement at the moment of tripping. The last 10 events are recorded.




The memory buffer is refreshed at each new relay tripping (FIFO logic).

<b>Display</b>	→	Reading of recorded Trips.
<b>Erase</b>	→	Clear all Trip recorded.

- 
  - Press "**Menu**" for access to the main menu with icons.
- 
  - Select "**L Trip**" icon with pushbutton "**Increase**" or "**Decrease**".
  - Press "**Select**" for access.
- 
  - Select "**Display**" with pushbutton "**Increase**" or "**Decrease**".
  - Press "**Select**" for access.
  - For "**Erase**" go to "8"
- 
  - If no trip is recorded the display shows "**! No Trips**".
- 
  - If any trip was recorded, select "**View**" to display the chronological list of the records.
  - By the keys "**Increase**" or "**Decrease**" select the date of the record to be checked.
- 
  - Will be shown:
    - "**Descr**" the function that caused the event (Example: t1> = Trip)
    - "**Edge**" if the function was tripped (Rise) or reset (Fall)
    - "**Date**", date of trip, year/month/day, hour:minutes:seconds:milliseconds
  - Press "**Value**", for reading the value of input quantities on tripping.





- 7
- 
- Scroll with pushbuttons "**Increase**" or "**Decrease**" the available measurements.
  - Select "**Exit**" to go back to "5" for another selection, or "2" go back to the main menu.
- 8
- 
- Select "**Erase**" with button "**Decrease**".
  - Press "**Select**" to execute the commands; **All** Trips recorded are erased. (if Password is request, see § Password).
- 9
- 
- When command has been executed the display shows "**! Command Done**";
  - Press "**Exit**" to go back to the main menu.

- **Date**      *Date* : Year/Month/Day  
                   *Time* : hours/minutes/second/hundredths of seconds
- **Cause**      Indication of the protection function which caused the relay tripping.

→ <b>Ia</b>	Phase A current	<b>A</b>
→ <b>Ib</b>	Phase B current	<b>A</b>
→ <b>Ic</b>	Phase C current	<b>A</b>
→ <b>Io</b>	Zero Sequence Current	<b>A</b>
→ <b>I1</b>	Positive sequence current	<b>In</b>
→ <b>I2</b>	Negative sequence current	<b>In</b>
→ <b>Frq</b>	Frequency	<b>Hz</b>
→ <b>Uan</b>	Phase Voltage "A-N"	<b>V</b>
→ <b>Ubn</b>	Phase Voltage "B-N"	<b>V</b>
→ <b>Ucn</b>	Phase Voltage "C-N"	<b>V</b>
→ <b>Uo</b>	Zero Sequence Voltage	<b>V</b>
→ <b>PhA</b>	Phase angle "Ia ^ Uan"	<b>°</b>
→ <b>PhB</b>	Phase angle "Ib ^ Ubn"	<b>°</b>
→ <b>PhC</b>	Phase angle "Ic ^ Ucn"	<b>°</b>
→ <b>Ph0</b>	Phase angle "Io ^ Uo"	<b>°</b>
→ <b>Tem</b>	Thermal status as % of the full load continuous operation temperature Tn	<b>%T</b>
→ <b>Wir</b>	Amount still remaining of permissible interruption energy before Circuit Breaker maintenance is requested.	<b>%W</b>

## 12. Counters


Counters of the number of operations for each of the relay functions.


By the interface program "MSCom2" it is possible to individually reset the counters and set an initial starting number.


<b>Display</b>	→ <b>T&gt;</b>	0	Operations counters	Thermal Image
	→ <b>1l&gt;</b>	0	Operations counters	<i>First</i> overcurrent element
	→ <b>2l&gt;</b>	0	Operations counters	<i>Second</i> overcurrent element
	→ <b>3l&gt;</b>	0	Operations counters	<i>Third</i> overcurrent element
	→ <b>1lo&gt;</b>	0	Operations counters	<i>First</i> Earth Fault element
	→ <b>2lo&gt;</b>	0	Operations counters	<i>Second</i> Earth Fault element
	→ <b>3lo&gt;</b>	0	Operations counters	<i>Third</i> Earth Fault element
	→ <b>1ls&gt;</b>	0	Operations counters	<i>First</i> Negative Sequence element
	→ <b>2ls&gt;</b>	0	Operations counters	<i>Second</i> Negative Sequence element
	→ <b>1U&gt;</b>	0	Operations counters	<i>First</i> Overvoltage element
	→ <b>2U&gt;</b>	0	Operations counters	<i>Second</i> Overvoltage element
	→ <b>1U&lt;</b>	0	Operations counters	<i>First</i> Undervoltage element
	→ <b>2U&lt;</b>	0	Operations counters	<i>Second</i> Undervoltage element
	→ <b>1f&gt;</b>	0	Operations counters	<i>First</i> Overfrequency element
	→ <b>2f&gt;</b>	0	Operations counters	<i>Second</i> Overfrequency element
	→ <b>1f&lt;</b>	0	Operations counters	<i>First</i> Underfrequency element
	→ <b>2f&lt;</b>	0	Operations counters	<i>Second</i> Underfrequency element
	→ <b>1Uo&gt;</b>	0	Operations counters	<i>First</i> Zero Sequence overvoltage element
	→ <b>2Uo&gt;</b>	0	Operations counters	<i>Second</i> Zero Sequence overvoltage element
	→ <b>U1&lt;</b>	0	Operations counters	<i>Positive</i> Sequence undervoltage element
	→ <b>U2&gt;</b>	0	Operations counters	<i>Negative</i> Sequence overvoltage element
	→ <b>Wi</b>	0	Operations counters	Circuit Breaker maintenance alarm
	→ <b>TCS</b>	0	Operations counters	Trip Circuit Supervision
	→ <b>IRF</b>	0	Operations counters	Internal Relay Fault
	→ <b>RT</b>	0	Operations counters	Remote Trip
	→ <b>RCL f</b>	0	Operations counters	Autoreclosure Failed
	→ <b>TwRCL</b>	0	Operations counters	Trip not enabled for initiating Automatic Reclosure
	→ <b>RCL ok</b>	0	Operations counters	Autoreclosure successful
	→ <b>MCL ok</b>	0	Operations counters	Manual Reclosure successful
	→ <b>RCL BL</b>	0	Operations counters	Autoreclosure blocked (Lock-Out)
	→ <b>BrkF</b>	0	Operations counters	Breaker failure to open
	→ <b>Aut Op</b>	0	Operations counters	Automatic C/B Openings
	→ <b>Aut CL</b>	0	Operations counters	Automatic C/B Closings
	→ <b>Man Op</b>	0	Operations counters	Manual C/B Openings
	→ <b>Man CL</b>	0	Operations counters	Manual C/B Closings
	→ <b>OvrOp</b>	0	Operations counters	Overall C/B Openings total (Man+Aut)
	→ <b>OvrCL</b>	0	Operations counters	Overall C/B Closings total (Man+Aut)




- 1


  - Press "**Menu**" for access to the main menu with icons.
- 2


  - Press "**Counter**" for access.
- 3


  - Press "**Display**" for access.
- 4

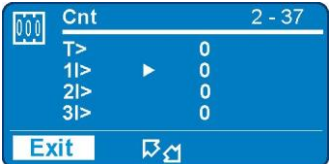
  - Display of the number of operations of each individual function.
  - With pushbuttons "**Increase**" or "**Decrease**" scroll the parameters
  - Press "**Exit**" go back to "3".




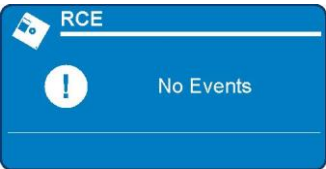

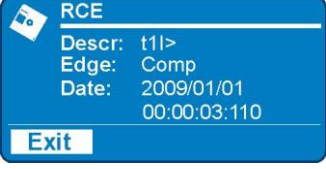

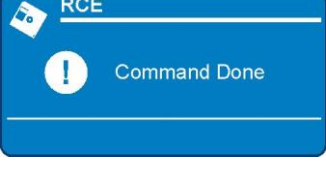
### 13. RCE (Recorder Chronologic Events)

Display of the function which caused any of the following events: - *Status change of digital Inputs/Outputs.* - *Start of protection functions – Trip of protection function – Function reset.*

The last 100 events are recorded.

The memory buffer is updated at each new event.

<b>Display</b>	→	Reading events recorded.
<b>Erase</b>	→	Clear all events recorded.

- 1 
  - Press “**Menu**” for access to the main menu with icons.
- 2 
  - Select “**RCE**” icon with pushbutton “**Increase**” or “**Decrease**”.
  - Press “**Select**” for access.
- 3 
  - Select “**Display**” with pushbutton “**Increase**” or “**Decrease**”.
  - Press “**Select**” for access.
  - For “**Erase**” go to “7”
- 4 
  - If no event is recorded the display shows message “**! No Events**”.
- 5 
  - If any event was recorded, select “**View**” to display the chronological list of the records.
  - By the keys “**Increase**” or “**Decrease**” select the date of the record to be checked.
- 6 
  - Will be shown:
    - “**Descr**” the function that caused the event  
(Example: 1I> = Start, t1I> = Trip)
    - “**Edge**” if the function was tripped (Rise) or reset (Fall)
    - “**Date**”, date of trip, year/month/day, hour:minutes:seconds:milliseconds
- 7 
  - Select “**Erase**” with button “**Decrease**”.
  - Press “**Select**” to execute the commands; **All** Events recorded are erased.  
(if Password is request, see § Password).
- 8 
  - When command has been execute the display shows “**! Command Done**”;
  - Press “**Exit**” to go back to the main menu.

### 13.1 – Events on display

Functions	Events Displayed		Events Description MScom2	Status
<b>T&gt;</b>	<b>Tal</b>	Alarm	Thermal Image T>	Rise
	<b>T&gt;</b>	Trip		Rise Fall
<b>1l&gt;</b>	<b>1l&gt;</b>	Start	First overcurrent element F50-51	Rise
	<b>t1l&gt;</b>	Trip		Rise Fall
<b>2l&gt;</b>	<b>2l&gt;</b>	Start	Second overcurrent element F50-51	Rise
	<b>t2l&gt;</b>	Trip		Rise Fall
<b>3l&gt;</b>	<b>3l&gt;</b>	Start	Third overcurrent element F50-51	Rise
	<b>t3l&gt;</b>	Trip		Rise Fall
<b>1lo&gt;</b>	<b>1lo&gt;</b>	Start	First earth fault element F50N-51N	Rise
	<b>t1lo&gt;</b>	Trip		Rise Fall
<b>2lo&gt;</b>	<b>2lo&gt;</b>	Start	Second earth fault element F50N-51N	Rise
	<b>t2lo&gt;</b>	Trip		Rise Fall
<b>3lo&gt;</b>	<b>3lo&gt;</b>	Start	Third earth fault element F50N-51N	Rise
	<b>t3lo&gt;</b>	Trip		Rise Fall
<b>1ls&gt;</b>	<b>1ls&gt;</b>	Start	First negative sequence current element F46	Rise
	<b>t1ls&gt;</b>	Trip		Rise Fall
<b>2ls&gt;</b>	<b>2ls&gt;</b>	Start	Second negative sequence current element F46	Rise
	<b>t2ls&gt;</b>	Trip		Rise Fall
<b>1U&gt;</b>	<b>1U&gt;</b>	Start	First overvoltage element F59	Rise
	<b>t1U&gt;</b>	Trip		Rise Fall
<b>2U&gt;</b>	<b>2U&gt;</b>	Star	Second overvoltage element F59	Rise
	<b>t2U&gt;</b>	Trip		Rise Fall
<b>1U&lt;</b>	<b>1U&lt;</b>	Start	First undervoltage element F27	Rise
	<b>t1U&lt;</b>	Trip		Rise Fall
<b>2U&lt;</b>	<b>2U&lt;</b>	Start	Second undervoltage element F27	Rise
	<b>t2U&lt;</b>	Trip		Rise Fall
<b>1f&gt;</b>	<b>1f&gt;</b>	Start	First overfrequency element F81	Rise
	<b>t1f&gt;</b>	Trip		Rise Fall
<b>2f&gt;</b>	<b>2f&gt;</b>	Start	Second overfrequency element F81	Rise
	<b>t2f&gt;</b>	Trip		Rise Fall
<b>1f&lt;</b>	<b>1f&lt;</b>	Start	First underfrequency element F81	Rise
	<b>t1f&lt;</b>	Trip		Rise Fall
<b>2f&lt;</b>	<b>2f&lt;</b>	Start	Second underfrequency element F81	Rise
	<b>t2f&lt;</b>	Trip		Rise Fall
<b>1Uo&gt;</b>	<b>1Uo&gt;</b>	Start	First zero sequence voltage element F59Uo	Rise
	<b>t1Uo&gt;</b>	Trip		Rise Fall
<b>2Uo&gt;</b>	<b>2Uo&gt;</b>	Start	Second zero sequence voltage element F59Uo	Rise
	<b>t2Uo&gt;</b>	Trip		Rise Fall
<b>U1&lt;</b>	<b>U1&lt;</b>	Start	Positive sequence undervoltage element F27U1	Rise
	<b>tU1&lt;</b>	Trip		Rise Fall
<b>U2&gt;</b>	<b>U2&gt;</b>	Start	Negative sequence overvoltage element F59U2	Rise
	<b>tU2&gt;</b>	Trip		Rise Fall
<b>Wi</b>	<b>tWi&gt;</b>		Circuit breaker maintenance level	Rise
<b>TCS</b>	<b>TCS</b>	Start	Trip coil supervision	Rise
	<b>tTCS</b>	Trip		Rise Fall
<b>IRF</b>	<b>IRF</b>	Start	Internal Relay Failure	Rise
	<b>tIRF</b>	Trip		Rise
<b>RT</b>	<b>Start RT</b>	Start	Element Remote Trip	Rise
	<b>RemTrip</b>	Trip		Rise

Functions	Events Displayed	Events Description MScom2	Status
	<b>79X</b>	Reclosure command	Rise
	<b>FR</b>	Reclosure failure	Rise
	<b>CRC</b>	Recloser cycle in progress	Rise
	<b>TWR</b>	Trip without reclosure	Rise
	<b>RecIDone</b>	Reclosure succesfull	Rise
	<b>StartTnExt</b>	Start reclaim time [TrExt] on external lockout	Rise
	<b>StopTrExt</b>	Stop reclaim time [TrExt] on external lockout	Rise
	<b>RCLInterr.</b>	Reclosure interrupted by setup cause	Rise
	<b>CH-Riusc.</b>	Manual close succesfull	Rise Fall
	<b>BiRCL</b>	Presence reclosure external lockout cause (input/CB Failure)	Rise
	<b>StartR1</b>	Start first reclosure	Rise
	<b>StartR2</b>	Start second reclosure	Rise
	<b>StartR3</b>	Start third reclosure	Rise
	<b>StartR4</b>	Start fourth reclosure	Rise
	<b>StartTr-d1</b>	Start Reclaim and Discrimination time on first closure	Rise
	<b>StartTr-d2</b>	Start Reclaim and Discrimination time on second closure	Rise
	<b>StartTr-d3</b>	Start Reclaim and Discrimination time on third closure	Rise
	<b>StartTr-d4</b>	Start Reclaim and Discrimination time on fourth closure	Rise
	<b>CRIntScDis</b>	Cycle blocked by not reclosing trip	Rise
	<b>CRIntApInt</b>	Cycle blocked by intentional C/B open	Rise
	<b>CRIntBinp</b>	Cycle interrupted by external cause	Rise
	<b>CRCInChCB</b>	Cycle blocked by intentional C/B close	Rise
	<b>StartRChM</b>	Start manual reclosure cycle	Rise
	<b>FrLTr</b>	Trip in last reclaim time available	Rise
	<b>Gr1-Gr2</b>	Switch to setup Bank 2	Rise Fall
	<b>RCLInterr</b>	Reclosure interrupt by persistent fault	Rise
	<b>SeqC</b>	Sequence coordination (Start mew/next RCL cycle)	Rise
	<b>L/Rdisc.</b>	Local/Remote signal Discrepancy	Rise
	<b>manOpKey</b>	Circuit Breaker intentional open by Key	Rise
	<b>manOpLocC</b>	Circuit Breaker intentional open by local command	Rise
	<b>manOpRemC</b>	Circuit Breaker intentional open by remote command	Rise
	<b>manOpExtIn</b>	Circuit Breaker intentional open by external input	Rise
	<b>ExterManOp</b>	Circuit Breaker intentional external open	Rise
	<b>manCIKey</b>	Circuit Breaker intentional close by Key	Rise
	<b>manCILocC</b>	Circuit Breaker intentional close by local command	Rise
	<b>manCIRemC</b>	Circuit Breaker intentional close by remote command	Rise
	<b>manCIExtIn</b>	Circuit Breaker intentional close by external input	Rise
	<b>ExterManCh</b>	Circuit Breaker intentional external close	Rise
	<b>CB-Fail</b>	Circuit Breaker failure	Rise Fall
	<b>0.D0</b>		
	----	Digital Input	Rise Fall
	<b>0.D4</b>		
	----	Digital input	Rise Fall
	<b>1.D1</b>		
	----	Digital input	Rise Fall
	<b>1.D15</b>		
	----	Digital input	Rise Fall
	<b>2.D1</b>		
	----	Digital input	Rise Fall
	<b>2.D15</b>		
	----	Digital input	Rise Fall
	<b>0.R1</b>		
	----	Output relay	Rise Fall
	<b>0.R6</b>		
	----	Output relay	Rise Fall
	<b>1.R1</b>		
	----	Output relay	Rise Fall
	<b>1.R14</b>		
	----	Output relay	Rise Fall
	<b>2.R1</b>		
	----	Output relay	Rise Fall
	<b>2.R14</b>		
	----	Output relay	Rise Fall
	<b>UpDateMon</b>	Update Monitor	Rise Fall
	<b>IPU boot</b>	IPU boot	Rise
	<b>TimeSynchro</b>	Time Synchronization	Rise




## 14. Sys (System parameters)

Setting of system parameters.

CT&PTs	Phase CT	Prim.	→	1000	A	(1 ÷ 9999)	step	1	A	(1)
		Sec.	→	1	A	(1 / 5)				
	PT (Ph-Ph)	Prim.	→	10.00	kV	(0.10 ÷ 500.00)	step	0.01	kV	(2)(3)
		Sec.	→	100	V	(50 ÷ 150)	step	1	V	
	Neut. CT	Prim.	→	1000	A	(1÷9999)		1	A	(1)
		Sec.	→	1	A	(1 / 5)				
	Nom. Val.		→	Freq.	50	Hz	(50 / 60)			
	(System Rated Values)		→	In	500	A	(1÷9999)		1	A
→			Un	10.00	kV	(0.10 ÷ 500.00)		0.01	kV	
Setup Group		→	Group	1		(1 / 2)				

- ☐ **Fn** : Nominal Frequency
- ☐ **In** : Nominal Current
- ☐ **Un** : Nominal Voltage
- ☐ **Group** : Setting group active


(1) Move the switch in the corresponding founding to the required input current as herebelow shorted.

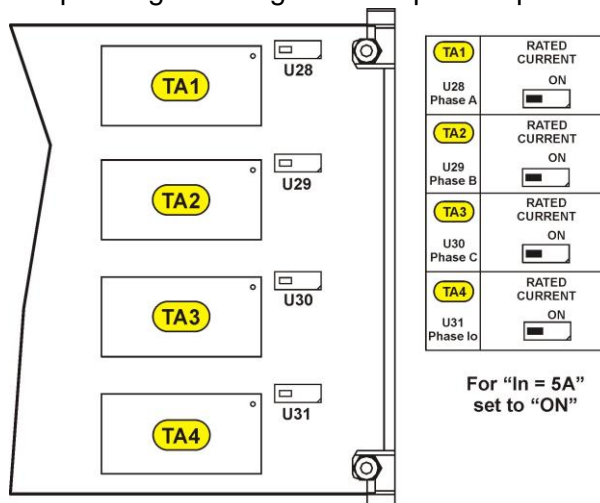



(2) Set the value of the phase-to-phase PT voltage.


$$\text{Example: Example : TV } \frac{10000 : \sqrt{3}}{100 : \sqrt{3}} \rightarrow \text{set } \frac{\text{Prim.} = 10000}{\text{Sec.} = 100}$$


(3) Zero sequence voltage input is to be supplied by three system P.Ts. Y/Open Delta connected; the open delta connected secondary are rated 1/3 of the phase-to-phase secondary voltage (Example: 10000 / 100:√3 / 100:3).


- 


  - Press **"Menu"** for access to the main menu with icons.
- 


  - Select **"Sys"** icon with pushbuttons **"Increase"** or **"Decrease"**.
  - Press **"Select"** for access.
- 

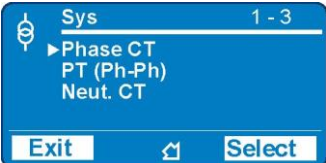  - Select **"CT&PTs"**.
  - Press **"Select"** for access.
- 

  - Select **"Phase CT"**.
  - Press **"Select"** for access.
- 

  - Select **"Prim."** to modify the primary value of Phase CT, or press **"Decrease"** and select **"Sec."** to modify the secondary value of Phase CT.
  - Press **"Modify"** to modify the parameter.  
(if Password is request, see § Password).
- 

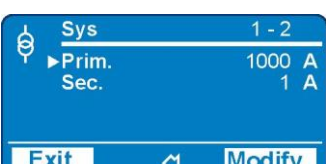
  - The value appear as bold figure.
  - Use pushbuttons **"Increase"** or **"Decrease"** to set the value.
  - Press **"Write"** to confirm the value
- 


  - The value is now set.
  - To set a new value return to the point "5".
  - Press **"Exit"**.
- 


  - The display show **"Confirm the change?"**.
  - Choose **"Yes"** to convalidate the changes.
  - Choose **"No"** to not confirm the changes.
  - After set confirmation (or non confirmation) the display goes back to point "4".




- 9

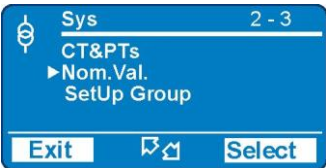
  - To modify the input quantities, select with pushbutton “**Decrease**”, “**Nom.Val.**”.
  - Press “**Select**” for access.
- 10





  - To set the input quantities see points “5-6-7-8” .
- 11


  - To select the Active Bank of setting press “**SetUp Group**”.
- 12


  - Select with pushbuttons “**Increase**” or “**Decrease**”, the Bank to be Active.

## 15. Settings

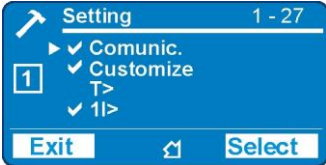Two complete Group of settings of the programmable variables are available in the “**SETTING**” menu. Both “Group #1” and “Group #2” include the hereunder listed variables.

- 1   Indicates the Setting Group that is actually being modified.
-  This symbol indicates that the function is enabled; symbol missing indicates that the function is disabled.


- **Comm.** Serial communication parameters
- **LCD** Visualization parameters
- **T>** Thermal Image
- **1l>** *First* overcurrent Element
- **2l>** *Second* overcurrent Element
- **3l>** *Third* overcurrent Element
- **1lo>** *First* Earth Fault Element
- **2lo>** *Second* Earth Fault Element
- **3lo>** *Third* Earth Fault Element
- **1ls>** *First* Negative Sequence Current Element
- **2ls>** *Second* Negative Sequence Current Element
- **1U>** *First* Overvoltage Element
- **2U>** *Second* Overvoltage Element
- **1U<** *First* Undervoltage Element
- **2U<** *Second* Undervoltage Element
- **1f>** *First* Overfrequency Element
- **2f>** *Second* Overfrequency Element
- **1f<** *First* Underfrequency Element
- **2f<** *Second* Underfrequency Element
- **1Uo>** *First* Zero Sequence Voltage Element
- **2Uo>** *Second* Zero Sequence Voltage Element
- **U1<** Positive Sequence Undervoltage Element F27U1
- **U2>** Negative sequence Overvoltage Element F59U2 or F47
- **Wi** Amount of Energy to reach the C/B maintenance level
- **TCS** Setting variables for Trip Circuit Supervision
- **IRF** Internal Relay Fault
- **RT** Remote Trip
- **tTripRd** Trip time Reduction
- **Reclos.** Automatic Reclosure
- **BrkFail** Setting variables for Breaker Failure detection
- **ExtReset** Configuration for external reset input
- **CB Mngr** C/B command Local / Remote setting
- **Oscillo** Setting variables for Oscillographic recording





## 15.1 - Modifying the setting of variables


To modify any variable setting by the keyboard proceed as follows:


(example: change setting of element “1I>”, from “Is 4.000 In” to “Is 3.500 In”)

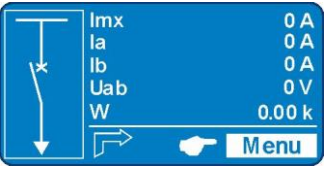
- 

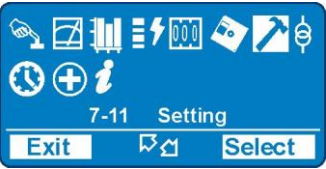
- Press “Menu” for access to the main menu with icons.
- 


- Select icon “Setting” by pushbuttons “Increase” or “Decrease”.
  - Press “Select”.
- 


- Select by pushbuttons “Increase” or “Decrease” the parameter “1I>”.
  - Press “Select”.
- 


- Select by buttons “Increase” or “Decrease” the menu “Oper.Levels”.
  - Press “Select”.
- 

- The arrow aside “Is” shows the parameter selected for changing
  - Press “Modify”.
  - If Password is request, see § Password
- 

- The value appear as bold figure.
- 

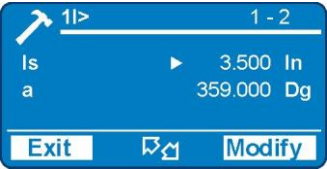- Set new values pushbuttons “Increase” or “Decrease” buttons
  - Press “Write”.
- 

- If the change of parameters is completed, press “Exit”.
- 

- “Yes” confirm all changes.
  - “No” voids all the changes.
- 

- The relay returns to point “4”.









## 15.2 - Password


The password is requested any time the user wishes to modify any password protected parameter (example "1l>" menu "Setting").


The factory default password is "1111".


The password is only modifiable with "MSCom 2" software (see Manual "MSCom 2").



When password is requested, proceed as follows:

- |  |  |   |   |
|--|--|---|---|
| <b>1</b>    | <ul style="list-style-type: none"> <li>Use the key "<b>Increase</b>" and "<b>Decrease</b>" and set the first digit of password.</li> </ul> | <b>5</b>    | <ul style="list-style-type: none"> <li>Use the key "<b>Increase</b>" or "<b>Decrease</b>" to set the third digit.</li> </ul>  |
| <b>2</b>    | <ul style="list-style-type: none"> <li>Press "<b>Next</b>" to validate and go to the next digit.</li> </ul>                                | <b>6</b>    | <ul style="list-style-type: none"> <li>Press "<b>Next</b>" to validate and go to the next digit.</li> </ul>                   |
| <b>3</b>   | <ul style="list-style-type: none"> <li>Use the key "<b>Increase</b>" or "<b>Decrease</b>" to set second digit.</li> </ul>                  | <b>7</b>   | <ul style="list-style-type: none"> <li>Use the key "<b>Increase</b>" or "<b>Decrease</b>" to set the fourth digit.</li> </ul> |
| <b>4</b>  | <ul style="list-style-type: none"> <li>Press "<b>Next</b>" to validate and go to the next digit.</li> </ul>                                | <b>8</b>  | <ul style="list-style-type: none"> <li>Press "<b>Next</b>" to validate and go to modify the next parameter.</li> </ul>        |

 By key "**Prev**" go back to previous digit.

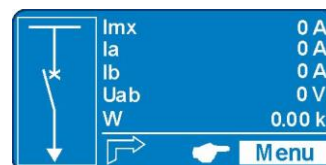 The password validity expires 60 sec after the last setting modification or as soon as you go back to the main menu



- |  |  |   |   |
|--|--|---|---|
| <b>1</b>  | <ul style="list-style-type: none"> <li>If set the incorrect password the display shows "<b>! Wrong code</b>".</li> </ul> | <b>2</b>  | <ul style="list-style-type: none"> <li>The display will repeat the initial interrogation</li> </ul> |
|--|--|---|---|





### 15.3 – Menu: **Comm.** (Communication parameters)

<b>Options</b>	→ <b>BRLoc</b>	38400	[9600 / 19200 / 38400 / 57600]
	→ <b>BRRem</b>	19200	[9600 / 19200 / 38400]
<b>Node Address</b>	→ <b>Indir.</b>	1	[1 ÷ 255]


#### 15.3.1 – Description of variables

- **BRLoc** : RS232 local (Front Panel) serial communication speed
- **BRRem** : RS485 remote (Rear terminal block) serial communication speed
- **Indir.** : Identification number for the connection on serial communication bus

#### 15.3.2 – Front Panel serial communication port (RS232)

A D-Sub, -pin female socket is available on Relay's front face for connection to the local RS232 serial communication line. Through this port - and by the interface program available from Microelettrica Scientifica S.p.A. (MCom2 for Windows 98/ME/2000/XP) – it is possible to connect a Personal Computer to download all available information, operate any control and program the relay; the protocol used is "Modbus RTU".

#### 15.3.3 – Cable for direct connection of Relay to Personal Computer

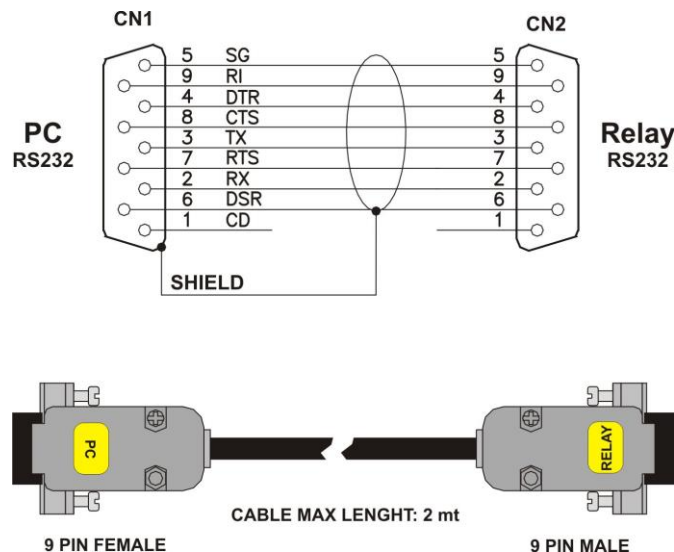

#### 15.3.4 – Main serial communication port (RS485)

From the Relay's back terminal board, a RS485 ports is available for communication with SCADA system with Protocol Modbus RTU or IEC60870-5-103 (selectable).

The communication interface allows to program all settings, operate all commands and download all information and records.

The physical connection can be via a normal pair of wires (RS485) or, on request, via fiber optic.



#### 15.4 - Menu: **LCD**

<b>Options</b>	→ <b>Lang</b>	English	[English / Loc.Lang]
	→ <b>Light</b>	Autom.	[Autom. / On]
	→ <b>Row1</b>	Imx	[Imx / Ia / Ib / Ic / Io / I1 / I2 / Frq / Uan / Ubn /
	→ <b>Row2</b>	Ia	Ucn / Uab / Ubc / Uca / Uo / V1 / V2 / PhA / PhB
	→ <b>Row3</b>	Ib	/ PhC / Ph0 / W / VAr / VA / Cos / Tem / Wir /
	→ <b>Row4</b>	Uab	LocRm / RCL / LCR / Empty]
	→ <b>Row5</b>	W	
	→ <b>Leds</b>	4	[4 / 11 / 18 / 25 / 32 / 39 / 46 / 53]

##### 15.4.1 – Description of variables

<input type="checkbox"/> <b>Lang</b>	:	Set Language
<input type="checkbox"/> <b>Light</b>	:	Set Display backlight
<input type="checkbox"/> <b>Row1</b>	:	Choosing the variable to be displayed in the rows on main menu
<input type="checkbox"/> <b>Row2</b>	:	
<input type="checkbox"/> <b>Row3</b>	:	
<input type="checkbox"/> <b>Row4</b>	:	
<input type="checkbox"/> <b>Row5</b>	:	
<input type="checkbox"/> <b>Leds</b>	:	Configuration Leds number
		<b>4</b> : 4 Base leds only
		<b>11</b> : 4 Base leds only + 7 configurable leds
		<b>18</b> : 4 Base leds only + 14 configurable leds
		<b>25</b> : 4 Base leds only + 21 configurable leds
		<b>32</b> : 4 Base leds only + 28 configurable leds
		<b>39</b> : 4 Base leds only + 35 configurable leds
		<b>46</b> : 4 Base leds only + 42 configurable leds
		<b>53</b> : 4 Base leds only + 49 configurable leds

This menu allows to customize the Language and the Display's backlight.

The standard languages are English and Italian. On request, other languages can be loaded (French, German, etc..).









The Display backlight can be programmed always on "ON" or switched-on "Automatically" for a few second at any operation of the keyboard "Auto".

This menu allows to customize the Language and the Display's backlight.

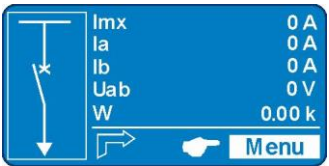The standard languages are English and Italian. On request, other languages can be loaded (French, German, etc..).

The Display backlight can be programmed always on "ON" or switched-on "Automatically" for a few second at any operation of the keyboard "Auto".

Example: set Local Language.

- |  |  |   |  |
|--|--|---|--|
| <b>1</b>    | <ul style="list-style-type: none"> <li>Press "<b>Menu</b>" for access to the main menu with icons.</li> </ul>  | <b>5</b>    | <ul style="list-style-type: none"> <li>Select "<b>Loc.Lang</b>".</li> <li>Press "<b>Write</b>".</li> <li>If Password is requested, see § Password</li> </ul> |
| <b>2</b>    | <ul style="list-style-type: none"> <li>Select icon "<b>Setting</b>" by pushbuttons "<b>Increase</b>" or "<b>Decrease</b>".</li> <li>Press "<b>Select</b>".</li> </ul>                          | <b>6</b>    | <ul style="list-style-type: none"> <li>Press "<b>Exit</b>".</li> </ul>   |
| <b>3</b>   | <ul style="list-style-type: none"> <li>Select "<b>Group 1</b>" or "<b>Group 2</b>".</li> <li>Select "<b>LCD</b>".</li> <li>Select "<b>Options</b>".</li> <li>Press "<b>Select</b>".</li> </ul> | <b>7</b>   | <ul style="list-style-type: none"> <li>"<b>Yes</b>" confirms all changes.</li> <li>"<b>No</b>" void all changes.</li> </ul>                                  |
| <b>4</b>  | <ul style="list-style-type: none"> <li>Select "<b>Lang</b>".</li> <li>Press "<b>Modify</b>".</li> </ul>  | <b>8</b>  | <ul style="list-style-type: none"> <li>After set confirmation the display shows "<b>Please Wait</b>".</li> </ul>   |



### 15.5 - Function: **T** (Thermal Image F49)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Options</b>	→ <b>OPMOD</b>	I1 I2	[I1 I2 – I <sub>max</sub> ]				
<b>Oper.Levels</b>	→ <b>Tal</b>	10.000	%Tn [10 ÷ 100]	step	1.000	%Tn	
	→ <b>Is</b>	0.500	[0.5 ÷ 1.5]	step	0.010		
	→ <b>Kt</b>	1.000	min [1 ÷ 600]	step	0.010	min	

#### 15.5.1 - Description of variables

- **Enab.** : Function enabling (No = Disable / Yes = Enable)
- **OPMOD** : Operation Mode
- **Tal** : Temperature prealarm level
- **Is** : Continuous admissible current
- **Kt** : Warming-up Time Constant of the load

#### 15.5.2 - Trip and Alarm

The algorithm compares the amount of heat accumulated “T” ( $\equiv i^2 \cdot t$ ) to the steady state amount of heat “T<sub>n</sub>” corresponding to continuous operation of the rated current “I<sub>n</sub>”.  
When the ratio “T/T<sub>n</sub>” reaches the level set for Thermal Alarm “Tal” or the max allowed heating, the relay trips accordingly

##### 15.5.2.1 – Operation mode “I<sub>max</sub>”

With this option, the largest of the three phase currents measured is used to compute the Thermal Image:

$$I = \text{MAX}(I_a, I_b, I_c)$$

##### 14.5.2.2 – Operation mode “I1-I2”

With this option, a composition of Positive and Negative Sequence components of the current measured is used to compute the Thermal Image:

$$I = \sqrt{(I_1)^2 + 3(I_2)^2}$$



### 15.5.2.3 – Trip time of the Thermal Image Element


The trip time of the Thermal Image Element is a function of the current “I” flowing into the load and depends on its warming-up Time Constant “Kt”, on the previous thermal status “Ip” and on the maximum admissible continuous current “Is” according to the equation:

$$t = Kt \cdot \ell_n \frac{\left(\frac{I}{I_n}\right)^2 - \left(\frac{I_p}{I_n}\right)^2}{\left(\frac{I}{I_n}\right)^2 - \left(\frac{I_s}{I_n}\right)^2}$$

<b>t</b>	=	Time to relay tripping
<b>Kt</b>	=	Load thermal time constant
<b>I</b>	=	Actual load current
<b>I<sub>n</sub></b>	=	Load rated current
<b>I<sub>s</sub></b>	=	Continuous admissible current
<b>I<sub>p</sub></b>	=	Steady state current before the overload
<b>ℓ<sub>n</sub></b>	=	Natural Logarithm

When the heating exceeds the set alarm level “Tal” or the max. allowed level (“I” > “Is” for the time “t”) the output relays programmed for these function will be operated. Reset will take place when the heating will drop below 99% of the trip level.

**15.5.2.4 – Thermal Image Curves (TU1024 Rev.1)**

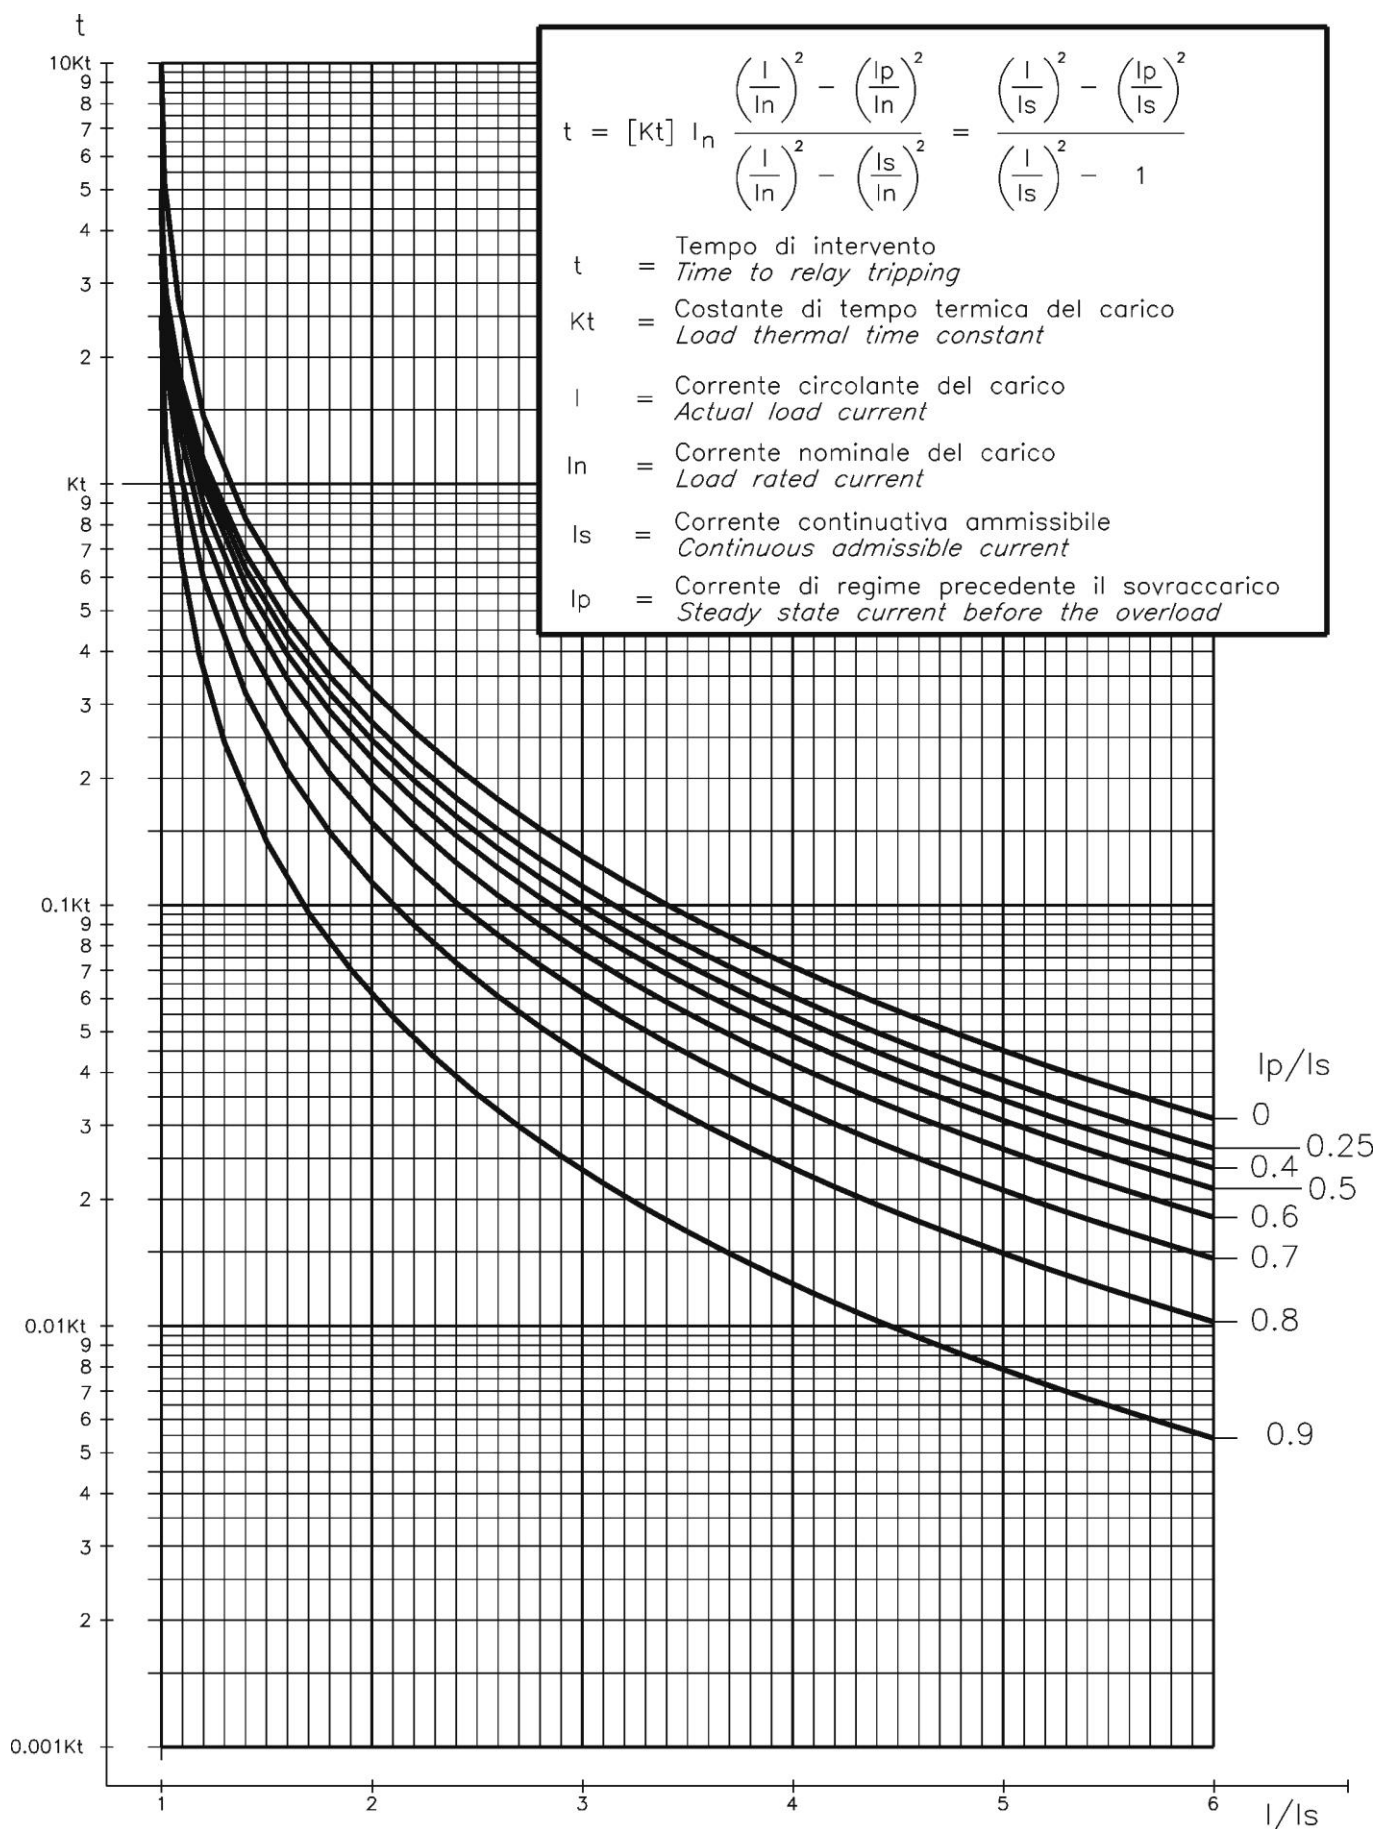





### 15.6 - Function: 1I> (First Overcurrent Element F50/51)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>f(t)</b>	Type - D	[D / A / B / C / I / VI / EI / MI / SI]
	→ <b>tBI</b>	Off	[Off / 2tBO]
	→ <b>f(a)</b>	Disable	[Disable / Sup / Dir]
	→ <b>f(U)</b>	Disable	[Disable / Enable]
<b>Oper. Levels</b>	→ <b>Is</b>	4.000	In (0.100÷4) step 0.010 In
	→ <b>a</b>	359.000	° (0.000÷359) step 1.000 °
<b>Timers</b>	→ <b>ts</b>	100.00	s (0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	s (0.05÷0.75) step 0.01 s (1)

#### 15.6.1 - Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **f(t)** : Operation characteristic (Time/Current curve):
  - (D) = Independent definite time
  - (A) = IEC Inverse Curve type A
  - (B) = IEC Very Inverse Curve type B
  - (C) = IEC Extremely Inverse Curve type C
  - (I) = IEEE Inverse Curve
  - (VI) = IEEE Very Inverse Curve
  - (EI) = IEEE Extremely Inverse Curve
  - (MI) = IEEE Moderate Inverse Curve
  - (SI) = IEEE Short Inverse Curve
- ❑ **tBI** : Blocking input reset time
  - Off = Permanent block
  - 2tBO = Set 2xtBO.
- ❑ **f(a)** : Operation mode:
  - Disable = Non Directional
  - Sup. = Directional Supervision
  - Dir. = Total Directional
- ❑ **f(U)** : Voltage restraint
- ❑ **Is** : Minimum operation level
- ❑ **a** : Reference phase current displacement angle for Directional operation
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

### 15.6.2 - Algorithm of the time current curves

The Time Current Curves are generally calculated with the following equation

$$(1) \quad t(I) = \left[ \frac{A}{\left(\frac{I}{I_s}\right)^a - 1} + B \right] \cdot K \cdot T_s + T_r \quad \text{where}$$

$t(I)$  = Actual trip time delay when the input current equals "I"

$I_s$  = Set minimum pick-up level

$$K = \left( \frac{A}{10^a - 1} + B \right)^{-1}$$

$T_s$  = Set time delay:  $t(I) = T_s$  when  $\frac{I}{I_s} = 10$

$t_r$  = Operation time of the output relay on pick-up.

The parameters A, B and a have different values for the different Time Current Curves.

Curve Name	Curve Identifier	A	B	a
IEC A Inverse	A	0.14	0	0.02
IEC B Very Inverse	B	13.5	0	1
IEC C Extremely Inverse	C	80	0	2
IEEE Moderate Inverse	MI	0.0104	0.0226	0.02
IEEE Short Inverse	SI	0.00342	0.00262	0.02
IEEE Very Inverse	VI	3.88	0.0963	2
IEEE Inverse	I	5.95	0.18	2
IEEE Extremely Inverse	EI	5.67	0.0352	2

For the IEC curves, being  $B = 0$ , the Time/Current equation (1), becomes:

$$(1') \quad t(I) = \frac{(10^a - 1)T_s}{\left(\frac{I}{I_s}\right)^a - 1} + t_r = \frac{Kt}{\left(\frac{I}{I_s}\right)^a - 1} + t_r$$


Where  $Kt = (10^a - 1)T_s$  is the time multiplier

When " $f(t) = D$ " is programmed, the trip time delay is Definite and independent from the current: excess " $t = t_s$ ".

**The maximum measuring current is "40xIn" for phase elements and "10xOn" for the neutral elements.**

Trip takes place when the current measured exceeds (no matter how much) the set level " $I_s$ " for the set time " $t_s$ ".


### 15.6.3 - IEC Curves

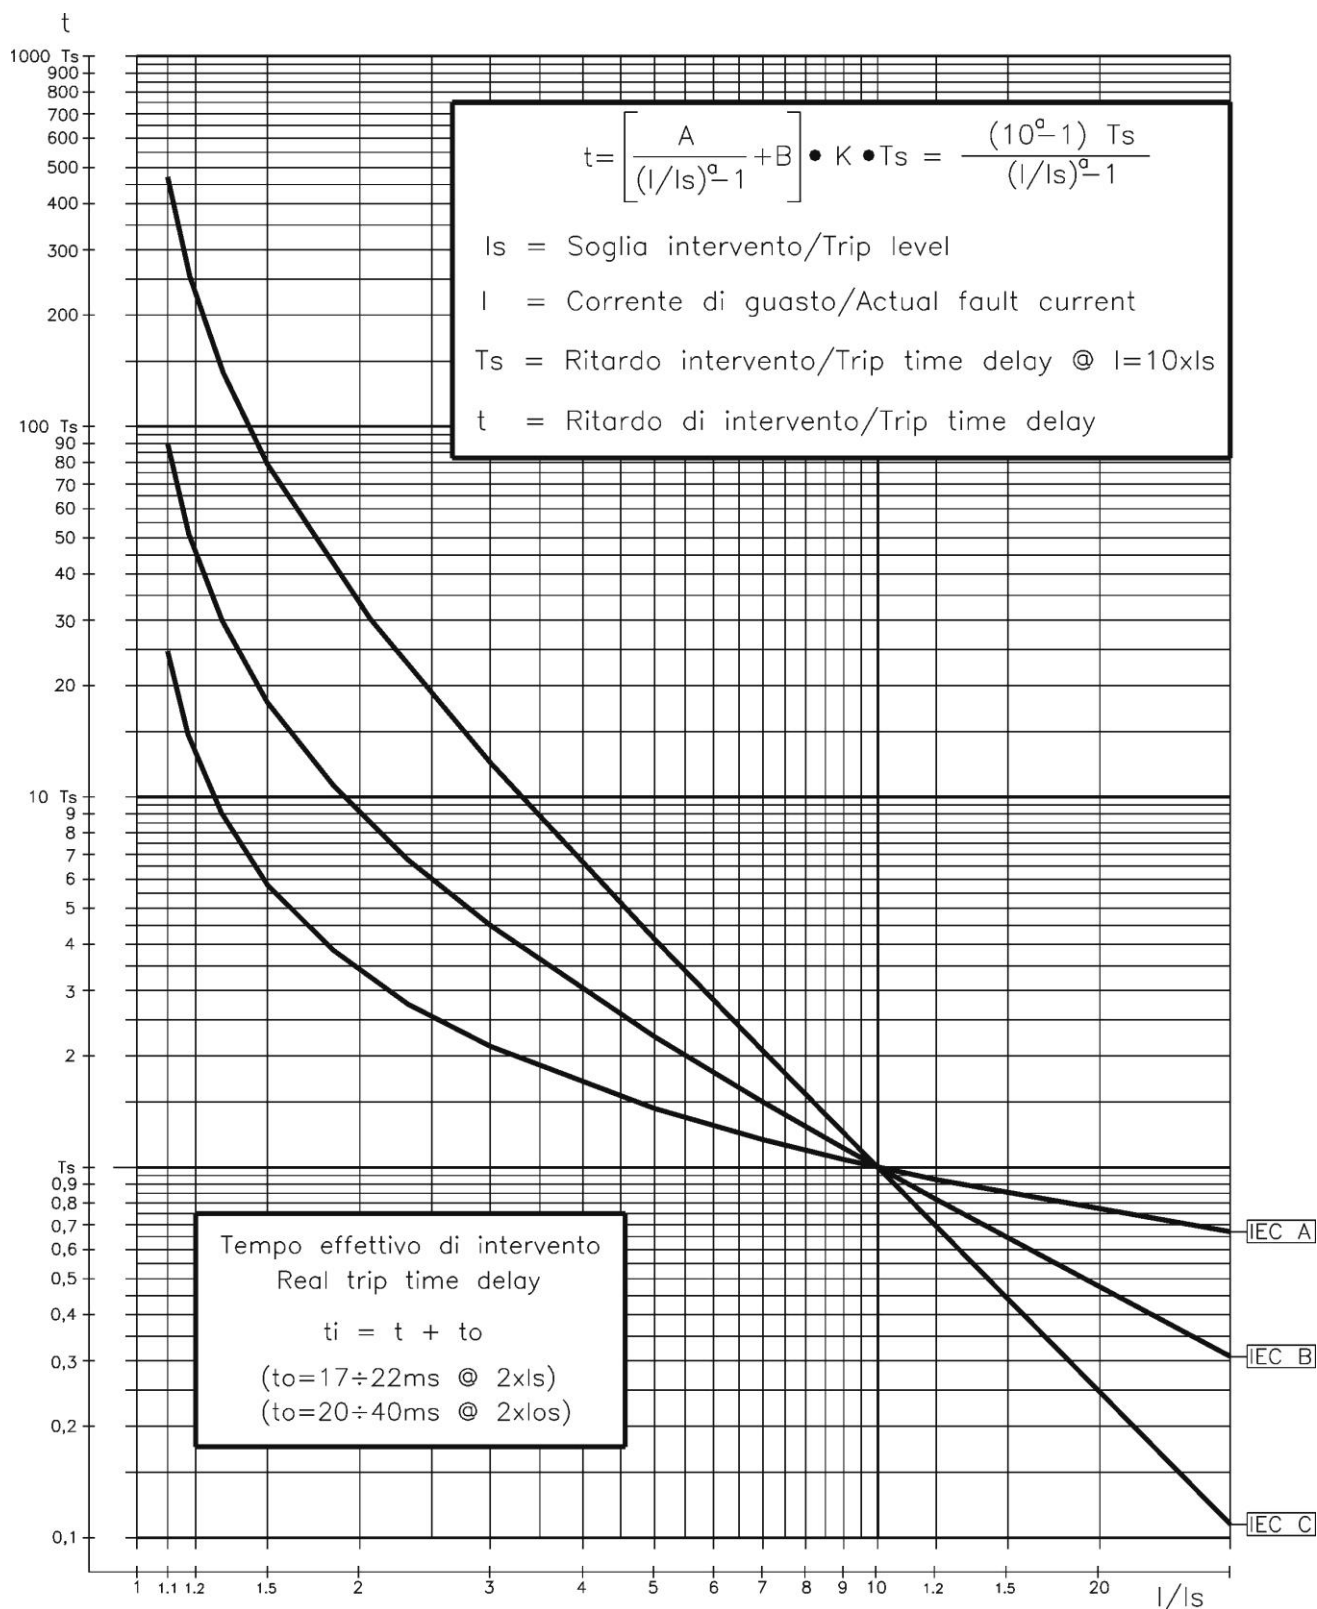

Curve Type	A	B	K	a
IEC A	0.14	0	0.336632	0.02
IEC B	13.5	0	0.666667	1
IEC C	80	0	1.2375	2

Max. "I" Phase =  $40 \times I_n$   
 Max. "I" Neutral =  $10 \times I_n$

### 15.6.4 – IEEE Curves

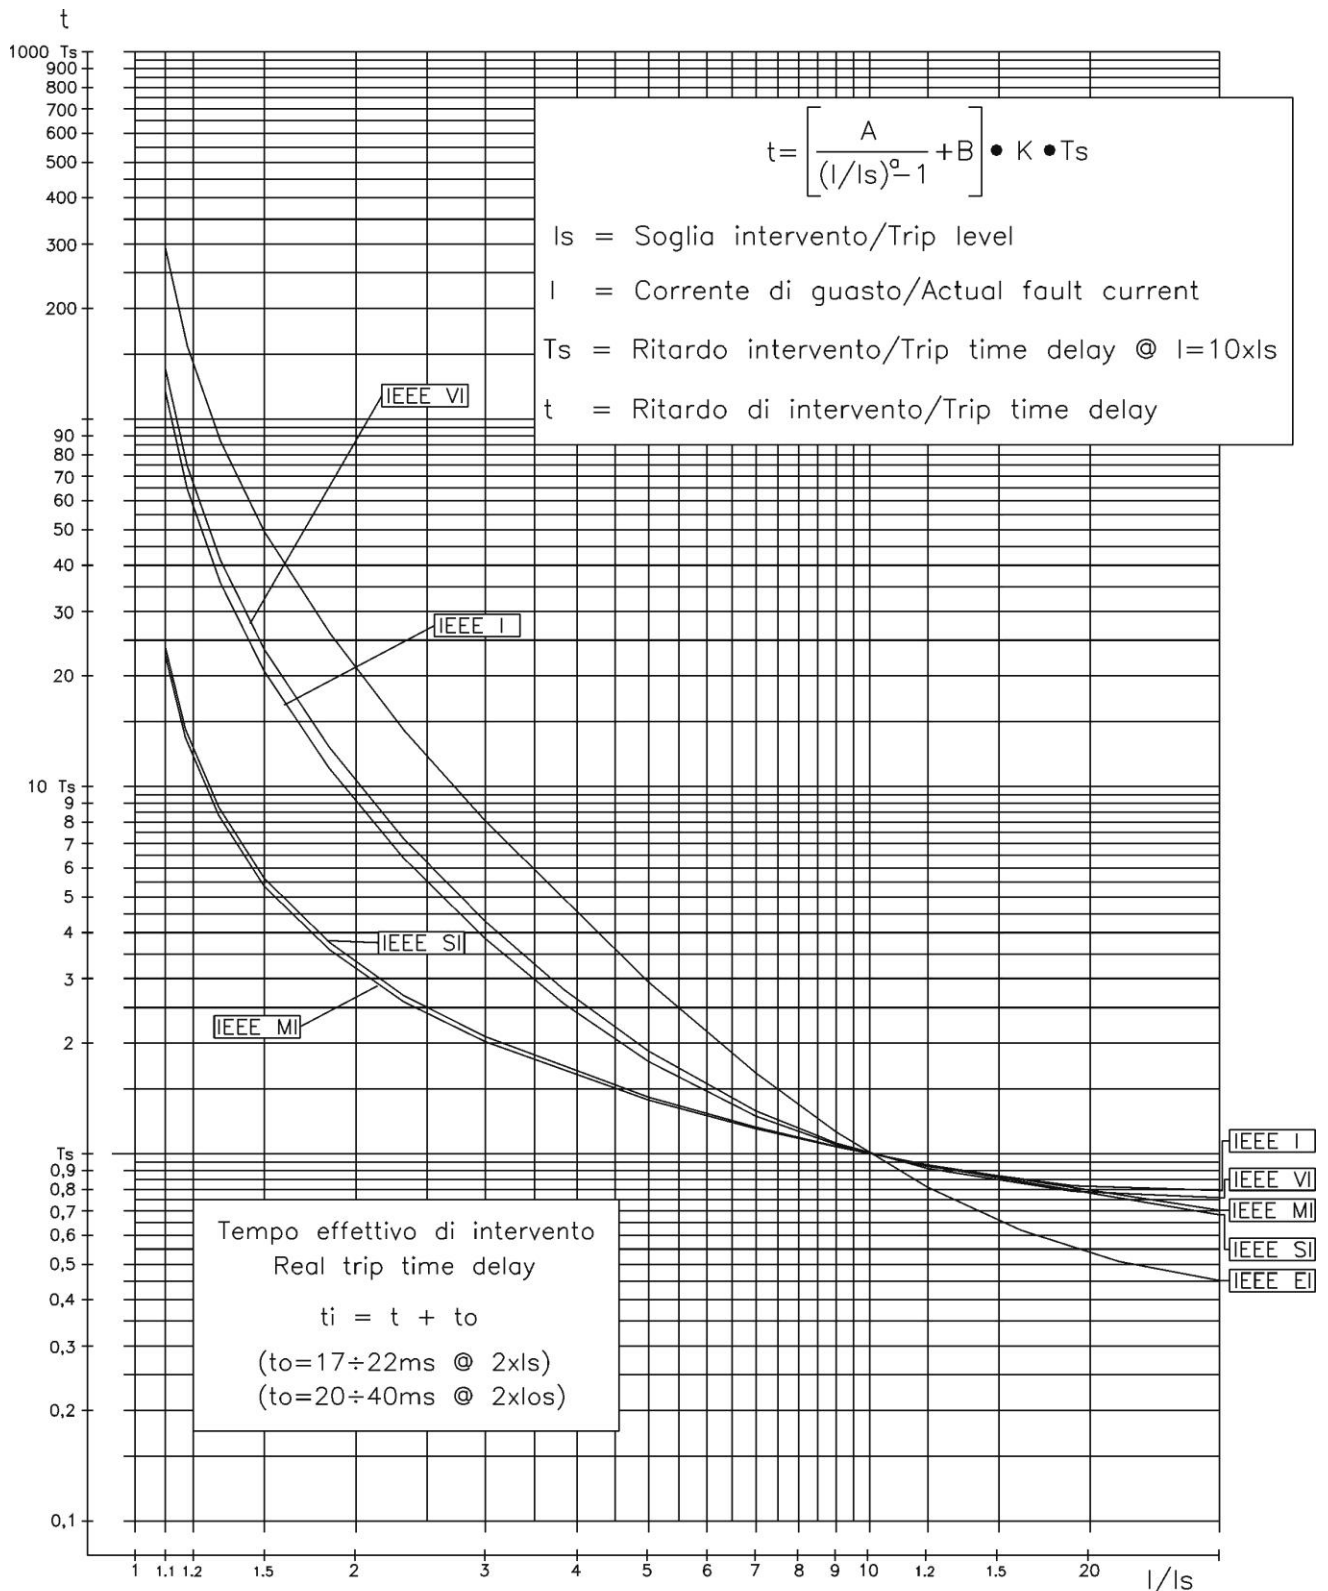

Curve Type	A	B	K	a
MI= IEEE Moderate Inv.	0.0104	0.0226	4.110608	0.02
SI= IEEE Short Inv.	0.00342	0.00262	13.30009	0.02
VI= IEEE Very Inv.	3.88	0.0963	7.380514	2
I= IEEE Inverse	5.95	0.18	4.164914	2
EI= IEEE Extremely Inv.	5.67	0.0352	10.814	2

Max. "I" Phase =  $40 \times I_n$   
 Max. "I" Neutral =  $10 \times I_{n0}$


### 15.6.5 – Operation of the phase Overcurrent Elements in function of variable “f(a)”

On each phase the relay measures the current “I<sub>x</sub>” and its displacement “φ<sub>x</sub>” from the relevant phase-to-neutral voltage “E<sub>x</sub>”.

Different operation modes are possible according to the programming of the variable “f(a)”.


- I<sub>s</sub> = Minimum operation current level.
- a = Operation reference angle (phase x; x = A, B, C).
- I<sub>x</sub> = Measured input current (largest among the three phase currents I<sub>A</sub>, I<sub>B</sub>, I<sub>C</sub>).
- φ<sub>x</sub> = Phase displacement of current “I<sub>x</sub>” from phase-to-neutral “E<sub>x</sub>” (X = A, B, C).
- I<sub>dx</sub> = Component of “I<sub>x</sub>” on the direction “a”.

A) Set f(a) = Disab.

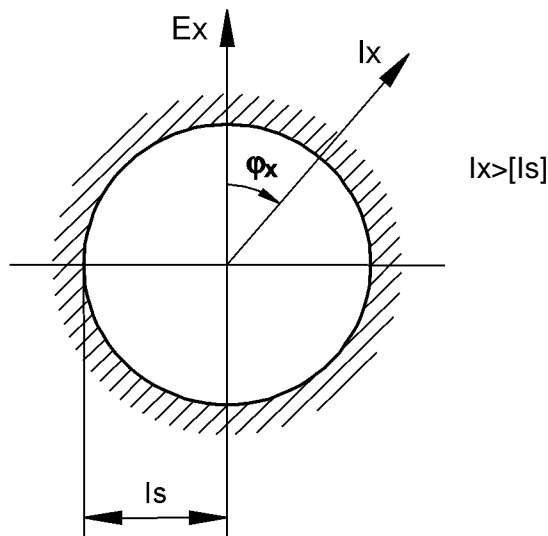

The overcurrent element operates independently from the current direction.

B) Set f(a) = Sup.

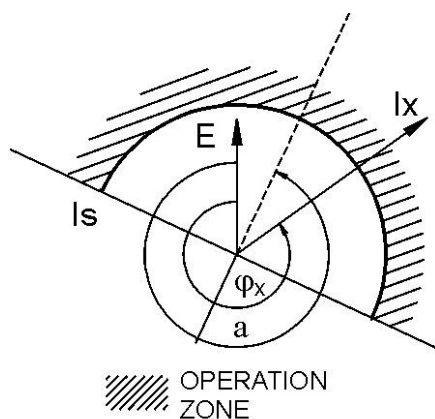


The Overcurrent element only supervises the direction of the current:

the operation conditions are:

- Input voltage above 1-2% of the rated input value.
- Input current above the set level: I<sub>x</sub> > [I<sub>s</sub>]
- Phase displacement “φ<sub>x</sub>” within ±90° from the reference direction “a”.

$$(a - 90^\circ) < \varphi_x < (a + 90^\circ)$$

C) Set  $f(a) = \text{Dir.}$

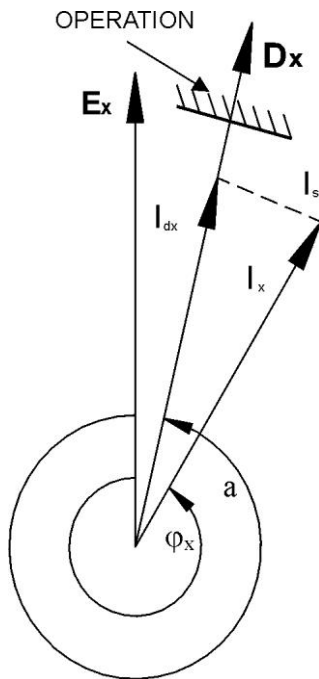

The overcurrent element operates in a real directional mode measuring the component “ $I_{dx}$ ” of the input current in the reference direction “ $a$ ” ( $x = A, B, C$ ).

$$I_{dA} = I_A \cos(\varphi_A - a) \quad I_{dB} = I_B \cos(\varphi_B - a) \quad I_{dC} = I_C \cos(\varphi_C - a)$$


The overcurrent starts to operate when the component “ $I_{dx}$ ” of the input current in the direction “ $D_x$ ” (versor displaced of “ $a$ ” from the phase-to-neutral voltage “ $E_x$ ”) exceeds the set level “ $I_s$ ”.

$$I_{dx} = I_x \cos(\varphi_x - a) \geq I_s$$

In details:

- When  $\varphi_x = a$  :  $I_{dx} = I_x \rightarrow$  operation if  $I_x > I_s$
- When  $(\varphi_x - a) = 90^\circ$  :  $I_{dx} = 0 \rightarrow$  no operation
- When  $(\varphi_x - a) > 90^\circ$  :  $I_{dx}$  opposite to  $D_x \rightarrow$  no operation

The operation is practically independent from the voltage as low as 1-2% of rated value.

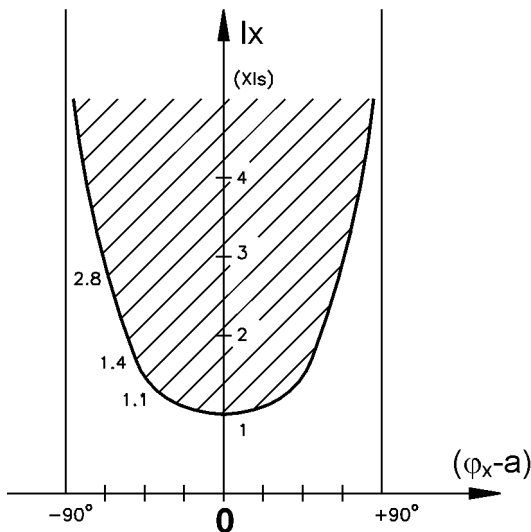


Recommended Reference angles for different applications:

- Measurement of resistive component of current (active power) :  
Direct :  $a = 0^\circ$  - Reverse :  $a = 180^\circ$
- Directional phase fault detection:  
Direct :  $a = 300^\circ (60^\circ \text{ lag})$  - Reverse :  $a = 120^\circ$
- Measurement of inductive reactive component:  
Direct :  $a = 270^\circ (90^\circ \text{ lag})$  - Reverse :  $a = 90^\circ$
- Measurement of capacitive reactive component:  
Direct :  $a = 90^\circ (90^\circ \text{ lead})$  - Reverse :  $a = 270^\circ$



### 15.6.6 – Operation of the Overcurrent Element with Voltage Control f(U)

When the “Voltage Restraint” function is enabled (F(U)=Enable), the set minimum pick-up level “Is” of the overcurrent elements, changes proportionally to the smallest of the input phase-to-phase voltages:  $I_s = F(U)$ .

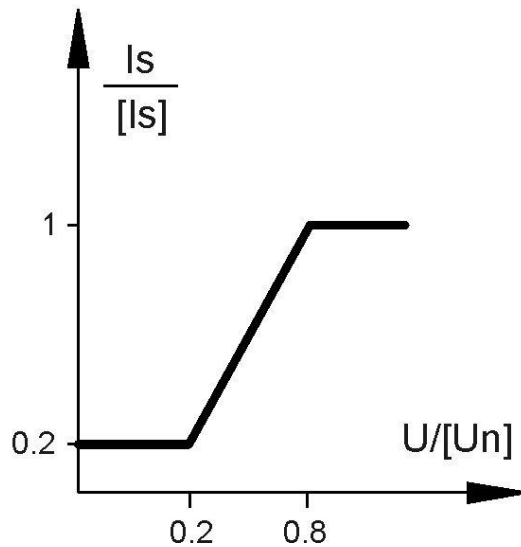

$$\frac{I_s}{[I_s]} = \frac{\text{Actual pick - up level}}{[\text{Set pick - up level}]}$$

$$\frac{U}{[U_n]} = \frac{\text{Actual input voltage}}{[\text{Set rated input voltage}]}$$

the algorithm uses the smallest among the ratios  $\frac{E_x \cdot \sqrt{3}}{[U_n]} (x = A, B, C)$

Practically, between 0.2  $U_n$  and 0.8  $U_n$ , the trip level of the Overcurrent element varies according to the equation:

$$\frac{I_s}{[I_s]} = \frac{0.8}{0.6} \cdot \left( \frac{U}{[U_n]} - 0.8 \right) + 1$$

Below 0.2  $[U_n]$   $\frac{I_s}{[I_s]} = 0.2$

Above 0.8  $[U_n]$   $\frac{I_s}{[I_s]} = 1$

---

### 15.6.7 – Blocking Logic (BO-BI)

---

For each Protection Function it is possible to activate a Blocking Logic allowing for inhibiting their operation by external signals supplied to the Digital Input.

#### 15.6.7.1 – Output Blocking signal “BO”

---

All the protection functions that can be programmed to operate in the blocking logic mode, element, have an instantaneous element (beside the time delayed) which is operated as soon as the controlled quantity exceeds the set trip level ( $I > [I_s]$  for current, etc..) and is instantaneously reset when the input quantity drops below the reset level (normally  $0.95I_s$ ).

The instantaneous element can control one of the user programmable output relays that, by its contacts, makes the signal available for blocking an external element (BO = Blocking Output). In case, “tBO” sec after the set trip time “ts” has expired, the Protection function is still in operation (current above trip level), the Blocking Output relay (instantaneous element) is anyhow reset to eventually remove the Blocking signal from a back-up protection.

#### 15.6.7.2 – Blocking Input “BI”

---

For all the functions controllable by the Blocking Logic, it is possible to inhibit the time delayed tripping by an external signal that activates a Digital Input programmed for this functionality. The programmed Digital Input gets activated by an external cold contact closing across its terminals.

With the variable “tBI” set to “OFF” (tBI=OFF), the tripping of the delayed function is blocked as long as the Blocking Input signal is present at the terminals of the Digital Input.

With the variable “tBI” set to “2xtBI” (tBI=2xtBI), 2xtBI seconds after the set trip time delay of the function has expired the blocking input is anyhow ignored and the function enabled to trip.

---

### 15.6.8 - Automatic doubling of Overcurrent thresholds on current inrush

---

For some of the phase Overcurrent functions it is possible to have the set trip level  $[I_s]$  automatically doubled when strong inrush current is detected.

If at circuit Breaker switch-on (i.e. when the input current rises from zero to a minimum measurable value) the current increases from 0 to 1.5 times the rated value  $[I_n]$  in less than 60ms, the set minimum pick-up level  $[I_s]$  is dynamically doubled ( $[I_s] \rightarrow [2I_s]$ ) and keeps this value until the input current drops below  $1.25 \times I_n$  or the set time  $[t_{2xI}]$  has elapsed.

This functionality is very useful to avoid spurious tripping of the instantaneous, or short-time delayed Overcurrent elements, that could be experienced at switch-on of reactive loads like Transformer or Capacitors.



### 15.7 – Function: **2I**> (Second Overcurrent Element F50/51)

<b>Stats</b>	→ <b>Enab.</b>	No		[No / Yes]
<b>Options</b>	→ <b>tBI</b>	Off		[Off / 2tBO]
	→ <b>f(a)</b>	Disable		[Disable / Sup / Dir]
	→ <b>2xl</b>	Disable		[Disable / Enable]
	→ <b>f(U)</b>	Disable		[Disable / Enable]
<b>Oper. Levels</b>	→ <b>Is</b>	40.000	In	(0.100÷40) step 0.010 In
	→ <b>a</b>	359.000	°	(0.000÷359) step 1.000 °
<b>Timers</b>	→ <b>ts</b>	100.00	s	(0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	s	(0.05÷0.75) step 0.01 s
	→ <b>t2xl</b>	100.00	s	(0.02÷100) step 0.01 s
	→ <b>td2xl</b>	0.06	s	fixed

#### 15.7.1 – Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **tBI** : Blocking input reset time  
*Off* = Permanent block  
*2tBO* = Set 2xtBO.
- ❑ **f(a)** : Operation mode:  
*Disable* = Non Directional  
*Sup.* = Directional Supervision  
*Dir.* = Total Directional
- ❑ **2xl** : Automatic doubling of trip level on inrush
- ❑ **f(U)** : Voltage restraint
- ❑ **Is** : Minimum operation level
- ❑ **a** : Reference phase current displacement angle for Directional operation
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.  
“tBO” is also the trip time delay of the Breaker Failure function.
- ❑ **t2xl** : Maximum time of automatic threshold doubling on inrush
- ❑ **td2xl** : Time for calculation of current rate of rise.



### 15.8 - Function: **3I** (Third Overcurrent Element F50/51)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>tBI</b>	Off	[Off / 2tBO]
	→ <b>f(a)</b>	Disable	[Disable / Sup / Dir]
	→ <b>2xl</b>	Disable	[Disable / Enable]
<b>Oper. Levels</b>	→ <b>Is</b>	40.000	In (0.100÷40) step 0.010 In
	→ <b>a</b>	359.000	° (0.000÷359) step 1.000 °
<b>Timers</b>	→ <b>ts</b>	100.00	s (0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	s (0.05÷0.75) step 0.01 s
	→ <b>t2xl</b>	100.00	s (0.02÷100) step 0.01 s
	→ <b>td2xl</b>	0.06	s fixed

#### 15.8.1 - Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **tBI** : Blocking input reset time  
Off = Permanent block  
2tBO = Set 2xtBO.
- ❑ **f(a)** : Operation mode:  
Disable = Non Directional  
Sup. = Directional Supervision  
Dir. = Total Directional
- ❑ **2xl** : Automatic doubling of trip level on inrush
- ❑ **Is** : Minimum operation level.
- ❑ **a** : Reference phase current displacement angle for Directional operation
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay.  
“tBO” is also the trip time delay of the Breaker Failure function.
- ❑ **t2xl** : Maximum time of automatic threshold doubling on inrush
- ❑ **td2xl** : Time for calculation of current rate of rise



### 15.9 - Function: **1lo** (First Earth Fault Element 50N/51N)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>f(t)</b>	Type - D	[D / A / B / C / I / VI / EI / MI / SI]
	→ <b>tBI</b>	Off	[Off / 2tBO]
	→ <b>f(a<sub>o</sub>)</b>	Disable	[Disable / Dir]
<b>Oper. Levels</b>	→ <b>I<sub>s</sub></b>	0.010	On (0.01÷4.00) step 0.01 On
	→ <b>V<sub>o</sub></b>	0.000	%Un (0.000÷20) step 0.100 %Un
	→ <b>a<sub>o</sub></b>	0.000	° (0.000÷359) step 1.000 °
	→ <b>a<sub>z</sub></b>	0.000	° (0.000÷359) step 1.000 °
<b>Timers</b>	→ <b>t<sub>s</sub></b>	100.00	s (0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	s (0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

#### 15.9.1 - Description of variables


- **Enab.** : Function enabling (No = Disable / Yes = Enable)
- **f(t)** : Operation characteristic (Time/Current curve):
  - (D) = Independent definite time
  - (A) = IEC Inverse Curve type A
  - (B) = IEC Very Inverse Curve type B
  - (C) = IEC Extremely Inverse Curve type C
  - (I) = IEEE Inverse Curve
  - (VI) = IEEE Very Inverse Curve
  - (EI) = IEEE Extremely Inverse Curve
  - (MI) = IEEE Moderate Inverse Curve
  - (SI) = IEEE Short Inverse Curve
- **tBI** : Blocking Input reset time
  - Off = Permanent block
  - 2tBO = Set 2xtBO.
- **f(a<sub>o</sub>)** : Operation mode:
  - Disable = Non Directional
  - Dir. = Total Directional
- **I<sub>s</sub>** : Minimum operation level
- **V<sub>o</sub>** : Minimum residual voltage level for enabling the directional operation
- **a<sub>o</sub>** : Reference Zero Sequence current displacement angle for Directional operation
- **a<sub>z</sub>** : Trip sector amplitude
- **t<sub>s</sub>** : Trip time delay
- **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

### 15.9.2 – Operation mode of the Earth Fault elements programming the variable “f(a<sub>o</sub>)”

The relay measures the current “3I<sub>o</sub>” and the input voltage “3V<sub>o</sub>” of the Earth Fault input and the displacement “φ<sub>o</sub>” of the current from the voltage. Different operation modes are programmable by the variable “f(a<sub>o</sub>)”.

- ❑ **I<sub>s</sub>** = Set minimum pick-up residual current “3I<sub>o</sub>”.
- ❑ **V<sub>o</sub>** = Set minimum residual voltage (3V<sub>o</sub>) to enable operation.
- ❑ **a<sub>o</sub>** = Set displacement of the reference current direction.
- ❑ **3I<sub>o</sub>** = Earth Fault current.
- ❑ **3V<sub>o</sub>** = Earth Fault voltage.
- ❑ **φ<sub>o</sub>** = I<sub>o</sub>/V<sub>o</sub> phase displacement.
- ❑ **a<sub>z</sub>** = Angle defining the directional operation area around the reference direction.

The Directional Earth Fault element can operate in two different modes:

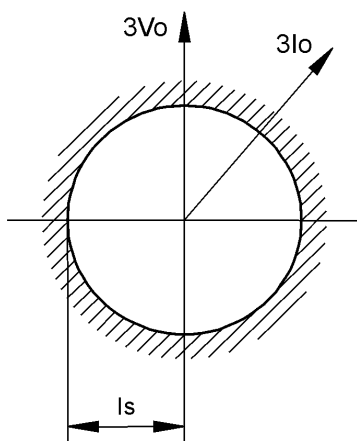

**f(a<sub>o</sub>) = Dis (Disable)**


Operation is Non Directional without any influence by the Zero Sequence Voltage “V<sub>o</sub>” and the displacement “φ<sub>o</sub>”.

- ❑ Operation starts when : 3I<sub>o</sub> ≥ [I<sub>s</sub>]

**f(a<sub>o</sub>) = Dir (Directional).**

Operation starts when the following 3 conditions are present:

- ❑ The Residual Voltage “3V<sub>o</sub>” exceeds the set level “V<sub>o</sub>” : 3V<sub>o</sub> ≥ [V<sub>o</sub>]
- ❑ The Residual Current “3I<sub>o</sub>” exceeds the set level “I<sub>s</sub>” : 3I<sub>o</sub> ≥ [I<sub>s</sub>]
- ❑ The angle “φ<sub>o</sub>” is within “± a<sub>z</sub>” from “a”  
(a<sub>o</sub> - a<sub>z</sub>) ≤ φ<sub>o</sub> ≤ (a<sub>o</sub> + a<sub>z</sub>)

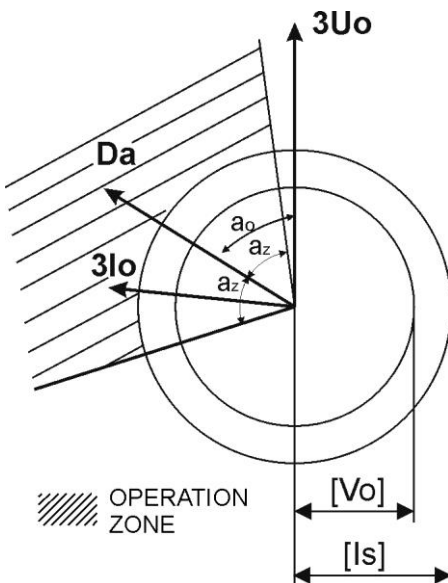

- ❑ 3U<sub>o</sub> > [V<sub>o</sub>]
- ❑ 3I<sub>o</sub> > [I<sub>s</sub>]
- ❑ (a<sub>o</sub> - a<sub>z</sub>) ≤ φ<sub>o</sub> ≤ (a<sub>o</sub> + a<sub>z</sub>)





### 15.10 - Function: **2lo** (Second Earth Fault Element 50N/51N)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>tBI</b>	Off	[Off / 2tBO]
	→ <b>f(a<sub>o</sub>)</b>	Disable	[Disable / Dir]
<b>Oper. Levels</b>	→ <b>Is</b>	0.010	On (0.01÷9.99) step 0.01 On
	→ <b>Vo</b>	0.000	%Un (0.000÷20) step 0.100 %Un
	→ <b>a<sub>o</sub></b>	0.000	° (0.000÷359) step 1.000 °
	→ <b>a<sub>z</sub></b>	0.000	° (0.000÷359) step 1.000 °
<b>Timers</b>	→ <b>ts</b>	100.00	s (0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	s (0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

#### 15.10.1 - Description of variables

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **tBI** : Blocking Input reset time  
*Off* = Permanent block  
*2tBO* = Set 2xtBO.
- ❑ **f(a<sub>o</sub>)** : Operation mode:  
*Disable* = Non Directional  
*Dir.* = Total Directional
- ❑ **Is** : Minimum operation level
- ❑ **Vo** : Minimum residual voltage level for enabling the directional operation
- ❑ **a<sub>o</sub>** : Reference Zero Sequence current displacement angle for Directional operation
- ❑ **a<sub>z</sub>** : Trip sector amplitude
- ❑ **ts** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.



### 15.11 - Function: **3lo>** (Second Earth Fault Element 50N/51N)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>tBI</b>	Off	[Off / 2tBO]
	→ <b>f(a<sub>o</sub>)</b>	Disable	[Disable / Dir]
<b>Oper. Levels</b>	→ <b>I<sub>s</sub></b>	0.010	<b>On</b> (0.01÷9.99) step 0.01 On
	→ <b>V<sub>o</sub></b>	0.000	<b>%Un</b> (0.000÷20) step 0.100 %Un
	→ <b>a<sub>o</sub></b>	0.000	° (0.000÷359) step 1.000 °
	→ <b>a<sub>z</sub></b>	0.000	° (0.000÷359) step 1.000 °
<b>Timers</b>	→ <b>t<sub>s</sub></b>	100.00	<b>s</b> (0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	<b>s</b> (0.05÷0.75) step 0.01 s

On = Rated primary current of CTs or of the current Tore CT.

#### 15.11.1 - Description parameters

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ❑ **tBI** : Blocking Input reset time  
*Off* = Permanent block  
*2tBO* = Set 2xtBO.
- ❑ **f(a<sub>o</sub>)** : Operation mode:  
*Disable* = Non Directional  
*Dir.* = Total Directional
- ❑ **I<sub>s</sub>** : Minimum operation level
- ❑ **V<sub>o</sub>** : Minimum residual voltage level for enabling the directional operation
- ❑ **a<sub>o</sub>** : Reference Zero Sequence current displacement angle for Directional operation
- ❑ **a<sub>z</sub>** : Trip sector amplitude
- ❑ **t<sub>s</sub>** : Trip time delay
- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.



### 15.12 - Function: **1Is** > (First Negative Sequence Element F46)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>t(t)</b>	Type-D	[D / A / B / C / I / VI / EI / MI / SI]
	→ <b>tBI</b>	Off	[Off / 2tBO]
<b>Oper. Levels</b>	→ <b>Is</b>	4.000	In (0.1÷4) step 0.01 In
<b>Timers</b>	→ <b>ts</b>	100.00	s (0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	s (0.05÷0.75) step 0.01 s

#### 15.12.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **f(t)** : Operation characteristic (Time/Current curve):
  - (D) = Independent definite time
  - (A) = IEC Inverse Curve type A
  - (B) = IEC Very Inverse Curve type B
  - (C) = IEC Extremely Inverse Curve type C
  - (I) = IEEE Inverse Curve
  - (VI) = IEEE Very Inverse Curve
  - (EI) = IEEE Extremely Inverse Curve
  - (MI) = IEEE Moderate Inverse Curve
  - (SI) = IEEE Short Inverse Curve
- ☐ **tBI** : Blocking Input reset time
  - Off = Permanent block
  - 2tBO = Set 2xtBO.
- ☐ **Is** : Minimum operation level
- ☐ **ts** : Trip time delay
- ☐ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.

#### 15.12.2 – Time/Current operation of the first Current Unbalance element "f(t)"

the relay measures the Negative Sequence component "I<sub>2</sub>" of the input current.  
The Time/Current curves can be selected by programming the variable "f(t)":

- ☐ f(t) = D Independent definite time operation.
- ☐ f(t) = I, VI, EI, MI, SI, A, B, C Dependent Inverse time operation




---

**15.13 - Function: 2Is> (Second Negative Sequence Element F46)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Si]
<b>Options</b>	→ <b>tBI</b>	Off	[Off / 2tBO]
<b>Oper. Levels</b>	→ <b>Is</b>	4.000	In (0.1÷4) step 0.01 In
<b>Timers</b>	→ <b>ts</b>	100.00	s (0.02÷100) step 0.01 s
	→ <b>tBO</b>	0.75	s (0.05÷0.75) step 0.01 s

---

**15.13.1 - Description of variables**


---

- ❑ **Enab.** : Function enabling (No = Disable / Yes = Enable)

---

- ❑ **tBI** : Blocking Input reset time  
     *Off* = Permanent block  
     *2tBO* = Set 2tBO.

---

- ❑ **Is** : Minimum operation level

---

- ❑ **ts** : Trip time delay

---

- ❑ **tBO** : Time to reset of the Blocking Output after expiring of the Trip time delay. "tBO" is also the trip time delay of the Breaker Failure function.




---

**15.14 - Function: 1U> (First Overvoltage Element F59)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]			
<b>Oper. Levels</b>	→ <b>Us</b>	90.000	%Un (10÷190)	step	1	%Un
<b>Timers</b>	→ <b>ts</b>	100.00	s (0.02÷100)	step	0.01	s

---

**15.14.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
  - ☐ **Us** : Minimum operation level
  - ☐ **ts** : Trip time delay
- 

---

**15.15 - Function: 2U> (Second Overvoltage Element F59)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]			
<b>Oper. Levels</b>	→ <b>Us</b>	90.000	%Un (10÷190)	step	1	%Un
<b>Timers</b>	→ <b>ts</b>	100.00	s (0.02÷100)	step	0.01	s

---

**15.15.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
  - ☐ **Us** : Minimum operation level
  - ☐ **ts** : Trip time delay
-




---

**15.16 - Function: 1U< (First Undervoltage Element F27)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>Us</b>	90.000	%Un	(10÷190)	step	1	%
<b>Timers</b>	→ <b>ts</b>	100.00	s	(0.02÷100)	step	0.01	s

---

**15.16.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
  - ☐ **Us** : Minimum operation level
  - ☐ **ts** : Trip time delay
- 

---

**15.17 - Function: 2U< (Second Undervoltage Element F27)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>Us</b>	90.000	%	(10÷190)	step	1	%
<b>Timers</b>	→ <b>ts</b>	100.00	s	(0.02÷100)	step	0.01	s

---

**15.17.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
  - ☐ **Us** : Minimum operation level
  - ☐ **ts** : Trip time delay
-






---

**15.18 - Function: 1f> (First Overfrequency Element F81>)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>fs</b>	40.000	Hz	(40÷70)	step	0.01	Hz
<b>Timers</b>	→ <b>ts</b>	10.00	s	(0.02÷1000)	step	0.01	s

---

**15.18.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)

---

- ☐ **fs** : Minimum operation level

---

- ☐ **ts** : Trip time delay

---

---

**15.19 - Function: 2f> (Second Overfrequency Element F81>)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>fs</b>	40.000	Hz	(40÷70)	step	0.01	Hz
<b>Timers</b>	→ <b>ts</b>	10.00	s	(0.02÷1000)	step	0.01	s

---

**15.19.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)

---

- ☐ **fs** : Minimum operation level

---

- ☐ **ts** : Trip time delay

---




---

**15.20 – Function: 1f< (First Underfrequency Element F81<)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>fs</b>	40.000	Hz	(40÷70)	step	0.01	Hz
<b>Timers</b>	→ <b>ts</b>	10.00	s	(0.02÷1000)	step	0.01	s

---

**15.20.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)

---

- ☐ **fs** : Minimum operation level

---

- ☐ **ts** : Trip time delay

---

---

**15.21 - Function: 2f< (Second Underfrequency Element F81<)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>fs</b>	40.000	Hz	(40÷70)	step	0.01	Hz
<b>Timers</b>	→ <b>ts</b>	10.00	s	(0.02÷1000)	step	0.01	s

---

**15.21.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)

---

- ☐ **fs** : Minimum operation level

---

- ☐ **ts** : Trip time delay

---




---

**15.22 - Function: 1Uo> (First Zero Sequence Overvoltage Element F59Uo)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>Us</b>	1.000	%Un	(1÷100)	step	1	%Un
<b>Timers</b>	→ <b>ts</b>	100.00	s	(0.02÷100)	step	0.01	s

---

**15.22.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)

---

- ☐ **Us** : Minimum operation level

---

- ☐ **ts** : Trip time delay

---

---

**15.23 - Function: 2Uo> (Second Zero Sequence Overvoltage Element F59Uo)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>Us</b>	1.000	%Un	(1÷100)	step	1	%Un
<b>Timers</b>	→ <b>ts</b>	100.00	s	(0.02÷100)	step	0.01	s

---

**14.23.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)

---

- ☐ **Us** : Minimum operation level

---

- ☐ **ts** : Trip time delay

---




---

**15.24 - Function:  $U1<$  (Positive Sequence Undervoltage Element F27U1)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>Us</b>	90.000	%Un	(10÷190)	step	1	%Un
<b>Timers</b>	→ <b>ts</b>	100.00	s	(0.02÷100)	step	0.01	s

---

**15.24.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
  - ☐ **Us** : Minimum operation level
  - ☐ **ts** : Trip time delay
- 

---

**15.25 - Function:  $U2>$  (Negative sequence Overvoltage Element F59U2 or F47)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]				
<b>Oper. Levels</b>	→ <b>Us</b>	90.000	%Un	(10÷190)	step	1	%Un
<b>Timers</b>	→ <b>ts</b>	100.00	s	(0.02÷100)	step	0.01	s

---

**15.25.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
  - ☐ **Us** : Minimum operation level
  - ☐ **ts** : Trip time delay
-



### 15.26 - Function: **Wi** (Circuit Breaker maintenance level)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Oper. Levels</b>	→ <b>li</b>	1.000	In (0.1÷99)
	→ <b>Wi</b>	1.000	(1÷9999)
			step 0.1 In
			step 1

#### 15.26.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **li** : Circuit Breaker Rated Current in multiples of the Relay rated input current In
- ☐ **Wi** : Maximum allowed amount of accumulated interruption energy before maintenance as stated by the C/B Manufactured.

#### 15.26.2 - Operation (Accumulation of the interruption Energy)

The relay computes the Arc Energy developed during each interruption of the Circuit Breaker and accumulates these values.

When the amount of the accumulated energy exceeds a settable level the relay gives out an alarm to signalize that maintenance inspection of the Circuit Breaker is needed.

The operation of this function is based on the following parameters:

$$li = li = (0.1-99)In$$

$$Wi = Wi = (1 - 9999)$$

"Wi" is set as a multiple of the conventional interruption energy unit.

Any time the Circuit Breaker opens (change of status from closed to open of the digital input connected to the normally open contact 52a of the C/B) the relay decreases the amount of energy corresponding to a number of conventional units:

$$nW_c = \frac{W}{W_c} = \frac{I^2 \cdot t_x}{li^2 \cdot t_i}$$

where:

**W** =  $I^2 \cdot t_x$  Interruption Energy during the interruption time "tx" with interruption current "I".

**Wc** =  $li^2 \cdot t_i$  Conventional unit of interruption energy corresponding to C/B rated current and rated interruption time "ti".

When the set Energy level before maintenance is decreased to zero a user programmable output relay is operated.

Reset to Zero of the Energy accumulation is available in the menu "**Cmd**" (Reset Term).



### 15.27 - Function: **TCS** (Trip Circuit Supervision)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Timers</b>	→ <b>ts</b>	0.10	s (0.1÷100) step 0.01 s

#### 15.27.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **ts** : Trip time delay

#### 15.27.2 - Operation

The relay includes a complete Circuit Breaker Trip Circuit Supervision unit that is associated to the Contact "15-26" of the "R1" Output Relay.

The contact of "R1" is used to trip the C/B as reported in the drawing here below.

The supervision works when the C/B is closed and recognizes the Trip Circuit as sound as far as the current flowing exceeds "1mA".


In case of Trip Circuit Fault detection, the diagnostic relay is operated and the Led starts flashing (see § Signalization).

To have Supervision also with the C/B open one N/C contact (52b) from the C/B and an external resistor "R" are needed.

$$R[k\Omega] \leq \frac{V}{1mA} - R_{52} \quad \text{where} \quad R_{52} = \text{Trip Coil internal resistance [k}\Omega\text{]}$$

$V$  = Trip Circuit Voltage

$$P_R \geq 2 \cdot \frac{V^2}{R} [W] \quad \text{Design power of external resistance "R"}$$

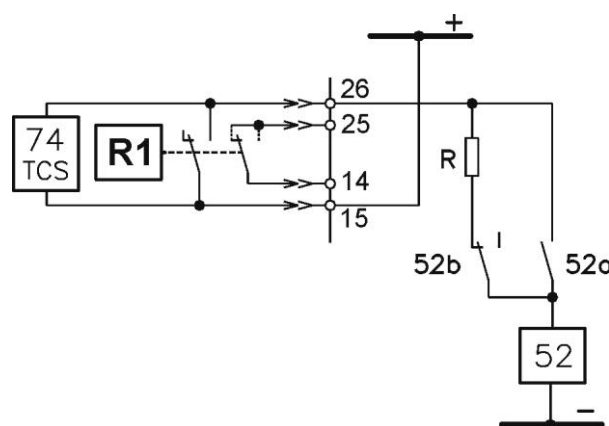

**Circuit Breaker Trip is controlled by output relay "R1" whereas tripping of the "TCS" function operates another user programmable output relay.**





### 15.28 - Function: **IRF** (Internal Relay Fault)

In this menu it is possible to configure the operation of the Relay Internal Fault detection element

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Timers</b>	→ <b>tIRF</b>	5.00 s	(5÷200) step 0.01 s

#### 15.28.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **tIRF** : Trip time delay

#### 15.28.2 - Operation

Tripping of the function operates a user programmable output relay.

### 15.29 - Function: **RT** (Remote Trip)

In this menu it is possible to configure the operation of Remote Trip via the relevant Digital Input.

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>RTon</b>	FallEdge	[RiseEdge – FallEdge]
<b>Timers</b>	→ <b>ts</b>	5.00 s	(0.00÷10.00) step 0.01 s

#### 15.29.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **RTon** : Remote trip Edge selector
- ☐ **ts** : Remote Trip time delay

#### 15.29.2 - Operation

This function operate when the Digital Input "RT" is activated.  
It can also be used to receive an external command from another protection. (Temperature sensor, RTD, etc.)



### 15.30 - Function: **TripTimeRd.** (Trip Time Reduction)

Status	→	Enab.	No	[No / Yes]			
Timers	→	tHold	0.00	s	(0.00÷180)	step	1 s
	→	tC1 I	0.02	s	(0.02÷100)	step	0.01 s
	→	tC2 I	0.02	s	(0.02÷100)	step	0.01 s
	→	tC3 I	0.02	s	(0.02÷100)	step	0.01 s
	→	tC1 lo	0.02	s	(0.02÷100)	step	0.01 s
	→	tC2 lo	0.02	s	(0.02÷100)	step	0.01 s
	→	tC3 lo	0.02	s	(0.02÷100)	step	0.01 s
	→	tC1 Uo	0.02	s	(0.02÷100)	step	0.01 s
	→	tC2 Uo	0.02	s	(0.02÷100)	step	0.01 s
	→	tCRT	0.00	s	(0.00÷10)	step	0.1 s

#### 15.30.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **tHold** : Duration of the trip time reduction;  
is set to 0,00 the reduction function does not operate.
- ☐ **tC1 I** : Reduced trip time for 1I>
- ☐ **tC2 I** : Reduced trip time for 2I>
- ☐ **tC3 I** : Reduced trip time for 3I>
- ☐ **tC1 lo** : Reduced trip time for 1Io>
- ☐ **tC2 lo** : Reduced trip time for 2Io>
- ☐ **tC3 lo** : Reduced trip time for 3Io>
- ☐ **tC1 Uo** : Reduced trip time for 1Uo>
- ☐ **tC2 Uo** : Reduced trip time for 2Uo>
- ☐ **tCRT** : Reduced trip time for RT

#### 15.30.2 - Operation

When this function is enabled, after a manual or automatic reclosure, the trip time delay of the protection functions is reduced from the original set value to the new time delay “tc” until “tHold” is expired.

Anyhow when the ongoing reclose cycle is over and the relay is ready for new reclose cycle, the original trip time delay is restored.

Functions originally programmed for a inverse time operation, during “tHold” operate as independent time function with definite time delay “tc”.



### 15.31 - Function: **Reclos** (Automatic Reclosure RCL)

#### 15.31.1 – Definitions

- ❑ **Shot Number (ShNum = 0, 1, 2, 3, 4):**  
Number of autoreclosure commands that can be issued in a Reclosure cycle before lock-out.
- ❑ Selection of the reclose shot of a cycle (R1, R2, ....) that can be initiated by the tripping of selectable protection elements (1I<, 2I>, ....).
- ❑ **Set Group Change-over (GR1-2):**  
Determines the reclosure shot in a cycle after switch the relay automatically switches from setting group 1 to setting group 2.  
At the end of the reclaim time “Tr” the setting group 1 is automatically restored.
- ❑ **Sequence Coordination (SeqC), (tSeqC):**  
When “SeqC” is set to “enable”, it allows the reclose element to count any downstream recloser operation, taking place within the sequence coordination time “tSeqC”, as its own, thereby preventing unnecessary operations of the back-up device for a fault beyond the downstream device. This is particularly useful when the back-up breaker feeds several branch reclosers, only one of which is experiencing a fault.
- ❑ **Reclosure time (t1, t2, t3, t4):**  
It is the reclose dead time before a reclosure command (R1, R2, R3, R4) is issued after C/B opening.
- ❑ **Reclaim time (Tr1, Tr2, Tr3, Tr4):**  
It is the reclaim time started after any automatic reclosure command.  
Any initiation signal (trip of enabled protection or seqC function) detected during “Trx” starts the next autoreclosure shot of the cycle.  
Any initiation signal detected during “Trx” after the last shot of the reclose cycle, produces the lock-out status.
- ❑ **Discrimination time (Td1, Td2, Td3):**  
Any new trip detected after a automatic reclosure shot, during the time “Tdx” (Td<Tr) produces the “lock-out” status with display information “Failed Reclosure”.
- ❑ **Reclaim time after manual closure (TrCL):**  
It is the reclaim time started after a manual closure of the C/B.  
Tripping of any protection element detected during “TrCL”, produces the lock-out status.  
Tripping of an “enabled” protection, shows the display “Failed” Reclosure.
- ❑ **Holding time of the external lock-out signal (ThExt):**  
The digital input programmed to detected an external reclosure lock-out signal, remains activated for the time the signal is present plus the holding time “ThExt” from the external signals removal.

### 15.31.2 - Description of variables

<input type="checkbox"/>	<b>Enab.</b>	: Function enabling (No = Disable / Yes = Enable)
<input type="checkbox"/>	<b>ShNum</b>	: Number of Shots available in one Autoreclosure Cycle
<input type="checkbox"/>	<b>R1l&gt;</b>	: Allows to select one or more of the Shots of a Cycle to be initiated by tripping of the function.....: 1l>
<input type="checkbox"/>	<b>R2l&gt;</b>	: Same as above.....: 2l>
<input type="checkbox"/>	<b>R3l&gt;</b>	: Same as above.....: 3l>
<input type="checkbox"/>	<b>R1lo&gt;</b>	: Same as above.....: 1lo>
<input type="checkbox"/>	<b>R2lo&gt;</b>	: Same as above.....: 2lo>
<input type="checkbox"/>	<b>R3lo&gt;</b>	: Same as above.....: 3lo>
<input type="checkbox"/>	<b>R1Uo&gt;</b>	: Same as above.....: 1Uo>
<input type="checkbox"/>	<b>R2Uo&gt;</b>	: Same as above.....: 2Uo>
<input type="checkbox"/>	<b>RRT</b>	: Same as above.....: RT
<input type="checkbox"/>	<b>GR1-2</b>	: Change-over SetGroup 1 to SetGroup 2
<input type="checkbox"/>	<b>SeqC</b>	: Sequence coordination
<input type="checkbox"/>	<b>tSeqC</b>	: Sequence coordination time
<input type="checkbox"/>	<b>t1</b>	: Reclosure time of 1st AR shot
<input type="checkbox"/>	<b>Tr1</b>	: Reclaim time of 1st AR shot
<input type="checkbox"/>	<b>Td1</b>	: Discrimination of 1st AR shot
<input type="checkbox"/>	<b>t2</b>	: Reclosure time of 2nd AR shot
<input type="checkbox"/>	<b>Tr2</b>	: Reclaim time of 2nd AR shot
<input type="checkbox"/>	<b>Td2</b>	: Discrimination of 2nd AR shot
<input type="checkbox"/>	<b>t3</b>	: Reclosure time of 3rd AR shot
<input type="checkbox"/>	<b>Tr3</b>	: Reclaim time of 3rd AR shot
<input type="checkbox"/>	<b>Td3</b>	: Discrimination of 3rd AR shot
<input type="checkbox"/>	<b>t4</b>	: Reclosure time of 4th AR shot
<input type="checkbox"/>	<b>Tr4</b>	: Reclaim time of 4th AR shot
<input type="checkbox"/>	<b>TrCL</b>	: Reclaim time on manual closure
<input type="checkbox"/>	<b>ThExt</b>	: Hold of lock-out signal after removal of external lock-out

## 15.31.3 – Setting

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>ShNum</b>	1	[0 - 1 - 2 - 3 - 4]
	→ <b>R 1l&gt;</b>	Recl. Dis.	→ Recl. Dis = Automatic Reclosure (AR) disable 1 = AR Enable on shot 1 2 = AR Enable on shot 2 1+2 = AR Enable on shot 1+2 3 = AR Enable on shot 3 1+3 = AR Enable on shot 1+3 2+3 = AR Enable on shot 2+3 1+2+3 = AR Enable on shot 1+2+3 4 = AR Enable on shot 4 1+4 = AR Enable on shot 1+4 2+4 = AR Enable on shot 2+4 1+2+4 = AR Enable on shot 1+2+4 3+4 = AR Enable on shot 3+4 1+3+4 = AR Enable on shot 1+3+4 2+3+4 = AR Enable on shot 2+3+4 1+2+3+4 = AR Enable on shot 1+2+3+4 (*) see example
	→ <b>R 2l&gt;</b>	Recl. Dis.	Same as above
	→ <b>R 3l&gt;</b>	Recl. Dis.	Same as above
	→ <b>R 1lo&gt;</b>	Recl. Dis.	Same as above
	→ <b>R 2lo&gt;</b>	Recl. Dis.	Same as above
	→ <b>R 3lo&gt;</b>	Recl. Dis.	Same as above
	→ <b>R 1Uo&gt;</b>	Recl. Dis.	Same as above
	→ <b>R 2Uo&gt;</b>	Recl. Dis.	Same as above
	→ <b>R RT</b>	Recl. Dis.	Same as above
	→ <b>GR1-2</b>	Disable	[Disable / Shot1 / Shot2 / Shot3 / Shot4]
	→ <b>SeqC</b>	Disable	[Disable / Enable]
<b>Timers</b>	→ <b>tSeqC</b>	0.00	s (0.00 ÷ 5.00) step 0.01 s
	→ <b>t1</b>	0.30	s (0.10 ÷ 200) step 0.1 s
	→ <b>Tr1</b>	5.00	s (5.00 ÷ 200) step 1 s
	→ <b>Td1</b>	0.00	s (0.00 - 5.00) step 0 / 5 s
	→ <b>t2</b>	1.00	s (0.10 ÷ 1000) step 0.1 s
	→ <b>Tr2</b>	5.00	s (5.00 ÷ 200) step 1 s
	→ <b>Td2</b>	0.00	s (0.00 - 5.00) step 0 / 5 s
	→ <b>t3</b>	3.00	s (0.10 ÷ 1000) step 0.1 s
	→ <b>Tr3</b>	5.00	s (5.00 ÷ 200) step 1 s
	→ <b>Td3</b>	0.00	s (0.00 - 5.00) step 0 / 5 s
	→ <b>t4</b>	10.00	s (0.10 ÷ 1000) step 0.1 s
	→ <b>Tr4</b>	5.00	s (5.00 ÷ 200) step 1 s
	→ <b>TrCL</b>	5.00	s (5.00 ÷ 200) step 1 s
	→ <b>ThExt</b>	5.00	s (5.00 ÷ 200) step 1 s



---

**15.31.3.1 - Example**

---

example: programming of the Reclose Shots initiated by tripping of the protection function 1I>.

- |                 |   |                  |   |  |
|-----------------|---|------------------|---|--|
| <b>R 1I&gt;</b> | = | <b>Recl.Dis.</b> | : | no shot is initiated on tripping of the function 1I>.  |
| <b>R 1I&gt;</b> | = | <b>1</b>         | : | only the shot n°1 of the AR cycle is initiated on tripping of the function 1I>.                    |
| <b>R 1I&gt;</b> | = | <b>1+2</b>       | : | only the shots n°1 and 2 of the AR cycle are initiated on tripping of the function 1I>.            |
| <b>R 1I&gt;</b> | = | <b>1+2+3</b>     | : | only the shots n°1 and 2 and 3 of the AR cycle are initiated on tripping of the function 1I>.      |
| <b>R 1I&gt;</b> | = | <b>1+2+3+4</b>   | : | all the shots n°1 and 2 and 3 and 4 of the AR cycle are initiated on tripping of the function 1I>. |
- 

- |             |   |                  |   |   |
|-------------|---|------------------|---|---|
| <b>R RT</b> | = | <b>Recl.Dis.</b> | : | no shot is initiated on Remote Trip signal (RT).  |
| <b>R RT</b> | = | <b>1</b>         | : | only the shot n°1 of the AR cycle is initiated on Remote Trip signal (RT).                    |
| <b>R RT</b> | = | <b>1+2</b>       | : | only the shots n°1 and 2 of the AR cycle are initiated on Remote Trip signal (RT).            |
| <b>R RT</b> | = | <b>1+2+3</b>     | : | only the shots n°1 and 2 and 3 of the AR cycle are initiated on Remote Trip signal (RT).      |
| <b>R RT</b> | = | <b>1+2+3+4</b>   | : | all the shots n°1 and 2 and 3 and 4 of the AR cycle are initiated on Remote Trip signal (RT). |
- 

Similarly for the other variables (R 2I>, R 3I>, R 1Io>, R 2Io>, R 3Io>, R 1Uo>, R 2Uo>).

---





#### 15.31.4 - Operation

The Autoreclose function is based on the setting of the variables described in the § Setting and involves the following operational status (§ Definition and Description variable).

<b>E/D</b>	Enable/Disable	Autoreclosing function Enabled/Disabled.
<b>S0</b>	"Wait C/B cl"	Waiting for C/B's manual closure
<b>Sx=S1</b>	"Ready"	Ready to start a AR Cycle after manual C/B closure
<b>Sx=Sh</b>	"Progress"	Ready to operate the next AR shot of the Cycle.
<b>L.O.</b>	"Lock-out"	Function blocked due to external blocking signal present at the relevant Digital Input, or due to the detection of a failure of the Circuit Breaker operation.

The status of the Circuit Breaker (C/B) is indicated by one normally open contact of the C/B itself and it is detected by the digital input "C/B" of the relay that has been programmed for monitoring C/B status (see § Physical Input).

A reclose shot is started after a C/B's opening operated by one of the relay's protection elements programmed to initiate this reclose shot; C/B's opening operated by one element not programmed to initiate the next reclosure shot, interrupts the Reclose cycle and activates the status "TwRCL" (Trip without Reclosure) of the relay. C/B's opening operated manually interrupts the Reclose cycle: the display of the relay shows "WaitC/Bcl" (Wait for C/B manual closure).

- Any time the Circuit Breaker (C/B) is manually closed the Reclaim time "TrCL" is started.
- Any time the C/B is reclosed by one AR shot (Sh1, 2, 3, 4) the relevant reclaim time (Tr1, Tr2, Tr3, Tr4) and the discrimination time (Td1, Td2, Td3) are started.
- After a manual closure of the C/B, tripping of any of the relay protection elements during "TrCL" makes the relay enter into the Lock-Out status (L.O.). In the L.O. status the relay, after breaker opening, does not produce any command for automatic reclose ; in this situation the "RCL" display indicates "Failed" Reclosure; if programmed the output relay (RCLf) is operated.
- Reset from the L.O. status take place when C/B manually closed or when the digital input "ExtReset" (if programmed) is activated.
- If none of the relay protection elements trips during "TrCL" after a manual closure of the C/B, the relay is ready to start the Automatic Reclose Sequence; the display indications are : RCL = Ready, LRC = Manual Close.
- The tripping of any element programmed for the operation of the next reclosure during the reclaim time "Trx" makes the relay proceed with the reclosing cycle.
- After "Trx" is expired the relay is ready for a new AR Cycle.

#### **N.B.**

**For operation of the Autoreclose Function C/B trip must be controlled by output relay "R1", and C/B close must be controlled by relay "R2".**

### 15.31.5 - Reclose Command

As soon as the C/B is opened due to tripping of one of the relay's elements programmed to initiate the next automatic reclose the relevant reclose, the relevant time delay ( $t_1$ ,  $t_2$ ,  $t_3$ ,  $t_4$ ) is started and at the end of this time the reclose command is issued by the relay.

The C/B is then automatically reclosed, the reclaim time "Trx" and the discrimination time "TDx" are started.

If during Tdx the C/B is again opened by any relay's protection element the relay goes in to L.O. status.

If during Trx the C/B is again opened by tripping of a protection element programmed to initiate the next AR shot, the C/B is reclosed after the relevant delay time "tx".

When the last shot of the AR Cycle sequence has been done, any further tripping during tr produces the relay's lock-out status.

If after any reclose shot no tripping takes place during "Tr", the relay gets ready for a new AR Cycle.


### 15.31.6 - Display Message



RCL	Status of the current Autoreclosure.			
	<b>Disable</b>	:	Disabled	
	<b>WaitC/Bcl</b>	:	Wait for C/B manual closure	
	<b>Ready</b>	:	Ready	
	<b>Progress</b>	:	In Progress	
	<b>LockOut</b>	:	LockOut	

LRC	Last Autoreclosure			
	<b>ManClose</b>	:	Manual Closure	
	<b>Success</b>	:	Successful Automatic Reclosure	
	<b>Failed</b>	:	Reclosure Failed	
	<b>TwRCL</b>	:	Trip without Automatic Reclosure	
	<b>Blocked</b>	:	Blocked by external cause	
	<b>NotAvail</b>	:	Information not Available	

### 15.31.7 - Flow chart - Automatic Reclosure RCL

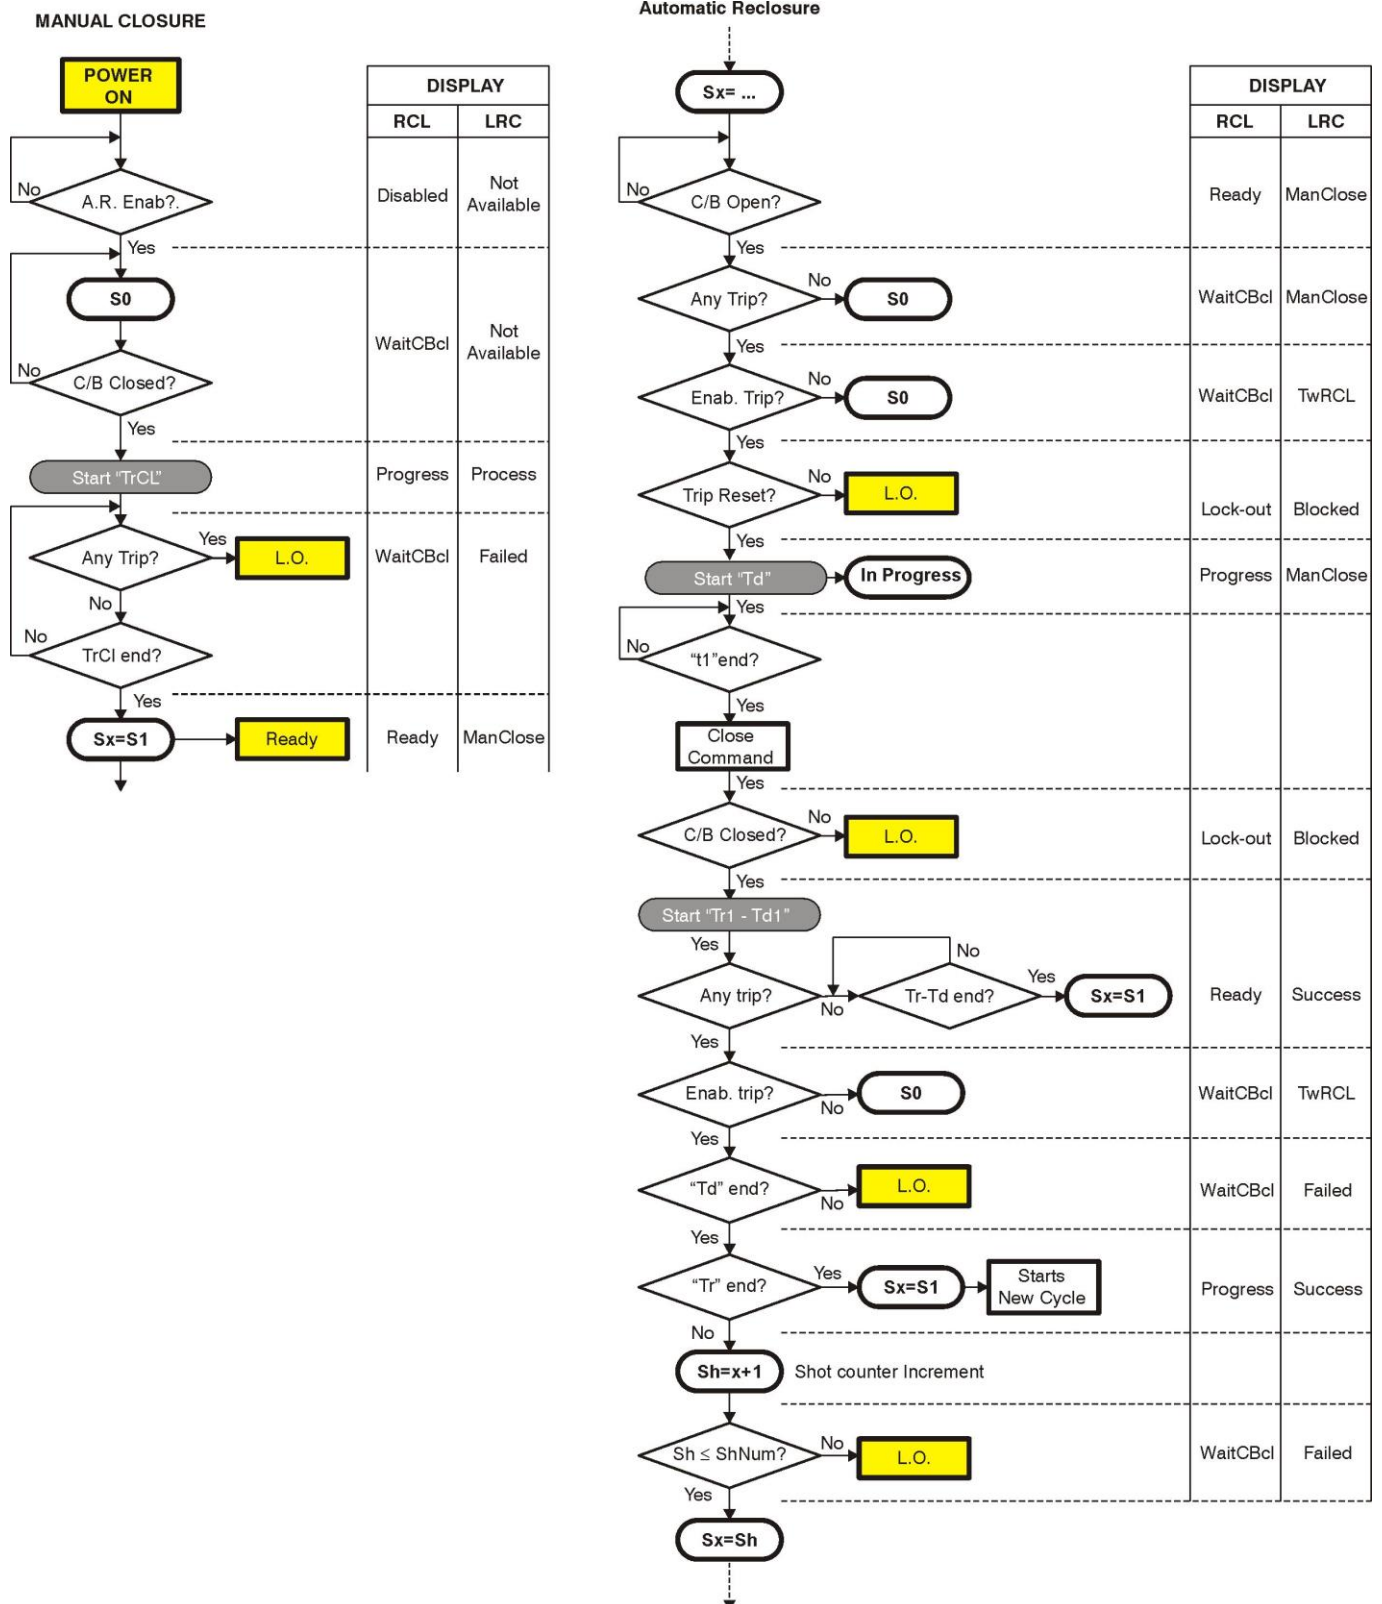




### 15.32 - Function: **CB Mngrn** (Control C/B)

This menu allows to configure the command for C/B operation.

<b>Options</b>	→ <b>L/R</b>	Ignored	[Ignored – Active]			
	→ <b>Key</b>	Enable	[Disable – Enable]			
<b>Timers</b>	→ <b>tL/R</b>	0.05	<b>s</b>	(0.05 ÷ 1.00)	step 0.05	<b>s</b>
	→ <b>tC/Bs</b>	0.50	<b>s</b>	(0.05 ÷ 1.00)	step 0.05	<b>s</b>

#### 15.32.1 - Description of variables


- ❑ **L/R** : Selection of Local/Remote C/B operation mode Ignored or Active
- ❑ **Key** : **Disable** = The pushbuttons on Front Panel are disabled;  
the operation of the C/B can be controlled by;
 


  - 1 - serial bus commands
  - 2 - commands available in the menu "**Cmd**" (Password protected).
  - 3 - Digital Inputs.


**Enable** = The C/B can be controlled also by the pushbuttons available on Relay's Front Face.
- ❑ **tL/R** : Admissible time before detection of the Local/Remote discrepancy alarm.
- ❑ **tC/Bs** : Maximum admissible delay for detection of status signal after C/B operation.

### 15.32.2 - Display Message


- 1

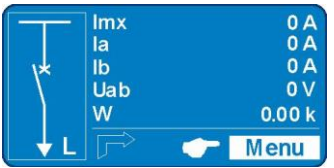


- **L** • “**L**” the control of C/B is in “Local” mode
- 2

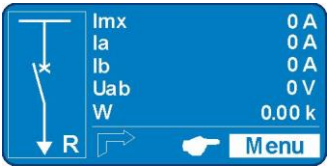

- **R** • “**R**” the control of C/B is in “Remote” mode
- 3

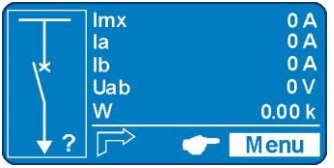

- **?** If the symbol “?” show up the relay is in discrepancy Local/Remote.  
The commands can be send from “Local” or “Remote”.
- 4



- **(+)** This symbol indicates the CB breaker failure (example: C/B closing failure)



### 15.33 - Function: **Oscillo** (Oscillographic Recording)

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Options</b>	→ <b>Trig</b>	Start	[Start / Trip / OnCmd / REUserLg / REUserLg]
<b>Timers</b>	→ <b>tPre</b>	0.50	s (0.01÷0.50) step 0.01 s
	→ <b>tPost</b>	0.50	s (0.01÷1.50) step 0.01 s

#### 15.33.1 - Description of variables

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
- ☐ **Trig** : Selection of the Trigger command source (start recording):
  - Start** = Trigger on time start of protection functions
  - Trip** = Trigger on trip (time delay end) of protection functions
  - OnCmd** = On Asynchronous Force trigger command
  - REUserLg** = On rising edge of "User Logic" (see § "User Trigger Oscillo")
  - FEUserLg** = On falling edge of "User Logic" (see § "User Trigger Oscillo")
- ☐ **tPre** : Recording time before Trigger
- ☐ **tPost** : Recording time after Trigger

#### 15.33.2 - Operation

In the options: "Trig = Start" and "Trig = Trip", the oscillographic recording starts respectively when any protection function starts operating or trip (provided the function was programmed "Enab = Yes").

The "Oscillo" Function includes the wave Form Capture of the input quantities and can totally store a record of 3 seconds.

The number of events recorded depends on the duration of each individual recording (tPre + tPost).

In any case the number of event stored can not exceed ten (10 x 0.3 sec).

Any new event beyond the 3 sec capacity of the memory, cancels and overwrites the former records (FIFO Memory).



## 15.33.3 – Available on MScCom2

	<b>SCDop</b>	Scada open breaker command	
	<b>SCDcl</b>	Scada close breaker command	
	<b>SCDop2</b>	Scada open breaker 2 command (generic command)	
	<b>SCDcl2</b>	Scada close breaker 2 command (generic command)	
	<b>SCDop3</b>	Scada open breaker 3 command (generic command)	
	<b>SCDcl3</b>	Scada close breaker 3 command (generic command)	
	<b>SCDop4</b>	Scada open breaker 4 command (generic command)	
	<b>SCDcl4</b>	Scada close breaker 5 command (generic command)	
	<b>DisRCL</b>	Scada disable reclose command	
	<b>EnRCL</b>	Scada enable reclose command	
<b>T&gt;</b>	<b>Tal</b> <b>T&gt;</b>	Alarm Trip	Thermal Image T>
<b>1l&gt;</b>	<b>1l&gt;</b> <b>t1l&gt;</b>	Start Trip	First overcurrent element F50-51
<b>2l&gt;</b>	<b>2l&gt;</b> <b>t2l&gt;</b>	Start Trip	Second overcurrent element F50-51
<b>3l&gt;</b>	<b>3l&gt;</b> <b>t3l&gt;</b>	Start Trip	Third overcurrent element F50-51
<b>1lo&gt;</b>	<b>1lo&gt;</b> <b>t1lo&gt;</b>	Start Trip	First earth fault element F50N-51N
<b>2lo&gt;</b>	<b>2lo&gt;</b> <b>t2lo&gt;</b>	Start Trip	Second earth fault element F50N-51N
<b>3lo&gt;</b>	<b>3lo&gt;</b> <b>t3lo&gt;</b>	Start Trip	Third earth fault element F50N-51N
<b>1ls&gt;</b>	<b>1ls&gt;</b> <b>t1ls&gt;</b>	Start Trip	First negative sequence current element F46
<b>2ls&gt;</b>	<b>2ls&gt;</b> <b>t2ls&gt;</b>	Start Trip	Second negative sequence current element F46
<b>1U&gt;</b>	<b>1U&gt;</b> <b>t1U&gt;</b>	Start Trip	First overvoltage element F59
<b>2U&gt;</b>	<b>2U&gt;</b> <b>t2U&gt;</b>	Star Trip	Second overvoltage element F59
<b>1U&lt;</b>	<b>1U&lt;</b> <b>t1U&lt;</b>	Start Trip	First undervoltage element F27
<b>2U&lt;</b>	<b>2U&lt;</b> <b>t2U&lt;</b>	Start Trip	Second undervoltage element F27
<b>1f&gt;</b>	<b>1f&gt;</b> <b>t1f&gt;</b>	Start Trip	First overfrequency element F81
<b>2f&gt;</b>	<b>2f&gt;</b> <b>t2f&gt;</b>	Start Trip	Second overfrequency element F81
<b>1f&lt;</b>	<b>1f&lt;</b> <b>t1f&lt;</b>	Start Trip	First underfrequency element F81
<b>2f&lt;</b>	<b>2f&lt;</b> <b>t2f&lt;</b>	Start Trip	Second underfrequency element F81
<b>1Uo&gt;</b>	<b>1Uo&gt;</b> <b>t1Uo&gt;</b>	Start Trip	First zero sequence voltage element F59Uo
<b>2Uo&gt;</b>	<b>2Uo&gt;</b> <b>t2Uo&gt;</b>	Start Trip	Second zero sequence voltage element F59Uo
<b>U1&lt;</b>	<b>U1&lt;</b> <b>tU1&lt;</b>	Start Trip	Positive sequence undervoltage element F27U1
<b>U2&gt;</b>	<b>U2&gt;</b> <b>tU2&gt;</b>	Start Trip	Negative sequence overvoltage element F59U2
<b>Wi</b>	<b>tWi&gt;</b>		Circuit breaker maintenance level
<b>TCS</b>	<b>TCS</b> <b>tTCS</b>	Start Trip	trip coil supervision
<b>IRF</b>	<b>IRF</b> <b>tIRF</b>	Start Trip	Internal Relay Failure
<b>RT</b>	<b>RT</b> <b>tRT</b>	Start Trip	Element Remote Trip



<b>TripTimeR</b>	<i>Trip time reduction active</i>		
<b>RCLf</b>	<i>Autoreclosure failed</i>		
<b>RCLrun</b>	<i>Autoreclosure in progress</i>		
<b>TwRCL</b>	<i>Trip not enabled for Automatic Reclosure</i>		
<b>RCL-OK</b>	<i>Successful Automatic Reclosure</i>		
<b>ManCL-OK</b>	<i>Manual Closure</i>		
<b>BiRCL</b>	<i>Presence Reclosure external lockout cause (input/CB Failure)</i>		
<b>Gr1to2</b>	<i>Switch to SetUp Group2</i>		
<b>manOpCmd</b>	<i>Manual Open Command</i>		
<b>CL-Cmd</b>	<i>Close Command</i>		
<b>C/Bfail</b>	<i>Circuit Breaker failure</i>		
<b>L/Rdisc</b>	<i>Local/Remote signal Discrepancy</i>		
<b>BF</b>	<i>Breaker Failure</i>		
<b>Gen.Start</b>	<i>Start Generic</i>		
<b>Gen.Trip</b>	<i>Trip Generic</i>		
<b>UserTriggerOscillo</b>	<i>User Variable for Oscillographic Recording</i>		
<b>UserVar&lt;0&gt;</b>	<i>User Variable</i>		
<b>to</b>			
<b>UserVar&lt;24&gt;</b>			
<b>Vcc</b>	<i>Reserved</i>		
<b>Gnd</b>	<i>Reserved</i>		
<b>ResLog</b>	<i>Reset signal logic</i>		
<b>P1</b>	<i>Push-button Open</i>		
<b>P2</b>	<i>Push-button Close</i>		
<b>0.D1</b>	<i>Digital Input "0.D1"</i>	<i>activated</i>	<i>Digital Input on Main Relay</i>
<b>0.D1Not</b>	<i>Digital Input "0.D1"</i>	<i>deactivated</i>	
<b>to</b>			
<b>0.D4</b>	<i>Digital Input "0.D4"</i>	<i>activated</i>	
<b>0.D4Not</b>	<i>Digital Input "0.D4"</i>	<i>deactivated</i>	<i>Digital input on Expansion Board</i>
<b>1.D1</b>	<i>Digital Input "1.D1"</i>	<i>activated</i>	
<b>1.D1Not</b>	<i>Digital Input "1.D1"</i>	<i>deactivated</i>	
<b>to</b>			
<b>1.D15</b>	<i>Digital Input "1.D15"</i>	<i>activated</i>	<i>Digital input on Expansion Board</i>
<b>1.D15Not</b>	<i>Digital Input "1.D15"</i>	<i>deactivated</i>	
<b>2.D1</b>	<i>Digital Input "2.D1"</i>	<i>activated</i>	
<b>2.D1Not</b>	<i>Digital Input "2.D1"</i>	<i>deactivated</i>	
<b>to</b>			<i>Digital input on Expansion Board</i>
<b>2.D15</b>	<i>Digital Input "2.D15"</i>	<i>activated</i>	
<b>2.D15Not</b>	<i>Digital Input "2.D15"</i>	<i>deactivated</i>	



### 15.33.4 – Setting “User Trigger Oscillo”

The “User trigger Oscillo” is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via “MSCom2” software.

Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
------	-------------	------------------	---------	-------	------------	----------------

#### Name

Internal name

#### User descr.

Fixed

#### Linked functions

Selection functions

#### OpLogic

Operation Logic = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

#### Timer

Time delay (0-10)s, step 0.01s

#### Timer type

**Delay** = Add a delay on output activation.  
The “Timer” is edge triggered on rise edge.

**Monostable** = Activated the output for the time “Timer”

#### Logical status

“User Trigger Oscillo” Logical status

### Example: Setting "User Variable"

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "User Variable"



Setting for "User Trigger Oscillo" : "1I>, 2I>, 3I> ", "OR", "1", "Monostable".


ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
1	UserTrigger Oscillo	UserTrigger Oscillo	1I>, 2I>, 3I>	OR	1	Monostable	0
2	UserVar <0>	UserVar <0>		None	0	Delay	0

## “Linked Functions”

Select “**Linked Functions**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:



Select “**1I>**, **2I>**, **3I>**” from “Available” box via push-button “<Add”, and press “OK”. For remove functions, use push-button “>Remove”.

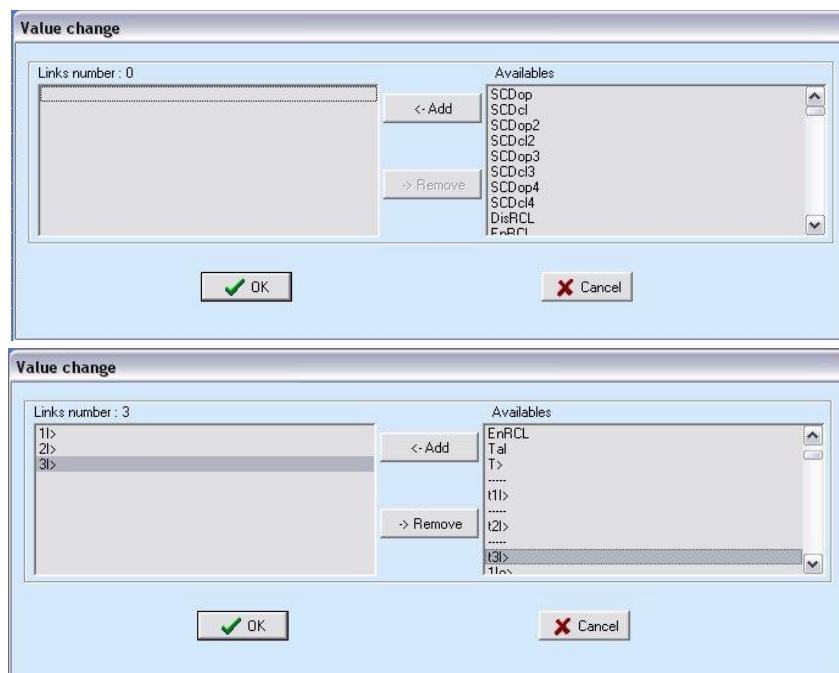


### "Operation Logic" (Oplogic)

Select "**Oper Logic**" related to "User Trigger Oscillo" and press right button on mouse, select "Value change":



Insert "**OR**" into box and press "OK":

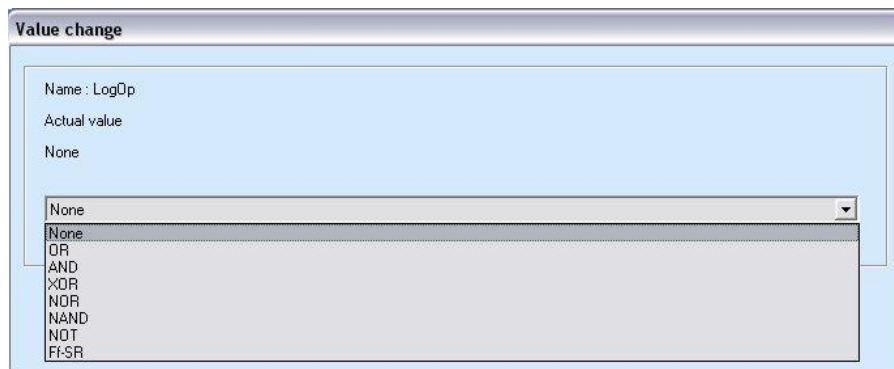


### "Timer"

Select "**Timer**" related to "User Trigger Oscillo" and press right button on mouse, select "Value change":



Select "**1**" into box and press "OK":

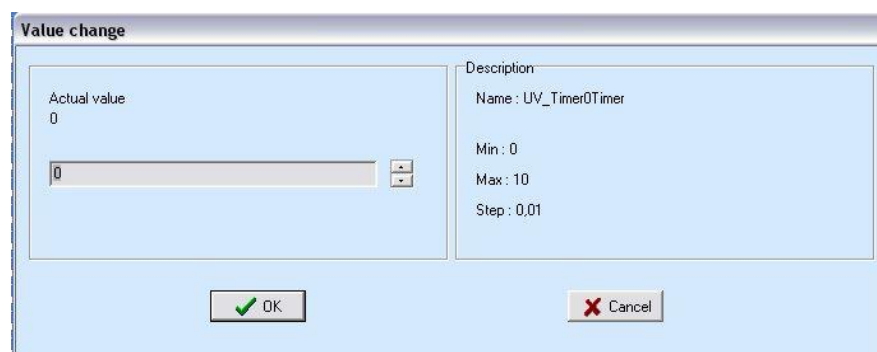


### “Timer type”

Select “**Timer**” related to “User Trigger Oscillo” and press right button on mouse, select “Value change”:



Select “**Monostable**” into box and press “OK”:

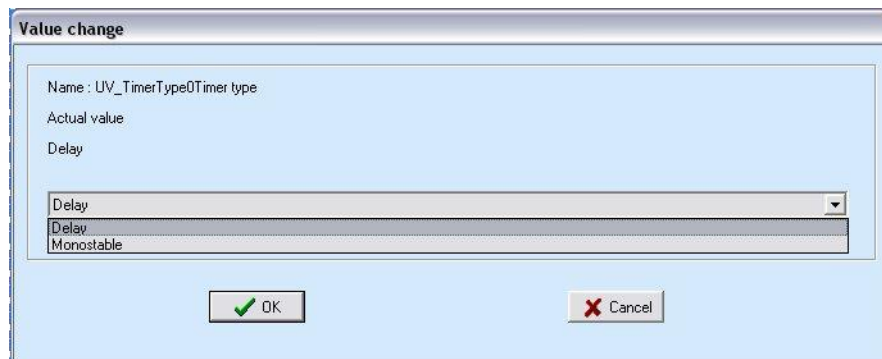






---

**15.34 - Function: *BrkFail* (Breaker Failure)**


---

<b>Status</b>	→ <b>Enab.</b>	No	[No / Yes]
<b>Timers</b>	→ <b>tBF</b>	0.75 s	(0.05÷0.75) step 0.01 s

---

**15.34.1 - Description of variables**


---

- ☐ **Enab.** : Function enabling (No = Disable / Yes = Enable)
  - ☐ **tBF** : Trip time delay
- 

**15.34.2 - Operation**


---

The Breaker Failure detection is started by the operation of the output relay “R1” (programmed to be controlled by the Protection Functions that trip the C/B).

If after [tBF] seconds from operation of the relay “R1”, any input current flow is still detected (>10% I<sub>n</sub>) , the function “BF” trips and operate one user programmable output relay,




---

**15.35 - Function: *ExtReset* (External Reset Configuration)**


---

This menu allows to configure the edge polarity of the digital input associated to the trip reset function.

---

<b>Options</b>	→ <b>ActOn</b>	RiseEdge	[RiseEdge / FallEdge]
----------------	----------------	----------	-----------------------

---

**15.35.1 - Description of variables**


---

- ☐ **ActOn**

:

RiseEdge  
FallEdge

Active on Rise Edge (Digital Input close).  
Active on Fall Edge (Digital Input open).



## 16. User Variables

The "User Variable" is a result of a logical operation (Or, AND, ecc...), it can be used like other logical output. This operation is possible only via "MSCom2" software.

ID	Nome	Descr. utente	Funz. associate	OpLogic	Timer	Tipo timer	Stato logico
----	------	---------------	-----------------	---------	-------	------------	--------------

### 16.1 - Name

Internal progressive name

### 16.2 - User Descr.

Custom identification label for user variable

### 16.3 - Linked functions

Selection functions

### 16.4 - OpLogic

*Operation Logic* = [None, OR, AND, XOR, NOR, NAND, NOT, Ff-SR]

### 16.5 - Timer

Time delay (0-10)s, step 0.01s

### 16.6 - Timer type

*Delay* = Add a delay on output activation.  
The "Timer" is edge triggered on rise edge.

*Monostable* = Activated the output for the time "Timer"

### 16.7 - Logical status

"User Variable" Logical status

## 16.8 - Example: Setting "User Variable"

Open "MSCom2" program and connect to the relay.

Select "Change Windows" from "Menu" button



Select "User Variable"



Setting for "UserVar<0>" :

"**Start Overcurrent Element**", "**1I>, 2I>, 3I>**", "**OR**", "**1**", "**Monostable**".


ID	Name	User descr.	Linked functions	OpLogic	Timer	Timer type	Logical status
1	UserTrigger Oscillo	UserTrigger Oscillo		None	0	Delay	0
2	UserVar <0>	Start Overcurrent Element	1I>,2I>,3I>	OR	1	Monostable	0

### 16.8.1 - "User description" (User descr.)

Select "**User descr**" related to "UserVar<0>" and press right button on mouse, select "Value change":



Insert "**Start Overcurrent Element**" into box and press "OK":

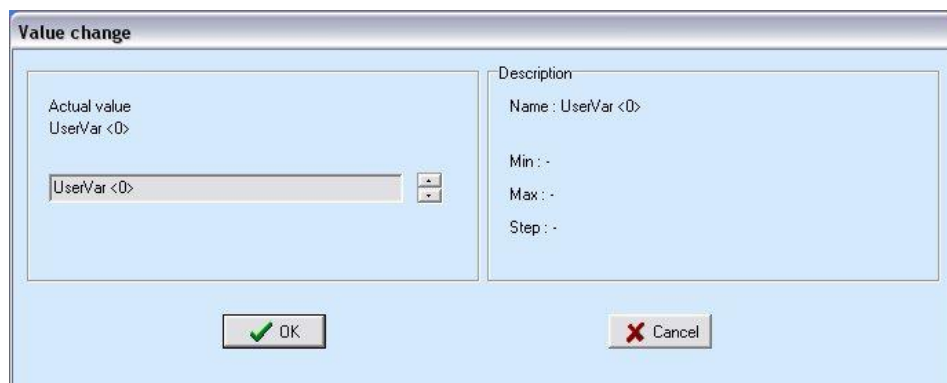

**Value change**


Actual value  
UserVar <0>

UserVar <0>

Description  
Name: UserVar <0>

Min: -  
Max: -  
Step: -

OK Cancel

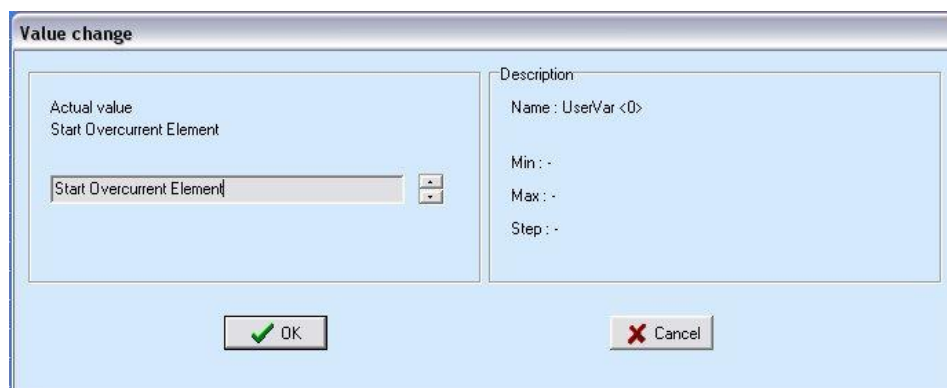

**Value change**

Actual value  
Start Overcurrent Element

Start Overcurrent Element

Description  
Name: UserVar <0>

Min: -  
Max: -  
Step: -


OK Cancel

### 16.8.2 - "Linked Functions"

Select "**Linked Functions**" related to "UserVar<0>" ("**Start Overcurrent Element**") and press right button on mouse, select "Value change":



Select "**1I>, 2I>, 3I>**" from "Available" box via push-button "<Add", and press "OK". For remove functions, use push-button ">Remove".

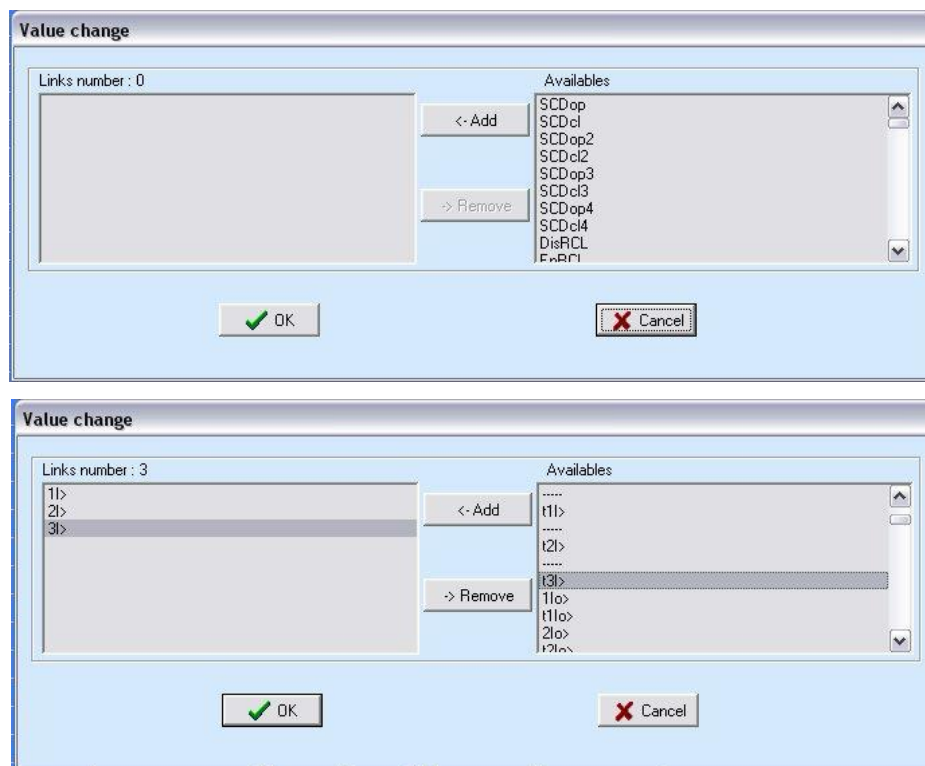


### 16.8.3 - "Operation Logic" (Oplogic)

Select "**Oper Logic**" related to "UserVar<0>" ("**Start Overcurrent Element**") and press right button on mouse, select "Value change":



Insert "**OR**" into box and press "OK":

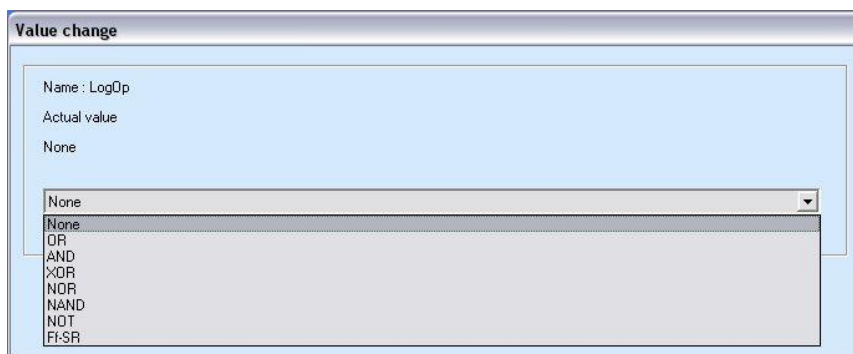


### 16.8.4 - "Timer"

Select "**Timer**" related to "UserVar<0>" ("**Start Overcurrent Element**") and press right button on mouse, select "Value change":



Select "**1**" into box and press "OK":

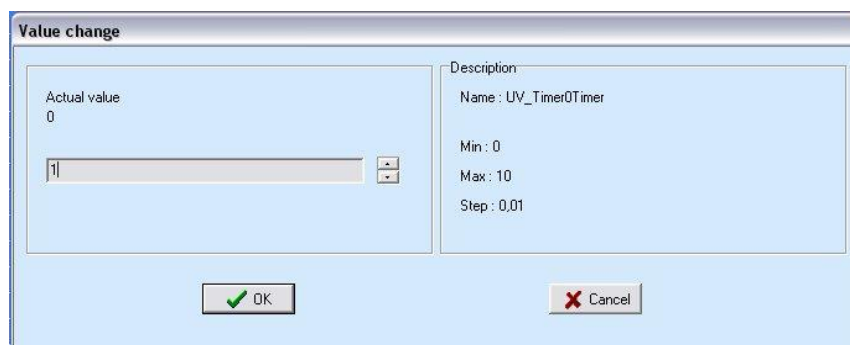




### 16.8.5 - "Timer type"

Select "**Timer**" related to "UserVar<0>" ("**Start Overcurrent Element**") and press right button on mouse, select "Value change":



Select "**Monostable**" into box and press "OK":

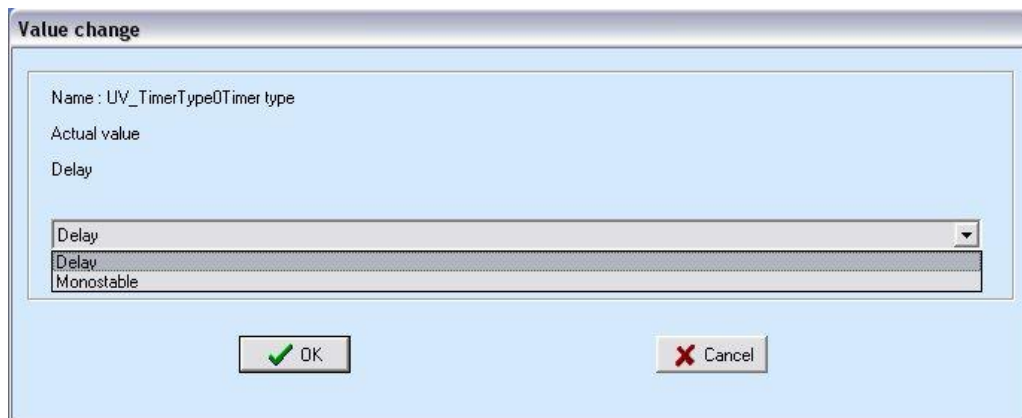

## 17. Input – Output (via MCom2 software)

The firmware can manage up to 32 digital inputs and 20 output relays; among these, 4 digital inputs and 6 output relays are available on the relay module, the remaining are available on additional expansion modules controlled via the CAN-Bus communication channel.

Can be controlled 1 or 2 additional modules.

<b>14DI</b>	Module	=	14 Digital Inputs
<b>14DO</b>	Module	=	14 Outputs Relay
<b>UX10-4</b>	Module	=	10 Digital Inputs and 4 Outputs Relay

### 17.1 – Digital Inputs

→ <b>0.D1</b>	Programmable (D1)	<i>Available in the Main Relay</i>	Any digital input of the expansion modules is active when the relevant terminals (see wiring diagram) are shorted.
→ <b>0.D2</b>	Programmable (D2)		
→ <b>0.D3</b>	Programmable (D3)		
→ <b>0.D4</b>	Programmable (D4)		
→ <b>1.D1</b>	Inputs "D8", "D16" not available	<i>Digital input on Expansion Board</i>	
→ <b>1.D--</b>			
→ <b>1.D15</b>			
→ <b>2.D1</b>	Inputs "D8", "D16" not available	<i>Digital input on Expansion Board</i>	
→ <b>2.D--</b>			
→ <b>2.D15</b>			

Four Digital Input are available on main relay:

<input type="checkbox"/> <b>D1</b> (0.D1)	(terminals 38 - 28)	: Programmable
<input type="checkbox"/> <b>D2</b> (0.D2)	(terminals 38 - 18)	: Programmable
<input type="checkbox"/> <b>D3</b> (0.D3)	(terminals 38 - 29)	: Programmable
<input type="checkbox"/> <b>D4</b> (0.D4)	(terminals 38 - 19)	: Programmable (PTC)

Three of them (0.D1, 0.D2, 0.D3) are disactivated, when the relevant terminals are open and get activated when the relevant terminals are shorted by an external cold contact.

The operation of the Input "0.D4" is dependent on the value "R" of resistance of the external circuit connected to its terminals (38-19):

- Activated if " $R < 50\Omega$ " or " $R > 3000\Omega$ ". - Disactivated if " $50\Omega \leq R \leq 3000\Omega$ ".

Therefore, if the terminals "38-19" are open-circuited, the input "0.D4" is activated; for using "0.D4" as a normal Digital Input simply controlled by an external cold contact, it is necessary to permanently connect across the terminal's "38-19" (in parallel to the external contact) a load resistor of value between 50 and 3000 $\Omega$  (example 1000 $\Omega$  - 0.5W).

The additional inputs "1.D1....1.D15" are available when the first expansion module is present.

The additional inputs "2.D1....2.D15" are available when the second expansion module is present.

Any digital input of the expansion modules is active when the relevant terminals (see wiring diagram) are shorted.

## 17.2 – “DI” Configuration (via MCom2 software)

Any of the Digital Inputs can be programmed to control one or more of the following functions.

<b>Bi1I&gt;</b>	Blocking input	First overcurrent element
<b>Bi2I&gt;</b>	Blocking input	Second overcurrent element
<b>Bi3I&gt;</b>	Blocking input	Third overcurrent element
<b>Bi1Io&gt;</b>	Blocking input	First earth fault element
<b>Bi2Io&gt;</b>	Blocking input	Second earth fault element
<b>Bi3Io&gt;</b>	Blocking input	Third earth fault element
<b>Bi1Is&gt;</b>	Blocking input	First negative sequence current element
<b>Bi2Is&gt;</b>	Blocking input	Second negative sequence current element
<b>Bi1U&gt;</b>	Blocking input	First overvoltage element
<b>Bi2U&gt;</b>	Blocking input	Second overvoltage element
<b>Bi1U&lt;</b>	Blocking input	First undervoltage element
<b>Bi2U&lt;</b>	Blocking input	Second undervoltage element
<b>Bi1Uo&gt;</b>	Blocking input	First zero sequence voltage element
<b>Bi2Uo&gt;</b>	Blocking input	Second zero sequence voltage element
<b>BiU1&lt;</b>	Blocking input	Positive sequence undervoltage element
<b>BiU2&gt;</b>	Blocking input	Negative sequence overvoltage element
<b>Group 1-2</b>	Selection of the setting Group 1 or 2.	
<b>Circuit Breaker</b>	Status Circuit Breaker	
<b>ExtR</b>	External Reset input	
<b>Blocking of reclosing functions</b>	Blocking of reclosing functions	
<b>Dig.Input for reduction of trip time</b>	Digital Input for reduction of trip time	
<b>Local state</b>	Locate state	
<b>Remote state</b>	Remote state	
<b>C/B open command</b>	Open C/B Command	
<b>C/B close command</b>	Close C/B Command	
<b>Remote (external) trip</b>	Remote Trip	

---

**17.2.1 – Example:**


---

ID	Name	Status	OpLogic	Functions
----	------	--------	---------	-----------

---

**17.2.2 – Name**


---

Logical Input name

---

**17.2.3 – Status**


---

Logical Input status

---

**17.2.4 – OpLogic**


---

Not Used

---

**17.2.5 – Functions**


---

Selection function

---

**17.2.6 – Example: Setting “Digital Input”**



---

Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button



Select “DI configuration”

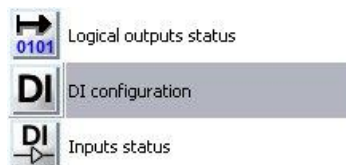


Setting for “**Bi1I>**” : “**1I>**”.

ID	Name	Status	OpLogic	Functions
1	Bi1I>	Not active	None	1I>



### 17.2.6.1 – “Functions”

Select “**Functions**” related to “**BiR1I>**” and press right button on mouse, select “Value change”:

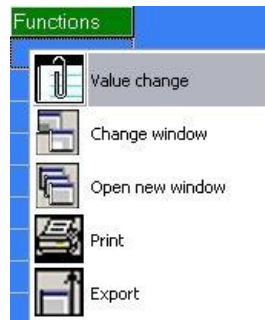

From box “Available”, select “**1I>**” and press “Add”.

Press “OK” for confirmation. (if Password is request, see § Password)

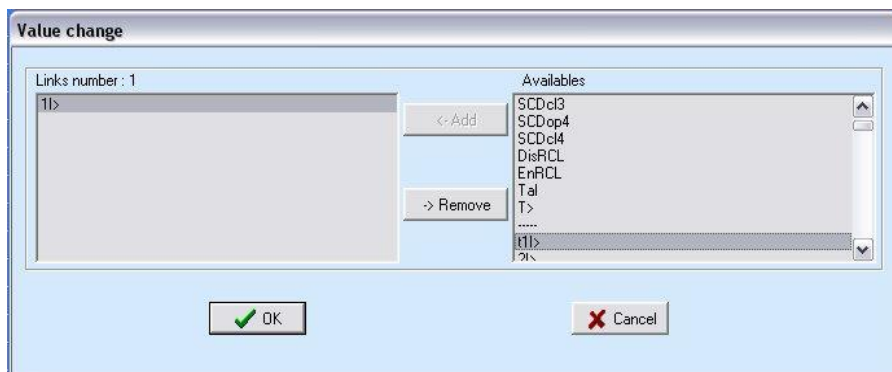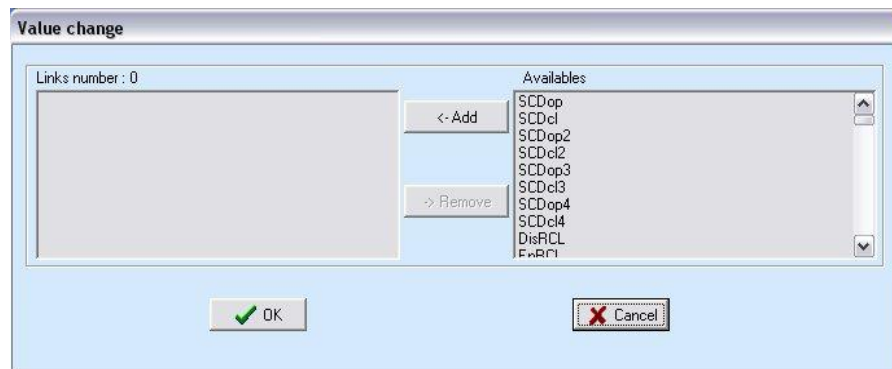

### 17.3 – Outputs Relay

The output relay are fully user programmable and controlled by any protection functions and by any digital inputs.

→ <b>0.R1</b>	Programmable (R1)	<i>Available in the main relay</i>
→ <b>0.R2</b>	Programmable (R2)	
→ <b>0.R3</b>	Programmable (R3)	
→ <b>0.R4</b>	Programmable (R4)	
→ <b>0.R5</b>	Programmable (R5)	
→ <b>0.R6</b>	Programmable (R6)	
→ <b>1.R1</b>	Programmable	<i>Output Relays on Expansion Board</i>
→ <b>1.R--</b>		
→ <b>1.R14</b>		
→ <b>2.R1</b>	Programmable	<i>Output Relays on Expansion Board</i>
→ <b>2.R--</b>		
→ <b>2.R14</b>		

### 17.4 - “DO” Configuration

Any Output Relay can be programmed to be controlled (energized) by one or more of the following functions or Digital Inputs:

	<b>SCDop</b>	Scada open breaker command
	<b>SCDcl</b>	Scada close breaker command
	<b>SCDop2</b>	Scada open breaker 2 command (generic command)
	<b>SCDcl2</b>	Scada close breaker 2 command (generic command)
	<b>SCDop3</b>	Scada open breaker 3 command (generic command)
	<b>SCDcl3</b>	Scada close breaker 3 command (generic command)
	<b>SCDop4</b>	Scada open breaker 4 command (generic command)
	<b>SCDcl4</b>	Scada close breaker 5 command (generic command)
	<b>DisRCL</b>	Scada disable reclose command
	<b>EnRCL</b>	Scada enable reclose command
<b>T&gt;</b>	<b>Tal</b>	Alarm
	<b>T&gt;</b>	Trip Thermal Image T>
<b>1l&gt;</b>	<b>1l&gt;</b>	Start
	<b>t1l&gt;</b>	Trip First overcurrent element F50-51
<b>2l&gt;</b>	<b>2l&gt;</b>	Start
	<b>t2l&gt;</b>	Trip Second overcurrent element F50-51
<b>3l&gt;</b>	<b>3l&gt;</b>	Start
	<b>t3l&gt;</b>	Trip Third overcurrent element F50-51
<b>1lo&gt;</b>	<b>1lo&gt;</b>	Start
	<b>t1lo&gt;</b>	Trip First earth fault element F50N-51N
<b>2lo&gt;</b>	<b>2lo&gt;</b>	Start
	<b>t2lo&gt;</b>	Trip Second earth fault element F50N-51N
<b>3lo&gt;</b>	<b>3lo&gt;</b>	Start
	<b>t3lo&gt;</b>	Trip Third earth fault element F50N-51N
<b>1ls&gt;</b>	<b>1ls&gt;</b>	Start
	<b>t1ls&gt;</b>	Trip First negative sequence current element F46
<b>2ls&gt;</b>	<b>2ls&gt;</b>	Start
	<b>t2ls&gt;</b>	Trip Second negative sequence current element F46
<b>1U&gt;</b>	<b>1U&gt;</b>	Start
	<b>t1U&gt;</b>	Trip First overvoltage element F59
<b>2U&gt;</b>	<b>2U&gt;</b>	Star
	<b>t2U&gt;</b>	Trip Second overvoltage element F59
<b>1U&lt;</b>	<b>1U&lt;</b>	Start
	<b>t1U&lt;</b>	Trip First undervoltage element F27
<b>2U&lt;</b>	<b>2U&lt;</b>	Start
	<b>t2U&lt;</b>	Trip Second undervoltage element F27
<b>1f&gt;</b>	<b>1f&gt;</b>	Start
	<b>t1f&gt;</b>	Trip First overfrequency element F81

<b>2f&gt;</b>	<b>2f&gt;</b> <b>t2f&gt;</b>	Start Trip	Second overfrequency element F81
<b>1f&lt;</b>	<b>1f&lt;</b> <b>t1f&lt;</b>	Start Trip	First underfrequency element F81
<b>2f&lt;</b>	<b>2f&lt;</b> <b>t2f&lt;</b>	Start Trip	Second underfrequency element F81
<b>1Uo&gt;</b>	<b>1Uo&gt;</b> <b>t1Uo&gt;</b>	Start Trip	First zero sequence voltage element F59Uo
<b>2Uo&gt;</b>	<b>2Uo&gt;</b> <b>t2Uo&gt;</b>	Start Trip	Second zero sequence voltage element F59Uo
<b>U1&lt;</b>	<b>U1&lt;</b> <b>tU1&lt;</b>	Start Trip	Positive sequence undervoltage element F27U1
<b>U2&gt;</b>	<b>U2&gt;</b> <b>tU2&gt;</b>	Start Trip	Negative sequence overvoltage element F59U2
<b>Wi</b>	<b>tWi&gt;</b>		Circuit breaker maintenance level
<b>TCS</b>	<b>TCS</b> <b>tTCS</b>	Start Trip	trip coil supervision
<b>IRF</b>	<b>IRF</b> <b>tIRF</b>	Start Trip	Internal Relay Failure
<b>RT</b>	<b>RT</b> <b>tRT</b>	Start Trip	Element Remote Trip
	<b>TripTimeR</b>		Trip time reduction active
	<b>RCLf</b>		Autoreclosure failed
	<b>RCLrun</b>		Autoreclosure in progress
	<b>TwRCL</b>		Trip not enabled for Automatic Reclosure
	<b>RCL-OK</b>		Successful Automatic Reclosure
	<b>ManCL-OK</b>		Manual Closure
	<b>BiRCL</b>		Presence Reclosure external lockout cause (input/CB Failure)
	<b>Gr1to2</b>		Switch to SetUp Group2
	<b>manOpCmd</b>		Manual Open Command
	<b>CL-Cmd</b>		Close Command
	<b>C/Bfail</b>		Circuit Breaker failure
	<b>L/Rdisc</b>		Local/Remote signal Discrepancy
	<b>BF</b>		Breaker Failure
	<b>Gen.Start</b>		Start Generic
	<b>Gen.Trip</b>		Trip Generic
	<b>UserTriggerOscillo</b>		User Variable for Oscillographic Recording
	<b>UserVar&lt;0&gt;</b> to <b>UserVar&lt;24&gt;</b>		User Variable
	<b>Vcc</b>		Reserved
	<b>Gnd</b>		Reserved
	<b>ResLog</b>		Reset signal logic
	<b>P1</b>		Push-button Open
	<b>P2</b>		Push-button Close
	<b>0.D1</b>	Digital Input "0.D1"	activated
	<b>0.D1Not</b>	Digital Input "0.D1"	deactivated
	to		Digital Input on Main Relay
	<b>0.D4</b>	Digital Input "0.D4"	activated
	<b>0.D4Not</b>	Digital Input "0.D4"	deactivated
	<b>1.D1</b>	Digital Input "1.D1"	activated
	<b>1.D1Not</b>	Digital Input "1.D1"	deactivated
	to		
	<b>1.D15</b>	Digital Input "1.D15"	activated
	<b>1.D15Not</b>	Digital Input "1.D15"	deactivated
	to		Digital input on Expansion Board
	<b>2.D1</b>	Digital Input "2.D1"	activated
	<b>2.D1Not</b>	Digital Input "2.D1"	deactivated
	to		
	<b>2.D15</b>	Digital Input "2.D15"	activated
	<b>2.D15Not</b>	Digital Input "2.D15"	deactivated
			Digital input on Expansion Board





### 17.4.1 - Example configuration

ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0.P1 [Master board, R:1]		None	Off	Normally open	Pulse	0,01	Off
2	0.P2 [Master board, R:2]		None	Off	Normally open	Pulse	0,01	Off

#### 17.4.1.1 - Relay

Relay internal name

#### 17.4.1.2 - Linked function

It's available only 1 link, select the function for tripping the output relay (for multiple association use "User Variable")

#### 17.4.1.3 - Operation Logic

Not Used

#### 17.4.1.4 - Logical Status

Relay Logical status

#### 17.4.1.5 - Output Configuration

**Normally Deenergized** The output relay is deenergized in normal conditions and gets energized on activation of the controlling Functional Output; reset means deenergizing.

**Normally Energized** The output relay is energized in normal conditions and gets deenergized on activation of the controlling Functional Output; reset means energizing.

#### 17.4.1.6 - tON (Operation Time)

This timer controls the duration of the activation of the output relay.


**tON** : 0 (0.01-10)s, step 0.01s

#### 17.4.1.7 - Relay Status

Relay – Physical status


## 17.5 - Functions - Operation Mode

- Automatic** : In this mode the output relay is “operated” (energized if “N.D.”, deenergized if “N.E.”) when the controlling Functional Output is activated and it is reset to the “non operated” condition when the Functional Output gets disactivated but, anyhow, not before the time “tON” has elapsed (minimum duration of the operation time)
- Manual** : In this mode the output relay is “operated” when the controlling Functional Output is activated and remains in the operated condition until a manual reset command is issued by the relay keyboard (local commands menu) or via the serial communication. In this mode the timer “tON” has no effect.
- Impulsive** : In this mode the output relay is “operated” when the controlling Functional Output is activated and it remains in the “operated” condition (energized if “N.D.”, deenergized if “N.E.”) for the set time “tON” independently from the status of the controlling Functional Output.

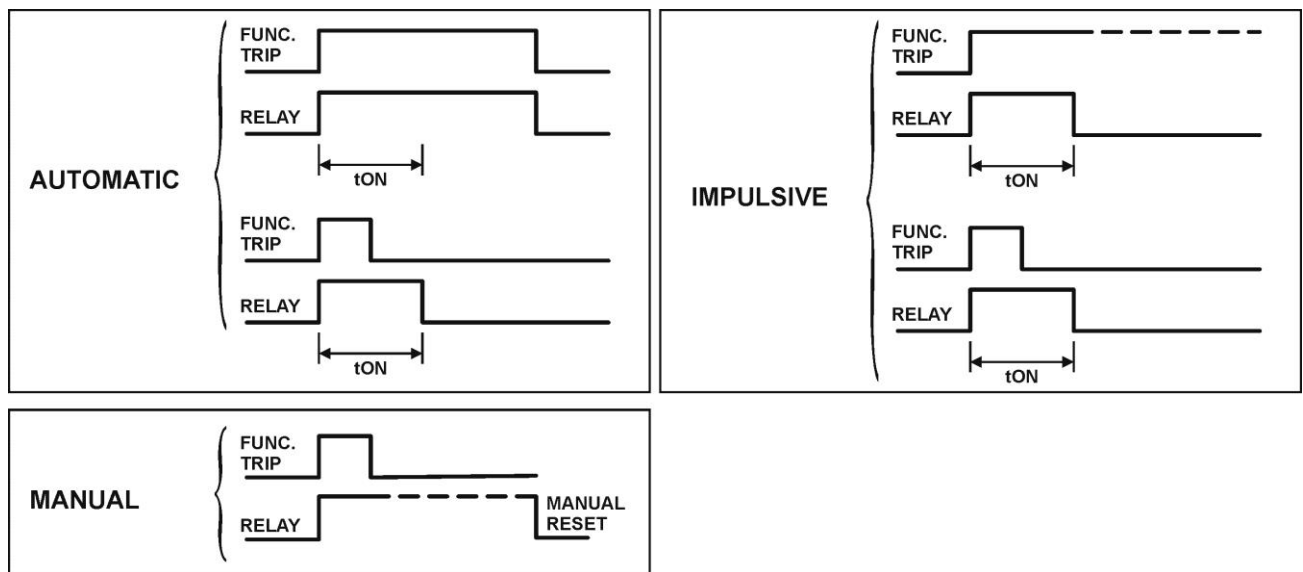


Open “MSCom2” program and connect to the relay.

Select “Change Windows” from “Menu” button

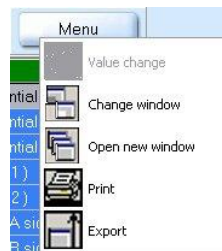

Select “DO Configuration”

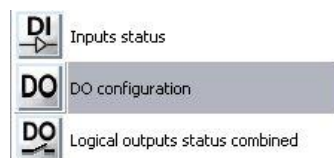


### 17.5.1 - Example: Change settings for "0.R1"

Change settings for "0.R1" : "1I>", "Normally Close", "Automatic reset", "0.5".



ID	Relay	Linked functions	OpLogic	Logical status	Output config	Function	tON	Relay status
1	0.R1 [Master board, R:1]	1I>	None	Off	Normally close	Automatic reset	0.5	Off
2	0.R2 [Master board, R:2]		None	Off	Normally open	Pulse	0.01	Off

#### 17.5.1.1 - "Linked Functions"

Select "**Linked Functions**" related to 0.R1 and press right button on mouse, select "Value change":

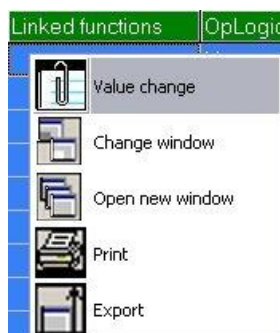

From box "Available", select "1I>" and press "Add".  
Press "OK" for confirmation. (if Password is request, see § Password)

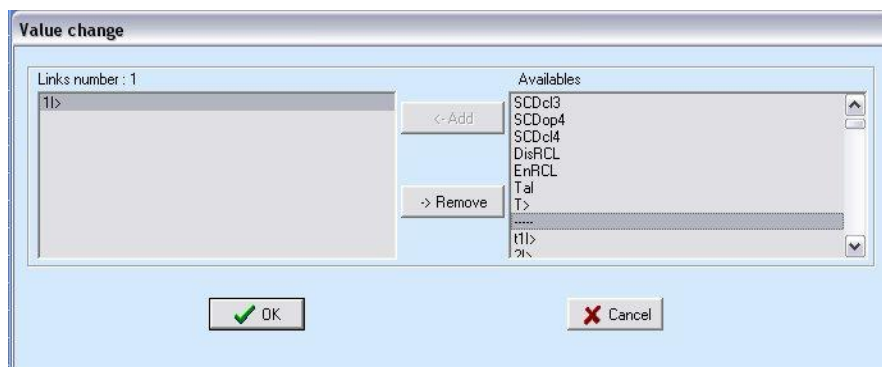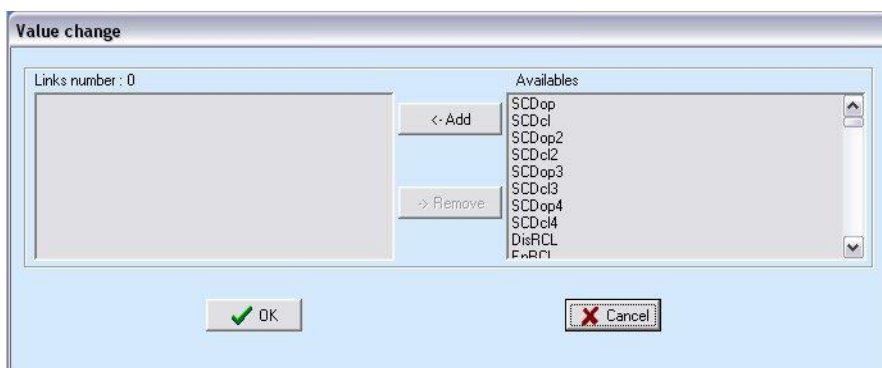


### 17.5.1.2 - "Output Config"

Select "**Output Config**" related to "0.R1" and press right button on mouse, select "Value change":



Select "**Normally Close**" from combo box and press "OK"  
(if Password is request, see § Password)

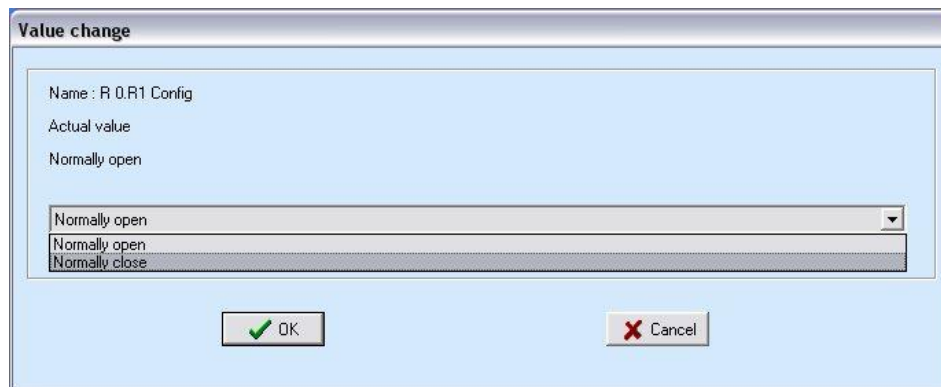


### 17.5.1.3 - "Function"

Select "**Function**" related to "0.R1" and press right button on mouse, select "Value change":



Select "**Manual reset**" from combo box and press "OK"  
(if Password is request, see § Password):

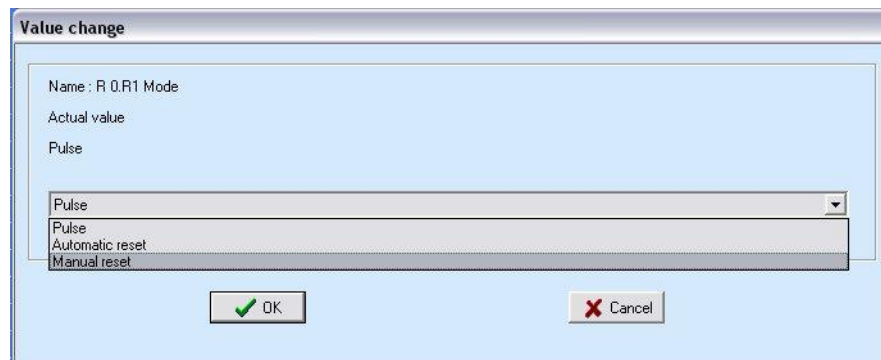


### 17.5.1.4 - "tON"

Select "**tON**" related to "0.R1" and press right button on mouse, select "Value change":





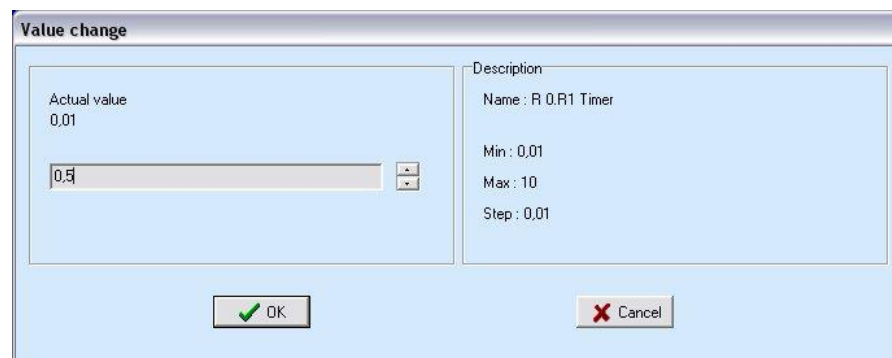


Set "**0.5**" and press "OK" (if Password is request, see § Password):



## 18. Date & Time

In this menu it is possible to configure the Date and Time

<b>Date:</b>	20YY	/	MM	/	DD	(2000/01/01 ÷ 2099/12/31) YY = Year / MM = Month / DD = Day
<b>Time:</b>	HH	:	MM	:	00	HH = hour / MM = Minutes / 00
<b>DofW:</b>	Day					Es: Wednesday

- 1 
  - Press "**Menu**" for access to the main menu with icons.
- 2 
  - Select icon "**TimeDate**" by pushbuttons "**Increase**" or "**Decrease**".
  - Press "**Select**".
- 3 
  - Press "**Modify**".
- 4 
  - The last two figures of the Year will appear in bold character; by pushbuttons "**Increase**" or "**Decrease**" set the new figures.
  - Press "**Next**" to go to the next setting.
- 5 
  - As above for changing the "Month"
  - Press "**Next**" to go to the next setting.
- 6 
  - As above for changing the "Day"
  - Press "**Next**" to go to the next setting.




7




- As above for changing the “Hours”
- Press “**Next**” to go to the next setting.

8

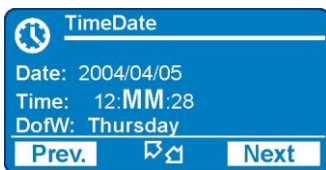

- As above for changing the “Minutes”
- Press “**Next**” to go to the next setting.

9

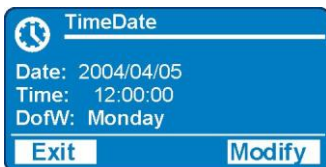

- The **Day of the Week** is calculated and displayed automatically.
- Press “**Exit**” to go back to the main menu.
- Press “**Modify**” to go back to the step “3”



Press the button “**Next**” to go back to the previous display.

### 18.1 – Clock synchronization

The internal clock has 1ms resolution and a stability of  $\pm 35$ ppm in the operational temperature range.

It can be synchronized with an external time reference in the following ways:

- ❑ Using the standard “Time Synchronization” procedure of the “IEC870-5-103” protocol.
- ❑ Using the “MCom 2” software or from the DCS with the Modbus RTU protocol.

**Note:** On power supply failure an internal battery supports the internal clock for over two years.



## 19. Healthy (Diagnostic Information)

The relay operates a continuous checking of the vital functionalities and in case an internal failure is detected, the I.R.F. function (see § I.R.F.) is activated and the Power/IRF led is set to flashing.

<b>Device</b>	→	<b>No Fail</b>	→	No Fail
		<b>Fail</b>	→	Fail present
		<b>MinorFail</b>	→	Minor Fail
		<b>HisoricalFail</b>	→	Cleared Fail
		<b>FW not comp.</b>	→	Firmware not compatible

If an internal self-clearing (transient) fault is detected, it is recorded into an historical file without any other action.

## 20. Info (Relay Version)

In this menu it is possible to read the information relevant to relay unit.


<b>SW Version</b>	<b>AcqUnit-I/O</b>	→	####.##.##.##	Firmware version of acquisition unit	
	<b>ProtectUnit</b>	→	####.##.##.##	Firmware version of CPU unit	
<b>Protect.Model</b>		→	FeederManager	Protection Type	
<b>Serial Number</b>		→	###/###/###/####	Relay Serial Number	
<b>User Tag</b>		→	FMR-R-PL	Relay identification label.	This information can only be modified by the interface program "MCom 2" and allows the user to give to the relay any suitable denomination.
<b>Build</b>		→	#####	Build identification label.	
<b>Line</b>		→	#####	Line identification label.	

## 21. Battery


The relay is equipped with a lithium battery type “CR2477N 3V”, to support the internal clock and the oscillographic recording memory in case of programmed lack of power.  
The expected minimum duration without power exceed 2 years.

**Attention!!** Use only battery specified.

Instruction for replacement the battery:

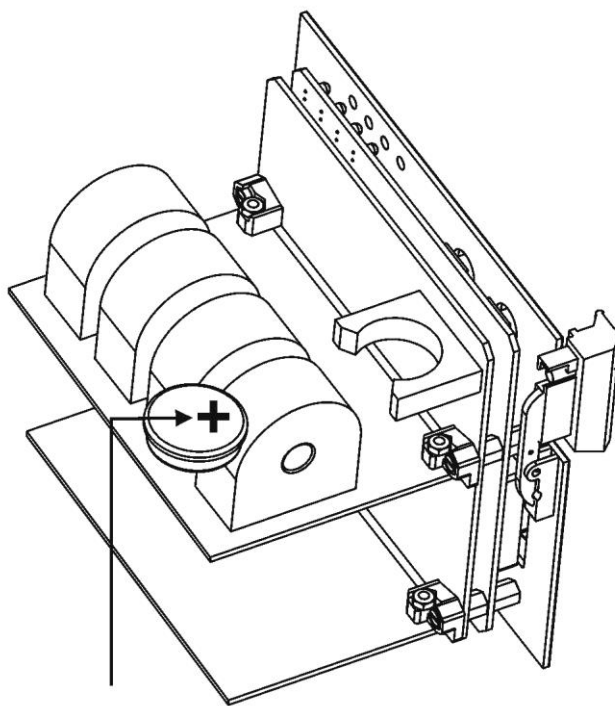

**BATTERY**

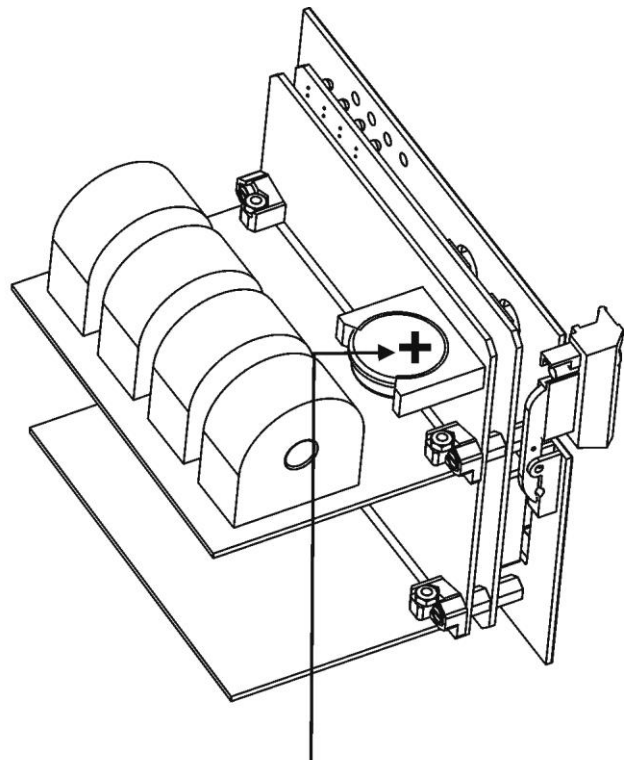

**BATTERY**


## 22. Maintenance

No maintenance is required. In case of malfunctioning please contact Microelettrica Scientifica Service or the local Authorized Dealer mentioning the relay's Serial No reported in the label on relays enclosure.


## 23. Power Frequency Insulation Test

Every relay individually undergoes a factory insulation test according to IEC255-5 standard at 2 kV, 50 Hz 1min. Insulation test should not be repeated as it unusefully stresses the dielectrics.  
When doing the insulation test, the terminals relevant to serial output, digital inputs and RTD input must always be short circuited to ground. When relays are mounted in switchboards or relay boards that have to undergo the insulation tests, the relay should be isolated. This is extremely important as discharges eventually taking place in other parts or components of the board can severely damage the relays or cause damages not immediately evident to the electronic components.


## 24. Basic Relay - Wiring Diagram

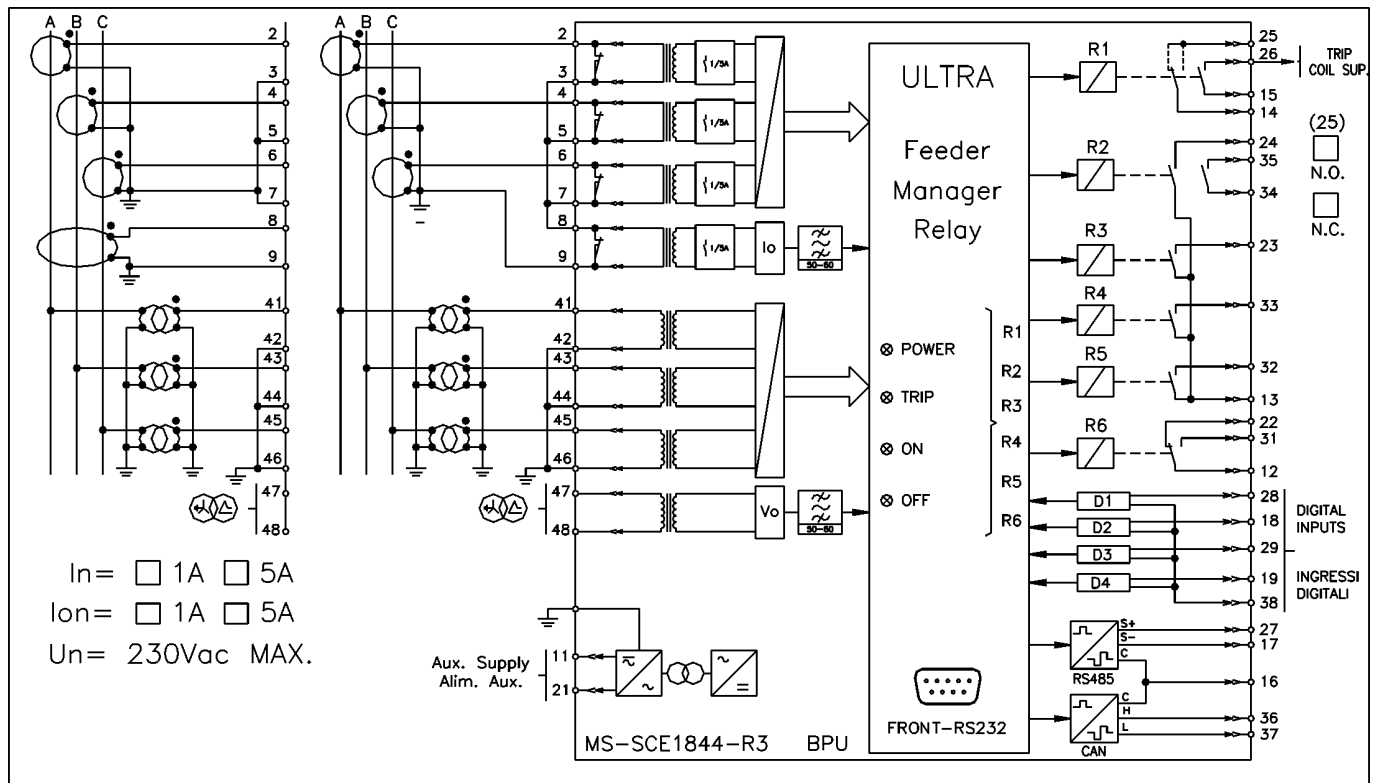


### 24.1 – UX10-4 - Expansion Module - Wiring Diagram (10 Digital Inputs + 4 Output Relays)

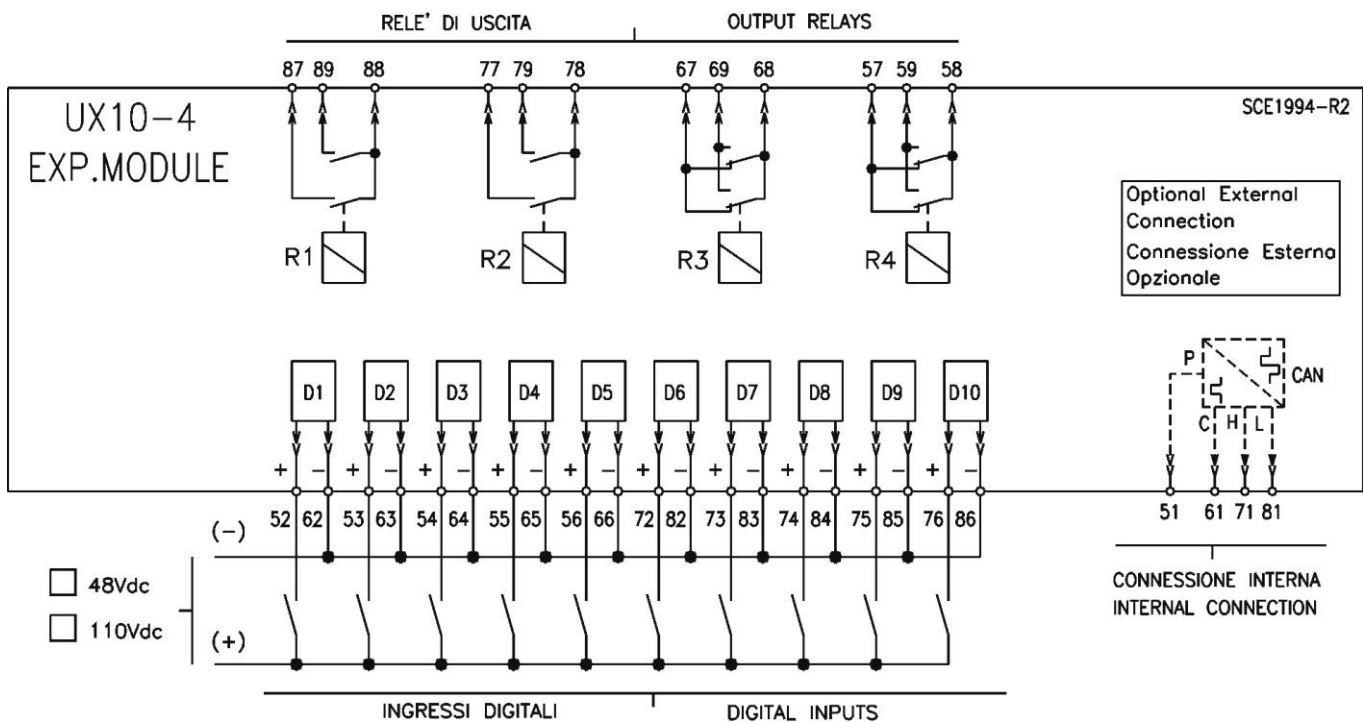


## 24.2 – 14DI - Expansion Module - Wiring Diagram (14 Digital Inputs)

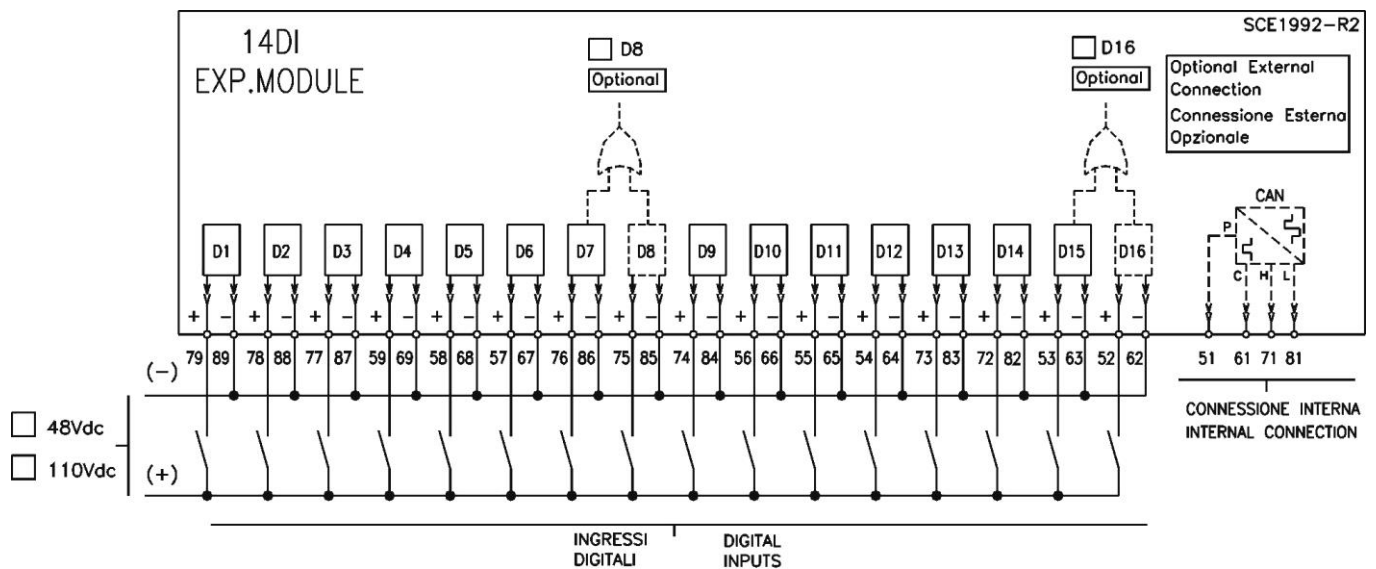

## 24.3 – 14DO - Expansion Module - Wiring Diagram (14 Output Relays)

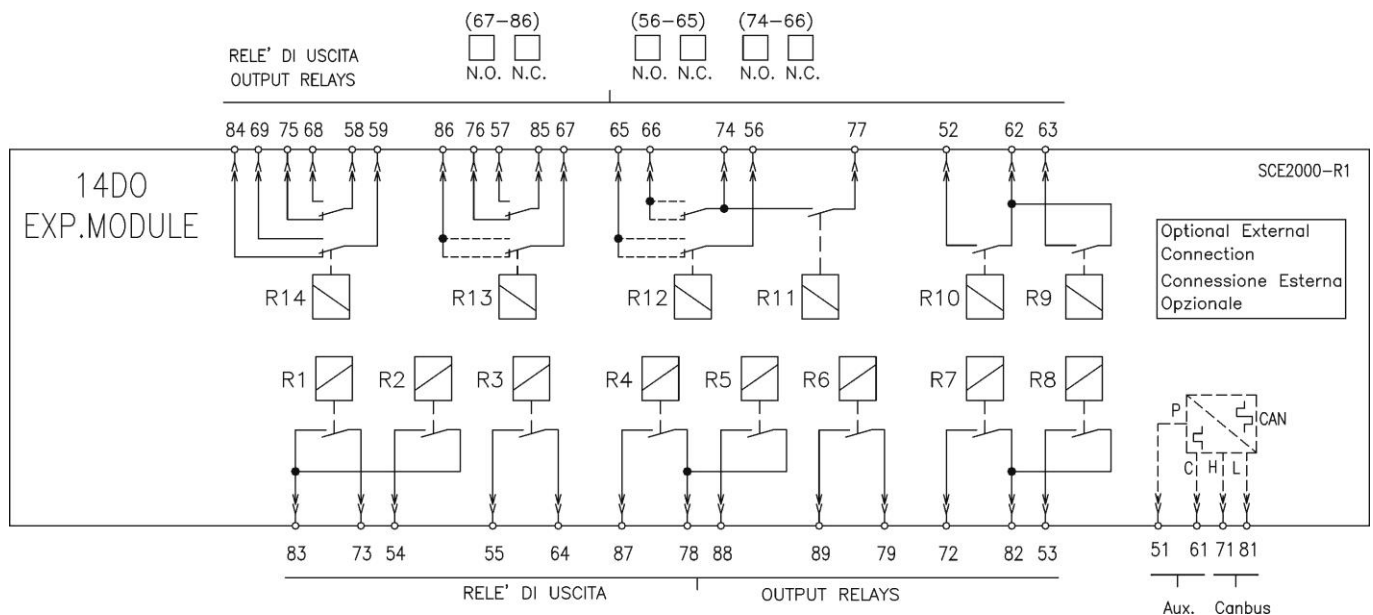


## 24.4 – 14DO-S - Expansion Module - Wiring Diagram (14 Output Relays)

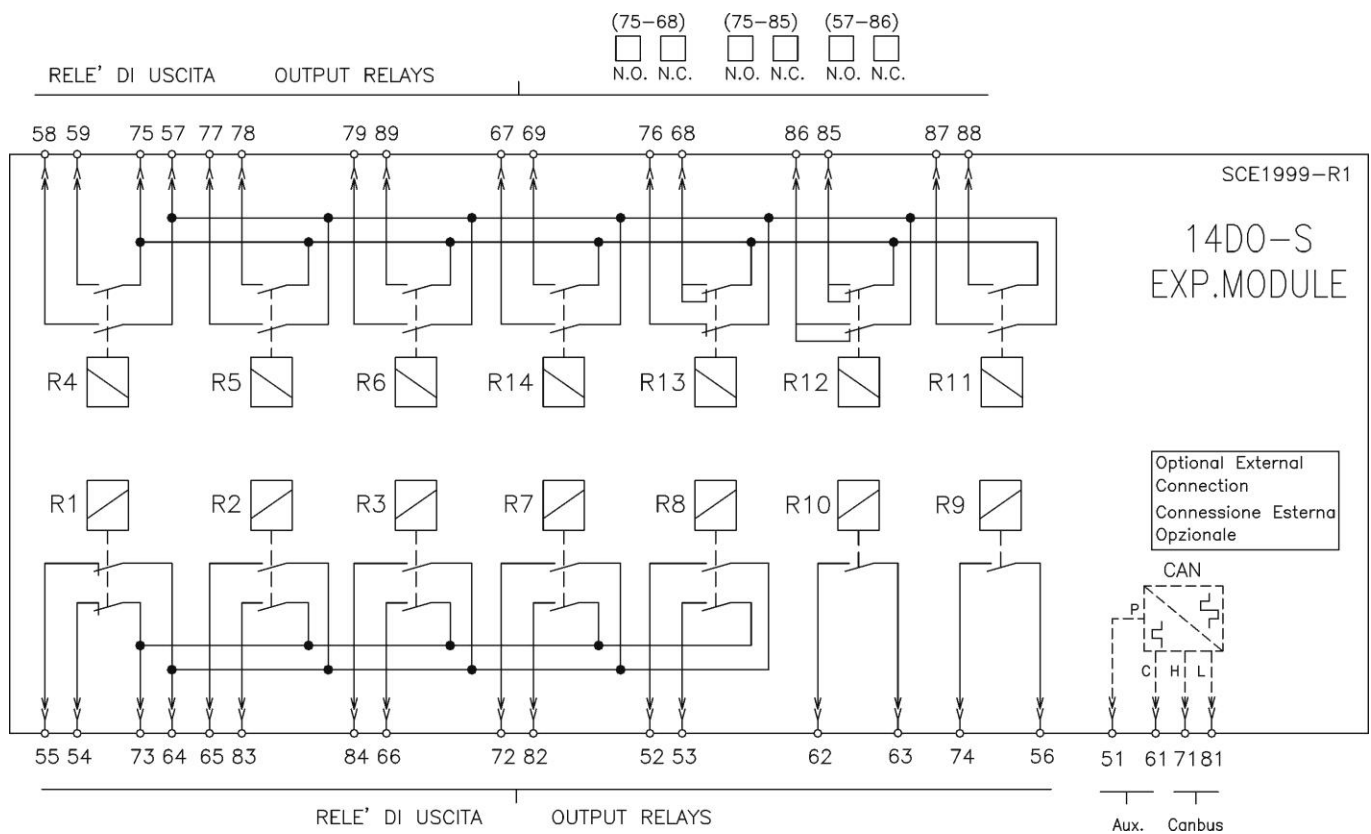


## 25. Wiring The Serial Communication Bus

### CONNECTION TO RS485

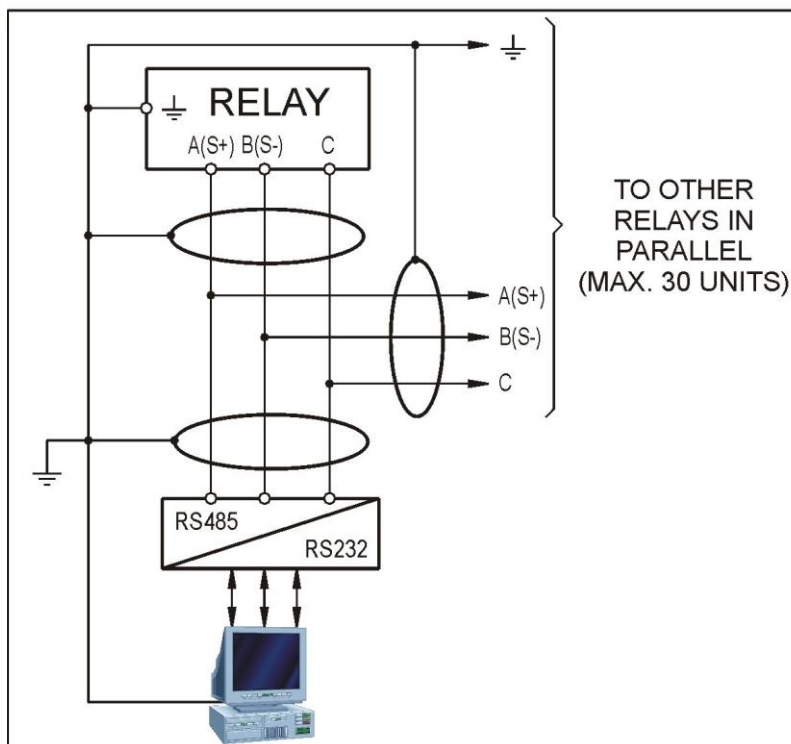

### FIBER OPTIC CONNECTION


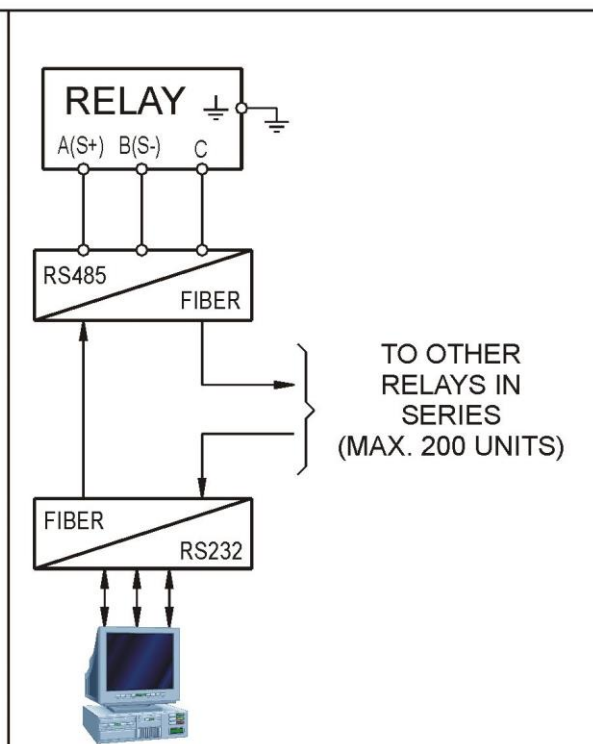


Each relay is identified by its programmable address code (NodeAd) and can be called from the P.C. A dedicated communication software (MSCom2) for Windows 9x/2000/XP (or later) is available. Please refer to the MSCom2 instruction manual for more information.

Maximum length of the serial bus can be up to 200m. For longer distance and for connection of up to 250 Relays, optical interconnection is recommended (please ask Microelettrica for accessories).



## 26. Basic Relay - Overall Dimensions

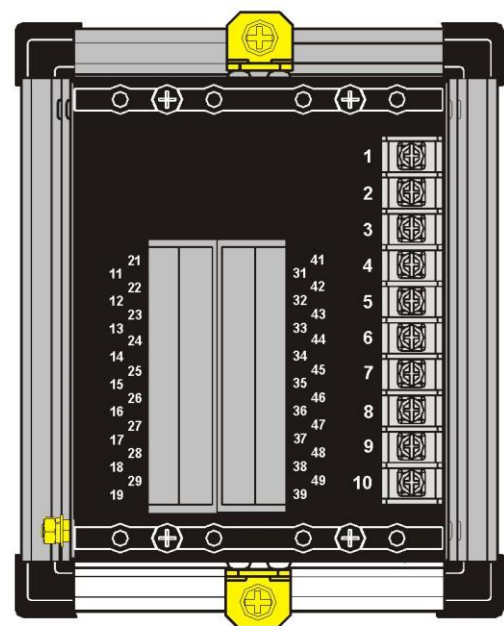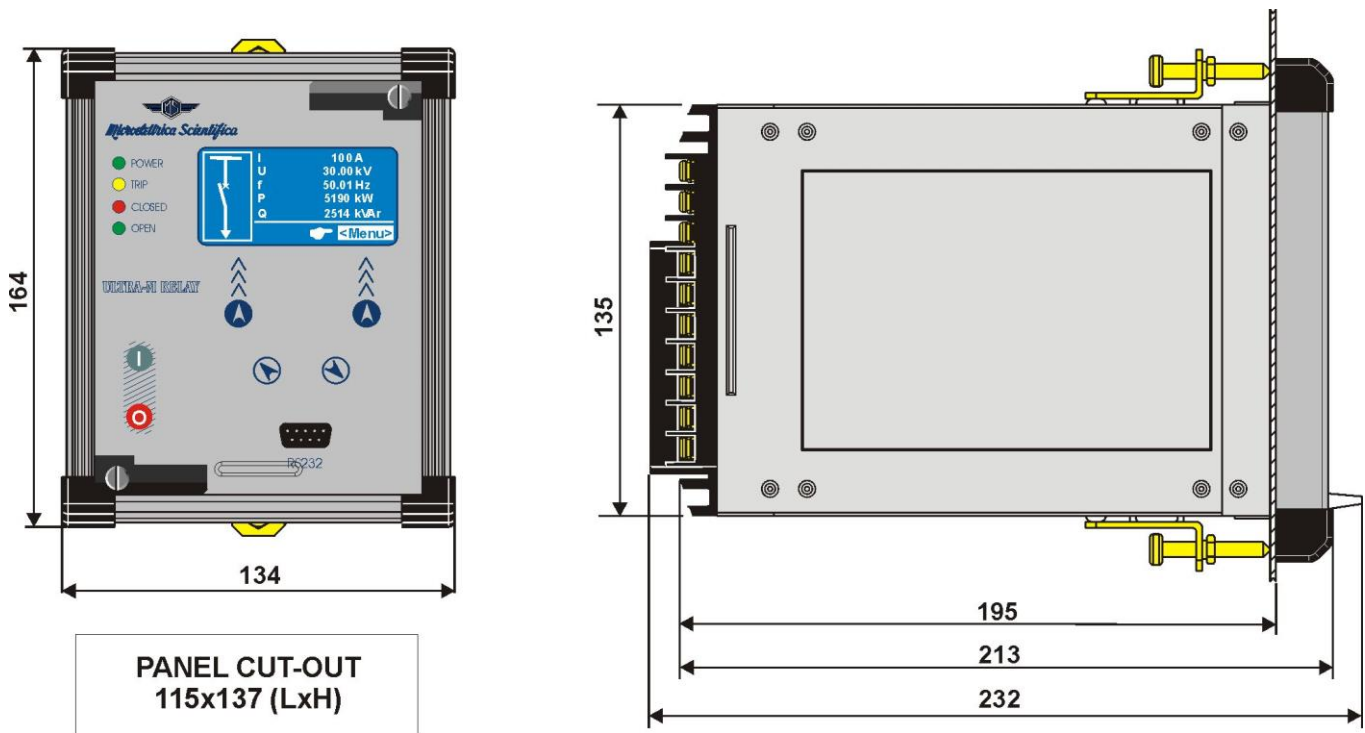


**TERMINAL CONNECTION**


Flush mounting protection degree: IP44 (54 on request).





**26.1 – (1 Expansion Module) & (2 Expansion Module) - Overall Dimensions**

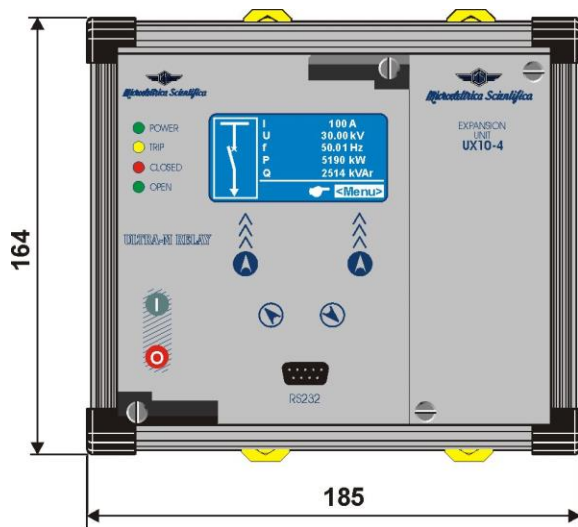

**PANEL  
CUT-OUT  
165x137 (LxH)**

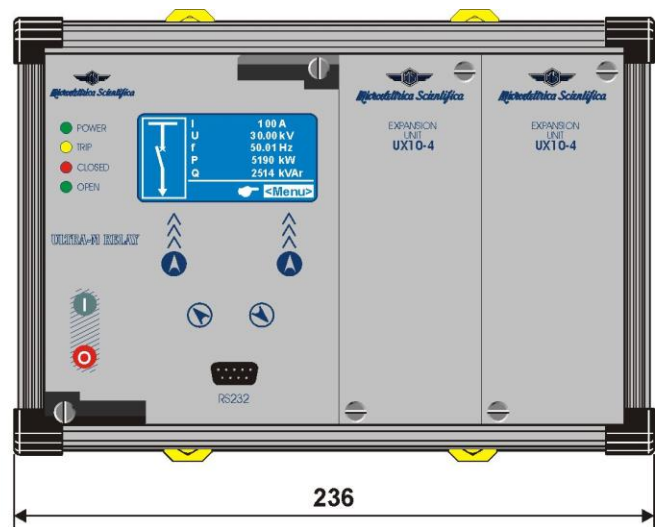


**PANEL  
CUT-OUT  
217x137 (LxH)**

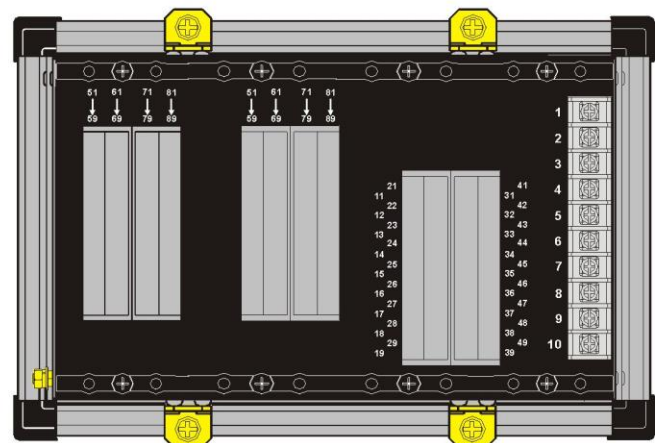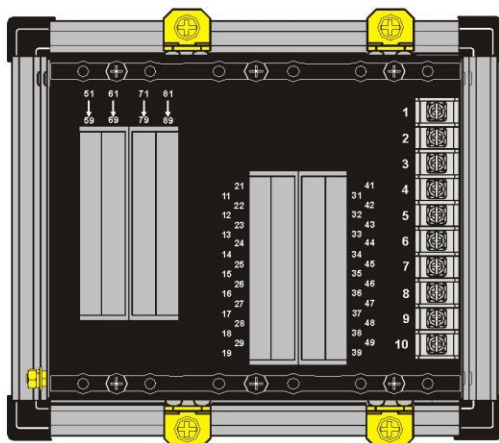



## 26.2 – Rack 3U – Overall Dimensions

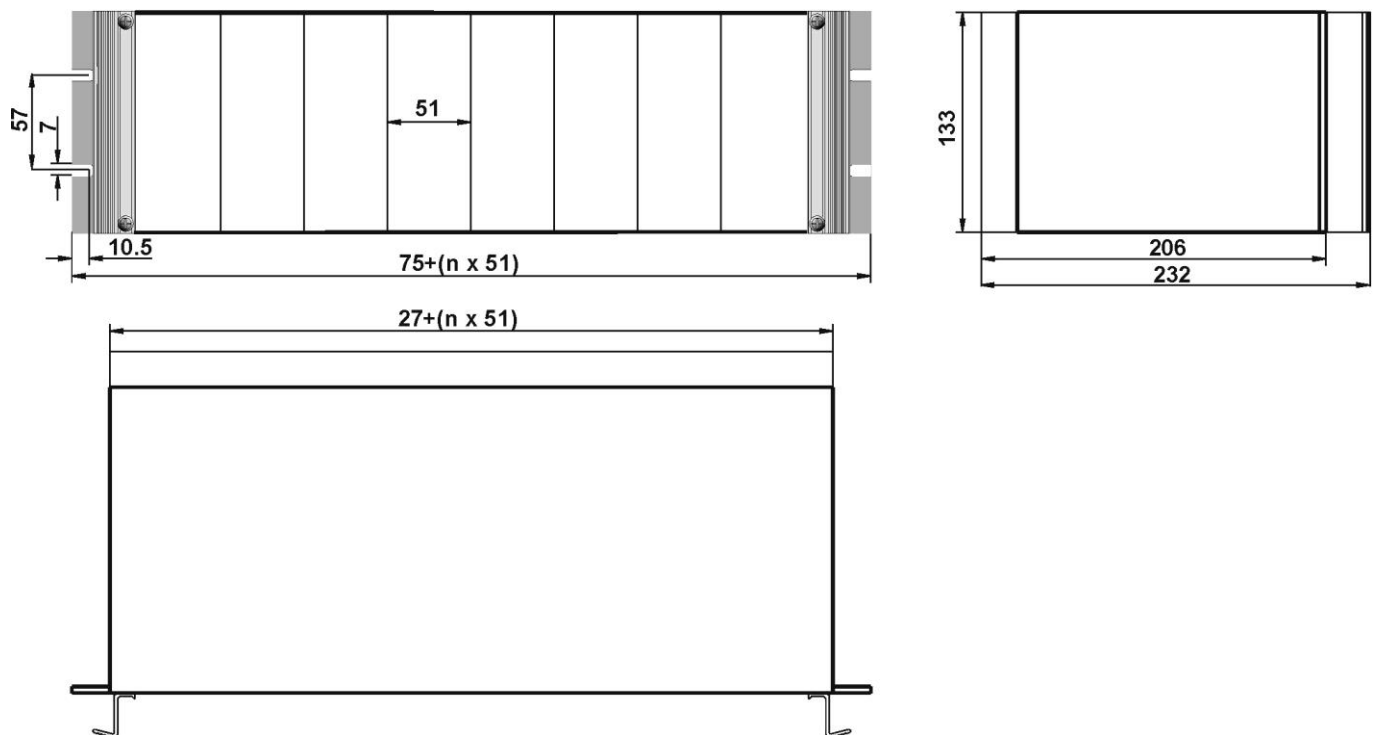


## 27. Direction for Pcb's Draw-Out and Plug-In

### 27.1 - Draw-out

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.  
Draw-out the PCB by pulling on the handles ③

### 27.2 – Plug-in

Rotate clockwise the screws ① and ② in the horizontal position of the screw-driver mark.  
Slide-in the card on the rails provided inside the enclosure.  
Plug-in the card completely and press the handle to the closed position.  
Rotate anticlockwise the screws ① and ② with the mark in the vertical position (locked).

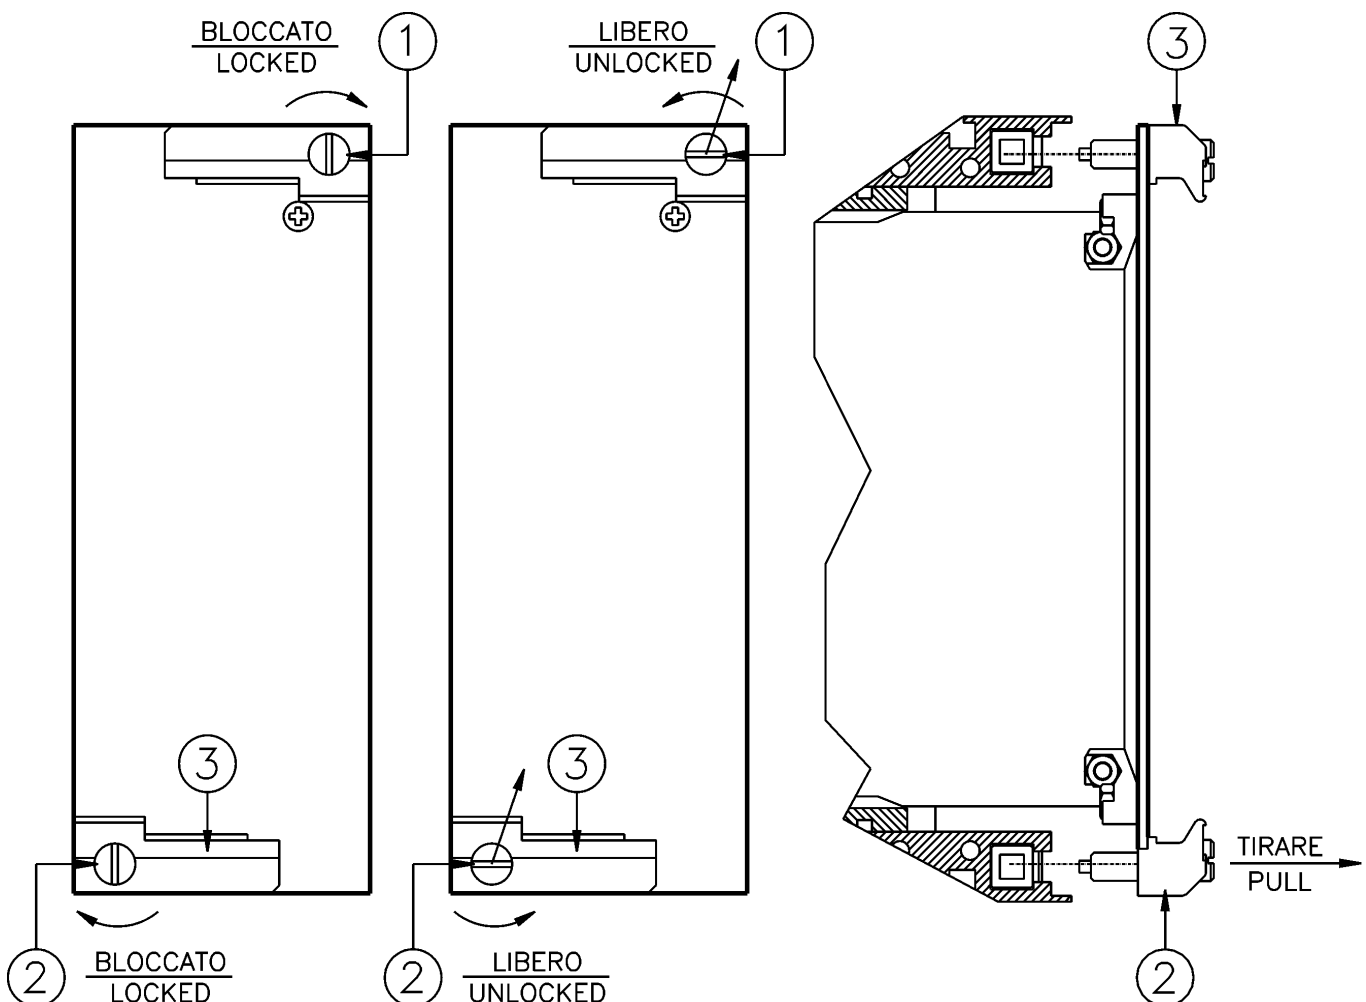

## 28. Electrical Characteristics

### APPROVAL: CE

### REFERENCE STANDARDS IEC 60255 - CE Directive - EN/IEC61000 - IEEE C37

<input type="checkbox"/> Dielectric test voltage	IEC 60255-5	2kV, 50/60Hz, 1 min.
<input type="checkbox"/> Impulse test voltage	IEC 60255-5	5kV (c.m.), 2kV (d.m.) – 1,2/50µs
<input type="checkbox"/> Insulation resistance	> 100MΩ	

### Environmental Std. Ref. (IEC 60068)

<input type="checkbox"/> Operation ambient temperature	-10°C / +55°C
<input type="checkbox"/> Storage temperature	-25°C / +70°C
<input type="checkbox"/> Environmental testing	(Cold) IEC60068-2-1
	(Dry heat) IEC60068-2-2
	(Change of temperature) IEC60068-2-14
	(Damp heat, steady state) IEC60068-2-78 RH 93% Without Condensing AT 40°C

### CE EMC Compatibility (EN61000-6-2 - EN61000-6-4 - EN50263)

<input type="checkbox"/> Electromagnetic emission	EN55011	industrial environment
<input type="checkbox"/> Radiated electromagnetic field immunity test	IEC61000-4-3	level 3 80-2000MHz 10V/m
	ENV50204	900MHz/200Hz 10V/m
<input type="checkbox"/> Conducted disturbances immunity test	IEC61000-4-6	level 3 0.15-80MHz 10V
<input type="checkbox"/> Electrostatic discharge test	IEC61000-4-2	level 3 6kV contact / 8kV air
<input type="checkbox"/> Power frequency magnetic test	IEC61000-4-8	1000A/m 50/60Hz
<input type="checkbox"/> Pulse magnetic field	IEC61000-4-9	1000A/m, 8/20µs
<input type="checkbox"/> Damped oscillatory magnetic field	IEC61000-4-10	100A/m, 0.1-1MHz
<input type="checkbox"/> Immunity to conducted common mode disturbance 0Hz-150KHz	IEC61000-4-16	level 4
<input type="checkbox"/> Electrical fast transient/burst	IEC61000-4-4	level 3 2kV, 5kHz
<input type="checkbox"/> HF disturbance test with damped oscillatory wave (1MHz burst test)	IEC60255-22-1	class 3 400pps, 2,5kV (m.c.), 1kV (d.m.)
<input type="checkbox"/> Oscillatory waves (Ring waves)	IEC61000-4-12	level 4 4kV(c.m.), 2kV(d.m.)
<input type="checkbox"/> Surge immunity test	IEC61000-4-5	level 4 2kV(c.m.), 1kV(d.m.)
<input type="checkbox"/> Voltage interruptions	IEC60255-4-11	
<input type="checkbox"/> Resistance to vibration and shocks	IEC60255-21-1 - IEC60255-21-2	10-500Hz 1g

### CARATTERISTICHE

<input type="checkbox"/> Accuracy at reference value of influencing factors	1% In – 0.1%On 2% + to (to=20÷30ms @ 2xIs)	for measure for times
<input type="checkbox"/> Rated Current	In = 1 or 5A - On = 1 or 5A	
<input type="checkbox"/> Current overload	80 In for 1 sec; 4 In continuous	
<input type="checkbox"/> Burden on current inputs	Phase : 0.01VA at In = 1A; 0.2VA at In = 5A Neutral : 0.01VA at In = 1A ; 0.2VA at In = 5A	
<input type="checkbox"/> Rated Voltage	Un = (100 ÷ 125)Vac	
<input type="checkbox"/> Voltage Overload	2Un permanent	
<input type="checkbox"/> Burden on voltage inputs	0,1VA at Un	
<input type="checkbox"/> Average power supply consumption	< 10 VA	
<input type="checkbox"/> Output relays	rating 5 A; Vn = 380 V A.C. resistive switching = 1100W (380V max) make = 30 A (peak) 0,5 sec. break = 0.3 A, 110 Vcc, L/R = 40 ms (100.000 op.)	

### COMMUNICATION PARAMETER

<input type="checkbox"/> Rear serial port	RS485 – 9600 to 38400 bps – 8,n,1 – Modbus RTU – IEC60870-5-103
<input type="checkbox"/> Front serial port	RS232 – 9600 to 57600 bps – 8,n,1 – Modbus RTU



---

## 28. Software & Firmware Version

---

---

❑ **Firmware for version**

IAU (Intelligent Acquisition Unit)	022.01.x
IPU (Processor Unit)	0600.28.01.x

---

❑ **Application Software**

MSCom 2	1.03.28 (or later)
---------	--------------------

---

**Microelettrica Scientifica S.p.A.** - 20089 Rozzano (MI) - Italy - Via Alberelle, 56/68  
Tel. (+39) 02 575731-Fax (+39) 02 57510940  
<http://www.microelettrica.com> e-mail : [sales.relays@microelettrica.com](mailto:sales.relays@microelettrica.com)

*The performances and the characteristics reported in this manual are not binding and can modified at any moment without notice*